## Safety light curtain

# SLC14-1650/130/151





### **Model Number**

### SLC14-1650/130/151

with 2 separate fail-safe semiconductor outputs

#### **Features**

- ٠ Sensing range up to 5 m
- Resolution 14 mm (finger protection) ٠
- Self-monitoring (type 4 according to IEC/EN 61496-1)
- Master/Slave detection, Plug and • Play
- Start/Restart disable ٠
- ٠ Very short response time
- Degree of protection IP67 •
- Integrated function display .
- Pre-fault indication ٠
- Optional with relay monitor (Option • 129)
- Connection via appliance socket ٠ M12 x b1
- Safety outputs OSSD in potential-se-• parated semiconductor version
- Protective field height up to 1800 mm

### Accessories

### **PG SLC-1650**

Protective glass panes for SLC series


### **BA SLC**

laser alignment aid for safety light cutrtains series SLC

₽ 58 Height of the protected area 22

## **Electrical connection**

Dimensions

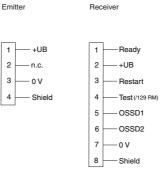


### **Pinout**


1

2

з

  4





USA: +1 330 486 0001 Pepperl+Fuchs Group www.pepperl-fuchs.com fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



200069\_eng.xml


# SLC14-1650/130/151


Technical data	
System components	
Emitter	SLC14-1650-T/130
Receiver	SLC14-1650-R/130/151
General specifications	
Effective detection range	0.2 5 m
Light source	IRED
Light type	modulated infrared light
LED risk group labelling	exempt group
Tests	IEC/EN 61496
Safety type according to IEC/EN 61496	4
Width of protected area	0.2 5 m
Protection field height	1650 mm
Number of beams	176
Operating mode	can be selected with or without start/restart disable
Optical resolution	14 mm <5 °
Angle of divergence	< 5
Functional safety related parameters	
Safety Integrity Level (SIL) Performance level (PL)	SIL 3 PL e
Category	PL e Cat. 4
Mission Time (T <sub>M</sub> )	20 a
PFH <sub>d</sub>	2.42 E-8
Туре	4
	•
Indicators/operating means Operation indicator	7-segment display in emitter
Diagnostics indicator	7-segment display in receiver
Function indicator	in receiver:
	LED red: OSSD off LED green: OSSD on LED yellow: Protected area free, system start-ready
Pre-fault indicator	LED orange
Control elements	switch for start/restart disable, transmission coding
Electrical specifications	
Operating voltage U <sub>B</sub>	24 V DC (-30 %/+25 %)
No-load supply current I <sub>0</sub>	Emitter: $\leq$ 100 mA receiver: $\leq$ 150 mA
Protection class	
Input	
Activation current	approx. 10 mA
Activation time	0.03 1 s
Test input	Reset-input for system test (not for option /129)
Function input	Start release
Output	
Safety output	2 separated fail safe semiconductor outputs
Signal output	1 PNP, max. 100 mA for start readiness
Switching voltage	Operating voltage -2 V
Switching current	max. 0.5 A
Response time	34 ms
Conformity	
Functional safety	ISO 13849-1
Product standard	EN 61496-1 ; IEC 61496-2
Ambient conditions	
Ambient temperature	0 55 °C (32 131 °F)
Storage temperature	-25 70 °C (-13 158 °F)
Relative humidity	max. 95 %, not condensing
Mechanical specifications	
Housing length L	1760 mm
Degree of protection	IP67
Connection	Emitter: M12 connector, 4-pin Receiver: M12 connector, 8-pin
Material	
Housing	extruded aluminum profile, RAL 1021 (yellow) coated
Optical face	Plastic pane
Mass	Per 5250 g
Approvals and certificates	
CE conformity	CE
UL approval	cULus Listed
CCC approval	CCC approval / marking not required for products rated ≤36 V
TÜV approval	TÜV


Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

### **Curves/Diagrams**

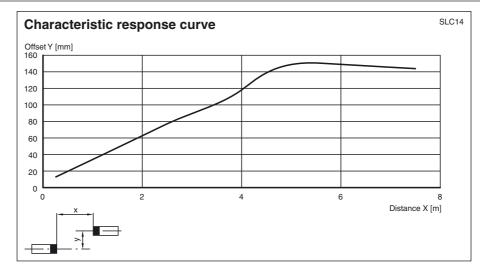

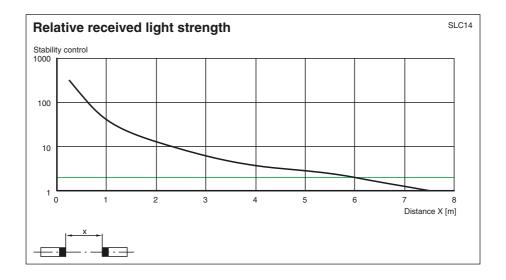

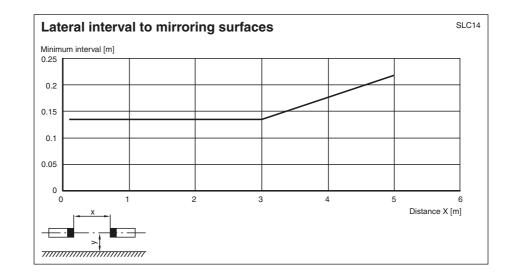

### Note

Pepperl+Fuchs Group

www.pepperl-fuchs.com

#### **Master-Slave operation**

Master:	SLC (semiconductor)
	or SLC/31 (relay)
Slave:	SLCS

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

USA: +1 330 486 0001 Germany: +4 fa-info@us.pepperl-fuchs.com fa-info@de.pu

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



## Safety light curtain

The use of slaves allows both the protection fields to be extended and protection fields to be created that do not all exist at a single level. When deciding which slaves to connect, remember that the total maximum of 96 beams must not be exceeded. Up to 192 beams are possible if the /130 option is selected.

Slaves exist for the transmitter and the receiver. These simply need to be connected to the master light curtain. Up to two slaves can be connected to both the transmitter and receiving units. Only one slave can be connected if the /130 option is selected.

#### Installation:

- 1 The end cap (no cable gland) on the light curtain is unscrewed and removed.
- 2 The plug-in jumper on the connectors of the now visible PCB is removed.
- 3 The slave is designed in such a way that the cap and PCB on the connecting cable plug directly onto the open end of the light curtain.
- 4 Once the end cap has been screwed on, the system is complete.

## System accessories

- Mounting set SLC
- Test rods SLC14/SLC30/SLC60
- Protection glass for SLC (to protect the optical surface)
- Side cable gland SLC
- Profile alignment tool
- Beam alignment tool SLC
- Mirror for SLC (to protect danger areas on more than one side)
- Stands UC SLP/SLC
- Enclosure for stands Enclosure UC SLP/SLC
- Start protection Damping UC SLP/SLC

Germany: +49 621 776 4411 m fa-info@de.pepperl-fuchs.com

76 4411 Singapore uchs.com fa-info@sg.pe

