Safety light curtain

SLC14-150/151





Model Number

SLC14-150/151

with 2 separate fail-safe semiconductor outputs

Features

- ٠ Sensing range up to 5 m
- Resolution 14 mm (finger protection) ٠
- Self-monitoring (type 4 according to IEC/EN 61496-1)
- Master/Slave detection, Plug and • Play
- Start/Restart disable ٠
- Degree of protection IP67 •
- Integrated function display
- Pre-fault indication .
- ٠ Optional with relay monitor (Option 129)
- Connection via appliance socket M12 x b1
- Safety outputs OSSD in potential-se-٠ parated semiconductor version
- Protective field height up to 1800 mm •

Accessories

MS SLC

Mounting bracket for Light grid

PA SLP/SLC

Alignment aid for SLP and SLC series profile light grids

PG HOLDER SLC

Holders for SLC protective glass panes


PG SLC-X

Protective glass panes for SLC series

13 58 Height of the protected area 22

Electrical connection

Dimensions

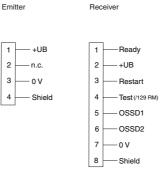


Pinout

1

2

з

 4



199718_eng.xml

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" USA: +1 330 486 0001 Pepperl+Fuchs Group www.pepperl-fuchs.com fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



SLC14-150/151


Technical data	
System components	
Emitter	SLC14-150-T/92
Receiver	SLC14-150-R/151
General specifications	
Effective detection range	0.2 5 m
Light source	IRED
Light type	modulated infrared light
LED risk group labelling	exempt group
Tests	IEC/EN 61496
Safety type according to IEC/EN 6	
Width of protected area Protection field height	0.2 5 m 150 mm
Number of beams	16
Operating mode	can be selected with or without start/restart disable
Optical resolution	14 mm
Angle of divergence	<5 °
Functional safety related paramet	
Safety Integrity Level (SIL)	SIL 3
Performance level (PL)	PL e
Category	Cat. 4
Mission Time (T _M)	20 a
PFH _d	2.42 E-8
Туре	4
Indicators/operating means	
Operation indicator	7-segment display in emitter
Diagnostics indicator	7-segment display in receiver
Function indicator	in receiver:
	LED red: OSSD off LED green: OSSD on
	LED yellow: Protected area free, system start-ready
Pre-fault indicator	LED orange
Control elements	switch for start/restart disable, transmission coding
Electrical specifications	
Operating voltage	U _B 24 V DC (-30 %/+25 %)
No-load supply current	I_0 Emitter: ≤ 100 mA receiver: ≤ 150 mA
Protection class	III
Input	
Activation current	approx. 10 mA
Activation time	0.03 1 s
Test input	Reset-input for system test (not for option /129)
Function input	Start release
Output	
Safety output	2 separated fail safe semiconductor outputs
Signal output	1 PNP, max. 100 mA for start readiness
Switching voltage	Operating voltage -2 V
Switching current Response time	max. 0.5 A 10 ms
•	10 1115
Conformity Functional safety	ISO 13849-1
T unctional salety	150 15045-1
Product standard	EN 61496-1 ; IEC 61496-2
Ambient conditions	
Ambient temperature	0 55 °C (32 131 °F)
Storage temperature	-25 70 °C (-13 158 °F)
Relative humidity	max. 95 %, not condensing
Mechanical specifications	
Housing length L	260 mm
Degree of protection	IP67
Connection	Emitter: M12 connector, 4-pin Receiver: M12 connector, 8-pin
Material	
Housing	extruded aluminum profile, RAL 1021 (yellow) coated
Optical face	Plastic pane
Mass	Per 750 g
Approvals and certificates	
	CE
CE conformity	
UL approval	cULus Listed
-	


Refer to "General Notes Relating to Pepperl+Fuchs Product Information".


Pepperl+Fuchs Group
USA: +1 330 486 0001
General General

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

Curves/Diagrams

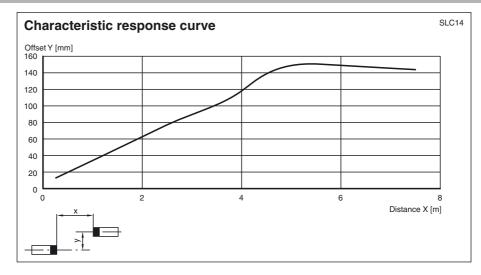

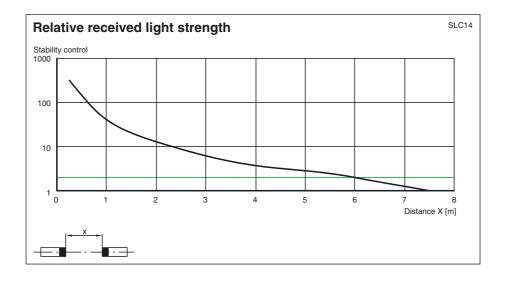

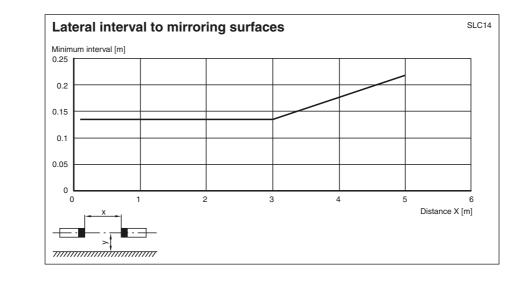

Notes

Master slave mode

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com



Master:	SLC (semiconductor)
	or
	SLC/31 (relay)
Slave:	SLCS

Using slaves makes it possible to lengthen protective fields or to form protective fields that lie in more than just one level. When you select slaves that can be connected, you should take into consideration that the maximum number of 96 light rays must not be exceeded.

There are slaves for transmitters and receivers. These may simply be connected to the master light curtain. As many as 2 slaves may be connected respectively to the transmitter and receiver unit.

Installation:

- The end cap should be screwed off for the light curtain (without cable gland). 1
- 2 The plug-in jumper on the connectors of the printed circuit board, which is now visible, should be removed.
- 3 The slave is designed so that the cap located on the cable connector can be plugged directly onto the open end of the light curtain with the printed circuit board.
- 4 After you have screwed on the connection cap, the system is complete.

System accessories

- Mounting set SLC •
- Test rods SLC14/SLC30/SLC60
- Protective glass pieces for SLC (to protect the optically functional surface)
- Lateral screwed connection SLC
- Profile alignment aid
- Laser alignment aid SLC
- Mirror for SLC (for securing hazardous areas on multiple sides)
- Ground pillar UC SLP/SLC
- Housing for pillar Enclosure UC SLP/SLC
- Collision protector Damping UC SLP/SLC

4

