

Installation instructions Dual sensor efectoried T5

CE



Function and features

The T5 dual sensor is a slave in the AS-i system (AS-i profile S-7.A.E). It is designed for use on pneumatic valve actuators. It energises the solenoid of the pneumatic valve and provides position feedback from the actuator.

- Sensor and actuator supply as well as data transfer to the controller via AS-i 2-wire cable.
- Watchdog function: If the connection to the master is interrupted for more than 40 ms, the output is switched off (logically 0) when the master messages fail.
- Diagnostic information via red LED (short circuit or open circuit).

Operation and display elements



- ① M12-plug
- ② T5 dual sensor
- ③ sensor area
- ④ puck

- (5) standard actuator
- 6 solenoid valve
- ⑦ M12 socket
- ⑧ AS-i flat cable

Installation

Address the T5 dual sensor with an addressing unit, address "0" is set at the factory. Fasten it to the valve fixings according to the standards (ISO 5211 VDI/VDE).

Connect the solenoid valve to the M12 socket. Only solenoid valves with a nominal voltage of 24 V and a power of up to max. 1 W may be connected.



Modification of a 5/2 valve to 3/2 or vice versa by using the supplied plates.

Data bits

Data bit	Туре	Designation	Description	
D0	input	sensor 1	sensor position 1 damped	
D1	input	sensor 2	sensor position 2 damped	
D2	input	error actuator	open circuit / short circuit at the actuator	
D0	output	actuator	switch output for solenoid valve	

Connection

4	M12 plug	Pin	M12 socket	Pin	3 4
	AS-i +	1	switch output +	4	
1 2	AS-i -	3	voltage -	3	2 1

Operation

Check the safe functioning of the unit. Display by LEDs.

- Red LED is lit: short circuit or open circuit in one output.
- Yellow LED is lit: function display (input and output signals are displayed).