



Model Number

OBE12M-R101-S2EP1-IO

Thru-beam sensor with fixed cable

Features

- Miniature design with versatile mounting options
- IO-link interface for service and process data
- Various frequencies for avoiding mutual interference (cross-talk immunity)
- Extended temperature range -40°C ... 60°C
- · High degree of protection IP69K


Product information

The miniature optical sensors are the first devices of their kind to offer an end-to- end solution in a small single standard design — from thru-beam sensor through to a distance measurement device. As a result of this design, the sensors are able to perform practically all standard automation tasks.


The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor.

The use of Multi Pixel Technology gives the standard sensors a high level of flexibility and enables them to adapt more effectively to their operating environment.


Dimensions

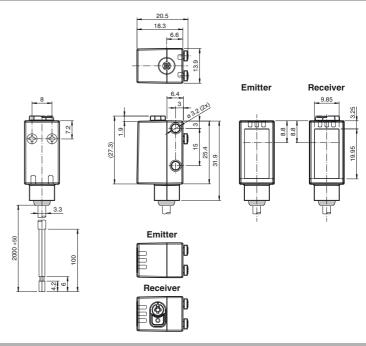

Electrical connection emitter

 


Electrical connection receiver

 


Indicators/operating means

 Emitter



1 Operating indicator

Receiver

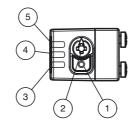

- 1 Light-on/dark-on changeover switch
- 2 Sensitivity adjuster
- 3 Operating indicator / light on
- 4 Signal indicator
- 5 Operating indicator / dark on

www.pepperl-fuchs.com

Technical data		
System components		
Emitter		OBE12M-R101-S-IO
Receiver		OBE12M-R101-2EP1-IO
General specifications		
Effective detection range		0 12 m
Threshold detection range		15 m
Light source		LED
Light type		modulated visible red light
LED risk group labelling		exempt group
Diameter of the light spot Angle of divergence		approx. 65 mm at a distance of 1 m 3.7 °
Ambient light limit		EN 60947-5-2 : 30000 Lux
Functional safety related para	meters	EN 00347 3 2 . 00000 Eux
MTTF _d	inicions	462 a
Mission Time (T _M)		20 a
Diagnostic Coverage (DC)		0 %
ndicators/operating means		
Operation indicator		LED green: constantly on - power on flashing (4Hz) - short circuit flashing with short break (1 Hz) - IO-Link mode
Function indicator		Yellow LED: Permanently lit - light path clear Permanently off - object detected Flashing (4 Hz) - insufficient operating reserve
Control elements		Receiver: light/dark switch
Control elements		Receiver: sensitivity adjustment
Parameterization indicator		IO link communication: green LED goes out briefly (1 Hz)
Electrical specifications		
Operating voltage	U_B	10 30 V DC
Ripple		max. 10 %
No-load supply current Protection class	I ₀	Emitter: ≤ 14 mA Receiver: ≤ 13 mA at 24 V supply voltage III
nterface		III
Interface type		IO-Link (via C/Q = pin 4)
Transfer rate		COM 2 (38.4 kBaud)
IO-Link Revision		1.1
Min. cycle time		2.3 ms
Process data witdh		Emitter: Process data output: 2 Bit Receiver: Process data input: 2 Bit Process data output: 2 Bit
SIO mode support Device ID		yes Emitter: 0x110401 (1115137)
Compatible master port type		Receiver: 0x11030À (1114890) A
nput		^
Test input		emitter deactivation at +U _B
Output		onmor adaditation at 10g
Switching type		The switching type of the sensor is adjustable. The default setting is: C/Q - BK: NPN normally closed / light-on, PNP normally ope dark-on, IO-Link /Q - WH: NPN normally open / dark-on, PNP normally closed light-on
Signal output		2 push-pull (4 in 1)outputs, short-circuit protected, reverse polarity protected, overvoltage protected
Switching voltage		max. 30 V DC
Switching current		max. 100 mA , resistive load
Usage category		DC-12 and DC-13
Voltage drop Switching frequency	U _d	≤ 1.5 V DC 1000 Hz
Response time		0.5 ms
Ambient conditions		0.0 1116
Ambient temperature		-40 60 °C (-40 140 °F) , fixed cable -25 60 °C (-13 140 °F) , movable cable not appropriate conveyor chains
Storage temperature		-40 70 °C (-40 158 °F)
Mechanical specifications		
Housing width		13.9 mm
Housing height		33.8 mm
Housing depth		18.3 mm
Degree of protection		IP67 / IP69 / IP69K
Connection Material		2 m fixed cable

Accessories

IO-Link-Master02-USB

IO-Link master, supply via USB port or separate power supply, LED indicators, M12 plug for sensor connection

OMH-R101

Mounting Clamp

OMH-R101-Front

Mounting Clamp

OMH-4.1

Mounting Clamp

OMH-ML6

Mounting bracket

OMH-ML6-U

Mounting bracket


OMH-ML6-Z


Mounting bracket

Other suitable accessories can be found at www.pepperl-fuchs.com


Housing	PC (Polycarbonate)
Optical face	PMMA
Mass	Emitter: approx. 10 g receiver: approx. 10 g
Cable length	2 m
Compliance with standards and directives	
Directive conformity	
EMC Directive 2004/108/EC	EN 60947-5-2:2007+A1:2012
Standard conformity	
Product standard	EN 60947-5-2:2007+A1:2012 IEC 60947-5-2:2007 + A1:2012
Standards	UL 60947-5-2: 2014 IEC 61131-9:2013 EN 62471:2008 EN 61131-9:2013
Amount and soutificates	
Approvals and certificates	
UL approval	E87056, cULus Listed, class 2 power supply, type rating 1

Curves/Diagrams

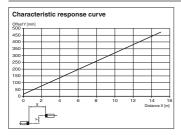

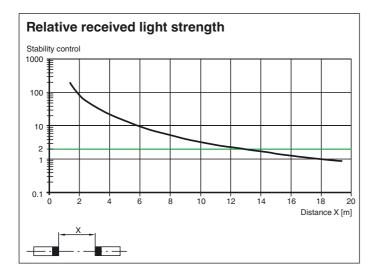

Functions and Operation

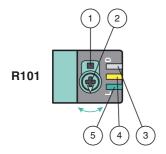

- 1 Light-on / dark-on changeover switch
- 2 Sensing range /sensitivity adjuster
- 3 Operating indicator / dark on
- 4 Signal indicator
- 5 Operating indicator / light on

To unlock the adjustment functions turn the sensing range adjuster for more than 180 degrees.

Sensing Range / Sensitivity

Turn sensing range / sensivity adjuster clockwise to increase sensing range / sensitivity.

Turn sensing range /sensivity adjuster counter clockwise to decrease sensing range / sensitivity.

If the end of the adjustment range is reached, the signal indicator starts flashing with 8 Hz.

Light-on / Dark-on Configuration

Press the light-on / dark-on changeover switch for more than 1 second (less than 4 seconds). The light-on / dark-on mode changes and the operating indicators are activated accordingly.

If you press the light-on / dark-on changeover switch for more than 4 seconds, the light-on / dark-on mode changes back to the original setting. On release of the light-on / dark-on changeover switch the current state is activated.

Restore Factory Settings

Press the light-on / dark-on changeover switch for more than 10 seconds (less than 30 seconds) until all LEDs turn off. On release of the light-on / dark-on changeover switch the signal indicator turns on. After 5 seconds the sensor resumes operation with factory default settings.

After 5 minutes of inactivity the sensing range / sensivity adjustment is locked. In order to reactivate the sensing range /sensivity adjustment, turn the sensing range / sensivity adjuster for more than 180 degrees.

PEPPERL+FUCHS