

# Thru-beam sensor



- OBE12M-R100-SE5F-IO-V31
- Miniature design with versatile mounting options
- IO-link interface for service and process data
- Various frequencies for avoiding mutual interference (cross-talk immunity)
- Extended temperature range -40°C ... 60°C
- High degree of protection IP69K

Thru-beam sensor SET



# Function

The R100 series miniature optical sensors are the first devices of their kind to offer an endto- end solution in a small single standard design — from thru-beam sensor through to a distance measurement device. As a result of this design, the sensors are able to perform practically all standard automation tasks.

The entire series enables sensors to communicate via IO-Link.

The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor. The use of Multi Pixel Technology gives the standard sensors a high level of flexibility and enables them to adapt more effectively to their operating environment.



### Thru-beam sensor

#### **Dimensions**



### **Technical Data**

System components	
Emitter	OBE12M-R100-S-IO-V31
Receiver	OBE12M-R100-E5F-IO-V31
General specifications	
Effective detection range	0 12 m
Threshold detection range	15 m
Light source	LED
Light type	modulated visible red light
LED risk group labelling	exempt group
Diameter of the light spot	approx. 65 mm at a distance of 1 m
Angle of divergence	3.7 °
Ambient light limit	EN 60947-5-2 : 30000 Lux
Functional safety related parameters	
MTTF <sub>d</sub>	462 a
Mission Time (T <sub>M</sub> )	20 a
Diagnostic Coverage (DC)	0 %
Indicators/operating means	
Operation indicator	LED green: constantly on - power on flashing (4Hz) - short circuit flashing with short break (1 Hz) - IO-Link mode
Function indicator	Yellow LED: Permanently lit - light path clear Permanently off - object detected Flashing (4 Hz) - insufficient operating reserve

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Release date: 2020-06-23 Date of issue: 2020-06-23 Filename: 308443\_eng.pdf

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

# OBE12M-R100-SE5F-IO-V31

Technical Data		
Control elemente		Dessiver light/ded. switch
Control elements		Receiver: light/dark switch
Control elements		Receiver: sensitivity adjustment
Parameterization indicator		IO link communication: green LED goes out briefly (1 Hz)
Electrical specifications		40 001/100
Operating voltage	U <sub>B</sub>	10 30 V DC
Ripple		max. 10 %
No-load supply current	lo	Emitter: ≤ 14 mA Receiver: ≤ 13 mA at 24 V supply voltage
Protection class		III
nterface		
Interface type		IO-Link ( via C/Q = pin 4 )
IO-Link Revision		1.1
Device ID		Emitter: 0x110401 (1115137) Receiver: 0x11030B (1114891)
Transfer rate		COM 2 (38.4 kBaud)
Min. cycle time		2.3 ms
Process data width		Emitter: Process data output: 2 Bit Receiver: Process data input: 2 Bit Process data output: 2 Bit
SIO mode support		yes
Compatible master port type		A
nput		
Test input		emitter deactivation at +U <sub>B</sub>
Dutput		
Pre-fault indication output		1 PNP, inactive when level falls below function reserve after approx. 5 s. Immediately inactive if the beam is interrupted 4 times during the flashtime.
Switching type		The switching type of the sensor is adjustable. The default setting is: C/Q - Pin4: PNP normally open / dark-on, IO-Link Alarm output - Pin2: PNP normally closed
Signal output		1 PNP, short-circuit protected, reverse polarity protected
Switching voltage		max. 30 V DC
Switching current		max. 100 mA , resistive load
Usage category		DC-12 and DC-13
Voltage drop	$U_d$	≤ 1.5 V DC
Switching frequency	f	1000 Hz
Response time		0.5 ms
Conformity		
Communication interface		IEC 61131-9
Product standard		EN 60947-5-2
Approvals and certificates		
UL approval		E87056 , cULus Listed , class 2 power supply , type rating 1
Ambient conditions		
Ambient temperature		-40 60 °C (-40 140 °F)
Storage temperature		-40 70 °C (-40 158 °F)
Mechanical specifications		
Housing width		11 mm
Housing height		44.5 mm
Housing depth		21.5 mm
Degree of protection		IP67 / IP69 / IP69K
Connection		M8 x 1 connector, 4-pin
Material		
Housing		PC (Polycarbonate)
Optical face		РММА



### **Connection Assignment**



# **Connection Assignment**



# **Connection Assignment**



Wire colors in accordance with EN 60947-5-2

1	BN	(brown)
2	WH	(white)
3	BU	(blue)
4	BK	(black)

# Assembly





1 Operating indicator

1	Light-on/Dark-on changeover switch			
2	Sensitivity adjuster			
3	Operating indicator / dark on			
4	Signal indicator			
5	Operating indicator / light on			

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".



# OBE12M-R100-SE5F-IO-V31

### **Characteristic Curve**





#### Accessories

	V31-WM-2M-PUR	Female cordset single-ended, M8, 4-pin, PUR cable
Z	V31-GM-2M-PUR	Female cordset single-ended, M8, 4-pin, PUR cable
	IO-Link-Master02-USB	IO-Link master, supply via USB port or separate power supply, LED indicators, M12 plug for sensor connection

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

5

#### **Functions and Operation**



- 1 Light-on / dark-on changeover switch
- 2 Sensing range / sensitivity
- adjuster
- 3 Operating indicator / dark on
- 4 Signal indicator
- 5 Operating indicator / light on

To unlock the adjustment functions turn the sensing range /sensitivity adjuster for more than 180 degrees.

### Sensing Range / Sensitivity

Turn sensing range / sensitivity adjuster clockwise to increase sensing range / sensitivity.

Turn sensing range / sensitivity adjuster counter clockwise to decrease sensing range / sensitivity.

If the end of the adjustment range is reached, the signal indicator starts flashing with 8 Hz.

#### Light-on / Dark-on Configuration

Press the light-on / dark-on changeover switch for more than 1 second (less than 4 seconds). The light-on / dark-on mode changes and the operating indicators are activated accordingly.

If you press the light-on / dark-on changeover switch for more than 4 seconds, the light-on /dark-on mode changes back to the original setting. On release of the light-on / dark-on changeover switch the current state is activated.

#### **Restore Factory Settings**

Press the light-on / dark-on changeover switch for more than 10 seconds (less than 30 seconds) until all LEDs turn off. On release of the light-on / dark-on changeover switch the signal indicator turns on. After 5 seconds the sensor resumes operation with factory default settings.

After 5 minutes of inactivity the sensing range / sensitivity adjustment is locked. In order to reactivate the sensing range / sensitivity adjuster for more than 180 degrees.

#### Accessories

Other suitable accessories can be found at www.pepperl-fuchs.com

6