Safety light curtain

SLC30-1500/129/151





Model Number

SLC30-1500/129/151

with 2 separate fail-safe semiconductor outputs

Features

- ٠ Sensing range up to 15 m
- Resolution 30 mm (hand protection) ٠
- Self-monitoring (type 4 according to IEC/EN 61496-1)
- Master/Slave detection, Plug and ٠ Play
- Degree of protection IP67 ٠
- Integrated function display ٠
- Pre-fault indication
- Connection via appliance socket • M12 x b1
- Safety outputs OSSD in potential-se-٠ parated semiconductor version
- Protective field height up to 1800 mm ٠
- Start/Restart disable preset by Option /129

Accessories

PG SLC-1500 Protective glass panes for SLC series

BA SLC

Pepperl+Fuchs Group www.pepperl-fuchs.com

laser alignment aid for safety light cutrtains series SLC



Electrical connection

Dimensions



Pinout

1

2

з

4





Germany: +49 621 776 4411 fa-info@us.pepperl-fuchs.com fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



Technical data	
System components	
Emitter	SLC30-1500-T/92
Receiver	SLC30-1500-R/129/151
General specifications	
Effective detection range	0.2 15 m
Light source	IRED
Light type	modulated infrared light
LED risk group labelling	exempt group
Tests	IEC/EN 61496
Safety type according to IEC/EN 61	
Width of protected area	0.2 15 m
Protection field height	1500 mm
Number of beams	80
Operating mode	can be selected with or without start/restart disable
Optical resolution	30 mm <5 °
Angle of divergence	
Functional safety related parameter	
Safety Integrity Level (SIL)	SIL 3 PL e
Performance level (PL) Category	Cat. 4
Mission Time (T _M)	20 a
PFH _d	1.5 E-8
Type	4
Indicators/operating means	
Operation indicator	7-segment display in emitter
Diagnostics indicator	7-segment display in receiver
Function indicator	in receiver:
	LED red: OSSD off
	LED green: OSSD on
	LED yellow: Protected area free, system start-ready
Pre-fault indicator	LED orange
Control elements	switch for start/restart disable, transmission coding
Electrical specifications	
	J _B 24 V DC (-30 %/+25 %)
	0 Emitter: ≤ 100 mA receiver: ≤ 150 mA
Protection class	III
Input	
Activation current	approx. 10 mA
Activation time	0.03 1 s
Test input	Reset-input for system test (not for option /129) Start release
Function input	Statt release
Output	2 constrated fail and comission durates outputs
Safety output Signal output	2 separated fail safe semiconductor outputs 1 PNP, max. 100 mA for start readiness
Switching voltage	Operating voltage -2 V
Switching current	max. 0.5 A
Response time	26 ms
Conformity	20115
Functional safety	ISO 13849-1
T unctional safety	
Product standard	EN 61496-1 ; IEC 61496-2
Ambient conditions	
Ambient temperature	0 55 °C (32 131 °F)
Storage temperature	-25 70 °C (-13 158 °F)
Relative humidity	max. 95 %, not condensing
Mechanical specifications	
Housing length L	1610 mm
Degree of protection	IP67
Connection	Emitter: M12 connector, 4-pin Receiver: M12 connector, 8-pin
Material	
Housing	extruded aluminum profile, RAL 1021 (yellow) coated
Optical face	Plastic pane
Mass	Per 4800 g
General information	
Note	Startup/restart disable preset
Approvals and certificates	
CE conformity	CE
UL approval	cULus Listed
CCC approval	CCC approval / marking not required for products rated \leq 36 V
TÜV approval	TÜV

2

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



Curves/Diagrams







Notes

Master slave mode

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group www.pepperl-fuchs.com



Master:	SLC (semiconductor)
	or
	SLC/31 (relay)
Slave:	SLCS

Using slaves makes it possible to lengthen protective fields or to form protective fields that lie in more than just one level. When you select slaves that can be connected, you should take into consideration that the maximum number of 96 light rays must not be exceeded.

There are slaves for transmitters and receivers. These may simply be connected to the master light curtain. As many as 2 slaves may be connected respectively to the transmitter and receiver unit.

Installation:

- The end cap should be screwed off for the light curtain (without cable gland). 1
- 2 The plug-in jumper on the connectors of the printed circuit board, which is now visible, should be removed.
- The slave is designed so that the cap located on the cable connector can be plugged directly onto the open end of the light 3 curtain with the printed circuit board.
- 4 After you have screwed on the connection cap, the system is complete.

System accessories

- Mounting set SLC •
- Test rods SLC14/SLC30/SLC60
- Protective glass pieces for SLC (to protect the optically functional surface)
- Lateral screwed connection SLC
- Profile alignment aid
- Laser alignment aid SLC
- Mirror for SLC (for securing hazardous areas on multiple sides)
- Ground pillar UC SLP/SLC
- Housing for pillar Enclosure UC SLP/SLC
- Collision protector Damping UC SLP/SLC

4

