

Inclination sensor

INY030D-F99-B16-V15

- E1-Type approvalHigh shock resistance
- Extended temperature range -40 ... +85 °C
- CANopen interface
- Measuring range -15° ... +15°
- Increased noise immunity 100 V/m










Dimensions

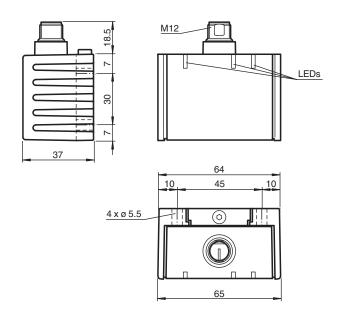


Technical Data

General specifications	
Туре	Inclination sensor, 2-axis
Measurement range	-15 15 °
Absolute accuracy	≤±0.2 °
Response delay	≤ 25 ms
Resolution	≤ 0.01 °
Repeat accuracy	≤ ± 0.02 °
Temperature influence	≤ 0.004 °/K
Functional safety related parameters	

Technical Data		
MTTF _d		300 a
Mission Time (T _M)		20 a
Diagnostic Coverage (DC)		0 %
Indicators/operating means		
Operation indicator		LED, green
Electrical specifications		
Operating voltage	U_B	10 30 V DC
No-load supply current	I_0	≤ 50 mA
Time delay before availability	t_{v}	≤ 2.5 s
Interface		
Interface type		CANopen
Device profile		CiA410, Ver. 1.2
Data output code		binary code
Node ID		1 127 , programmable
Transfer rate		10 1000 kBit/s , programmable
Termination		external
Cycle time		≥ 20 ms
Compliance with standards and directives		
Standard conformity		
Shock and impact resistance		100 g according to DIN EN 60068-2-27
Standards		EN 60947-5-2:2007 IEC 60947-5-2:2007
Approvals and certificates		
UL approval		cULus Listed, Class 2 Power Source
E1 Type approval		10R-04
Ambient conditions		
Ambient temperature		-40 85 °C (-40 185 °F)
Storage temperature		-40 85 °C (-40 185 °F)
Mechanical specifications		
Connection type		5-pin, M12 x 1 connector
Housing material		PA
Degree of protection		IP68 / IP69K
Mass		240 g
Factory settings		
Node ID		1
Transfer rate		250 kBit/s

 Connection





Wire colors in accordance with EN 60947-5-2

1	BN	(brown)
2	WH	(white)
3	BU	(blue)
4	BK	(black)
5	GY	(gray)

Accessories



V15S-T-CAN/DN-V15 Y-Splitter, M12 socket on M12 connector/socket



ICZ-TR-CAN/DN-V15 Terminal resistor for DeviceNet, CANopen

Sensor Orientation

 
In the default setting the zero position of the sensor is reached, when the sensor is mounted on a horizontal plane and electrical connection faces sidewards.

Mounting

Mounting of the sensor

Sensors from the -F99 series consist of a sensor module and accompanying cast aluminum housing. Select a horizontal flat surface with minimum dimensions of 70 mm \times 50 mm to mount the sensor.

Mount the sensor as follows:







- 1. Loosen the central screw under the sensor connection.
- 2. Slide back the clamping element until you are able to remove the sensor module from the housing.
- 3. Remove the sensor module from the housing
- 4. Position the housing at the required mounting location and secure using four countersunk screws. Make sure that the heads of the screws do not protrude.
- 5. Place the sensor module in the housing.
- 6. Slide the clamping element flush into the housing. Check that the sensor element is seated correctly.
- 7. Finally tighten the central screw.

The sensor is now mounted correctly.

Configuration

Baud rate setting

Inclination sensors by Pepperl+Fuchs are supplied with a baud rate of 250 kbit/s. To change the baud rate, write the new baud rate to object 2001h "Baud rate." If a "Reset sensor" command is issued via an NMT message or the power supply is interrupted, the sensor operates at the new baud rate. Invalid values are not adopted. In this case, the current setting is retained.

Example of modifying the baud rate from 250 kbit/s to 1 Mbit/s:

601h	2Fh	01h	20h	00h	08h	xxh	xxh	xxh
CAN	Com	Object index		Subi	New	not used		
-ID	man			ndex	baud			
	d				rate			
	Data	Data	Data	Data	Data	Data byte 6	Data	Data
	byte	byte	byte	byte	byte		byte	byte
	1	2	3	4	5		7	8

CAN ID: 601h, SDO1 channel of node 1

Command: 2Fh, write object, 1 byte of usable data
Object index: 2001h, note: low byte first, then high byte!

Subindex: 00h

New baud rate: 08h, for 1 Mbit/s New baud rate: 07h, for 800 kbit/s New baud rate: 06h, for 500 kbit/s New baud rate: 05h, for 250 kbit/s New baud rate: 04h, for 125 kbit/s New baud rate: 03h, for 100 kbit/s New baud rate: 02h, for 50 kbit/s New baud rate: 01h, for 20 kbit/s New baud rate: 00h, for 10 kbit/s

Indication

LED displays

The inclination sensor has three indicator LEDs that allow rapid visual monitoring.



eng.pdf

Inclination sensor

- The green **power** LED indicates the state of the power supply
- The yellow run LED indicates the bus and sensor status
- The red err LED indicates an error

power (green)	run (yellow)	err (red)	Meaning
Off	Off	Off	No power supply
On	Flashing constantly	Off	Pre-operational
On	1x flashing	Off	Stopped
On	On	Off	Operational
On	Off	On	CAN bus off
On	depending on bus status	1x flashing	Warning, e.g., outside measuring range
On	depending on bus status	2x flashing	Error, e.g., EEPROM checksum incorrect
Flashing constantly	Off	On	Undervoltage

Technical Features

EMC Properties

Interference immunity in accordance with

DIN ISO 11452-2: 100 V/m

Frequency band 20 MHz up to 2 GHz

Mains-borne interference in accordance with ISO 7637-2:

Pulse	1	2	2	3	3	4
		а	b	а	b	
Severity	I	1	- 1	I	I	-1
level	- 1	- 1	I	1	1	-1
	I	- 1	- 1	ı	ı	-1
Failure	С	Α	С	Α	Α	С

criterion

EN 61000- CD: 8 kV AD: 15 kV

4-2: /

Severity IV IV

level

EN 61000- 30 V/m (80...2500 MHz)

4-3:

Severity IV level

EN 61000- 2 kV 4-4: Severity III

level

EN 61000- 10 V (0.01...80 MHz)

4-6:

Severity III

level

EN 55011: Klasse A

