

## **Model Number**

#### UCC6000-30GH70S-IE2R2-V15


Ultrasonic diffuse sensor with pivoting transducer

#### **Features**

- Analog output 4 ... 20 mA
- 1 switch output
- Temperature compensation
- Synchronization options •
- Can be parameterized via the **ULTRA-PROG-IR software and** interface (accessories)
- High chemical resistance through • FEP coated transducer surface

## **Diagrams**

## Characteristic response curve

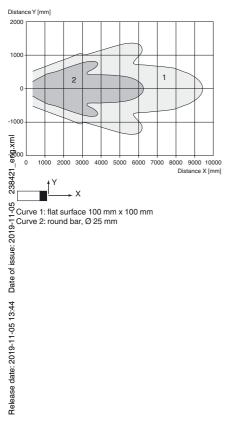

**General specifications** Sensing range Adjustment range Dead band Standard target plate Transducer frequency Response delay Nominal ratings Temperature drift Time delay before availability t Limit data Permissible cable length Indicators/operating means LED yellow LED green/yellow Potentiometer **Electrical specifications** Rated operating voltage Ue Operating voltage UB Ripple No-load supply current I<sub>0</sub> Interface Interface type Mode Input/Output Input/output type 0 Level 1 Level Input impedance Number of sensors Switching output Output type Default setting Repeat accuracy R Operating current IL Switching frequency Switching hysteresis Voltage drop Off-state current Analog output Output type Default setting Load resistor Ambient conditions Ambient temperature Storage temperature Shock resistance Vibration resistance Mechanical specifications Connection type Degree of protection Material Housing Transducer Installation position Mass Construction type Compliance with standards and directives Standard conformity Standards Approvals and certificates UL approval CSA approval CCC approval

**Technical data** 

# UCC6000-30GH70S-IE2R2-V15

350 6000 mm
400 6000 mm
0 350 mm
100 mm x 100 mm
approx. 80 kHz
≤ 275 ms
≤ ± 1.5 % of full-scale value
≤ 300 ms
max. 300 m
switching state switch output
yellow: object in evaluation range
green: Teach-In
switch output adjustable
24 V DC
20 30 V DC (including ripple)
$\leq 10 \%$
≤ 50 mA
Infrared
point-to-point connection
1 synchronization connection, bidirectional (Factory setting:
synchronized mode ) / Teach-In input
≤3 V
≥ 15 V
typ. 900 Ω
max. 10
1 switch output PNP, NO ( NC contact programmable )
400 6000 mm ( adjustable via potentiometer )
± 9 mm
300 mA , short-circuit/overload protected
≤1 Hz
60 mm ( programmable )
≤3V
≤ 10 μA
1 current output 4 20 mA , ascending/descending
programmable
rising ramp ; evaluation limit A1: 400 mm ; evaluation limit A2:
6000 mm
$\leq$ 500 $\Omega$
-25 70 °C (-13 158 °F)
-25 85 °C (-13 185 °F)
30 g , 11 ms period
10 55 Hz , Amplitude ± 1 mm
Openedation M40d. 5
Connector plug M12 x 1 , 5-pin IP65
Stainless steel 1.4571 / AISI 316Ti plastic PBT
FEP coated; epoxy resin/hollow glass sphere mixture;
polyurethane foam
any position
300 g
Cylindrical
EN 60947-5-2:2007+A1:2012
IEC 60947-5-2:2007 + A1:2012
EN 60947-5-7:2003 IEC 60947-5-7:2003
cULus Listed, General Purpose
cCSAus Listed, General Purpose
CCC approval / marking native diferenced ustantiated <26 V/

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group USA: +1 330 486 0001

www.pepperl-fuchs.com fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com


Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

**EPPERL+FUCHS** 

CCC approval / marking not required for products rated ≤36 V


1

# Dimensions

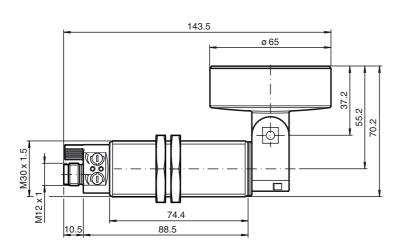


# **Additional Information**

 
# Analog output operating mode



# Switching output operating mode

 

## **Electrical Connection**

 

## **Pinout**



#### Wire colors in accordance with EN 60947-5-2

1	BN	(brown)
2	WH	(white)
3	BU	(blue)
4	BK	(black)
5	GY	(gray)

www.pepperl-fuchs.com

## Accessories

BF 30

Mounting flange, 30 mm

## BF 5-30

Universal mounting bracket for cylindrical sensors with a diameter of 5 ... 30 mm

#### V15-G-2M-PUR Female cordset, M12, 5-pin, PUR cable

UC-18/30GM-IR

Interface cable


## ULTRA-PROG-IR

Configuration software for ultrasonic sensors

## **Description of Sensor Functions**

## **Displays and Controls**

The sensor has two potentiometers and two display LEDs.

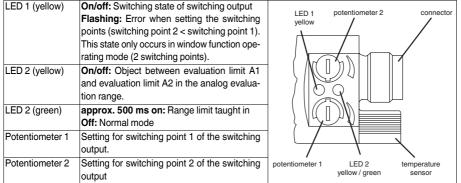

The potentiometer function described illustrates the default function. The function of the potentiometer can be altered using the ULTRA-PROG-IR software. As soon as a configuration has been changed, the potentiometer function selected using ULTRA-PROG-IR is activated.


## Setting the Sensor Using the Potentiometers

 The sensor is equipped with two potentiometers. These potentiometers are assigned to the switching output by default. The switching output operates in window mode by default (2 switching points). Potentiometer 1 is used to set the near switching point of the switching window. Potentiometer 2 is used to set the distant switching point of the switching window. Note:

The function of the potentiometer can be altered using the ULTRA-PROG-IR software. As soon as a configuration has been changed, the potentiometer function selected using ULTRA-PROG-IR is activated.

## Parameterization via ULTRA-PROG-IR

In order to be able to set the sensor parameters and adjust the sensor to the respective application, the sensor is able to communicate with a PC via the integrated infrared interface. The UC-18/30GM-IR interface cable is required to allow communication via this method. This cable is connected to an unused USB port on the PC.



The ULTRA-PROG-IR parameterization software is also required for setting the sensor parameters. The ULTRA-PROG-IR software can be downloaded for free from the **www.pepperl-fuchs.com** website. The software allows all open parameters to be set, including:

- All trip points and switching hystereses
- Output modes and behaviors
- Delay times
- Settings and setting ranges of the potentiometer
- Settings for teach-in and synchronization
- Definition of blind zones
- Sensor modes and measurement methods
- Filtering measurement values
- The following service functions are also available:
- Observing and recording measurement values
- Diagnosing interference reflections

## Teach-in

www.pepperl-fuchs.com

The sensor is equipped with a function input (XI). In order to teach in a limit value, this sensor must be parameterized as the Teach-in input using the ULTRA-PROG-IR parameterization software. This parameterization software allows you to specify what limit value is taught in. **Note:** 

The Teach-in function is not activated when the sensor is delivered.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"
Pepperl+Fuchs Group
USA: +1 330 486 0001
G

USA: +1 330 486 0001 Ge fa-info@us.pepperl-fuchs.com fa-i

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com fa-

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

#### Description of the Teach-in process:

- 1. Position an object at the required distance.
- 2. Connect the Teach-in input to L-.
- The green LED lights up briefly after approx. 3 seconds. This indicates that the required distance has been successfully saved. 3. Disconnect the Teach-in input from L-.

#### Note:

If the Teach-in input remains connected to L-, the Teach-in process is repeated every 3 seconds.

#### Synchronization

The sensor features a function input (XI). Using the ULTRA-PROG-IR parameterization software, this function input can be configured as a synchronization input to suppress mutual interference from external ultrasonic signals. This is illustrated in the following description. If the synchronization input is not connected, the sensor operates with internally generated cycle pulses.

#### **External synchronization**

The sensor can be synchronized by applying external rectangular pulses. The pulse duration must be  $\geq 100 \ \mu$ s. Each rising pulse edge sends an individual ultrasonic pulse. If the signal at the synchronization input is high, the sensor reverts to the normal, unsynchronized operating mode. If a low signal is applied to the synchronization input, the sensor switches to standby. In this operating mode, the last recorded output statuses are retained.

## Internal synchronization

#### Common mode operation

Up to ten sensors can be synchronized with each other. To do this, the synchronization inputs of the individual sensors are connected to each other. When configured in this state, all of the sensors send the ultrasonic signals together at the same time. The cycle rate corresponds to the cycle rate of the sensor with the lowest rate.

#### Multiplex mode

Up to ten sensors can work in multiplex mode; i.e. the sensors send their ultrasonic signals in succession. This prevents the sensor signals interfering with each other. In multiplex mode, the synchronization inputs of all sensors are connected to each other. An address must also be assigned to each sensor using the ULTRA-PROG-IR parameterization software, and the number of sensors to be synchronized must be determined. To start multiplex mode, all sensors are commissioned together by switching on the power supply.

#### **Mounting instruction**

The sensor is also suitable for outdoor use. Hereby the tranducer should be protected from direct ultravioilet radiation.