



 **IO-Link**



Operating Instructions  
IO-Link Master with PROFINET interface

DataLine

8 Ports

IP 65 / IP 66 / IP 67

**AL1302**

IO-Link: 1.1.2

ifm firmware: 2.0.35 or higher

LR DEVICE: 1.2.0.107 or higher

English

## Contents

|          |                                                    |           |
|----------|----------------------------------------------------|-----------|
| <b>1</b> | <b>Preliminary note</b>                            | <b>5</b>  |
| 1.1      | Legal and copyright information .....              | 5         |
| 1.2      | Purpose of the document .....                      | 5         |
| 1.3      | Symbols and styles used .....                      | 6         |
| 1.4      | Modification history .....                         | 6         |
| <b>2</b> | <b>Safety instructions</b>                         | <b>7</b>  |
| 2.1      | General .....                                      | 7         |
| 2.2      | Required background knowledge .....                | 7         |
| 2.3      | Warnings used .....                                | 8         |
| 2.4      | Safety symbols on the device .....                 | 8         |
| 2.5      | Tampering with the unit .....                      | 8         |
| <b>3</b> | <b>Intended use</b>                                | <b>9</b>  |
| 3.1      | Permitted use .....                                | 9         |
| 3.2      | Prohibited use .....                               | 9         |
| <b>4</b> | <b>Function</b>                                    | <b>10</b> |
| 4.1      | Communication, parameter setting, evaluation ..... | 11        |
| 4.1.1    | IO-Link .....                                      | 11        |
| 4.1.2    | Profinet .....                                     | 11        |
| 4.1.3    | Internet of Things (IoT) .....                     | 11        |
| 4.1.4    | Parameter setting .....                            | 11        |
| 4.1.5    | Visual indication .....                            | 12        |
| 4.2      | Digital inputs .....                               | 12        |
| 4.3      | IO-Link supply .....                               | 12        |
| <b>5</b> | <b>Mounting</b>                                    | <b>13</b> |
| 5.1      | Mount the device .....                             | 13        |
| <b>6</b> | <b>Electrical connection</b>                       | <b>14</b> |
| 6.1      | Remarks .....                                      | 14        |
| 6.2      | Profinet ports .....                               | 15        |
| 6.3      | IoT port .....                                     | 16        |
| 6.4      | IO-Link ports .....                                | 17        |
| 6.4.1    | Input circuit .....                                | 17        |
| 6.4.2    | IO-Link circuits .....                             | 18        |
| 6.5      | Connect the device .....                           | 19        |
| <b>7</b> | <b>Operating and display elements</b>              | <b>20</b> |
| 7.1      | Overview .....                                     | 20        |
| 7.2      | LED indicators .....                               | 21        |
| 7.2.1    | Status LEDs .....                                  | 21        |
| 7.2.2    | Ethernet interface .....                           | 21        |
| 7.2.3    | IoT port .....                                     | 22        |
| 7.2.4    | Voltage supply .....                               | 22        |
| 7.2.5    | IO-Link ports (Class A) .....                      | 22        |

|           |                                                                     |           |
|-----------|---------------------------------------------------------------------|-----------|
| <b>8</b>  | <b>Configuration</b>                                                | <b>23</b> |
| 8.1       | LR DEVICE .....                                                     | 24        |
| 8.1.1     | Remarks .....                                                       | 25        |
| 8.1.2     | IoT: Configure access rights .....                                  | 26        |
| 8.1.3     | IoT: Configure IP settings .....                                    | 27        |
| 8.1.4     | IoT: Configure the interface to the LR SMARTOBSERVER .....          | 28        |
| 8.1.5     | Fieldbus: Configure the Profinet port .....                         | 28        |
| 8.1.6     | IO-Link ports: Activate data transfer to the LR SMARTOBSERVER ..... | 29        |
| 8.1.7     | IO-Link ports: Configure operating mode .....                       | 30        |
| 8.1.8     | IO-Link ports: Set the device validation and data storage .....     | 31        |
| 8.1.9     | Firmware: Reset device to factory settings .....                    | 32        |
| 8.1.10    | Firmware: Reboot the device .....                                   | 32        |
| 8.1.11    | Configure IO-Link devices .....                                     | 33        |
| 8.2       | Profinet: Configure the device .....                                | 34        |
| 8.2.1     | Install GSD file .....                                              | 35        |
| 8.2.2     | Add the device to the Profinet network .....                        | 36        |
| 8.2.3     | Configure communication profile .....                               | 38        |
| 8.2.4     | Configure IO-Link ports .....                                       | 39        |
| 8.2.5     | Configure the Profinet interface .....                              | 40        |
| 8.2.6     | Profinet: Configure IO-Link devices .....                           | 40        |
| 8.2.7     | Read and write data cyclically .....                                | 41        |
| 8.2.8     | Profinet: Read & write device information .....                     | 41        |
| 8.2.9     | Profinet: Programmers' notes .....                                  | 42        |
| 8.3       | IoT Core .....                                                      | 44        |
| 8.3.1     | Configure IoT port .....                                            | 45        |
| 8.3.2     | Configure the fieldbus port .....                                   | 45        |
| 8.3.3     | Configure IO-Link ports .....                                       | 46        |
| 8.3.4     | Set application identification .....                                | 46        |
| 8.3.5     | Read / write cyclic process data .....                              | 46        |
| 8.3.6     | Read diagnostic data .....                                          | 47        |
| 8.3.7     | Read device information .....                                       | 47        |
| 8.3.8     | Control IO-Link master .....                                        | 48        |
| 8.3.9     | Configure IO-Link devices .....                                     | 48        |
| 8.3.10    | Read information about IO-Link devices .....                        | 48        |
| 8.3.11    | Examples .....                                                      | 49        |
| 8.3.12    | Programmers' notes .....                                            | 52        |
| <b>9</b>  | <b>Operation</b>                                                    | <b>56</b> |
| 9.1       | Identify device .....                                               | 56        |
| 9.2       | Firmware update .....                                               | 57        |
| 9.3       | Exchange IO-Link device .....                                       | 58        |
| <b>10</b> | <b>Maintenance</b>                                                  | <b>59</b> |
| <b>11</b> | <b>Factory settings</b>                                             | <b>60</b> |
| <b>12</b> | <b>Accessories</b>                                                  | <b>61</b> |
| <b>13</b> | <b>Appendix</b>                                                     | <b>62</b> |
| 13.1      | Technical data .....                                                | 63        |
| 13.1.1    | Application .....                                                   | 63        |
| 13.1.2    | Electrical data .....                                               | 63        |
| 13.1.3    | Inputs / outputs .....                                              | 63        |
| 13.1.4    | Inputs .....                                                        | 64        |

**Content**

|           |                                                                      |           |
|-----------|----------------------------------------------------------------------|-----------|
| 13.1.5    | Outputs.....                                                         | 64        |
| 13.1.6    | Interfaces.....                                                      | 64        |
| 13.1.7    | Operating conditions .....                                           | 65        |
| 13.1.8    | Approvals / tests .....                                              | 65        |
| 13.1.9    | Mechanical data .....                                                | 65        |
| 13.1.10   | Electrical connection .....                                          | 66        |
| 13.2      | Profinet.....                                                        | 67        |
| 13.2.1    | Parameter data.....                                                  | 67        |
| 13.2.2    | Cyclic data.....                                                     | 70        |
| 13.2.3    | Acyclic data .....                                                   | 72        |
| 13.3      | ifm IoT Core .....                                                   | 75        |
| 13.3.1    | Overview: IoT profile .....                                          | 76        |
| 13.3.2    | Overview: IoT types.....                                             | 79        |
| 13.3.3    | Overview: IoT services .....                                         | 80        |
| <b>14</b> | <b>Index</b>                                                         | <b>87</b> |
| <b>15</b> | <b>ifm weltweit • ifm worldwide • ifm à l'échelle internationale</b> | <b>89</b> |

# 1 Preliminary note

## Contents

|                                       |   |
|---------------------------------------|---|
| Legal and copyright information ..... | 5 |
| Purpose of the document .....         | 5 |
| Symbols and styles used .....         | 6 |
| Modification history .....            | 6 |

14801

## 1.1 Legal and copyright information

1631

© All rights reserved by **ifm electronic gmbh**. No part of this manual may be reproduced and used without the consent of **ifm electronic gmbh**.

- All product names, pictures, companies or other brands used on our pages are the property of the respective rights owners:
- AS-i is the property of the AS-International Association, (→ [www.as-interface.net](http://www.as-interface.net))
- CAN is the property of the CiA (CAN in Automation e.V.), Germany (→ [www.can-cia.org](http://www.can-cia.org))
- CODESYS™ is the property of the 3S – Smart Software Solutions GmbH, Germany (→ [www.codesys.com](http://www.codesys.com))
- DeviceNet™ is the property of the ODVA™ (Open DeviceNet Vendor Association), USA (→ [www.odva.org](http://www.odva.org))
- EtherNet/IP® is the property of the →ODVA™
- EtherCAT® is a registered trade mark and patented technology, licensed by Beckhoff Automation GmbH, Germany
- IO-Link® (→ [www.io-link.com](http://www.io-link.com)) is the property of the →PROFIBUS Nutzerorganisation e.V., Germany
- ISOBUS is the property of the AEF – Agricultural Industry Electronics Foundation e.V., Deutschland (→ [www.aef-online.org](http://www.aef-online.org))
- Microsoft® is the property of the Microsoft Corporation, USA (→ [www.microsoft.com](http://www.microsoft.com))
- PROFIBUS® is the property of the PROFIBUS Nutzerorganisation e.V., Germany (→ [www.profibus.com](http://www.profibus.com))
- PROFINET® is the property of the →PROFIBUS Nutzerorganisation e.V., Germany
- Windows® is the property of the →Microsoft Corporation, USA

## 1.2 Purpose of the document

22044

This document is only for device types "IO-Link master - Profinet gateway (DataLine) 8 port IP 65 / IP 66 / IP 67" (art. no.: AL1302).

It is part of the device and contains information about the correct handling of the product.

- Read this document before using the device.
- Keep this document during the service life of the device.

## 1.3 Symbols and styles used

13839

- ... Instructions
- > ... Reaction, result
- ... Cross-reference or internet link
- 123 Decimal number
- 0x123 Hexadecimal number
- 0b010 Binary number
- [...] Designation of pushbuttons, buttons or indications

## 1.4 Modification history

21676

| Version | Topic                    | Date    |
|---------|--------------------------|---------|
| 00      | New creation of document | 12/2017 |

## 2 Safety instructions

| Contents                            |   |
|-------------------------------------|---|
| General .....                       | 7 |
| Required background knowledge ..... | 7 |
| Warnings used .....                 | 8 |
| Safety symbols on the device .....  | 8 |
| Tampering with the unit .....       | 8 |

213

### 2.1 General

22068



The plant manufacturer is responsible for the safety of the plant in which the device is installed.

If the device is used in a way that is not intended by the manufacturer, the protection supported by the device may be impaired.

Non-observance of the instructions, operation which is not in accordance with use as prescribed below, wrong installation or incorrect handling can affect the safety of operators and machinery.

- ▶ Observe these operating instructions.
- ▶ Adhere to the warning notes on the product.

### 2.2 Required background knowledge

22046

This document is intended for specialists. Specialists are people who, based on their relevant training and experience, are capable of identifying risks and avoiding potential hazards that may be caused during operation or maintenance of the product.

The document contains information about the correct handling of the product.

## 2.3 Warnings used

13685



### **WARNING**

Death or serious irreversible injuries may result.



### **CAUTION**

Slight reversible injuries may result.

### **NOTICE**

Property damage is to be expected or may result.



Important note

Non-compliance may result in malfunction or interference.



Information

Supplementary note.

## 2.4 Safety symbols on the device

15021



General warning

When this symbol is shown, consult the corresponding section in the operating instructions.

## 2.5 Tampering with the unit

11242



### **WARNING**

Tampering with the units can affect the safety of operators and machinery!

Tampering with the units is not allowed.

In case of non-compliance our liability and warranty expire.

- ▶ Do not open the devices!
- ▶ Do not insert any objects into the devices!
- ▶ Prevent metal foreign bodies from penetrating!



### 3 Intended use

#### Contents

|                     |   |
|---------------------|---|
| Permitted use ..... | 9 |
| Prohibited use..... | 9 |

18761

#### 3.1 Permitted use

22052

The IO-Link master serves as a gateway between intelligent IO-Link devices and the fieldbus. The device is designed for use without a control cabinet.

#### 3.2 Prohibited use

22053

The device may not be used beyond the limits of the technical data (→ **Technical data** (→ p. [63](#)))!

## 4 Function

### Contents

|                                                    |    |
|----------------------------------------------------|----|
| Communication, parameter setting, evaluation ..... | 11 |
| Digital inputs .....                               | 12 |
| IO-Link supply.....                                | 12 |

7482

## 4.1 Communication, parameter setting, evaluation

### Contents

|                                |    |
|--------------------------------|----|
| IO-Link .....                  | 11 |
| Profinet .....                 | 11 |
| Internet of Things (IoT) ..... | 11 |
| Parameter setting .....        | 11 |
| Visual indication .....        | 12 |

7485

### 4.1.1 IO-Link

7773

The device offers the following IO-Link functions:

- IO-Link master (IO-Link revision 1.0 and 1.1)
- 8 IO-Link ports for connection of IO-Link devices
- Provision of process data of the connected IO-Link devices for LR SMARTOBSERVER monitoring software (→ [www.ifm.com](http://www.ifm.com))

### 4.1.2 Profinet

2259

The device offers the following Profinet functions:

- Provision of the functions of a Profinet RT Device (Class B)
- 2 port switch for access to the Profinet interface (X21/X22)
- Gateway for transmission of the process and parameter data between the connected IO-Link devices and the higher-level Profinet controller

### 4.1.3 Internet of Things (IoT)

8355

The device has an Ethernet port (X23) for Internet-of-Things applications. The interface allows separate access from IT networks to parameters, process and monitoring data of the IO-Link master and the connected IO-Link devices. Different protocols (e.g. TCP/IP JSON) are supported.

### 4.1.4 Parameter setting

7284

The device provides the following configuration options:

- Parameter setting of the IO-Link master of the AL1302 with LR DEVICE parameter setting software, Profinet projection software or ifm IoT-Core services.
- Parameter setting of the connected IO-Link devices (sensors, actuators) with LR DEVICE parameter setting software, Profinet projection software or ifm IoT-Core services
- Storage of parameter sets of the connected IO-Link devices for automatic recovery (data storage)

### 4.1.5 Visual indication

7772

The device has the following visual indicators:

- Status and error indication of the gateway, of the Profinet connection and of the system
- Status display of the voltage supply
- Status and activity display of the Ethernet connection
- Status, error and short circuit/overload indication of the IO-Link ports

## 4.2 Digital inputs

7584

The device has 8 additional digital inputs (type 2 according to EN 61131-2).

The digital inputs are on pin 2 of the IO-Link ports X01 ... X08.

All inputs refer to the potential of the device supply (pin 3).

## 4.3 IO-Link supply

7623

The device has 8 supplies for IO-Link devices.

The IO-Link ports X01...X08 are ports class A.

Every supply provides short circuit monitoring.

The device ensures fire protection for the connected IO-Link devices by providing a power-restricted circuit at the IO-Link ports (according to IEC61010-1 and Class 2 according to UL1310).

## 5 Mounting

### Contents

|                        |    |
|------------------------|----|
| Mount the device ..... | 13 |
|------------------------|----|

22016

### 5.1 Mount the device

15540



- ▶ Disconnect the system from power before installation.
- ▶ For installation choose a flat mounting surface.
- ▶ Please observe the maximum tightening torque.

- ▶ Fix the unit to the mounting surface using 2 M5 mounting screws and washers.
  - Tightening torque: 1.8 Nm
- ▶ Ground the unit via the two mounting screws of the upper mounting lugs.

## 6 Electrical connection

### Contents

|                          |    |
|--------------------------|----|
| Remarks .....            | 14 |
| Profinet ports .....     | 15 |
| IoT port .....           | 16 |
| IO-Link ports .....      | 17 |
| Connect the device ..... | 19 |

22017

### 6.1 Remarks

18076



A qualified electrician must connect the unit.

- ▶ Observe the national and international regulations for the installation of electrical equipment.

Device is only suitable for operation on SELV/PELV voltages.

- ▶ Observe the information concerning IO-Link circuits (→ **IO-Link circuits** (→ p. [18](#)))!

The device contains components that can be damaged or destroyed by electrostatic discharge (ESD).

- ▶ Observe the required safety measures against electrostatic discharge!

The IP rating depends on the individual protection ratings of the unit, the applied connection elements and the corresponding protective covers.

- ▶ For UL applications: For connecting the device and the IO-Link devices use UL certificated cables of category CYJV or PVVA with a minimum temperature rating of 100°C.
- ▶ Depending on the installation environments apply a cable relief to avoid invalid load of the mounting points and the M12 connectors.
- ▶ Ensure a proper fit and correct installation of the M12 connectors. If disregarded the desired protection rating can not be guaranteed.


Wiring: → **Technical data** (→ p. [63](#))



The communication interfaces are separated from the device supply according to EN61010-1 considering basis isolation as secondary circuit with maximum 30 V DC derived from the applied voltage up to 300 V of overvoltage category II. The communication interfaces are designed for a network environment 0 according to IEC TR62102.

## 6.2 Profinet ports


17849

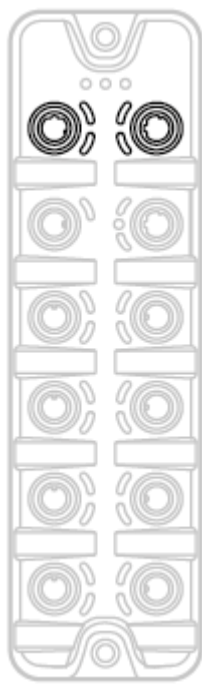

- ▶ Connect the device via the M12 socket X21 and/or X22 to the Profinet network (e.g. Profinet PLC, additional Profinet device)
  - Tightening torque: 0.6...0.8 Nm
- ▶ To connect the devices, use M12 connectors with protection rating IP 65 / IP 66 / IP 67 or higher (→ **Accessories** (→ p. [61](#))).
- ▶ Cover the unused sockets with M12 protective caps (→ **Accessories** (→ p. [61](#))).
  - Tightening torque 0.6...0.8 Nm

## 6.3 IoT port

11029

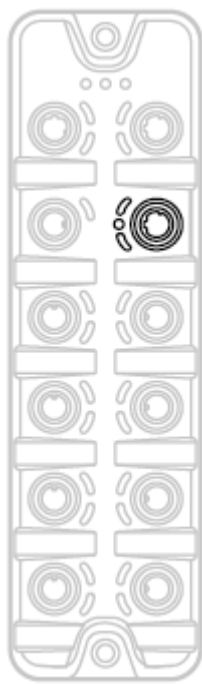


- ▶ Connect the device via the M12 socket X23 to the IT network (e.g. laptop/PC with installed LR DEVICE parameter setting software, laptop/PC with installed LR SMARTOBSERVER monitoring software)
  - Tightening torque: 0.6...0.8 Nm
- ▶ To connect the devices, use M12 connectors with protection rating IP 65 / IP 66 / IP 67 or higher (→ **Accessories** (→ p. [61](#))).
- ▶ Cover the unused sockets with M12 protective caps (→ **Accessories** (→ p. [61](#)))
  - Tightening torque 0.6...0.8 Nm



## 6.4 IO-Link ports

22684

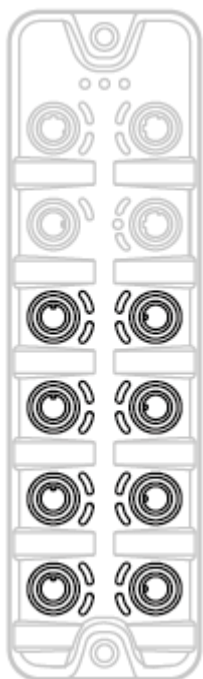

### Ports X01...X08: For use as IO-Link port class A:

- ▶ Connect the connector of the IO-Link devices with the M12 sockets X01 ... X08.
  - Tightening torque: 0.6...0.8 Nm
  - Maximum cable length per IO-Link interface: 20 m
- ▶ For the connection, use M12 connectors with protection rating IP 65 / IP 66 / IP 67 or higher (→ Accessories).

### Ports X01...X08: For use as IO-Link port class B:

- ▶ Connect the connector of the IO-Link devices via the adapter with the M12 sockets X01 ... X08.
  - Tightening torque: 0.6...0.8 Nm
- ▶ To connect the devices, use M12 connectors with protection rating IP 65 / IP 66 / IP 67 or higher (→ Accessories).
- ▶ Cover the unused sockets with M12 protective caps (→ Accessories).
  - Tightening torque 0.6...0.8 Nm

### 6.4.1 Input circuit

18629

The inputs of the ports X01...X08 (pin 2) provide a type 2 behaviour according to standard EN61131-2, the connected electronics must be rated for this electrically.

## 6.4.2 IO-Link circuits

11616

The IO-Link interfaces of the device meet the requirements of the IO-Link specification 1.0 to 1.1.2.



The connected IO-Link devices may only be supplied via the AL1302.

Exception: Connection of IO-Link devices to ports X01...X08 via suitable connection technology for port class B operation (→ **IO-Link ports** (→ p. 17)):

The external supply for port class B operation must be galvanically separated from the circuit of the AL1302 by assuring basic isolation (according to EN61010-1, secondary circuit with maximum 30 V DC derived from applied voltage up to 300 V of overvoltage category II)!

The isolation must be done both for IO-Link devices and for the connection technology.

### NOTICE

Risk of material damage


If the requirements of galvanic separation of the circuits are not observed, the fire protection of the device can not be assured.

- Observe the requirements of the electrical connection of IO-Link devices for port class B operation!

Further information: → **Technical data** (→ p. 63)

## 6.5 Connect the device

2580

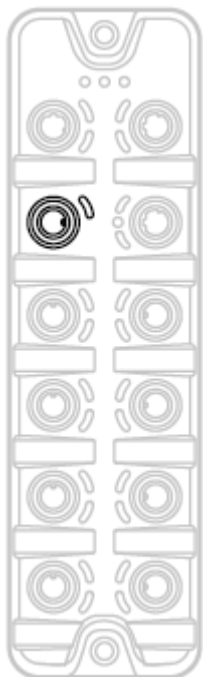

- ▶ Disconnect power.
- ▶ Connect the unit via M12 socket X31 to 24 V DC (20...30 V SELV/PELV, for cULus max. 24 V DC; according to EN61010-1, secondary circuit with maximum 30 V DC derived from applied voltage up to 300 V of overvoltage category II).
  - Tightening torque: 0.6...0.8 Nm
  - Maximum cable length: 25 m
- ▶ To connect the device, use M12 connectors with protection rating IP 65 / IP 66 / IP 67 or higher (→ Accessories).

If the port X01...X08 will be used as IO-Link ports Class B:

- ▶ Connect adapter for Port Class B operation to 24 V DC (20...30 V SELV/PELV, for cULus max. 24 V DC; according to EN61010-1, secondary circuit with maximum 30 V DC derived from applied voltage up to 300 V of overvoltage category II) (→ **IO-Link ports** (→ p. [17](#)))
  - Tightening torque: 0.6...0.8 Nm

## 7 Operating and display elements


### Contents

|                      |    |
|----------------------|----|
| Overview.....        | 20 |
| LED indicators ..... | 21 |

5440

### 7.1 Overview

17857

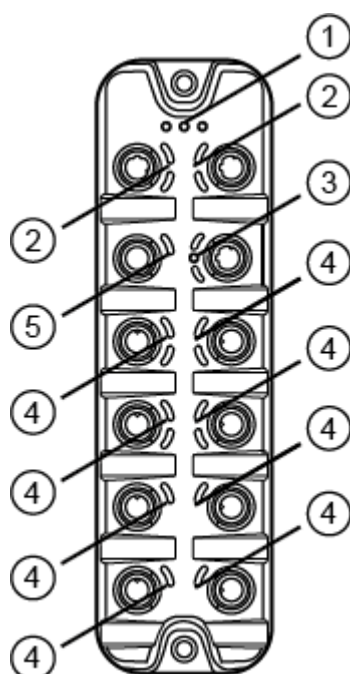

- ① RDY, BF and SF status LEDs  
→ **Status LEDs** (→ p. [21](#))
- ② LNK and ACT status LEDs of the Profinet interfaces 1 (X21) and 2 (X22)  
→ **Ethernet interface** (→ p. [21](#))
- ③ LNK, ACT status-LEDs and IoT LED of the IoT interface (X23)  
→ **IoT port** (→ p. [22](#))
- ④ IOL and DI status-LEDs of the IO-Link port (X01...X08)  
→ **IO-Link ports (Class A)** (→ p. [22](#))
- ⑤ PWR status LED of the voltage supply (X31)  
→ **Voltage supply** (→ p. [22](#))

## 7.2 LED indicators

22024

The device only has the following LED indicators:

### 7.2.1 Status LEDs

22034

The RDY LED shows the status of the gateway.

The BF LED (Bus Failure) shows the status of the Profinet connection.

The SF LED (System Failure) shows the status of the system.

| Status LED |       |              | Description                                                                                                                                                                                 |
|------------|-------|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| RDY        | green | on           | Gateway functions properly                                                                                                                                                                  |
|            |       | flashes 1 Hz | Error                                                                                                                                                                                       |
|            |       | flashes 5 Hz | Firmware update                                                                                                                                                                             |
|            |       | off          | Gateway does not function; Unit reboots                                                                                                                                                     |
| BF         | red   | on           | Bus error                                                                                                                                                                                   |
|            |       | flashes 1 Hz | No connection to the Profinet controller                                                                                                                                                    |
|            |       | off          | error-free                                                                                                                                                                                  |
| SF         | red   | on           | <ul style="list-style-type: none"> <li>Error in gateway</li> <li>At least 1 IO-Link device sends warning / alarm (temperature, over/under current, over/under voltage, shortcut)</li> </ul> |
|            |       | off          | error-free                                                                                                                                                                                  |

### 7.2.2 Ethernet interface

22027

Each Ethernet interface (X21, X22) has 2 LEDs (LNK and ACT). The LEDs indicate the status of the Ethernet connection.

| Status LED |        |         | Description                                     |
|------------|--------|---------|-------------------------------------------------|
| LNK        | green  | on      | Ethernet connection established                 |
|            |        | off     | No Ethernet connection                          |
| ACT        | yellow | flashes | Data is transmitted via the Ethernet interface. |
|            |        | off     | No data transmission                            |

## 7.2.3 IoT port

7722

The IoT port (X23) has the 3 LNK, ACT and IoT LEDs. The LEDs indicate the status of the Ethernet connection and the device identification.

| Status LED |        |         | Description                                     |
|------------|--------|---------|-------------------------------------------------|
| LNK        | green  | on      | Ethernet connection established                 |
|            |        | off     | No Ethernet connection                          |
| ACT        | yellow | flashes | Data is transmitted via the Ethernet interface. |
|            |        | off     | No data transmission                            |
| IoT        | green  | flashes | Device identification active                    |

## 7.2.4 Voltage supply

22026

The interface for voltage supply (X31) has the LED that is marked as US. The LED indicates the status of the voltage supply.

| Status LED |       |     | Description                                                            |
|------------|-------|-----|------------------------------------------------------------------------|
| US         | green | on  | The supply voltage Us is applied.                                      |
|            |       | off | No supply voltage is applied or the applied supply voltage is too low. |

## 7.2.5 IO-Link ports (Class A)

22029

Each IO-Link port Class A (X01 ... X08) has 2 LEDs marked as IOL and DI. The LEDs indicate the status of the IO-Link port.

| Status LED |        |              | Description                                                  |
|------------|--------|--------------|--------------------------------------------------------------|
| IOL        | yellow | on           | Interface configured as DI/DO: Pin 4 (C/Q) = ON              |
|            |        | off          | Interface configured as DI/DO: Pin 4 (C/Q) = OFF             |
|            | green  | on           | IO-Link transmission functions properly                      |
|            |        | flashes 1 Hz | Interface configured as IO-Link, but no IO-Link transmission |
|            | red    | on           | Short circuit or overload in supply voltage                  |
|            |        | flashes 1 Hz | Transmission error                                           |
| DI         | yellow | on           | Digital input: Pin 2 (DI) = ON                               |
|            |        | off          | Digital input : Pin 2 (DI) = OFF                             |

## 8 Configuration

### Contents

|                                      |    |
|--------------------------------------|----|
| LR DEVICE.....                       | 24 |
| Profinet: Configure the device ..... | 34 |
| IoT Core.....                        | 44 |

22367

## 8.1 LR DEVICE

### Contents

|                                                                     |    |
|---------------------------------------------------------------------|----|
| Remarks .....                                                       | 25 |
| IoT: Configure access rights .....                                  | 26 |
| IoT: Configure IP settings .....                                    | 27 |
| IoT: Configure the interface to the LR SMARTOBSERVER .....          | 28 |
| Fieldbus: Configure the Profinet port .....                         | 28 |
| IO-Link ports: Activate data transfer to the LR SMARTOBSERVER ..... | 29 |
| IO-Link ports: Configure operating mode .....                       | 30 |
| IO-Link ports: Set the device validation and data storage .....     | 31 |
| Firmware: Reset device to factory settings .....                    | 32 |
| Firmware: Reboot the device .....                                   | 32 |
| Configure IO-Link devices .....                                     | 33 |

22822

On delivery, the AL1302 is configured with the factory settings (→ **Factory settings** (→ p. [60](#))).

Required software: LR DEVICE (1.2.0.107) (art.-No.: QA0011/QA0012)



## 8.1.1 Remarks

### Contents

|                                 |    |
|---------------------------------|----|
| Offline parameter setting ..... | 25 |
| VPN connection .....            | 25 |

22369

### Offline parameter setting

22405

The AL1302 supports the offline parameter setting. In this context, the user creates and stores a configuration for the unit and the connected IO-Link devices without being connected to the AL1302. The configuration created in this way can be stored as a file (\*.lrp) and loaded to the device and activated at a later date.



Further information about offline parameter setting: → Operating instructions of the parameter setting software LR DEVICE

### VPN connection

22762



An active VPN connection blocks the access of the parameter setting software LR DEVICE to the Profinet interface of the AL1302.

- Deactivate the VPN connection in order to be able to access the AL1302 with the LR DEVICE.

## 8.1.2 IoT: Configure access rights

16555

The access rights define which instance may read and / or write the parameter data, process data and event/diagnostic messages.

In order to configure the access rights to the IO-Link master:

- ▶ Select [IoT] menu.
- > The menu page shows the current settings.
- ▶ Set the following parameters as required:

| Name            | Description                                                                                                                                            | Possible values              |                                                                                                                                                                                                                                                                                        |
|-----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| [Access Rights] | The access rights to the parameter data, process data and the event/diagnostic messages of the IO-Link master as well as the connected IO-Link devices | [Profinet + IoT]             | <ul style="list-style-type: none"> <li>▪ Profinet and IoT Core have read and write access rights to parameters and process data</li> <li>▪ Profinet and &lt;IoT Core&gt; have read access rights to events/alarms</li> </ul>                                                           |
|                 |                                                                                                                                                        | [Profinet + IoT (read-only)] | <ul style="list-style-type: none"> <li>▪ Profinet has read and write access rights to parameters and process data</li> <li>▪ Profinet has read access rights to events/alarms</li> <li>▪ IoT Core only has read access rights to parameters, process data and events/alarms</li> </ul> |
|                 |                                                                                                                                                        | [IoT only]                   | <ul style="list-style-type: none"> <li>▪ IoT Core has read and write access rights to parameters and process data</li> <li>▪ IoT has read access rights to events/alarms</li> <li>▪ Profinet has no access rights</li> </ul>                                                           |

- ▶ Save changed values on the device.



If the parameter [Access Rights] = [Profinet + IoT]:

Different parameter settings in the Profinet projection software and the IoT applications can result in undesired system behaviour. The set values of the Profinet projection software apply.



Changes of the parameter [Access Rights] are only effective after restarting the device.

To activate the changed access rights:

- ▶ **Firmware: Reboot the device** (→ p. [32](#))

### 8.1.3 IoT: Configure IP settings

17713

For access to the IO-Link master via the IT infrastructure the user has to set the IP settings of the IoT port.



To configure the IP settings with DHCP, a DHCP server has to be active in the IT network. If no DHCP server can be reached in the IT network, an IP address is automatically assigned to the IoT port with the Zeroconfig protocol (address range: → Factory settings).

To configure the IP settings of the IoT port:

- ▶ Select [IoT] menu.
- > The menu page shows the current settings.
- ▶ Set the following parameters as required:

| Name                          | Description                                       | Possible values              |                                                      |
|-------------------------------|---------------------------------------------------|------------------------------|------------------------------------------------------|
| [DHCP]                        | Activate/deactivate the DHCP client of the device | [Static IP]                  | IP settings were set by the user                     |
|                               |                                                   | [DHCP]                       | IP settings are set by a DHCP server in the network. |
| [IP address]*                 | IP address of the IoT port                        | Factory setting: 169.254.X.X |                                                      |
| [Subnet mask]*                | Subnet mask of the Ethernet network               | Factory setting: 255.255.0.0 |                                                      |
| [Default gateway IP address]* | IP address of the network gateway                 | Factory setting: 0.0.0.0     |                                                      |
| [MAC address]                 | MAC address of the IoT port                       | The value is firmly set.     |                                                      |

\* ... can only be edited if parameter [DHCP] = [Static IP]

- ▶ Save changed values on the device.

## 8.1.4 IoT: Configure the interface to the LR SMARTOBSERVER

16552

To enable data transfer between the device and the LR SMARTOBSERVER monitoring software, the LR SMARTOBSERVER monitoring software interface has to be configured.

- ▶ Select [IoT] menu.
- > The menu page shows the current settings.
- ▶ Set the following parameters as required:

| Name                          | Description                                                                                     | Possible values                  |                                |
|-------------------------------|-------------------------------------------------------------------------------------------------|----------------------------------|--------------------------------|
| [IP address LR SMARTOBSERVER] | IP address of the PC on which the LR SMARTOBSERVER is installed.                                | Factory setting: 255.255.255.255 |                                |
| [Port LR SMARTOBSERVER]       | Port number that is used to send process data to the LR SMARTOBSERVER                           | 0<br>...<br>65535                | Factory setting: 35100         |
| [Interval LR SMARTOBSERVER]   | Cycle time for the transfer of the process data to the LR SMARTOBSERVER (value in milliseconds) | [Off]                            | no transfer                    |
|                               |                                                                                                 | 500<br>...<br>2147483647         | 500 ms<br>...<br>2147483647 ms |
| [Application Tag]             | Source identifier of the IO-Link master in the structure of the LR SMARTOBSERVER (String32)     | Factory setting: AL1302          |                                |



After changing the parameter [Port LR SMARTOBSERVER] or [Application Tag], it may take 120 seconds before the device establishes a new TCP connection.

To prevent the delay:

- ▶ Reboot the device after the parameter change.
- ▶ Save changed values on the device.

## 8.1.5 Fieldbus: Configure the Profinet port

16581

The Profinet ports X21/X22 have to be configured via the Profinet for access to the device.

To set the IP properties of the fieldbus port:

- ▶ Select [Fieldbus] menu.
- > The menu page shows the current settings.
- ▶ Set the following parameters as required:

| Parameter                    | Description                                | Possible values          |
|------------------------------|--------------------------------------------|--------------------------|
| [IP address]                 | IP address of the Profinet port            | Factory setting: 0.0.0.0 |
| [Subnet mask]                | Subnet mask of the IP network              | Factory setting: 0.0.0.0 |
| [Default gateway IP address] | IP address of the gateway                  | Factory setting: 0.0.0.0 |
| [Profinet name]              | Name of the device in the Profinet network | e.g. al1xxx              |
| [MAC address]                | MAC address of the device                  | The value is firmly set. |

- ▶ Save changed values on the device.

## 8.1.6 IO-Link ports: Activate data transfer to the LR SMARTOBSERVER

16551

The user can decide separately for each IO-Link port if the process data of the connected IO-Link devices should be transferred to the LR SMARTOBSERVER.



To transfer process data the interfaces to the LR SMARTOBSERVER have to be correctly configured (→ **IoT: Configure the interface to the LR SMARTOBSERVER** (→ p. [28](#))).

To activate / deactivate data transfer:

- ▶ Select [Port x] menu (x = 1...8).
- > The menu page shows the current settings.
- ▶ Set the following parameters as required:

| Name                               | Description                                                                  | Possible values |                                 |
|------------------------------------|------------------------------------------------------------------------------|-----------------|---------------------------------|
| [Transmission to LR SMARTOBSERVER] | Transfer of process data of the connected IO-Link device to LR SMARTOBSERVER | [Disabled]      | Process data is not transferred |
|                                    |                                                                              | [Enabled]       | Process data is transferred     |

- ▶ Save changed values on the device.

## 8.1.7 IO-Link ports: Configure operating mode

17439

The IO-Link ports X01...X08 of the device support the following operating modes:

- Digital input (DI): binary input signal at pin 4 (C/Q) of the IO-Link port
- Digital output (DO): binary output signal at pin 4 (C/Q) of the IO-Link port
- IO-Link: IO-Link data transfer via pin 4 (C/Q) of the IO-Link port

The user can set the operating mode separately for each IO-Link port.

To set the operating mode of an IO-Link port:

- Select [Port x] menu (x = 1...8).
- > The menu page shows the current settings.
- Set the following parameters as required:

| Name                  | Description                                                                                                           | Possible values            |                                                                |
|-----------------------|-----------------------------------------------------------------------------------------------------------------------|----------------------------|----------------------------------------------------------------|
| [Mode]                | Operating mode of the IO-Link port                                                                                    | [Disabled]                 | Port deactivated                                               |
|                       |                                                                                                                       | [DI]                       | Operation as digital input                                     |
|                       |                                                                                                                       | [DO]                       | Operation as digital output                                    |
|                       |                                                                                                                       | [IO-Link]                  | Operation as IO-Link interface                                 |
| [Cycle time actual]** | Current cycle time of the data transfer between IO-Link master and IO-Link device on the port (value in microseconds) | Parameter can only be read |                                                                |
| [Cycle time preset]*  | Cycle time of the data transfer between the IO-Link master and the IO-Link device at the port (value in microseconds) | 0                          | The device automatically sets the fastest possible cycle time. |
|                       |                                                                                                                       | 1                          | 1 microsecond                                                  |
|                       |                                                                                                                       | ...                        | ...                                                            |
|                       |                                                                                                                       | 132800                     | 132800 microseconds                                            |
| [Bitrate]**           | Current transmission rate of the data transfer between the IO-Link master and the IO-Link device on the port          | Parameter can only be read |                                                                |

\* ... Parameter only available if [Mode] = [IO-Link]

\*\* ... Parameter only visible if the IO-Link device is connected to the IO-Link port.

- Save changed values on the device.

## 8.1.8 IO-Link ports: Set the device validation and data storage

17945

In the operating mode "IO-Link" the user can set the behaviour of the IO-Link port with regard to device validation and the storage / restoration of the parameter data of the connected IO-Link device.

To configure the device validation and the data storage:

- Select [Port x] menu (x = 1...8).
- > The menu page shows the current settings.
- Set the following parameters as required:

| Name                        | Description                                                                                                            | Possible values                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|-----------------------------|------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| [Validation / Data Storage] | Supported IO-Link standard and behaviour of the device during connection of a new IO-Link device on port x (x = 1...8) | [No check and clear]                                | <ul style="list-style-type: none"> <li>▪ No verification of the vendor ID and device ID</li> <li>▪ No data storage</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|                             |                                                                                                                        | [Type compatible V1.0 device]                       | <ul style="list-style-type: none"> <li>▪ IO-Link device is compatible with the V1.0 IO-Link standard</li> <li>▪ Verification whether it is an IO-Link device of the same type (validation via vendor ID and device ID)</li> <li>▪ No data storage</li> </ul>                                                                                                                                                                                                                                                                                                                 |
|                             |                                                                                                                        | [Type compatible V1.1 device]                       | <ul style="list-style-type: none"> <li>▪ IO-Link device is compatible with the V1.1 IO-Link standard</li> <li>▪ Verification whether it is an IO-Link device of the same type (validation via vendor ID and device ID)</li> <li>▪ No data storage</li> </ul>                                                                                                                                                                                                                                                                                                                 |
|                             |                                                                                                                        | [Type compatible V1.1 device with Backup + Restore] | <ul style="list-style-type: none"> <li>▪ IO-Link device is compatible with the V1.1 IO-Link standard</li> <li>▪ Verification whether it is an IO-Link device of the same type (validation via vendor ID and device ID)</li> <li>▪ The IO-Link master saves the parameter values of the connected IO-Link device; modifications of the parameter values are also saved (observe the note!)</li> <li>▪ When connecting an IO-Link device with factory settings, the parameter values stored in the IO-Link master are restored automatically on the IO-Link device.</li> </ul> |
|                             |                                                                                                                        | [Type compatible V1.1 device with Restore]          | <ul style="list-style-type: none"> <li>▪ IO-Link device is compatible with the V1.1 IO-Link standard</li> <li>▪ Verification whether it is an IO-Link device of the same type (validation via vendor ID and device ID)</li> <li>▪ The IO-Link master saves the parameter values of the connected IO-Link device once.</li> <li>▪ When connecting an IO-Link device with factory settings, the parameter values stored in the IO-Link master are restored automatically on the IO-Link device.</li> </ul>                                                                     |
| [Vendor ID]                 | ID of the manufacturer that is to be validated                                                                         | 0<br>...<br>65535                                   | Factory setting: 0<br>ifm electronic: 310                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| [Device ID]                 | ID of the IO-Link device that is to be validated                                                                       | 0<br>...<br>16777215                                | Factory setting: 0                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |

- Save changed values on the device.

## 8.1.9 Firmware: Reset device to factory settings

7209

When the IO-Link master is reset, all parameters are set to the factory settings:

To reset the device to factory settings:

- ▶ Select [Firmware] menu.
- > The menu page shows the current settings.
- ▶ Click on [Factory Reset] to reset the device.
- > LR DEVICE sets the device to the factory settings.

## 8.1.10 Firmware: Reboot the device

18105

When rebooting the device, all settings are kept.

To restart the AL1302:

- ▶ Select [Firmware] menu.
- > The menu page shows the current settings.
- ▶ Click on [Reboot] to reboot the device.
- > LR DEVICE reboots the ifm IO-Link master.



## 8.1.11 Configure IO-Link devices

11033

To configure the IO-Link devices connected to the device with the LR DEVICE parameter setting software:

### Requirements:


- > IO-Link master is correctly installed and connected to the LR DEVICE parameter setting software.
- > The IO-Link device is correctly connected to the AL1302.
- > Operating mode of the IO-Link port is "IO-Link" (→ **IO-Link ports: Configure operating mode** (→ p. 30)).
- > IoT has write access rights to the IO-Link master (→ **IoT: Configure access rights** (→ p. 26)).

### 1 Select IO-Link master

- ▶ Start LR DEVICE.
- ▶ Update IODD file library  
OR:  
Import IODD file of the IO-Link device manually.
- ▶ Scan network for devices.
- > LR DEVICE detects IO-Link master.

### 2 Add IO-Link device

- ▶ Under [ONLINE]: Click on the required IO-Link master.
- > LR DEVICE automatically detects the IO-Link devices connected to the IO-Link master (e.g. ifm sensor KG5065).

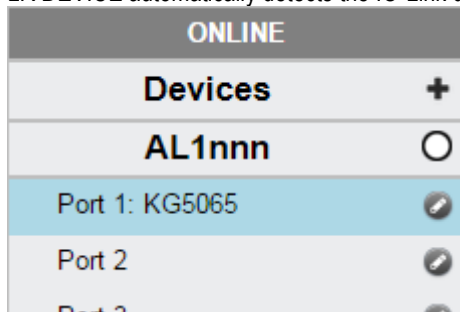

### 3 Configure IO-Link device

- ▶ Mouse click on the port to which the <IO> device is connected.
- > LR DEVICE reads and shows the current parameter values of the IO-Link device.
- ▶ Configure IO-Link device.



Information about the available parameters of the IO-Link device: → IO Device Description (IODD) of the IO-Link device

- ▶ Save the changed configuration on the IO-Link device.

## 8.2 Profinet: Configure the device

### Contents

|                                                 |    |
|-------------------------------------------------|----|
| Install GSD file .....                          | 35 |
| Add the device to the Profinet network.....     | 36 |
| Configure communication profile .....           | 38 |
| Configure IO-Link ports .....                   | 39 |
| Configure the Profinet interface.....           | 40 |
| Profinet: Configure IO-Link devices.....        | 40 |
| Read and write data cyclically .....            | 41 |
| Profinet: Read & write device information ..... | 41 |
| Profinet: Programmers' notes .....              | 42 |

22758

On the field bus side, the device can be configured with the following options:

- Profinet projection software STEP 7 (version 5.5 SP 4 or higher)
- Profinet projection software TIA portal



Further information about operation and functions of the Profinet parameter setting software:

- Use the help function of the Profinet projection software!

## 8.2.1 Install GSD file

22410


To represent the AL1302 in a field bus projection software (e.g. STEP 7), ifm provides a GSD file. The user can download the GSD file from the ifm website (→ [www.ifm.com](http://www.ifm.com)). In the GSD file, all parameters, process data, and their valid value ranges are defined.

To add the AL1302 to the STEP 7 hardware catalogue:

- ▶ Download GSD file of the AL1302 from the ifm website.
- ▶ Start STEP 7 application "HW Config".
- ▶ Select [Options] > [Install GSD files...].
- > The [Install GSD files] window appears.
- ▶ Click on [Browse ...].
- ▶ Select the GSD file of the AL1302 and click on [OK] to adopt the file.
- > The selected GSD file appears in the list.
- ▶ Select the GSD file in the list and click on [Install].
- > STEP 7 installs the GSD file and adds the AL1302 to the hardware catalogue.

After installation of the GSD file, the AL1302 is in the hardware catalogue in the following folder:

- > [PROFINET IO] > [Additional Field Devices] > [IO] > [ifm electronic]

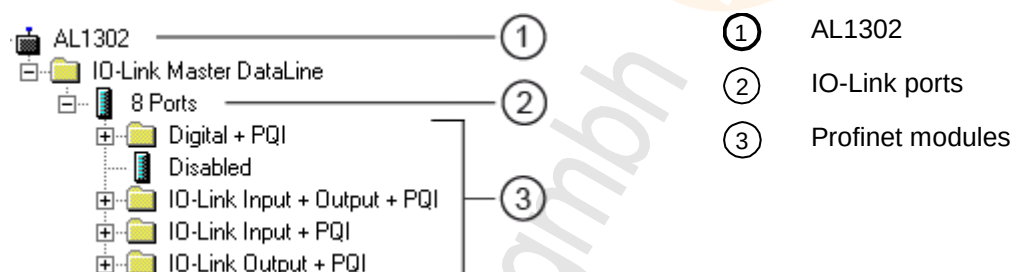

## 8.2.2 Add the device to the Profinet network

22406

The configuration of the Profinet parameters is done via the Profinet projection software.

The Profinet parameters define which data is transmitted between AL1302 and the higher-level Profinet controller.

### Requirements:


- > Profinet has read and write permission on the AL1302 (→ **IoT: Configure access rights** (→ p. 26))
- > The GSD file of the AL1302 is installed (→ **Install GSD file** (→ p. 35))

### 1 Create/open project

- ▶ Create new Profinet project.  
OR  
Open an existing Profinet project.
- ▶ Configure Profinet connection.


### 2 Add the AL1302 to project

- ▶ Open STEP-7 application "HW Config".
- > Program window shows the hardware structure of the project.
- ▶ Open hardware catalogue.
- ▶ Move the [AL1302] node via drag&drop from the hardware catalogue to the Profinet connection.
- > STEP 7 shows the device as Profinet bus participant.

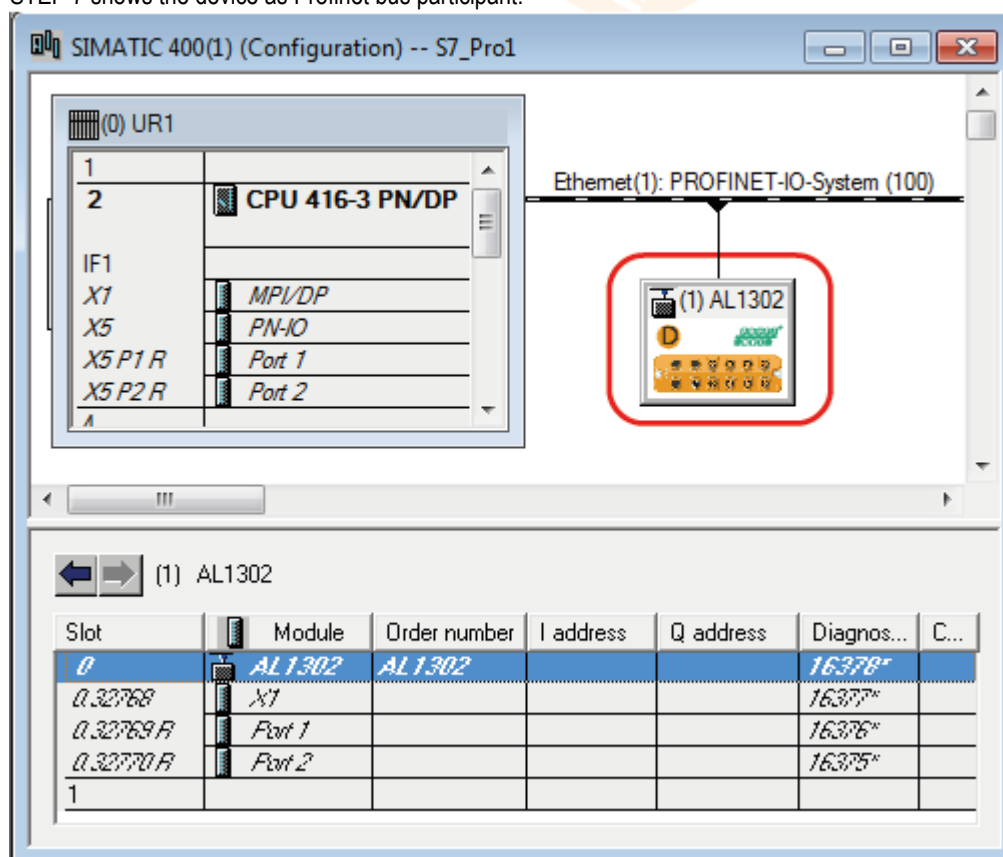

### 3 Add IO-Link ports

- Move the [8 Ports] node via drag&drop from the hardware catalogue to slot 1 of the AL1302.
- > Step 7 shows available IO-Link interfaces.

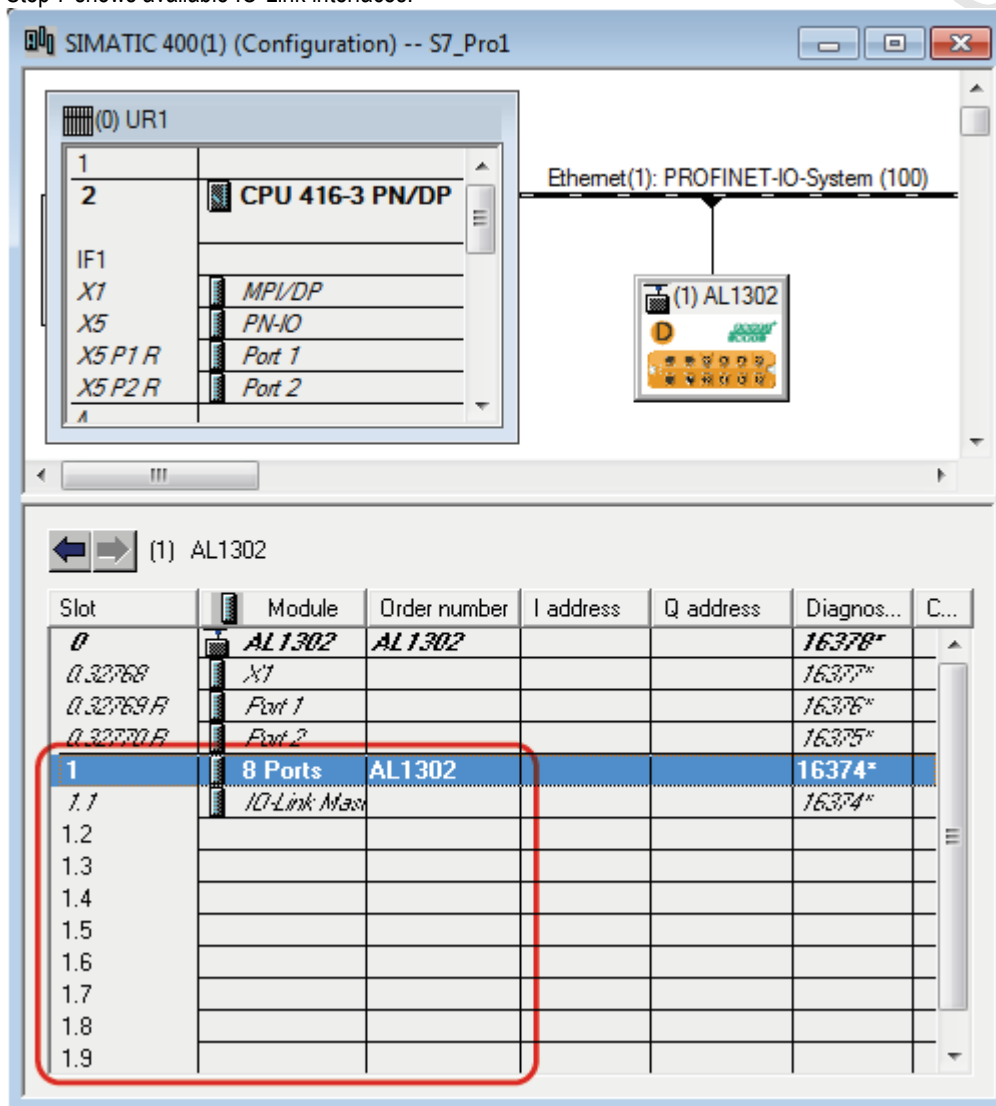

- Save the project.

## 8.2.3 Configure communication profile

22760

 
In order to configure the access rights to the device:

### 1 Open device editor

- ▶ Open STEP-7 application "HW Config".
- > Program window shows the hardware structure of the project.
- ▶ Click on AL1302.
- > The device editor shows the current configuration of the AL1302.

### 2 Configure access rights

- ▶ Double click on the slot line [1.1 IO-Link Master]



- > The window [Properties IO-Link master] appears.
- ▶ Select [Parameters] tab.
- ▶ Set the following parameter as required:
  - Communication Profile (→ **Parameter of the IO-Link master** (→ p. 67))
- ▶ Click on [Add] to save the changes.



If parameter [Communication Profile] = Profinet + LineRecorder:

Different parameter settings in the Profinet projection software and the LR DEVICE may cause undesired system behaviour. Parameter settings applied by the Profinet projection software always overrule the settings applied by LR DEVICE.



Changes of the parameter [Communication Profile] are only effective after restarting the device.

To activate the changed access rights:

- ▶ → **Firmware: Reboot the device** (→ p. 32)

## 8.2.4 Configure IO-Link ports

17306

In STEP 7, the following assignment of the Profinet slots to the IO-Link ports of the device applies:

| Slot | Subslot              | IO Link port of AL1302 |
|------|----------------------|------------------------|
| 1    | 2                    | X01                    |
|      | 3                    | X02                    |
|      | ...                  | ...                    |
|      | <IOL_PN_MaxSubindex> | X08                    |

Each sub-slot can be configured for cyclic transmission of process data with a Profinet module. The selected Profinet module determines the operation type of the IO-link interface and the configurable parameters.

Overview of the available Profinet modules: → **Profinet modules** (→ p. 70)

To add a Profinet module to a sub-slot:

### 1 Open device editor

- ▶ In "HW Config": Click on AL1302.
- > The device editor shows the current configuration of the AL1302.

### 2 Add Profinet module

- ▶ Open hardware catalogue.
- ▶ Draw the required Profinet module of the AL1302 from the hardware catalogue to the slot.
- > The device editor shows the slot with the selected Profinet module.

### 3 Set parameters of the Profinet module

- ▶ Double click on the added slot.
- > Window [Properties] appears.
- ▶ Select [Parameters] tab.
- > The page shows the current parameter settings of the IO-Link ports.
- ▶ Set the parameters as required (marked with X in table):

| Operating mode of the IO-Link ports | Available parameters |               |                           |                 |           |                 |                |
|-------------------------------------|----------------------|---------------|---------------------------|-----------------|-----------|-----------------|----------------|
|                                     | Fail Safe Mode       | Pattern Value | Validation / Data storage | Vendor ID (VID) | Device ID | Port cycle time | IO-Link Events |
| DI: Digital input                   | --                   | --            | --                        | --              | --        | --              | X              |
| DO: Digital output                  | X                    | --            | --                        | --              | --        | --              | X              |
| IO-Link: Input                      | --                   | --            | X                         | X               | X         | X               | X              |
| IO-Link: Output                     | X                    | X             | X                         | X               | X         | X               | X              |
| IO-Link: Input and output           | X                    | X             | X                         | X               | X         | X               | X              |



Further information about the parameters of the Profinet modules: → **Parameters of the IO-Link ports** (→ p. 68)

- ▶ Click on [Add] to save the changes.
- > Changed settings are applied.

## 8.2.5 Configure the Profinet interface

22761

In order to configure the Ethernet interface of the AL1302:

### Prerequisites

- > AL1302 is correctly integrated in the Profinet project (→ **Add the device to the Profinet network** (→ p. [36](#))).

### 1 Open object characteristics

- ▶ Start the application "HW Config"
- ▶ Click on AL1302.
- ▶ Select [Target System] > [Ethernet ...] > [Edit Ethernet Users].
- > [Edit Ethernet Users] window appears.

### 2 Search AL1302

- ▶ Click on [Browse ...] button.
- > [Browse Network] window appears.
- ▶ Click on [Start] button.
- > STEP 7 browses the Profinet network for devices.
- > List shows found devices.
- ▶ Select AL1302 in list and click [OK] to adopt the device.
- > The [MAC address] shows the MAC address of the AL1302

### 3 Set IP address and network mask

- ▶ Click on the [Use IP parameters] selection field in group [Set IP configuration].
- ▶ Enter the required IP address in the [IP address] field.
- ▶ Enter the required subnet mask in the [Subnet mask] field.

### 4 Assign device names

- ▶ Enter the required Profinet name in the [Device name] field.
- ▶ Click on the [Assign Name] button.
- > STEP 7 assigns the selected name to the AL1302.
- ▶ Click on the [Close] button to close the window.

## 8.2.6 Profinet: Configure IO-Link devices

18428

The AL1302 supports the configuration of the connected IO-Link devices out of the Profinet projection software. The configurable parameters depend on the corresponding IO-Link device.

Information about the usable functions: → **Profinet: Programmers' notes** (→ p. [42](#))



Available parameters of the IO-Link devices: → Operating instructions of the IO-Link device



## 8.2.7 Read and write data cyclically

17372



- To check the validity of the cyclic process data, evaluate the PQI byte (→ **PQI (Port Qualifier Information)** (→ p. [71](#))).

Even with an interruption of the fieldbus connection the PQI byte indicates that the process data is valid. This can have unintended impact on the control process.

- Take suitable measures to detect an interruption of the fieldbus connection.

## 8.2.8 Profinet: Read & write device information

22783

I&M0 provide the user with device-specific basic information. This ensures reliable identification of the device, the device's hardware and software components, and the manufacturer.

The datasets I&M1 to 3 offer the programmer the possibility to store project-specific information on the device.

The programmer can access the I&M0 datasets of the slots 0 and 1 in the Profinet projection software via the following functions:



Information about the usable function blocks: → **Profinet: Programmers' notes** (→ p. [42](#))

Further information about the I&M datasets: → **I&M datasets** (→ p. [72](#))

## 8.2.9 Profinet: Programmers' notes

12761

The programmer can access on the following data from the PLC application:

- Read device information of the AL1302
- Read diagnostics and alarms
- Set parameters of the connected IO-Link devices

The following sections show the available options.



Further information about the functional/operational blocks: → Help function of the Profinet projection software

### Read and write I&M datasets

2261

| Symbol / function block | Meaning                                                                                                              | Remarks                                                                                                                   |
|-------------------------|----------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|
| GET_IM_DATA / FB        | Function block for reading the I&M datasets of a device<br>GET_IM_DATA only supports the reading of the I&M0 dataset | Input parameters:<br>▪ IM_TYPE = 0                                                                                        |
| RDREC                   | Function block for acyclic reading of datasets                                                                       | Input parameters:<br>▪ I&M0: Index = 0xAFF0<br>▪ I&M1: Index = 0xAFF1<br>▪ I&M2: Index = 0xAFF2<br>▪ I&M3: Index = 0xAFF3 |
| WRREC                   | Function block for acyclic writing of datasets<br>Observe access rights on datasets!                                 | Input parameters:<br>▪ I&M1: Index = 0xAFF1<br>▪ I&M2: Index = 0xAFF2<br>▪ I&M3: Index = 0xAFF3                           |

### Detect diagnostics and alarms

2272

| Symbol / operational block | Meaning             | Remarks |
|----------------------------|---------------------|---------|
| I/O_FLT1 / OB82            | Diagnostic alarms   |         |
| I/O_FLT2 / OB83            | Pull/plug in alarms |         |
| RACK_FLT / OB86            | Module rack failure |         |



Available alarms and diagnostic messages: → **Diagnostic and alarms** (→ p. 74)

## Configure IO-Link devices

1860

| Symbol / function block | Description                                                       | Remarks                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|-------------------------|-------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| IO_LINK_DEVICE / FB5001 | Acyclic access to the parameters of an IO-Link device             | <p>Input parameters:</p> <ul style="list-style-type: none"> <li>▪ CAP: Access point for function AL1302: 0xB400</li> <li>▪ PORT: HW-ID: Slot/sub-slot of the IO-Link port with connected IO-Link device<br/> Port X01: 1<br/> Port X02: 2<br/> Port X03: 3<br/> Port X04: 4<br/> Port X05: 5<br/> Port X06: 6<br/> Port X07: 7<br/> Port X08: 8</li> <li>▪ IOL_INDEX and IOL_SUBINDEX: depends on the IO-Link device (→ operating instructions of the IO-Link device)</li> </ul> |
| IOL_CALL / FB1          | Acyclic access to the parameters of an IO-Link devices (obsolete) | → IO_LINK_DEVICE                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

## 8.3 IoT Core

### Contents

|                                              |    |
|----------------------------------------------|----|
| Configure IoT port.....                      | 45 |
| Configure the fieldbus port .....            | 45 |
| Configure IO-Link ports .....                | 46 |
| Set application identification .....         | 46 |
| Read / write cyclic process data .....       | 46 |
| Read diagnostic data .....                   | 47 |
| Read device information .....                | 47 |
| Control IO-Link master .....                 | 48 |
| Configure IO-Link devices .....              | 48 |
| Read information about IO-Link devices ..... | 48 |
| Examples .....                               | 49 |
| Programmers' notes .....                     | 52 |

17302



The user can access the IoT Core only via IoT port X23 of the ifm IO-Link master.

General notes on the ifm IoT Core: → **Programmers' notes** (→ p. [52](#))

The AL1302 is of type device (→ **Overview: IoT types** (→ p. [79](#))).

It has the following sub-structures:

| Structure                         | Contents                                                                                                                                                                                                                                      |
|-----------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| processdatamaster                 | <ul style="list-style-type: none"> <li>Diagnostic data (temperature, voltage, current)</li> <li>Status of the current / voltage supply</li> </ul>                                                                                             |
| deviceinfo                        | Device identification                                                                                                                                                                                                                         |
| timer[1]                          | Subscribe to data                                                                                                                                                                                                                             |
| timer[2]                          | Subscribe to data                                                                                                                                                                                                                             |
| iotsetup                          | Parameters of the IoT port (access rights, IP settings, IP settings of the LR SMARTOBSERVER)                                                                                                                                                  |
| fieldbussetup                     | Parameters of the fieldbus port (IP settings, device identification in fieldbus projection software)                                                                                                                                          |
| iolinkmaster/port[n]              | <ul style="list-style-type: none"> <li>Parameters of the IO-Link port (operating mode, transmission rate, cycle time, validation and data storage)</li> <li>Digital input data (pin 2)</li> <li>Port event</li> </ul>                         |
| iolinkmaster/port[n]/iolinkdevice | <ul style="list-style-type: none"> <li>Status information IO-Link devices on the IO-Link port</li> <li>Device information of the IO-Link device</li> <li>Process data on input/output</li> <li>Application-specific identification</li> </ul> |
| firmware                          | <ul style="list-style-type: none"> <li>Firmware of the device</li> <li>Reset devices</li> <li>Reboot the device</li> </ul>                                                                                                                    |

The user can request the available data points and services in the substructures with `gettree`(→ **Service: `gettree`** (→ p. [80](#))). The service returns the device description as tree structure. It shows the services supported by a data point: In the sub-element "subs" each data point lists all services that can be applied to it.

### 8.3.1 Configure IoT port

16540

The parameters of the IoT port X23 are saved in the `iotsetup` substructure. The user can access the following data points:

| Name                                           | Description                                                                                                                                                            | Access |
|------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
| <code>iotsetup/accessrights</code>             | Access rights to the IO-Link master <ul style="list-style-type: none"> <li>0 = Profinet + IoT</li> <li>1 = Profinet + IoT (read only)</li> <li>2 = IoT only</li> </ul> | rw     |
| <code>iotsetup/smobip</code>                   | IP address of the LR SMARTOBSERVER                                                                                                                                     | rw     |
| <code>iotsetup/smobport</code>                 | Port number of the LR SMARTOBSERVER                                                                                                                                    | rw     |
| <code>iotsetup/smobinterval</code>             | Cycle time for (value in milliseconds)                                                                                                                                 | rw     |
| <code>iotsetup/network/dhcp</code>             | Configuration of the IP settings of the IoT port <ul style="list-style-type: none"> <li>0 = STATIC_IP/OFF</li> <li>1 = DHCP/ON</li> </ul>                              | rw     |
| <code>iotsetup/network/ipaddress</code>        | IP address of the IoT port                                                                                                                                             | rw     |
| <code>iotsetup/network/subnetmask</code>       | Subnet mask of the network segment                                                                                                                                     | rw     |
| <code>iotsetup/network/ipdefaultgateway</code> | IP address of the network gateway                                                                                                                                      | rw     |

rw ... read and write

### 8.3.2 Configure the fieldbus port

16458

The parameters of the fieldbus port X21/X22 are saved in the `fieldbussetup` substructure. The user can access the following data points:

| Name                                                | Description                                        | Access |
|-----------------------------------------------------|----------------------------------------------------|--------|
| <code>fieldbussetup/hostname</code>                 | Name of the IO-Link master in the fieldbus project | rw     |
| <code>fieldbussetup/fieldbusfirmware</code>         | Firmware version of the IO-Link master             | r      |
| <code>fieldbussetup/network/macaddress</code>       | MAC address of the fieldbus port                   | r      |
| <code>fieldbussetup/network/ipaddress</code>        | IP address of the fieldbus port                    | rw     |
| <code>fieldbussetup/network/subnetmask</code>       | Subnet mask of the network segment                 | rw     |
| <code>fieldbussetup/network/ipdefaultgateway</code> | IP address of the network gateway                  | rw     |

r = read only

rw ... read and write

### 8.3.3 Configure IO-Link ports

16454

Parameters of the IO-Link ports of the IO-Link master are saved in the `iolinkmaster/port[n]` substructure. There are the following data points for each IO-Link-Port X01...X08 :

| Name                                                          | Description                                                                         | Access |
|---------------------------------------------------------------|-------------------------------------------------------------------------------------|--------|
| <code>iolinkmaster/port[n]/senddatatosmob</code>              | Send process data to LR SMARTOBSERVER                                               | rw     |
| <code>iolinkmaster/port[n]/mode</code>                        | Operating mode of the IO-Link port                                                  | rw*    |
| <code>iolinkmaster/port[n]/mastercycletime_preset</code>      | Cycle time of the data transfer at the IO-Link port (value in microseconds)         | rw     |
| <code>iolinkmaster/port[n]/mastercycletime_actual</code>      | Current cycle time of the data transfer at the IO-Link port (value in microseconds) | r      |
| <code>iolinkmaster/port[n]/validation_datastorage_mode</code> | Response of the IO-Link port when a new IO-Link device is connected                 | rw*    |
| <code>iolinkmaster/port[n]/validation_vendorid</code>         | IO-Link ID of the manufacturer that is to be validated                              | rw*    |
| <code>iolinkmaster/port[n]/validation_deviceid</code>         | IO-Link ID of the device that is to be validated                                    | rw*    |

n ... 1...8)

r = read only

rw ... read and write

\* ... only available if Profinet PLC is separated from the device

### 8.3.4 Set application identification

16580

The application name of the IO-Link master is saved in the `devicetag` substructure. The user can access the following data points:

| Name                                  | Description                                                          | Access |
|---------------------------------------|----------------------------------------------------------------------|--------|
| <code>devicetag/applicationtag</code> | Name of the IO-Link master in the fieldbus project (application tag) | rw     |

rw ... read and write

### 8.3.5 Read / write cyclic process data

10994

Cyclic process data of the IO-Link ports X01...X08 is saved in the `iolinkmaster/port[n]` substructure. The user can access the following data points:

| Name                                                 | Description                                          | Access |
|------------------------------------------------------|------------------------------------------------------|--------|
| <code>iolinkmaster/port[n]/pin2in</code>             | Digital input signal to pin 2 of the IO-Link port n  | r      |
| <code>iolinkmaster/port[n]/iolinkdevice/pdin</code>  | IO-Link input signal at pin 4 of the IO-Link port n  | r      |
| <code>iolinkmaster/port[n]/iolinkdevice/pdout</code> | IO-Link output signal at pin 4 of the IO-Link port n | rw*    |

n ... 1...8

r = read only

rw ... read and write

\* ... only available if Profinet PLC is separated from the device

### 8.3.6 Read diagnostic data

16571

Diagnostic data is saved in the `processdatamaster` substructure. The user can access the following data points:

| Name                                             | Description                                                                                                                                                                           | Access |
|--------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
| <code>processdatamaster/temperature</code>       | Temperature of the IO-Link master (value in °C)                                                                                                                                       | r      |
| <code>processdatamaster/voltage</code>           | Voltage applied (value in V)                                                                                                                                                          | r      |
| <code>processdatamaster/current</code>           | Current (value in A)                                                                                                                                                                  | r      |
| <code>processdatamaster/supervisionstatus</code> | Diagnostic information of the device supply <ul style="list-style-type: none"> <li>0 = no error</li> <li>1 = short circuit</li> <li>2 = overload</li> <li>3 = undervoltage</li> </ul> | r      |

r = read only

### 8.3.7 Read device information

17133

Device information is saved in the `deviceinfo` substructure. The user can access the following data points:

| Name                                       | Description         | Access |
|--------------------------------------------|---------------------|--------|
| <code>deviceinfo/productcode</code>        | Article Number      | r      |
| <code>deviceinfo/vendor</code>             | Vendor              | r      |
| <code>deviceinfo/devicefamily</code>       | Device family       | r      |
| <code>deviceinfo/hwrevision</code>         | Hardware revision   | r      |
| <code>deviceinfo/serialnumber</code>       | Serial number       | r      |
| <code>deviceinfo/swrevision</code>         | Firmware version    | r      |
| <code>deviceinfo/bootloaderrevision</code> | Bootloader revision | r      |
| <code>deviceinfo/extensionrevisions</code> |                     | r      |

r = read only

Additional information about the AL1302 can be read with the `getidentity` service (→ **Service: getidentity** (→ p. 82)).

### 8.3.8 Control IO-Link master

17963

The device can be controlled via the following services:

| Service               | Description                              | Access |
|-----------------------|------------------------------------------|--------|
| firmware/version      | Firmware version of the IO-Link master   | r      |
| firmware/reboot       | Reboot IO-Link master                    | rw     |
| firmware/factoryreset | Reset IO-Link master to factory settings | rw     |

r = read only

rw ... read and write

### 8.3.9 Configure IO-Link devices

11002

The ifm IoT Core supports the configuration of the connected IO-Link devices. A parameter is accessed via IO-Link index and subindex (→ IO Device Description (IODD) of the device)

The user can use the following services:

| Service                                           | Description                                         | Access |
|---------------------------------------------------|-----------------------------------------------------|--------|
| iolinkmaster/port[n]/iolinkdevice/iolreadacyclic  | Acyclic reading of a parameter of an IO-Link device | r      |
| iolinkmaster/port[n]/iolinkdevice/iolwriteacyclic | Acyclic writing of a parameter of an IO-Link device | rw     |

n ... 1...8

r = read only

rw ... read and write

### 8.3.10 Read information about IO-Link devices

16553

Information about an IO-Link device connected via an IO-Link port is saved in the `iolinkmaster/port[n]/iolinkdevice/` substructure. The user can access the following data points:

| Name                                                     | Description                                                                                                                                 | Access |
|----------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------|--------|
| iolinkmaster/port[n]/iolinkdevice/status                 | Status of the connected IO-Link device<br>0 = SENSOR_NOT_CONNECTED<br>1 = SENSOR_IN_PREOPERATE<br>2 = SENSOR_IN_OPERATE<br>3 = SENSOR_WRONG | r      |
| iolinkmaster/port[n]/iolinkdevice/vendorid               | IO-Link ID of the manufacturer                                                                                                              | r      |
| iolinkmaster/port[n]/iolinkdevice/deviceid               | IO-Link ID of the IO-Link device                                                                                                            | r      |
| iolinkmaster/port[n]/iolinkdevice/productname            | Product name of the IO-Link device                                                                                                          | r      |
| iolinkmaster/port[n]/iolinkdevice/serial                 | Serial number of the IO-Link device                                                                                                         | r      |
| iolinkmaster/port[n]/iolinkdevice/applicationspecifictag | Device-specific identification (application tag)                                                                                            | rw     |

n ... 1...8



## 8.3.11 Examples

| Contents                                                                         |    |
|----------------------------------------------------------------------------------|----|
| Example: Read process data of an IO-Link device .....                            | 49 |
| Example: Read several parameter values of the IO-Link master simultaneously..... | 49 |
| Example: Change name of the IO-Link master .....                                 | 50 |
| Example: read the parameter value of an IO-Link device .....                     | 50 |
| Example: change the parameter value of an IO-Link device .....                   | 51 |
| Example: Subscribe to event.....                                                 | 51 |

16577

### Example: Read process data of an IO-Link device

16574

**Task:** Read the current measured value of the ifm temperature sensor TN2531 at IO-Link port X06

**Solution:** Read the data point for the process input data with the `getdata` service.

- Request object:

```
{"code":10,"cid":4711,"adr":"/iolinkmaster/port[6]/iolinkdevice/pdin/getdata"}
```

- Return object:

```
{"cid": 4711,"data":{"value": "03C9"},"code": 200}
```

The return value is given in hexadecimal format. Besides the temperature value the return value comprises additional information (→ IO Device Description (IODD) of the sensor). The temperature value is shown in bits 2 to 15.

0x03C9 = 0b1111001001

Temperature value: 0b11110010 = 242

Therefore: The current temperature value is 24.2 °C.

### Example: Read several parameter values of the IO-Link master simultaneously

17310

**Task:** The following current values are to be read by the IO-Link master. Temperature, serial number

**Solution:** Read the current parameter values using the `getdatamult` (data point temperature service: `/processdatamaster/temperature`; Data point serial number: `/deviceinfo/serialnumber`)

**Request object:**

```
{"code":10,"cid":4711,"adr":"/getdatamulti","data":{"datatosend":["/processdatamaster/temperature"],["/deviceinfo/serialnumber"]}}
```

**Return object:**

```
{"cid":4711,"data":{"processdatamaster/temperature":{"code":200,"data":44},"deviceinfo/serialnumber":{"code":200,"data":"000174210147"},"code":200}
```

### Example: Change name of the IO-Link master

10987

**Task:** Set the name of the IO-Link master for the representation in the LR SMARTOBSERVER to AL1302.

**Solution:** Change the parameter [Application Tag] with the setdata service to the value [AL1302].

The data point of the parameter [Application Tag] in the device description object is /devicetag/applicationtag.

- Request object:

```
{"code":10,"cid":4711,"adr":"/devicetag/applicationtag/setdata","data":{"newvalue":"AL1302"}}
```

- Return object:

```
{"cid":4711,"code":200}
```

### Example: read the parameter value of an IO-Link device

16546

**Task:** Read the serial number of the ifm temperature sensor TN2531 at IO-Link port X02

**Solution:** Read the serial number with the iolreadacyclic service from the IO-Link device (index: 21, subindex: 0)

- Request object:

```
{  
  "code":10,  
  "cid":4711,  
  "adr":"/iolinkmaster/port[2]/iolinkdevice/iolreadacyclic",  
  "data":{"index":21,"subindex":0}  
}
```

- Return object:

```
{  
  "cid":4711,  
  "data":{"value":"4730323134323830373130"},  
  "code":200  
}
```

The returned value is given in hexadecimal format. The conversion of the HEX value in a STRING value is: G0214280710

## Example: change the parameter value of an IO-Link device

16578

**Task:** Set the output configuration OUT1 of the ifm temperature sensor TN2531 at IO-Link port X02 to the value "Hnc / hysteresis function, normally closed".

**Solution:** Change the parameter [ou1] of the sensor to the value 4 using the `iolwritecyclicdata` service. The parameter can be accessed via IO-Link index 580, subindex 0 (→ IO-Link description of the sensor).

- Request object:

```
{"code":10,"cid":4711,"adr":"/iolinkmaster/port[2]/iolinkdevice/iolwritecyclic","data":{"index":580,"subindex":0,"value":4}}
```

- Response object:

```
{"cid":4711,"code":200}
```

## Example: Subscribe to event

17946

**Task:** The current values of the following parameters should be sent regularly to a network server with IP address 192.168.0.4: product name of the IO-Link device at IO-Link port X02, cyclic input data of the IO-Link device at IO-Link port X02 and the operating temperature of the IO-Link master.

**Solution:** Subscribe to the required data using the `subscribe` service.

- Request object:

```
{
  "code":80,
  "cid":4711,
  "adr":"/timer[1]/counter/datachanged/subscribe",
  "data":
  {
    "callback":"192.168.0.44/temp",
    "datatosend":[
      "/iolinkmaster/port[2]/iolinkdevice/productname",
      "/iolinkmaster/port[2]/iolinkdevice/pdin",
      "/processdatamaster/temperature"
    ]
  }
}
```

## 8.3.12 Programmers' notes

### Contents

|                                         |    |
|-----------------------------------------|----|
| ifm IoT Core: General information ..... | 52 |
| Device description .....                | 52 |
| Access ifm-IoT Core .....               | 53 |
| IoT Core: Diagnostic codes .....        | 55 |

10989

### ifm IoT Core: General information

16576

The DataLine device family has one IoT Core. This component allows the user to address the IO-Link master from IT networks and to integrate it into Internet-of-Things applications.

The IoT Core provides the user with the following functions:

- Control device
- Monitoring of process data
- Read / write parameters of the IO-Link master
- Read / write parameters of the connected IO-Link devices
- Collect diagnostic data

### Device description

14411

The IoT Core creates a device description on the AL1302. This device description is a structured, machine-readable data object in JSON format. All current values of parameters, diagnostic data and device information are mapped in this data object. The user can access this data object from IT networks.

The complete device description can be read using the gettree (→ service **Service: gettree** (→ p. [80](#))).

## Access ifm-IoT Core

17561



To activate the changes of the parameter values the IoT Core must have the respective write access rights to the IO-Link master (→ Parameter [Access Rights]).

The ifm IoT Core supports HTTP requests. The following request methods are available.

### GET method

21300

Using the GET method the user has read access to a data point.

The syntax of the request to the IoT Core is:

ip/datapoint/service

| Description | Description                                          |
|-------------|------------------------------------------------------|
| ip          | IP address of the IoT port X23 of the IO-Link master |
| data_point  | Data point which is to be accessed                   |
| service     | Service                                              |

The syntax of the return of the IoT Core is:

```
{
  "cid":id,
  "data":{"value":resp_data},
  "code":err_code
}
```

| parameter | Description                                                           |
|-----------|-----------------------------------------------------------------------|
| id        | Correlation ID for the assignment of request and return               |
| resp_data | Value of the data point; depending on the data type of the data point |
| err_code  | Error code (→ <b>IoT Core: Diagnostic codes</b> (→ p. 55))            |

Example:

Request (via browser): 192.168.0.250/devicetag/applicationtag/getdata

Return: {"cid":-1,"data":{"value":"AL1302"}, "code":200}

## POST method

16548

Using the POST method the user has read and write access to a data point. A form with the required information is transferred to the IP address of the IO-Link master (IoT port X23).

The syntax of the request to the IoT Core is:

```
{
  "code":code_id,
  "cid":id,
  "adr":"data_point/service",
  "data":{"req_data"}
}
```

| Parameter  | Description                                                                                              |
|------------|----------------------------------------------------------------------------------------------------------|
| code_id    | ID of the service class                                                                                  |
|            | 10      Request                                                                                          |
|            | 11      Transaction                                                                                      |
|            | 80      Event                                                                                            |
| id         | Correlation ID for the assignment of request and return                                                  |
| data_point | Data point which is to be accessed                                                                       |
| service    | Service to be performed (→ <b>Overview: IoT services</b> (→ p. 80))                                      |
| req_data   | Data to be transferred to the IoT Core (e.g. new values); indication optional (depending on the service) |

The syntax of the return of the IoT Core is:

```
{
  "cid":id,
  "data":{"value":resp_data},
  "code":err_code
}
```

| Parameter | Description                                                           |
|-----------|-----------------------------------------------------------------------|
| id        | Correlation ID for the assignment of request and return               |
| resp_data | Value of the data point; depending on the data type of the data point |
| err_code  | Error code (→ <b>IoT Core: Diagnostic codes</b> (→ p. 55))            |

Example:

Request: {"code":10,"cid":4711, "adr":"devicetag/applicationtag/getdata"}

Return: {"cid":4711,"data":{"value":"AL1302"}, "code":200}

## IoT Core: Diagnostic codes

17437

The ifm IoT Core uses the following diagnostic codes:

| Code | Description                                                                                                     |
|------|-----------------------------------------------------------------------------------------------------------------|
| 200  | OK                                                                                                              |
| 230  | OK; but reboot required                                                                                         |
| 231  | OK, but block request not yet terminated                                                                        |
| 232  | Data accepted but changed internally                                                                            |
| 233  | IP settings changed; application has to reboot the device; Wait for min. 1 second before the device is rebooted |
| 400  | Invalid request                                                                                                 |
| 403  | Unauthorised access                                                                                             |
| 500  | Internal server fault                                                                                           |
| 503  | Service not available                                                                                           |
| 530  | Requested data is invalid                                                                                       |
| 531  | IO-Link error                                                                                                   |
| 532  | Error in PLC                                                                                                    |

## 9 Operation

### Contents

|                              |    |
|------------------------------|----|
| Identify device.....         | 56 |
| Firmware update.....         | 57 |
| Exchange IO-Link device..... | 58 |

22368

### 9.1 Identify device

16568

In the online mode, the user can identify the device using the RDY and IoT status LEDs.

- ▶ Start LR DEVICE.
- ▶ Scan network for devices.
- > LR DEVICE recognises the IO-Link master.
- ▶ Click on the selection field next to the device name.
- > The RDY and IoT status LEDs are flashing.



## 9.2 Firmware update

16582

The new firmware is installed via the device's web interface.



If the firmware update is not successful, deactivate all connections to the Profinet PLC, LR SMARTOBSERVER and LR DEVICE and repeat the process.

- ▶ Stop Profinet PLC.
- ▶ Set the parameter [IP address SmartObserver] to 255.255.255.255 (→ **IoT: Configure the interface to the LR SMARTOBSERVER** (→ p. 28)).
- ▶ Stop the LRAgent.LRDevice service in the Windows task manager.

To install a new firmware version on the device:

### Requirements

- > File with new firmware has been downloaded.
- > Ethernet connection between laptop/PC and device is established.

### 1 Call up web interface

- ▶ Start web browser.
- ▶ Enter the following into the address field of the browser: and confirm with [ENTER]:  
<IP address of the device>/web/update
- > Web browser shows the [Firmware Update] page.

### 2 Load new firmware to AL1302

- ▶ Click on [Search...].
- > Dialogue window appears.
- ▶ Select the firmware file and click on [Open] in order to adopt the file.
- ▶ Click on [Submit] to start the firmware update.
- > Firmware is being loaded to the device.
- > After successful storage, the success message is displayed.

### 3 Restart the device

- ▶ Click on [Restart device now] to restart the device.
- > The status LED RDY flashes quickly.
- > Firmware is updating.
- ▶ Follow the instructions in the browser.

## 9.3 Exchange IO-Link device

7775

To exchange an IO-Link device:

**Requirement:**

- > IO-Link device is with factory settings.
- > IO-Link device supports IO-Link standard 1.1 or higher.

**1 Set data storage**

- ▶ Set the following parameters of the IO-Link port:  
[Validation / Data Storage] = Type compatible V1.1 device with Restore  
OR  
[Port x IO-Link Validation / Data Storage] = Type compatible V1.1 device with Restore
- ▶ Save changes.

**2 Exchange IO-Link device**

- ▶ Disconnect old IO-Link device from AL1302.
- ▶ Connect new IO-Link device with the same IO-Link port of the AL1302.
- > IO-Link master copies parameter values from the data memory to the new IO-Link device.

## 10 Maintenance

21577

The operation of the unit is maintenance-free.

- ▶ Clean the surface of the unit when necessary. Do not use any caustic cleaning agents for this!
- ▶ After use, dispose of the unit in an environmentally friendly way in accordance with the applicable national regulations.



# 11 Factory settings

16542

In the factory settings, the device has the following parameter settings:

| Parameter                            | Factory setting |
|--------------------------------------|-----------------|
| [IP address] (Profinet)              | 0.0.0.0         |
| [Subnet mask] (Profinet)             | 0.0.0.0         |
| [IP gateway address] (Profinet)      | 0.0.0.0         |
| [IP address] (IoT interface)         | 169.254.X.X     |
| [Subnet mask] (IoT interface)        | 255.255.0.0     |
| [IP gateway address] (IoT interface) | 0.0.0.0         |
| [Profinet name]                      | blank           |
| Data memory (Data Storage)           | blank           |

## 12 Accessories

17853

List of accessories of AL1302: → [www.ifm.com](http://www.ifm.com) > Product page > Accessories



## 13 Appendix

### Contents

|                      |    |
|----------------------|----|
| Technical data ..... | 63 |
| Profinet .....       | 67 |
| ifm IoT Core .....   | 75 |

7156

## 13.1 Technical data

### Contents

|                             |    |
|-----------------------------|----|
| Application .....           | 63 |
| Electrical data .....       | 63 |
| Inputs / outputs .....      | 63 |
| Inputs .....                | 64 |
| Outputs .....               | 64 |
| Interfaces .....            | 64 |
| Operating conditions .....  | 65 |
| Approvals / tests .....     | 65 |
| Mechanical data .....       | 65 |
| Electrical connection ..... | 66 |

9011

### 13.1.1 Application

23710

| Application          |                                    |
|----------------------|------------------------------------|
| Application          | I/O modules for field applications |
| Daisy-chain function | Fieldbus interface                 |

### 13.1.2 Electrical data

22819

| Electrical data             |                                                   |
|-----------------------------|---------------------------------------------------|
| Operating voltage [V]       | 20...30 DC; (US; to SELV/PELV; cULus: max. 24 DC) |
| Current Consumption [mA]    | 300...3900; (US)                                  |
| Protection class            | III                                               |
| Sensor supply US            |                                                   |
| Max. current load total [A] | 3.6                                               |

### 13.1.3 Inputs / outputs

23711

| Inputs / outputs                   |                    |
|------------------------------------|--------------------|
| Total number of inputs and outputs | 16; (configurable) |

## 13.1.4 Inputs

22820

| Inputs                                          |                                   |
|-------------------------------------------------|-----------------------------------|
| Number of digital inputs                        | 16; (IO-Link Port Class A: 8 x 2) |
| Switching level high [V]                        | 11...30 DC                        |
| Switching level low [V]                         | 0...5 DC                          |
| Digital inputs protected against short circuits | yes                               |

## 13.1.5 Outputs

22821

| Outputs (digital)                 |                                  |
|-----------------------------------|----------------------------------|
| Output function                   | 8; (IO-Link Port Class A: 8 x 1) |
| Max. current load per output [mA] | 200                              |
| Short-circuit protection          | yes                              |

## 13.1.6 Interfaces

10921

| Interfaces                  |                                                                                                                                                                                       |
|-----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Communication interface     | Ethernet; IO-Link                                                                                                                                                                     |
| Communication interface     | IO-Link; TCP/IP; PROFINET IO                                                                                                                                                          |
| Ethernet                    |                                                                                                                                                                                       |
| Transmission standard       | 10Base-T; 100Base-TX                                                                                                                                                                  |
| Transmission rate [MBit/s]  | 10; 100                                                                                                                                                                               |
| Protocol                    | TCP/IP; PROFINET IO                                                                                                                                                                   |
| Factory settings            | <ul style="list-style-type: none"> <li>IP address: 0.0.0.0</li> <li>Subnet mask: 0.0.0.0</li> <li>Gateway IP address: 0.0.0.0</li> <li>MAC address: see type label</li> </ul>         |
| IO-Link master              |                                                                                                                                                                                       |
| Type of transmission        | COM 1 / COM 2 / COM 3                                                                                                                                                                 |
| IO-Link revision            | V1.1                                                                                                                                                                                  |
| Number of ports Class A     | 8                                                                                                                                                                                     |
| IoT interface               |                                                                                                                                                                                       |
| Transmission standard       | 10Base-T; 100Base-TX                                                                                                                                                                  |
| Transmission rate [Mbits/s] | 10; 100                                                                                                                                                                               |
| Protocol                    | DCP, DHCP, Auto IP                                                                                                                                                                    |
| Factory settings            | <ul style="list-style-type: none"> <li>IP address: 169.254.X.X</li> <li>Subnet mask: 255.255.0.0</li> <li>Gateway IP address: 0.0.0.0</li> <li>MAC address: see type label</li> </ul> |



## 13.1.7 Operating conditions

22823

| Operating conditions                 |                     |
|--------------------------------------|---------------------|
| Applications                         | Indoor use          |
| Ambient temperature [°C]             | -25...60            |
| Storage temperature [°C]             | -25...85            |
| Max. perm. relative air humidity [%] | 90                  |
| Max. height above sea level [m]      | 2000                |
| Protection rating                    | IP 65; IP 66; IP 67 |
| Pollution Degree                     | 2                   |

## 13.1.8 Approvals / tests

22824

| Approval / tests |                                                                                      |
|------------------|--------------------------------------------------------------------------------------|
| EMC              | <ul style="list-style-type: none"> <li>EN 61000-6-2</li> <li>EN 61000-6-4</li> </ul> |
| MTTF [Years]     | 90                                                                                   |

 
 
 
 
## 13.1.9 Mechanical data

22825

| Mechanical data |                                          |
|-----------------|------------------------------------------|
| Weight [g]      | 380,2                                    |
| Materials       | Housing: PA; socket: brass nickel-plated |

## 13.1.10 Electrical connection

17850

| Voltage supply IN X31                                           |                                                                                     |                                                                     |
|-----------------------------------------------------------------|-------------------------------------------------------------------------------------|---------------------------------------------------------------------|
| Plug and socket connection                                      | M12                                                                                 |                                                                     |
| Wiring                                                          |    | 1: + 24 V DC (US)<br>2: -<br>3: GND (US)<br>4: -                    |
| Ethernet IN / OUT X21, X22                                      |                                                                                     |                                                                     |
| Plug and socket connection                                      | M12                                                                                 |                                                                     |
| Wiring                                                          |    | 1: TX +<br>2: RX +<br>3: TX -<br>4: RX -<br>5: -                    |
| IoT X32                                                         |                                                                                     |                                                                     |
| Plug and socket connection                                      | M12                                                                                 |                                                                     |
| Wiring                                                          |  | 1: TX +<br>2: RX +<br>3: TX -<br>4: RX -<br>5: -                    |
| Process connection IO-Link ports Class A X01...X0<IOL_AnzPorts> |                                                                                     |                                                                     |
| Plug and socket connection                                      | M12                                                                                 |                                                                     |
| Wiring                                                          |  | 1: + 24 V DC (US)<br>2: DI<br>3: GND (US)<br>4: C/Q IO-Link<br>5: - |

## 13.2 Profinet

### Contents

|                      |    |
|----------------------|----|
| Parameter data ..... | 67 |
| Cyclic data .....    | 70 |
| Acyclic data .....   | 72 |

22433

### 13.2.1 Parameter data

1630

| Slot | Subslot | Name     | Description                                                                                                                                                                                       |
|------|---------|----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | 1       | Master   | Parameter data of the IO-Link master (→ <b>Parameter of the IO-Link master</b> (→ p. 67))                                                                                                         |
|      | 2       | Port X01 | <ul style="list-style-type: none"> <li>Parameter data of the IO-Link ports (→ <b>Parameters of the IO-Link ports</b> (→ p. 68))</li> <li>modules (→ <b>Profinet modules</b> (→ p. 70))</li> </ul> |
|      | 3       | Port X02 |                                                                                                                                                                                                   |
|      | 4       | Port X03 |                                                                                                                                                                                                   |
|      | 5       | Port X04 |                                                                                                                                                                                                   |
|      | 6       | Port X05 |                                                                                                                                                                                                   |
|      | 7       | Port X06 |                                                                                                                                                                                                   |
|      | 8       | Port X07 |                                                                                                                                                                                                   |
|      | 9       | Port X08 |                                                                                                                                                                                                   |

### Parameter of the IO-Link master

22788

| Parameter       | Description                                                                                                                                  | Possible values              |                                                                                                                                                                                                                                                                                                        |
|-----------------|----------------------------------------------------------------------------------------------------------------------------------------------|------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| [Access Rights] | The access rights to the parameter data, process data and events/diagnostic messages of the IO-Link master and the connected IO-Link devices | Profinet + LineRecorder      | <ul style="list-style-type: none"> <li>Profinet and LR DEVICE have read and write access rights to parameters and process data</li> <li>Profinet and LR DEVICE have read access rights to events/alarms</li> </ul>                                                                                     |
|                 |                                                                                                                                              | Profinet + LineRecorder (ro) | <ul style="list-style-type: none"> <li>Profinet has read and write access rights to parameters and process data</li> <li>Profinet has read access rights to events/alarms</li> <li>LR DEVICE only has read access rights to parameters, process data and events/alarms</li> </ul>                      |
|                 |                                                                                                                                              | Profinet only                | <ul style="list-style-type: none"> <li>Profinet has read and write access rights to parameters and process data</li> <li>Profinet has read access rights to events/alarms</li> <li>LR DEVICE has no access rights (parameters, process data, events/alarms, web interface, firmware update)</li> </ul> |
|                 |                                                                                                                                              | keep setting                 | keeps settings                                                                                                                                                                                                                                                                                         |

## Parameters of the IO-Link ports

22787

| Parameter                   | Description                                                                                                                                                                                                              | Possible values                                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|-----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| [Fail-safe mode]            | Behaviour in case the Profinet connection is interrupted                                                                                                                                                                 | No Fail Safe                                      | deactivated                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|                             |                                                                                                                                                                                                                          | Fail Safe Reset Value                             | reset to default values                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|                             |                                                                                                                                                                                                                          | Fail Safe Old Value                               | maintain the most recent valid process value                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|                             |                                                                                                                                                                                                                          | Fail Safe with Pattern                            | set user-defined values                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| [Pattern Value]*            | <ul style="list-style-type: none"> <li>required values for the process data in case the connection is interrupted (as hexadecimal value)</li> <li>Pattern depends on the size of the selected Profinet module</li> </ul> | Per byte:<br>0x00 ... 0xFF                        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| [Port cycle time]           | Cycle time of the data transmission at the IO-Link port                                                                                                                                                                  | as fast as possible                               | The device automatically sets the fastest possible cycle time                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|                             |                                                                                                                                                                                                                          | 2.0 ms<br>...<br>128.0 ms                         | 2 milliseconds<br>...<br>128 milliseconds                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| [Validation / Data Storage] | Supported IO-Link standard and behaviour of the AL1302 when a new IO-Link device is connected to the IO-Link port                                                                                                        | no check and clear                                | <ul style="list-style-type: none"> <li>no verification of the vendor ID and device ID</li> <li>no data storage</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|                             |                                                                                                                                                                                                                          | Type compatible V1.0 device                       | <ul style="list-style-type: none"> <li>IO-Link device is compatible with the V1.0 IO-Link standard</li> <li>Verification whether it is an IO-Link device of the same type (validation via vendor ID and device ID)</li> <li>no data storage</li> </ul>                                                                                                                                                                                                                                                                                                                  |
|                             |                                                                                                                                                                                                                          | Type compatible V1.1 device                       | <ul style="list-style-type: none"> <li>IO-Link device is compatible with the V1.1 IO-Link standard</li> <li>Verification whether it is an IO-Link device of the same type (validation via vendor ID and device ID)</li> <li>no data storage</li> </ul>                                                                                                                                                                                                                                                                                                                  |
|                             |                                                                                                                                                                                                                          | Type compatible V1.1 device with Backup + Restore | <ul style="list-style-type: none"> <li>IO-Link device is compatible with the V1.1 IO-Link standard</li> <li>Verification whether it is an IO-Link device of the same type (validation via vendor ID and device ID)</li> <li>The IO-Link master saves the parameter values of the connected IO-Link device; modifications of the parameter values are also stored (→ observe the note!)</li> <li>When connecting an IO-Link device with factory settings, the parameter values stored in the IO-Link master are restored automatically on the IO-Link device.</li> </ul> |

| Parameter         | Description                                      | Possible values                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|-------------------|--------------------------------------------------|------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                   |                                                  | Type compatible V1.1 device with Restore | <ul style="list-style-type: none"> <li>IO-Link device is compatible with the V1.1 IO-Link standard</li> <li>Verification whether it is an IO-Link device of the same type (validation via vendor ID and device ID)</li> <li>The IO-Link master stores the parameter values of the connected IO-Link device once if the data memory of the AL1302 is empty.</li> <li>When connecting an IO-Link device with factory settings, the parameter values stored in the IO-Link master are restored automatically on the IO-Link device.</li> </ul> |
| [Vendor ID (VID)] | ID of the manufacturer that is to be validated   | 0 ... 65535                              | ID of the manufacturer of the IO-Link device (ifm electronic: 310)                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| [Device ID]       | ID of the IO-Link device that is to be validated | 0 ... 16777215                           | ID of the IO-Link device                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |

\* ... settings are only valid if [Fail Safe Mode] = Fail Safe with Pattern



If the parameter values of an IO-Link device are changed with IO\_LINK\_DEVICE, the backup mechanism remains ineffective. The changed parameter values are not stored on the IO-Link master.

## 13.2.2 Cyclic data

### Contents

|                                        |    |
|----------------------------------------|----|
| Profinet modules.....                  | 70 |
| PQI (Port Qualifier Information) ..... | 71 |

22429

### Profinet modules

22685

| Module                   | Description         |                                               |
|--------------------------|---------------------|-----------------------------------------------|
| IO-Link 32 I/ 32 O + PQI | IO-Link activated   | 32 bytes input and output data and PQI        |
| IO-Link 16 I/ 16 O + PQI |                     | 16 bytes input and output data and PQI        |
| IO-Link 8 I/ 8 O + PQI   |                     | 8 bytes input and output data and PQI         |
| IO-Link 4 I/ 4 O + PQI   |                     | 4 bytes input and output data and PQI         |
| IO-Link 2 I/ 2 O + PQI   |                     | 2 bytes input and output data and PQI         |
| IO-Link 1I/1O +PQI       |                     | 1 byte input and output data and PQI          |
| IO-Link 1I/15O +PQI      |                     | 1 byte input and 15 bytes output data and PQI |
| IO-Link 32I +PQI         |                     | 32 bytes input data and PQI                   |
| IO-Link 16I +PQI         |                     | 16 bytes input data and PQI                   |
| IO-Link 8I +PQI          |                     | 8 bytes input data and PQI                    |
| IO-Link 4I +PQI          |                     | 4 bytes input data and PQI                    |
| IO-Link 2I +PQI          |                     | 2 bytes input data and PQI                    |
| IO-Link 1I +PQI          |                     | 1 bytes input data and PQI                    |
| IO-Link 32O +PQI         |                     | 32 bytes output data and PQI                  |
| IO-Link 16O +PQI         |                     | 16 bytes output data and PQI                  |
| IO-Link 8O +PQI          |                     | 8 bytes output data and PQI                   |
| IO-Link 4O +PQI          |                     | 4 bytes output data and PQI                   |
| IO-Link 2O +PQI          |                     | 2 bytes output data and PQI                   |
| IO-Link 1O +PQI          |                     | 1 bytes output data and PQI                   |
| DI + PQI                 | IO-Link deactivated | Digital input and PQI                         |
| DO + PQI                 |                     | Digital output and PQI                        |
| Disabled                 | deactivated         |                                               |

## PQI (Port Qualifier Information)

22686

Port Qualifier Information (PQI) contains diagnostic information about the IO-Link port. In addition to the process data, the IO-Link master sends the PQI to the Profinet controller.

| Bit |    |    |    |    |    |     |     |
|-----|----|----|----|----|----|-----|-----|
| 7   | 6  | 5  | 4  | 3  | 2  | 1   | 0   |
| PQ  | DE | DA | -- | -- | -- | DI2 | DI4 |

Legend:

|     |                                                                                                                                                  |       |                     |
|-----|--------------------------------------------------------------------------------------------------------------------------------------------------|-------|---------------------|
| DI4 | Signal status of the digital input on Pin 4 (if used)                                                                                            | FALSE | = OFF               |
|     |                                                                                                                                                  | TRUE  | = ON                |
| DI2 | Signal status of the digital input on Pin 2 (if used)                                                                                            | FALSE | = OFF               |
|     |                                                                                                                                                  | TRUE  | = ON                |
| DA  | Device Available: shows if the IO-Link device has been recognised and if the device is in the "preoperate" or in the "operate" state             | FALSE | = no device         |
|     |                                                                                                                                                  | TRUE  | = device recognised |
| DE  | Device Error: shows if an error or a warning occurred; Note: The user needs to determine the cause of the fault separately via acyclic services. | FALSE | = no error          |
|     |                                                                                                                                                  | TRUE  | = error             |
| PQ  | Port Qualifier: shows if IO data is valid                                                                                                        | FALSE | = invalid           |
|     |                                                                                                                                                  | TRUE  | = valid             |

## 13.2.3 Acyclic data

22427

### I&M datasets

22778

The AL1302 supports the following I&M datasets (I&M = Identification & Maintenance):

#### I&M0 (Slot 0)

22779

| Variable                 | Description                                                             | Access* | Size |
|--------------------------|-------------------------------------------------------------------------|---------|------|
| Vendor ID                | IO-Link ID of the manufacturer                                          | r       | 2    |
| OrderID                  | Order number of the device (numbers are separated by blanks)            | r       | 20   |
| Serial number            | Serial number of the device (numbers separated by blanks)               | r       | 16   |
| Hardware revision        | Hardware revision of the device                                         | r       | 2    |
| Software revision prefix | Prefix of the software revision of the device (V, R, P, U or T)         | r       | 1    |
| Software Revision        | Software revision (numbers separated by blanks, e.g. x y z in "Vx.y.z") | r       | 3    |
| Revision Counter         | Revision counter; is incremented with each parameter change             | r       | 2    |
| Profile ID               | ID of sub-module profile (Slot 0: 0x0000)                               | r       | 2    |
| Profile Specific Type    | additional value for profile ID; 0, if not used                         | r       | 2    |
| IMVersion                | I&M version (default value: 0x0101)                                     | r       | 2    |
| IMSupported              | Supported I&M datasets (0x1110 for I&M1-3)                              | r       | 2    |

\* ... r = only read

#### I&M1 (Slot 0)

22765

| Variable                 | Description                                                     | Access* | Size |
|--------------------------|-----------------------------------------------------------------|---------|------|
| TagFunction of submodule | function of the device (ASCII, padded with spaces)              | r/w     | 32   |
| TagLocation of submodule | Location of the device in the plant (ASCII, padded with spaces) | r/w     | 22   |

\* ... r/w = read and write

#### I&M2 (Slot 0)

22780

| Variable          | Description                                                 | Access* | Size |
|-------------------|-------------------------------------------------------------|---------|------|
| Installation_Date | Installation date of the device (ASCII, padded with spaces) | r/w     | 16   |
|                   | reserved                                                    | r/w     | 38   |

\* ... r/w = read and write

#### I&M3 (Slot 0)

22781

| Variable   | Description                                           | Access* | Size |
|------------|-------------------------------------------------------|---------|------|
| Descriptor | Description of the device (ASCII, padded with spaces) | r/w     | 54   |

\* ... r/w = read and write



## I&M0 (Slot 1)

22782

| Variable                 | Description                                                             | Access* | Size |
|--------------------------|-------------------------------------------------------------------------|---------|------|
| Vendor ID                | IO-Link ID of the manufacturer                                          | r       | 2    |
| OrderID                  | Order number of the device (numbers are separated by blanks)            | r       | 20   |
| Serial number            | Serial number of the device (numbers separated by blanks)               | r       | 16   |
| Hardware revision        | Hardware revision of the device                                         | r       | 2    |
| Software revision prefix | Prefix of the software revision of the device (V, R, P, U or T)         | r       | 1    |
| SOFTWARE_REVISION        | Software revision (numbers separated by blanks, e.g. x y z in "Vx.y.z") | r       | 3    |
| REVISION_COUNTER         | Revision counter; is incremented with each parameter change             | r       | 2    |
| Profile ID               | ID of the sub-module profile (Slot 1: 0x4E01 = IOLink)                  | r       | 2    |
| Profile Specific Type    | additional value for profile ID; 0, if not used                         | r       | 2    |
| IMVersion                | I&M version (default value: 0x0101)                                     | r       | 2    |
| IMSupported              | Supported I&M datasets (0x0E for I&M1-3)                                | r       | 2    |

\* ... r = only read

## Diagnostic and alarms

22784

| ECD code | Name                        | Description                                                  | Type        |
|----------|-----------------------------|--------------------------------------------------------------|-------------|
| 0x02     | EVNT_CODE_M_PDU_CHECK       | Receive frame with CRC error                                 | Alarm       |
| 0x1B     | EVNT_CODE_S_RETRY           | Repetitions detected                                         | Alarm       |
| 0x1E     | EVNT_CODE_P_SHORT           | Short circuit on C/Q cable detected                          | Diagnostics |
| 0x1F     | EVNT_CODE_P_SENSOR          | Error in the sensor supply                                   | Diagnostics |
| 0x20     | EVNT_CODE_P_ACTOR           | Error in the actuator supply                                 | Diagnostics |
| 0x21     | EVNT_CODE_P_POWER           | Error in the power supply of the IO-Link master              | Diagnostics |
| 0x28     | EVNT_CODE_DSREADY_NOACTION  | Data storage completed, but no action, since CRC was correct | Alarm       |
| 0x29     | DS_FAULT_IDENT              | Sensor does not match the content of the data memory         | Alarm       |
| 0x2A     | DS_FAULT_SIZE               | Sensor parameters too large for data memory                  | Alarm       |
| 0x2B     | DS_FAULT_UPLOAD             | Error during data memory transmission from the sensor        | Alarm       |
| 0x2C     | DS_FAULT_DOWNLOAD           | Error during data memory transmission to the sensor          | Alarm       |
| 0x2F     | DS_FAULT_DEVICE_LOCKED      | Error during data storage because the device is blocked      | Alarm       |
| 0x32     | EVNT_CODES_DSREADY_DOWNLOAD | Parameter transmission to the sensor finished                | Alarm       |
| 0x33     | EVNT_CODE_DSREADY_UPLOAD    | Parameter transmission from the sensor finished              | Diagnostics |

## 13.3 ifm IoT Core

### Contents

|                              |    |
|------------------------------|----|
| Overview: IoT profile.....   | 76 |
| Overview: IoT types.....     | 79 |
| Overview: IoT services ..... | 80 |

8988

### 13.3.1 Overview: IoT profile

#### Contents

|                             |    |
|-----------------------------|----|
| Profile: deviceinfo .....   | 76 |
| Profile: devicetag .....    | 77 |
| Profile: iolinkmaster ..... | 77 |
| Profile: parameter .....    | 78 |
| Profile: processdata .....  | 78 |
| Profile: service .....      | 78 |
| Profile: software .....     | 78 |
| Profile: timer .....        | 78 |

17711

#### Profile: deviceinfo

17135

| Element (identifier)          | Properties                                                                                        | mandatory | Comments                                        |
|-------------------------------|---------------------------------------------------------------------------------------------------|-----------|-------------------------------------------------|
| deviceinfo                    | <ul style="list-style-type: none"> <li>type = structure</li> <li>profiles = deviceinfo</li> </ul> |           | characterises the element as device information |
| deviceinfo/devicename         | type = data                                                                                       | optional  |                                                 |
| deviceinfo/devicefamily       | type = data                                                                                       | optional  |                                                 |
| deviceinfo/devicevariant      | type = data                                                                                       | optional  |                                                 |
| deviceinfo/devicesymbol       | type = data                                                                                       | optional  |                                                 |
| deviceinfo/deviceicon         | type = data                                                                                       | optional  |                                                 |
| deviceinfo/serialnumber       | type = data                                                                                       | mandatory |                                                 |
| deviceinfo/productid          | type = data                                                                                       | optional  |                                                 |
| deviceinfo/productname        | type = data                                                                                       | optional  |                                                 |
| deviceinfo/productcode        | type = data                                                                                       | mandatory |                                                 |
| deviceinfo/producttext        | type = data                                                                                       | optional  |                                                 |
| deviceinfo/ordernumber        | type = data                                                                                       | optional  |                                                 |
| deviceinfo/productiondate     | type = data                                                                                       | optional  |                                                 |
| deviceinfo/productioncode     | type = data                                                                                       | optional  |                                                 |
| deviceinfo/hwrevision         | type = data                                                                                       | mandatory |                                                 |
| deviceinfo/swrevision         | type = data                                                                                       | mandatory |                                                 |
| deviceinfo/bootloaderrevision | type = data                                                                                       | optional  |                                                 |
| deviceinfo/vendor             | type = data                                                                                       | optional  |                                                 |
| deviceinfo/vendortext         | type = data                                                                                       | optional  |                                                 |
| deviceinfo/vendorurl          | type = data                                                                                       | optional  |                                                 |
| deviceinfo/vendorlogo         | type = data                                                                                       | optional  |                                                 |
| deviceinfo/productwebsite     | type = data                                                                                       | optional  |                                                 |
| deviceinfo/supportcontact     | type = data                                                                                       | optional  |                                                 |
| deviceinfo/icon               | type = data                                                                                       | optional  |                                                 |
| deviceinfo/image              | type = data                                                                                       | optional  |                                                 |
| deviceinfo/standards          | type = data                                                                                       | optional  |                                                 |

## Profile: devicetag

17438

| Element (identifier)       | Properties                                                                                       | mandatory | Comments |
|----------------------------|--------------------------------------------------------------------------------------------------|-----------|----------|
| devicetag                  | <ul style="list-style-type: none"> <li>type = structure</li> <li>profiles = devicetag</li> </ul> |           |          |
| devicetag/applicationtag   | type = data                                                                                      | mandatory |          |
| devicetag/applicationgroup | type = data                                                                                      | optional  |          |
| devicetag/machinecode      | type = data                                                                                      | optional  |          |
| devicetag/tenant           | type = data                                                                                      | optional  |          |

## Profile: iolinkmaster

14997

| Element (identifier)                   | Properties                                                                                              | mandatory | Comments           |
|----------------------------------------|---------------------------------------------------------------------------------------------------------|-----------|--------------------|
| masterport                             | <ul style="list-style-type: none"> <li>type = structure</li> <li>profiles = iolinkmaster</li> </ul>     |           | Executable service |
| masterport/mode                        | <ul style="list-style-type: none"> <li>type = data</li> <li>profile = parameter</li> </ul>              | mandatory |                    |
| masterport/comspeed                    | <ul style="list-style-type: none"> <li>type = data</li> <li>profile = parameter</li> </ul>              | mandatory |                    |
| masterport/mastercycletime_actual      | <ul style="list-style-type: none"> <li>type = data</li> <li>profile = parameter</li> </ul>              | mandatory |                    |
| masterport/mastercycletime_preset      | <ul style="list-style-type: none"> <li>type = data</li> <li>profile = parameter</li> </ul>              | mandatory |                    |
| masterport/validation_datastorage_mode | <ul style="list-style-type: none"> <li>type = data</li> <li>profile = parameter</li> </ul>              | mandatory |                    |
| masterport/validation_vendorid         | <ul style="list-style-type: none"> <li>type = data</li> <li>profile = parameter</li> </ul>              | mandatory |                    |
| masterport/validation_deviceid         | <ul style="list-style-type: none"> <li>type = data</li> <li>profile = parameter</li> </ul>              | mandatory |                    |
| masterport/additionalpins_in           | <ul style="list-style-type: none"> <li>type = data</li> <li>profile = processdata</li> </ul>            | optional  |                    |
| masterport/additionalpins_out          | <ul style="list-style-type: none"> <li>type = data</li> <li>profile = processdata</li> </ul>            | optional  |                    |
| masterport/portevent                   | <ul style="list-style-type: none"> <li>type = data</li> </ul>                                           | mandatory |                    |
| masterport/iolinkdevice                | <ul style="list-style-type: none"> <li>type = structure</li> <li>profile = iolinkdevice_full</li> </ul> | mandatory |                    |

## Profile: parameter

16545

The profile is used to mark the elements of type data as parameters (acyclic data). The profile defines no substructure.

## Profile: processdata

16569

The profile is used to mark the elements of type data as process data (cyclic data). The profile does not define a substructure.

## Profile: service

16575

| Element (identifier) | Properties                                                                                   | mandatory | Comments           |
|----------------------|----------------------------------------------------------------------------------------------|-----------|--------------------|
| service              | <ul style="list-style-type: none"> <li>type = service</li> <li>profiles = service</li> </ul> |           | Executable service |

## Profile: software

10999

| Element (identifier)  | Properties                                                                                      | mandatory | Comments                              |
|-----------------------|-------------------------------------------------------------------------------------------------|-----------|---------------------------------------|
| software              | <ul style="list-style-type: none"> <li>type = structure</li> <li>profiles = software</li> </ul> |           | characterises the element as software |
| software/version      | type = data                                                                                     | mandatory |                                       |
| software/reboot       | type = service                                                                                  | optional  |                                       |
| software/factoryreset | type = service                                                                                  | optional  |                                       |
| software/status       | type = structure                                                                                | optional  |                                       |
| software/diag         | type = structure                                                                                | optional  |                                       |

## Profile: timer

10997

| Element (identifier) | Properties                                                                                   | mandatory | Comments           |
|----------------------|----------------------------------------------------------------------------------------------|-----------|--------------------|
| timer                | <ul style="list-style-type: none"> <li>type = structure</li> <li>profiles = timer</li> </ul> |           | Executable service |
| timer/counter        | <ul style="list-style-type: none"> <li>type = data</li> <li>profile = parameter</li> </ul>   | mandatory |                    |
| timer/interval       | <ul style="list-style-type: none"> <li>type = data</li> <li>profile = parameter</li> </ul>   | optional  |                    |
| timer/start          | type = service                                                                               | optional  |                    |
| timer/start          | type = service                                                                               | optional  |                    |

### 13.3.2 Overview: IoT types

16547

The ifm IoT Core uses the following element types:

| Name      | Description                                                                 |
|-----------|-----------------------------------------------------------------------------|
| structure | Element is a structure element (like a folder in a file system)             |
| service   | Element is a service that can be addressed from the network                 |
| Event     | Element is an event that can be started by the firmware and sends messages. |
| data      | Element is a data point                                                     |
| device    | Root element a device represents                                            |

### 13.3.3 Overview: IoT services

| Contents                          |    |
|-----------------------------------|----|
| Service: factoryreset.....        | 80 |
| Service: gettree .....            | 80 |
| Service: getdata.....             | 81 |
| Service: getdatamulti .....       | 81 |
| Service: getidentity .....        | 82 |
| Service: getsubscriptioninfo..... | 82 |
| Service: iolreadacyclic.....      | 83 |
| Service: iolwriteacyclic.....     | 83 |
| Service: reboot .....             | 83 |
| Service: setblock .....           | 84 |
| Service: setdata.....             | 84 |
| Service: setelementinfo .....     | 85 |
| Service: subscribe .....          | 85 |
| Service: unsubscribe .....        | 86 |

17708

#### Service: factoryreset

12188

**Name:** factoryreset

**Description:** The service sets the parameters of the device to the factory settings.

**Applicable to:** different objects

**Request data:** none

**Return data (data):** none

#### Service: gettree

17435

**Name:** gettree

**Description:** The service reads the complete device description of the AL1302 and provides it as JSON object.

**Applicable to:** Objects of the device type

**Request data:** none

**Return data (data):**

| Data field | Required field | Data type   | Default | Description                    |
|------------|----------------|-------------|---------|--------------------------------|
| Identifier | mandatory      | STRING      |         | Identifier of the root element |
| type       | mandatory      | STRING      |         | Type of the element            |
| format     | optional       | JSON object | empty   | Format of the data content     |
| uid        | optional       | STRING      | empty   |                                |
| profiles   | optional       | JSON array  | empty   |                                |
| subs       | mandatory      | JSON array  |         | Subelements                    |
| hash       | optional       | STRING      |         |                                |



## Service: getdata

12223

**Name:** getdata

**Description:** Service reads the value of a data point and provides it.

**Applicable to:** Objects of the data type

**Request data:** none

**Return data (data):**

| Data field | Required field | Data type | Default | Description                     |
|------------|----------------|-----------|---------|---------------------------------|
| value      | mandatory      | STRING    |         | Value of the element/data point |

Example: {"code":10,"cid":4711,"adr":"devicetag/applicationtag/getdata"}

## Service: getdatamulti

17964

**Name:** getdatamulti

**Description:** The service sequentially reads the values of several data points and provides them. The value and the diagnostic code are provided for each data point.

**Applicable to:** Objects of the data type

**Request data:**

| Data field | Required field | Data type        | Default | Description                                                                       |
|------------|----------------|------------------|---------|-----------------------------------------------------------------------------------|
| datatosend | mandatory      | ARRAY OF STRINGS |         | List of data points to be requested; data points must support the service getdata |
| consistent | optional       | BOOL             | false   |                                                                                   |

**Return data (data):** for each requested data point

| Data field | Required field | Data type | Default | Description                    |
|------------|----------------|-----------|---------|--------------------------------|
| Data point | mandatory      | STRING    |         | Data point request             |
| code       | mandatory      | INT       |         | Diagnostic code of the request |
| data       | mandatory      | STRING    |         | Value of the data point        |

## Service: getidentity

17134

**Name:** getidentity

**Description:** The service reads the complete device description of the AL1302 and provides it as JSON object.

**Applicable to:** Objects of the device type

**Request data:** none

**Return data (data):**

| Data field          | Required field | Data type        | Default | Description                       |
|---------------------|----------------|------------------|---------|-----------------------------------|
| iot                 |                | device           |         | Device description as JSON object |
| iot.name            | mandatory      | STRING           |         |                                   |
| iot.uid             | optional       | STRING           |         |                                   |
| iot.version         | mandatory      | STRING           |         |                                   |
| iot.catalogue       | optional       | ARRAY OF OBJECTS |         |                                   |
| iot.deviceclass     | optional       | ARRAY OF STRING  |         |                                   |
| iot.serverlist      |                | ARRAY OF OBJECTS |         |                                   |
| device              | optional       |                  |         | AL1302                            |
| device.serialnumber | optional       |                  |         | Serial number                     |
| device.hwrevision   | optional       |                  |         | Hardware version                  |
| device.swrevision   | optional       |                  |         | Software version                  |
| device.custom       | optional       |                  |         |                                   |

## Service: getsubscriptioninfo

17436

**Name:** getsubscriptioninfo

**Description:** The service provides information about an existing subscription (subscribe).

**Applicable to:** Objects of the event type

**Request data:**

| Data field     | Required field | Data type | Default | Description            |
|----------------|----------------|-----------|---------|------------------------|
| subscriptionid | mandatory      | INT       |         | ID of the subscription |

**Return data (data):** none

## Service: iolreadacyclic

12222

**Name:** iolreadacyclic

**Description:** The service acyclically reads the parameter value of an IO-Link device. It is accessed via IO-Link index and subindex.

**Applicable to:** IO-Link specific objects

**Request data:**

| Data field | Required field | Data type | Default | Description                       |
|------------|----------------|-----------|---------|-----------------------------------|
| index      | mandatory      | NUMBER    |         | IO-Link index of the parameter    |
| subindex   | mandatory      | NUMBER    |         | IO-Link subindex of the parameter |

**Return data (data):**

| Data field | Required field | Data type | Default | Description                 |
|------------|----------------|-----------|---------|-----------------------------|
| value      | mandatory      | STRING    |         | Value in hexadecimal format |

## Service: iolwriteacyclic

11035

**Name:** iolwriteacyclic

**Description:** The service acyclically writes the parameter value of an IO-Link device. It is accessed via IO-Link index and subindex.

**Applicable to:** IO-Link specific objects

**Request data:**

| Data field | Required field | Data type | Default | Description                       |
|------------|----------------|-----------|---------|-----------------------------------|
| index      | mandatory      | NUMBER    |         | IO-Link index of the parameter    |
| subindex   | mandatory      | NUMBER    |         | IO-Link subindex of the parameter |
| value      | mandatory      | NUMBER    |         | New value of the parameter        |

**Return data (data):** none

## Service: reboot

10986

**Name:** reboot

**Description:** The service reboots the device.

**Applicable to:** different objects

**Request data:** none

**Return data (data):** none

**Service: setblock**

12224

**Name:** setblock**Description:** The service simultaneously sets the values of several data points of a structure.**Applicable to:** Objects of the data type**Request data:**

| Data field | Required field | Data type          | Default | Description                                                                            |
|------------|----------------|--------------------|---------|----------------------------------------------------------------------------------------|
| datatosend | mandatory      | ARRAY OF (STRINGS) |         | List of data points and their new values; data points must support the service setdata |
| consistent | optional       | BOOL               | false   |                                                                                        |

**Return data (data):** none

Example:

```
{
  "code":10,
  "cid":4711,
  "adr":"/iotsetup/network/setblock",
  "data":{"consistent":true,"datatosend":["ipadresse":"192.168.0.6","ipdefaultgateway":"192.168.0.250"]}
}
```

**Service: setdata**

11036

**Name:** setdata**Description:** The service sets the value of the data point.**Applicable to:** Objects of the data type**Request data:**

| Data field | Required field | Data type | Default | Description                         |
|------------|----------------|-----------|---------|-------------------------------------|
| newvalue   | mandatory      | STRING    |         | New value of the element/data point |

**Return data (data):** none

Example:

```
{
  "code":10,
  "cid":4711,
  "adr":"/devicetag/applicationtag/setdata",
  "data":{"newvalue":"ifm IO-Link master"}
}
```

## Service: setelementinfo

7159

**Name:** setelementinfo

**Description:** The service sets the uid of an element.

**Applicable to:** Objects of the device type

**Request data:**

| Data field | Required field | Data type   | Default | Description                      |
|------------|----------------|-------------|---------|----------------------------------|
| url        | mandatory      | STRING      |         | URL of the element to be changed |
| uid        | optional       | STRING      |         | UID to be set                    |
| profiles   | optional       | JSON array  |         |                                  |
| format     | optional       | JSON object |         |                                  |

**Return data (data):**

| Data field | Required field | Data type   | Default | Description                               |
|------------|----------------|-------------|---------|-------------------------------------------|
| identifier | mandatory      | STRING      |         | Identifier of the element                 |
| type       | mandatory      | STRING      |         | Type of the element                       |
| format     | optional       | JSON object | blank   | Format of the data or the service content |
| uid        | optional       | STRING      | blank   |                                           |
| profiles   | optional       | JSON array  | blank   |                                           |
| hash       | optional       | STRING      | --      |                                           |

## Service: subscribe

10920

**Name:** subscribe

**Description:** The service subscribes to the values of data points. The data points to be subscribed are transferred as a list. The IO-Link master sends changes to the data drain defined in callback.

**Applicable to:** Objects of the event type

**Request data:**

| Data field | Required field | Data type        | Default | Description                                                                                     |
|------------|----------------|------------------|---------|-------------------------------------------------------------------------------------------------|
| callback   | mandatory      | STRING           |         | Address to which IoT Core event notifications are to be sent; complete URL: ipaddress:port/path |
| datatosend | mandatory      | ARRAY OF STRINGS |         | List from URLs of data elements; elements have to support getdata                               |

**Return data (data):** none

## Service: unsubscribe

16567

**Name:** unsubscribe

**Description:** The service deletes an existing subscription. unsubscribe is successful if cid and the callback address are registered for a subscription (subscribe). If the STRING "DELETE" is provided in callback, the IO-Link master deletes all active subscriptions.

**Applicable to:** Objects of the event type

**Request data:**

| Data field | Required field | Data type | Default | Description                                                                                     |
|------------|----------------|-----------|---------|-------------------------------------------------------------------------------------------------|
| callback   | mandatory      | STRING    |         | Address to which IoT Core event notifications are to be sent; complete URL: ipaddress:port/path |

**Return data (data):** none

# 14 Index

## A

|                                              |    |
|----------------------------------------------|----|
| Access ifm-LoT Core .....                    | 53 |
| Accessories .....                            | 61 |
| Acyclic data .....                           | 72 |
| Add the device to the Profinet network ..... | 36 |
| Appendix .....                               | 62 |
| Application .....                            | 63 |
| Approvals / tests .....                      | 65 |

## C

|                                                    |            |
|----------------------------------------------------|------------|
| CAN standard units .....                           | 42         |
| Communication, parameter setting, evaluation ..... | 11         |
| Configuration .....                                | 23         |
| Configure communication profile .....              | 38         |
| Configure IO-Link devices .....                    | 33, 43, 48 |
| Configure IO-Link ports .....                      | 39, 46     |
| Configure LoT port .....                           | 45         |
| Configure the fieldbus port .....                  | 45         |
| Configure the Profinet interface .....             | 40         |
| Connect the device .....                           | 19         |
| Control IO-Link master .....                       | 48         |
| Cyclic data .....                                  | 70         |

## D

|                                     |    |
|-------------------------------------|----|
| Detect diagnostics and alarms ..... | 42 |
| Device description .....            | 52 |
| Diagnostic and alarms .....         | 74 |
| Digital inputs .....                | 12 |

## E

|                                                                          |        |
|--------------------------------------------------------------------------|--------|
| Electrical connection .....                                              | 14, 66 |
| Electrical data .....                                                    | 63     |
| Ethernet interface .....                                                 | 21     |
| Example .....                                                            |        |
| Change name of the IO-Link master .....                                  | 50     |
| change the parameter value of an IO-Link device .....                    | 51     |
| Read process data of an IO-Link device .....                             | 49     |
| Read several parameter values of the IO-Link master simultaneously ..... | 49     |
| read the parameter value of an IO-Link device .....                      | 50     |
| Subscribe to event .....                                                 | 51     |
| Examples .....                                                           | 49     |
| Exchange IO-Link device .....                                            | 58     |

## F

|                                        |    |
|----------------------------------------|----|
| Factory settings .....                 | 60 |
| Fieldbus .....                         |    |
| Configure the Profinet port .....      | 28 |
| Firmware .....                         |    |
| Reboot the device .....                | 32 |
| Reset device to factory settings ..... | 32 |
| Firmware update .....                  | 57 |
| Function .....                         | 10 |

## G

|                  |    |
|------------------|----|
| General .....    | 7  |
| GET method ..... | 53 |

## I

|                                                                     |        |
|---------------------------------------------------------------------|--------|
| I&M datasets .....                                                  | 72     |
| I&M0 (Slot 0) .....                                                 | 72     |
| I&M0 (Slot 1) .....                                                 | 73     |
| I&M1 (Slot 0) .....                                                 | 72     |
| I&M2 (Slot 0) .....                                                 | 72     |
| I&M3 (Slot 0) .....                                                 | 72     |
| Identify device .....                                               | 56     |
| ifm LoT Core .....                                                  | 75     |
| General information .....                                           | 52     |
| ifm weltweit • ifm worldwide • ifm à l'échelle internationale ..... | 89     |
| Input circuit .....                                                 | 17     |
| Inputs .....                                                        | 64     |
| Inputs / outputs .....                                              | 63     |
| Install GSD file .....                                              | 35     |
| Intended use .....                                                  | 9      |
| Interfaces .....                                                    | 64     |
| Internet of Things (IoT) .....                                      | 11     |
| IO-Link .....                                                       | 11     |
| IO-Link circuits .....                                              | 18     |
| IO-Link ports .....                                                 | 17     |
| Activate data transfer to the LR SMARTOBSERVER .....                | 29     |
| Configure operating mode .....                                      | 30     |
| Set the device validation and data storage .....                    | 31     |
| IO-Link ports (Class A) .....                                       | 22     |
| IO-Link supply .....                                                | 12     |
| IoT .....                                                           |        |
| Configure access rights .....                                       | 26     |
| Configure IP settings .....                                         | 27     |
| Configure the interface to the LR SMARTOBSERVER .....               | 28     |
| IoT Core .....                                                      | 44     |
| Diagnostic codes .....                                              | 55     |
| IoT port .....                                                      | 16, 22 |

## L

|                                       |    |
|---------------------------------------|----|
| LED indicators .....                  | 21 |
| Legal and copyright information ..... | 5  |
| LR DEVICE .....                       | 24 |

## M

|                            |    |
|----------------------------|----|
| Maintenance .....          | 59 |
| Mechanical data .....      | 65 |
| Modification history ..... | 6  |
| Mount the device .....     | 13 |
| Mounting .....             | 13 |

## O

|                                      |    |
|--------------------------------------|----|
| Offline parameter setting .....      | 25 |
| Operating and display elements ..... | 20 |
| Operating conditions .....           | 65 |
| Operation .....                      | 56 |
| Outputs .....                        | 64 |
| Overview .....                       | 20 |
| IoT profile .....                    | 76 |
| IoT services .....                   | 80 |
| IoT types .....                      | 79 |

## P

|                      |    |
|----------------------|----|
| Parameter data ..... | 67 |
|----------------------|----|

## Index

|                                        |        |
|----------------------------------------|--------|
| Parameter of the IO-Link master .....  | 67     |
| Parameter setting .....                | 11     |
| Parameters of the IO-Link ports .....  | 68     |
| Permitted use .....                    | 9      |
| PI controller .....                    | 5      |
| POST method .....                      | 54     |
| PQI (Port Qualifier Information) ..... | 71     |
| Preliminary note .....                 | 5      |
| Profile .....                          |        |
| deviceinfo .....                       | 76     |
| devicetag .....                        | 77     |
| iolinkmaster .....                     | 77     |
| parameter .....                        | 78     |
| processdata .....                      | 78     |
| service .....                          | 78     |
| software .....                         | 78     |
| timer .....                            | 78     |
| Profinet .....                         | 11, 67 |
| Configure IO-Link devices .....        | 40     |
| Configure the device .....             | 34     |
| Programmers' notes .....               | 42     |
| Read & write device information .....  | 41     |
| Profinet modules .....                 | 70     |
| Profinet ports .....                   | 15     |
| Programmers' notes .....               | 52     |
| Prohibited use .....                   | 9      |
| Purpose of the document .....          | 5      |

## R

|                                              |        |
|----------------------------------------------|--------|
| Read / write cyclic process data .....       | 46     |
| Read and write data cyclically .....         | 41     |
| Read and write I&M datasets .....            | 42     |
| Read device information .....                | 47     |
| Read diagnostic data .....                   | 47     |
| Read information about IO-Link devices ..... | 48     |
| Remarks .....                                | 14, 25 |
| Required background knowledge .....          | 7      |

## S

|                                      |    |
|--------------------------------------|----|
| Safety instructions .....            | 7  |
| Safety symbols on the device .....   | 8  |
| Service .....                        |    |
| factoryreset .....                   | 80 |
| getdata .....                        | 81 |
| getdatamulti .....                   | 81 |
| getidentity .....                    | 82 |
| getsubscriptioninfo .....            | 82 |
| gettree .....                        | 80 |
| iolreadacyclic .....                 | 83 |
| iolwriteacyclic .....                | 83 |
| reboot .....                         | 83 |
| setblock .....                       | 84 |
| setdata .....                        | 84 |
| setelementinfo .....                 | 85 |
| subscribe .....                      | 85 |
| unsubscribe .....                    | 86 |
| Set application identification ..... | 46 |
| Status LEDs .....                    | 21 |
| Symbols and styles used .....        | 6  |

## T

|                               |   |
|-------------------------------|---|
| Tampering with the unit ..... | 8 |
|-------------------------------|---|

|                      |    |
|----------------------|----|
| Technical data ..... | 63 |
|----------------------|----|

## V

|                         |    |
|-------------------------|----|
| Visual indication ..... | 12 |
| Voltage supply .....    | 22 |
| VPN connection .....    | 25 |

## W

|                     |   |
|---------------------|---|
| Warnings used ..... | 8 |
|---------------------|---|



# 15 ifm weltweit • ifm worldwide • ifm à l'échelle internationale

Version: 2017-12-18

8310

ifm electronic gmbh • Friedrichstraße 1 • 45128 Essen

[www.ifm.com](http://www.ifm.com) • Email: [info@ifm.com](mailto:info@ifm.com)

Service hotline: 0800 / 16 16 16 (only Germany, Mo-Fr 07.00...18.00 h)

## ifm Niederlassungen • Sales offices • Agences

|    |                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|----|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| D  | Niederlassung Nord • 31135 Hildesheim • Tel. 05121 7667-0<br>Niederlassung West • 45128 Essen • Tel. 0201 36475 -0<br>Niederlassung Mitte-West • 58511 Lüdenscheid • Tel. 02351 4301-0<br>Niederlassung Süd-West • 64646 Heppenheim • Tel. 06252 7905-0<br>Niederlassung Baden-Württemberg • 73230 Kirchheim • Tel. 07021 8086-0<br>Niederlassung Bayern • 82178 Puchheim • Tel. 089 80091-0<br>Niederlassung Ost • 07639 Tautenhain • Tel. 036601 771-0 |
| AE | ifm electronic FZC • Saif Zone, Sharjah • phone +971- 6-5573601                                                                                                                                                                                                                                                                                                                                                                                          |
| AR | ifm electronic s.r.l. • 1107 Buenos Aires • phone +54 11 5353-3436                                                                                                                                                                                                                                                                                                                                                                                       |
| AT | ifm electronic gmbh • 1120 Wien • phone +43 / 1 / 617 45 00                                                                                                                                                                                                                                                                                                                                                                                              |
| AU | ifm efector pty ltd. • Mulgrave Vic 3170 • phone +61 1300 365 088                                                                                                                                                                                                                                                                                                                                                                                        |
| BE | ifm electronic n.v./s.a. • 1731 Zellik • phone +32 2 481 0220                                                                                                                                                                                                                                                                                                                                                                                            |
| BG | ifm electronic eood • 1202 Sofia • phone +359 2 807 59 69                                                                                                                                                                                                                                                                                                                                                                                                |
| BR | ifm electronic Ltda. • 03337-000 Sao Paulo / SP • phone +55-11-2672-1730                                                                                                                                                                                                                                                                                                                                                                                 |
| CA | ifm efector Canada inc. • Mississauga, ON L5N 2X7 • phone +1 855-436-2262                                                                                                                                                                                                                                                                                                                                                                                |
| CH | ifm electronic ag • 4624 Härkingen • phone +41 / 800 88 80 33                                                                                                                                                                                                                                                                                                                                                                                            |
| CL | ifm electronic SpA • Oficina 5041 Comuna de Conchalí • phone +56-2-32239282                                                                                                                                                                                                                                                                                                                                                                              |
| CN | ifm electronic (Shanghai) Co. Ltd. • 201203 Shanghai • phone +86 21 3813 4800                                                                                                                                                                                                                                                                                                                                                                            |
| CZ | ifm electronic, spol. s.r.o. • 140 00 Praha 4 • phone +420 267 990 211                                                                                                                                                                                                                                                                                                                                                                                   |
| DK | ifm electronic a/s • 2605 Brøndby • phone +45 70 20 11 08                                                                                                                                                                                                                                                                                                                                                                                                |
| ES | ifm electronic s.a. • 08820 El Prat de Llobregat • phone +34 93 479 30 80                                                                                                                                                                                                                                                                                                                                                                                |
| FI | ifm electronic oy • 00440 Helsinki • phone +358 75 329 5000                                                                                                                                                                                                                                                                                                                                                                                              |
| FR | ifm electronic s.a. • 93192 Noisy-le-Grand Cedex • phone +33 0820 22 30 01                                                                                                                                                                                                                                                                                                                                                                               |
| GB | ifm electronic Ltd. • Hampton, Middlesex TW12 2HD • phone +44 / 20 / 8213 0000                                                                                                                                                                                                                                                                                                                                                                           |
| GR | ifm electronic monoprosofi E.P.E. • 15125 Amaroussio • phone +30 210 61 800 90                                                                                                                                                                                                                                                                                                                                                                           |
| HU | ifm electronic kft. • 9028 Győr • phone +36-96 / 518-397                                                                                                                                                                                                                                                                                                                                                                                                 |
| IN | ifm electronic India Private Limited • Kolhapur, 416234 • phone +91 / 231 / 267 27 70                                                                                                                                                                                                                                                                                                                                                                    |
| IE | ifm electronic (Ireland) Ltd. • Dublin 22 • phone +353 / 1 / 461 32 00                                                                                                                                                                                                                                                                                                                                                                                   |
| IT | ifm electronic s.r.l. • 20864 Agrate Brianza (MB) • phone +39 39-6899982                                                                                                                                                                                                                                                                                                                                                                                 |
| JP | efector co., ltd. • Chiba-shi, Chiba 261-7118 • phone +81 043-299-2070                                                                                                                                                                                                                                                                                                                                                                                   |
| KR | ifm electronic Ltd. • 04420 Seoul • phone +82 2-790-5610                                                                                                                                                                                                                                                                                                                                                                                                 |
| MX | ifm efector S. de R.L. de C.V. • San Pedro Garza Garcia, N.L. 66269 • phone +52-81-8040-3535                                                                                                                                                                                                                                                                                                                                                             |
| MY | ifm electronic Pte. Ltd • 47100 Puchong, Selangor • phone +603 8066 9853                                                                                                                                                                                                                                                                                                                                                                                 |
| NA | ifm electronic (pty) Ltd • 25 Dr. W. Kulz Street Windhoek • phone +264 61 300984                                                                                                                                                                                                                                                                                                                                                                         |
| NL | ifm electronic b.v. • 3843 GA Harderwijk • phone +31 341-438 438                                                                                                                                                                                                                                                                                                                                                                                         |
| NZ | ifm efector pty ltd • 930 Great South Road Penrose, Auckland • phone +64 / 95 79 69 91                                                                                                                                                                                                                                                                                                                                                                   |
| PL | ifm electronic sp. z o.o. • 40-106 Katowice • phone +48 32 70 56 400                                                                                                                                                                                                                                                                                                                                                                                     |
| PT | ifm electronic s.a. • 4410-137 São Félix da Marinha • phone +351 223 71 71 08                                                                                                                                                                                                                                                                                                                                                                            |
| RO | ifm electronic s.r.l. • Sibiu 557260 • phone +40 269 224 550                                                                                                                                                                                                                                                                                                                                                                                             |
| RU | ifm electronic • 105318 Moscow • phone +7 495 921-44-14                                                                                                                                                                                                                                                                                                                                                                                                  |
| SG | ifm electronic Pte Ltd • 609 916 Singapore • phone +65 6562 8661                                                                                                                                                                                                                                                                                                                                                                                         |
| SK | ifm electronic s.r.o. • 831 06 Bratislava • phone +421 244 872 329                                                                                                                                                                                                                                                                                                                                                                                       |
| SE | ifm electronic ab • 412 50 Göteborg • phone +46 31-750 23 00                                                                                                                                                                                                                                                                                                                                                                                             |
| TR | ifm electronic Ltd. Sti. • 34381 Sisli, Istanbul • phone +90 212 210 50 80                                                                                                                                                                                                                                                                                                                                                                               |
| TW | ifm electronic • Kaohsiung City, 806, Taiwan R.O.C. • phone +886 7 3357778                                                                                                                                                                                                                                                                                                                                                                               |
| UA | TOV ifm electronic • 02660 Kiev • phone +380 44 501-85-43                                                                                                                                                                                                                                                                                                                                                                                                |
| US | ifm efector inc. • Malvern, PA 19355 • phone +1 800-441-8246                                                                                                                                                                                                                                                                                                                                                                                             |
| VN | ifm electronic Vietnam Co., Ltd. • 700000 Ho Chi Minh City • phone +84-28-2253.6715                                                                                                                                                                                                                                                                                                                                                                      |
| ZA | ifm electronic (Pty) Ltd. • 0157 Pretoria • phone +27 12 450 0412                                                                                                                                                                                                                                                                                                                                                                                        |

Technische Änderungen behalten wir uns ohne vorherige Ankündigung vor.

We reserve the right to make technical alterations without prior notice.

Nous nous réservons le droit de modifier les données techniques sans préavis.