Autonics Specifications Ø50mm Shaft type Single-turn S NPN open collector output EP50S8-**Absolute Rotary Encoder** Output code **EP50S SERIES** INSTRUCTION MANUAL CE TS: 7.5 ±25 (7-bit) TS: 8° ±25' (7-bit) TP1: 5° ±60' (1-bit) TP2: 2° ±60' (1-bit) TS: 9° ±60' (6-bit) EP: 9° ±60' (1-bit) TP1: 7° ±60' (1-bit) EP: 9 ±00 (1-bit) TP2: 2° ±60' (1-bit) TS: 11.25° ±60' (6-bit) EP: 11.25° ±60' (1-bit) Output phase Output angle³ Thank you for choosing our Autonics product. Please read the following safety considerations before use. Safety Considerations %Please observe all safety considerations for safe and proper product operation to avoid hazards $imes \Lambda$ symbol represents caution due to special circumstances in which hazards may occur. Marning Failure to follow these instructions may result in serious injury or death. ▲ Caution Failure to follow these instructions may result in personal injury or product damage. A Warning TP1: 53° ±60' (1-bit) TP2: 15° ±60' (1-bit) TS: 60° ±60' (3-bit) EP: 60° ±60' (1-bit) 1. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety Control equipment, crime/disaster prevention devices, etc.) Failure to follow this instruction may result in personal injury, economic loss or fire. 2. Do not use the unit in the place where flammable/explosive/corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present. Failure to follow this instruction may result in explosion or fire. Current consumption Max. 100mA (disconnection of load) 3. Install on a device panel to use. Failure to follow this instruction may result in fire. 4. Do not connect, repair, or inspect the unit while connected to a power source. Dielectric strength Axial cable type (cable gland) Max. 70gf·cm (0.0069N·m) Failure to follow this instruction may result in fire. Starting torque Max. 70gf·cm (0.0069N·m) Moment of inertia Max. 40g·cm² (4×10⁶kg·m²) Shaft loading Radial: 10kgf, Thrust: 2.5kgf 5. Check 'Connections' before wiring. Failure to follow this instruction may result in fire. 6. Do not disassemble or modify the unit. Max. allowat Max, allowable 3.000rpm Failure to follow this instruction may result in fire Vibration ▲ Caution Approx. max. 50G -10 to 70°C, storage: -25 to 85°C Shock Environ-ment Ambien Protection structure Ambient temp. -10 to 70°C, storage: -25 to 85°C Ambient humid. 35 to 85%RH, storage: 35 to 90%RH 1. Use the unit within the rated specifications. Failure to follow this instruction may result in fire or product damage 2. Do not short the load. Failure to follow this instruction may result in product damage by fire. Cable 3. Do not use the unit near the place where there is the equipment which generates Accessory Bracket, Coupling strong magnetic force or high frequency noise and strong alkaline, strong acidic Œ Approval exists. Failure to follow this instruction may result in product damage. max. allowable revolution when selecting the resolution Ordering Information %3: The weight includes packaging. The weight in parenthesis is for unit only %Environment resistance is rated at no freezing or condensation. EP50S 8 - 1024 1 R Р 24 Pulses/ Shaft Series Output code Rotation direction Control output Power supply diameter revolution Dimensions : Output increases by CW rotation direction PNP open 2: PNP open collector output 1: NPN open collector output 24: 12-24VDC ±5% BCD code 50mm Refer to at the shaft Shaft type Ø8mm Binary code I: NPN open esolution Output increases by : Gray code collector output CCW rotation direction at the shaft 6 88 88 0 Control Output I/O Circuit Output type PNP open collector output NPN open collector output Rotary encoder circuit Load connection Rotary encoder circuit Load connection 4-M4 DP10 Sorting Bracket O Coupling Source current Load max. 32mA 4.5 2.5 Output Output Output circuit 54.3 Load Sink current R22.5 \oplus : max. 32mA V0, R2.2 / %Each bit of output has the same circuit. Overload or short may cause circuit break the catalogue. %The above specifications are subject to change and some models may be discontinued *Do not put strong impact when insert a coupling into shaft. 14.5 Failure to follow this instruction may result in product damage. %Fix the unit or a coupling by a wrench under 0.15 N·m of torque. without notice. *Be sure to follow cautions written in the instruction manual, and the technical When you install this unit, if eccentricity and deflection angle are larger it may shorten the life cycle of this unit. descriptions (catalog, website).





Cor			ti	or	ı																
solution	6	8	10	12	16	20	24	32	40	45	48	64	90	128	180	256	360	512	720	1024	
hite												+	-V								
ack												C	V								
own	2 ⁰																				
ed	21																				
ange	2 ²																				
llow	N·C 2 ³																				
ue	N·C							2°×10													
ırple	N·C						2 ¹ ×10														
ay	N·C							2 ² ×10													
hite/ own	TP1									N·C						2 ³ ×10					
hite/ ed	TP2								N·C												
hite/ ange	EP												N∙C				2 ¹ ×100				
hite/ llow	N									N∙C		2 ² ×	100								
hite/ ue											N		2 ³ ×100								
hite/ Irple										N·C											
ield ble		Signal shield cable (F.G.)																			

solution	6	8	10	12	16	20	24	32	40	45	48	64	90	128	180	256	360	512	720	1024		
hite	+V																					
ack	0V																					
own	2°																					
ed	21																					
ange	2 ²																					
llow	/ N·C 2 ³																					
Je	N°C									24												
Irple	N·C										2 ⁵											
ay	N·C										26											
hite/ own	TP1								N·C							27						
hite/ ed	TP2									N·C							2 ⁸					
hite/ ange	EP									N·C 2 ⁹												
iield		Signal shield cable (F.G.)																				