


# MLG-2 ProNet

Measuring automation light grid with Ethernet/IP™  
fieldbus

**SICK**  
Sensor Intelligence.

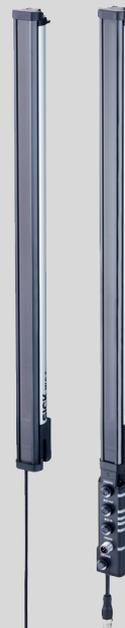

---

**Described product**

MLG-2 ProNet

**Manufacturer**

SICK AG  
Erwin-Sick-Str. 1  
79183 Waldkirch  
Germany

**Legal information**

This work is protected by copyright. Any rights derived from the copyright shall be reserved for SICK AG. Reproduction of this document or parts of this document is only permissible within the limits of the legal determination of Copyright Law. Any modification, abridgment or translation of this document is prohibited without the express written permission of SICK AG.

The trademarks stated in this document are the property of their respective owner.

© SICK AG. All rights reserved.

**Original document**

This document is an original document of SICK AG.

# EtherNet/IP™



## Contents

<b>1</b>	<b>About this document.....</b>	<b>7</b>
1.1	Purpose of this document.....	7
1.2	Target group.....	7
1.3	Information depth.....	7
1.4	Symbols used.....	7
1.5	Abbreviations used.....	8
<b>2</b>	<b>Safety information.....</b>	<b>9</b>
2.1	Requirements for the qualification of personnel.....	9
2.2	Correct use.....	9
2.3	General safety notes.....	10
<b>3</b>	<b>Product description.....</b>	<b>11</b>
3.1	Type label of the MLG-2 ProNet.....	11
3.2	Type code.....	12
3.2.1	Monitoring height.....	13
3.2.2	Optical properties.....	13
3.2.3	Preconfiguration.....	13
3.3	MLG-2 product properties.....	14
3.4	Setup and function.....	14
3.4.1	MLG-2 ProNet device components.....	14
3.4.2	Measurement principle.....	16
3.4.3	Beam separations and monitoring height.....	16
3.4.4	Sensing ranges.....	17
3.4.5	Synchronizing the MLG-2.....	17
3.4.6	Teach-in.....	17
3.4.7	Beam blanking.....	18
3.5	Scan time.....	18
3.5.1	Response time, minimum presence time and reproducibility of the MLG-2.....	19
3.5.2	Scan time with cross-beam function.....	19
3.5.3	Scan time with high-speed scan on the MLG-2.....	20
3.6	Beam separation and minimum detectable object.....	21
3.6.1	Minimum detectable object with parallel-beam function.....	21
3.6.2	Minimum detectable object length.....	22
3.6.3	Minimum detectable object with cross-beam function .....	23
3.6.4	Minimum detectable object with high measurement accuracy from the MLG-2.....	24
3.7	Operating reserve.....	25
3.7.1	Operating reserves on the MLG-2.....	25
3.8	MLG-2 operating modes.....	25
3.8.1	Standard operating mode.....	25
3.8.2	Transparent operating mode.....	25
3.8.3	Dust- and sunlight-resistant operating mode.....	26

3.9	Interfaces, functions and process data.....	26
3.9.1	Interfaces.....	27
3.9.2	Configurable functions.....	27
3.9.3	Available process data.....	30
3.10	Display and operating elements.....	32
3.10.1	Sender.....	32
3.10.2	Empfänger.....	32
3.10.3	Fieldbus module.....	34
3.11	Application examples.....	34
3.11.1	Application examples for the MLG2.....	34
<b>4</b>	<b>Mounting.....</b>	<b>36</b>
4.1	Scope of delivery.....	36
4.2	Recommended mounting arrangements.....	36
4.2.1	Mounting with light in opposite directions.....	36
4.2.2	Mounting with light in the same direction.....	37
4.2.3	Placement of two light grids at right angles.....	39
4.2.4	Minimum distance from reflective surfaces.....	40
4.3	Mounting procedure.....	41
4.3.1	Mounting the QuickFix bracket.....	41
4.3.2	Mounting the FlexFix bracket.....	43
4.3.3	Turning the fieldbus module on the MLG-2.....	45
4.3.4	Feldbusmodul vom MLG-2 abgesetzt montieren.....	47
<b>5</b>	<b>Electrical installation.....</b>	<b>48</b>
5.1	Fieldbus module connections.....	48
5.2	Sender connections.....	50
5.3	T-Verteiler zum Anschluss des MLG-2 ProNet.....	51
<b>6</b>	<b>Commissioning.....</b>	<b>53</b>
6.1	Mechanical alignment of sender and receiver.....	53
6.2	Alignment and teach-in.....	54
<b>7</b>	<b>The MLG-2 on the Ethernet/IP™ network.....</b>	<b>56</b>
7.1	Overview.....	56
7.1.1	Common industrial protocol (CIP).....	57
7.1.2	Integration and configuration options.....	58
7.1.3	Error messages of the Allen Bradley control system.....	63
7.2	Supported classes.....	64
7.3	Identity object.....	65
7.4	Assembly object.....	67
7.4.1	I/O-Assemblies .....	68
7.4.2	I/O assemblies with process data.....	70
7.4.3	I/O assemblies for initiating operating functions.....	81
7.4.4	Configuration assemblies.....	82
7.5	Manufacturer-specific classes.....	84

7.5.1	Class 100 with system information.....	86
7.5.2	Class 101 for definition of operating mode and performance options.....	87
7.5.3	Class 102 with auxiliary resources and diagnostic options.....	92
7.5.4	Class 103 for the teach-in function.....	96
7.5.5	Class 104 for beam evaluation.....	99
<b>8</b>	<b>Configuration with SOPAS ET.....</b>	<b>102</b>
8.1	Preparation.....	102
8.1.1	Installing the software.....	102
8.1.2	Device selection.....	102
8.2	SOPAS ET interface.....	103
8.2.1	System boundaries and status.....	104
8.2.2	Basic functions and status of the output.....	105
8.2.3	Representation of the detection area.....	106
8.2.4	Expandable menus.....	110
8.3	System settings.....	112
8.3.1	System settings for the user levels EASY and EXPERT.....	112
8.3.2	System settings for the EXPERT user level.....	112
8.4	Measuring and diagnostic functions for switching outputs.....	114
8.4.1	Height classification.....	115
8.4.2	Object recognition.....	116
8.4.3	Object detection/object width.....	119
8.4.4	Hole detection/hole size.....	120
8.4.5	Outside/inside dimension.....	122
8.4.6	Classification of an object position.....	124
8.4.7	Classification of a hole position.....	125
8.4.8	Diagnostics.....	127
8.4.9	Advanced settings for the outputs.....	127
8.5	Zones.....	128
8.5.1	“Zone measuring” function.....	128
8.6	Address configuration for Ethernet/IP™.....	130
8.7	Cloning (only at the EXPERT user level).....	131
8.8	Teach-in.....	132
8.9	Performance options.....	134
8.9.1	“Cross beam” function.....	137
8.9.2	Energy option (only at the EXPERT user level).....	140
8.10	Beam evaluation.....	140
8.10.1	“Blocked Beams Hold (BBH)” evaluation mode.....	140
8.10.2	“Lost Beams Hold (LBH)” evaluation mode.....	141
8.11	Simulation.....	142
8.12	Beam monitor (only in the EXPERT user level).....	144
8.13	Function programming (in the EXPERT user level).....	145
8.13.1	Beam functions.....	147
<b>9</b>	<b>Configuration of MLG-2 with the internal web server.....</b>	<b>149</b>

<b>10</b>	<b>Servicing.....</b>	<b>150</b>
<b>11</b>	<b>Troubleshooting.....</b>	<b>151</b>
11.1	Response to faults.....	151
11.2	SICK support.....	151
11.3	Anzeigen und Fehleranzeigen der LEDs.....	151
11.4	Advanced diagnostics on the MLG-2.....	152
<b>12</b>	<b>Decommissioning.....</b>	<b>153</b>
12.1	Disposal.....	153
12.2	Returns.....	153
<b>13</b>	<b>Technical data.....</b>	<b>154</b>
13.1	Data sheet.....	154
13.2	Data sheet - fieldbus module.....	156
13.3	Diagrams.....	157
13.3.1	Response time and minimum presence time without high-speed scan.....	157
13.3.2	Response time and minimum presence time during high-speed scan with 2,5 mm resolution.....	158
13.3.3	Response time and minimum presence time during high-speed scan with up to 3.5 m sensing range.....	158
13.3.4	Response time and minimum presence time during high-speed scan with up to 8.5 m sensing range.....	159
13.3.5	Minimum detectable absorption.....	159
13.4	Dimensional drawings.....	160
13.4.1	Dimensional drawing MLG-2 ProNet.....	160
13.4.2	Measurement tables.....	161
13.4.3	Dimensional drawings for the MLG-2 fieldbus module.....	163
<b>14</b>	<b>Ordering information.....</b>	<b>165</b>
<b>15</b>	<b>Accessories.....</b>	<b>166</b>
15.1	Auxiliary equipment.....	166
15.2	Mounting materials.....	166
15.3	Anschlussmaterial.....	166
<b>16</b>	<b>Annex.....</b>	<b>168</b>
16.1	Compliance with EU directive.....	168
<b>17</b>	<b>List of figures.....</b>	<b>169</b>
<b>18</b>	<b>List of tables.....</b>	<b>172</b>

# 1 About this document

## 1.1 Purpose of this document

These operating instructions are for giving technical personnel of the machine manufacturer or operator instructions on the mounting, configuration, electrical installation, commissioning, operation, and maintenance of the MLG-2 measuring automation light grid.

These operating instructions do not provide information on operating the machine into which a measuring automation light grid is integrated. For information about this, refer to the operating instructions of the particular machine.

## 1.2 Target group

These operating instructions are intended for planning engineers, developers, and operators of plants and systems into which one or more MLG-2 measuring automation light grids are to be integrated. They are also intended for people who integrate the MLG-2 into a machine, carry out its commissioning, or who are in charge of maintenance.

## 1.3 Information depth

These operating instructions contain information about the MLG-2 measuring automation light grid on the following topics:

- Mounting
- Electrical installation
- Commissioning and configuration
- Care
- Fault diagnosis
- Part numbers
- Conformity and approval

When planning and using a measuring automation light grid such as the MLG-2, technical skills are required that are not covered by this document.

The official and legal regulations for operating the MLG-2 must always be complied with.



### NOTE

Please also refer to the SICK AG website: [www.sick.de](http://www.sick.de).

## 1.4 Symbols used

### Recommendation

Recommendations are designed to assist you in the decision-making process with respect to the use of a certain function or a technical measure.



### NOTE

Notes inform you about special aspects of the device.



LED symbols describe the status of a diagnostics LED. Examples:

- The LED is illuminated continuously.
- ◐ The LED flashes evenly.
- ◑ The LED flashes briefly.
- The LED is off.

▶ Take action ...

Instructions for taking action are indicated by an arrow. Carefully read and follow the instructions for action.



## **CAUTION Warning!**

A warning indicates a specific or potential hazard. This is intended to protect you against accidents.

Read carefully and follow the warnings!

---

## **Sender and receiver**

In figures and connection diagrams, the symbol  indicates the sender and  indicates the receiver.

## **1.5 Abbreviations used**

BNB	Beam Number Blocked
BNM	Beam Number Made
CBB	Central Beam Blocked
CBM	Central Beam Made
EDS	Electronic Data Sheet
FBB	First Beam Blocked
FBM	First Beam Made
IDI	Inside Dimension
LBB	Last Beam Blocked
LBM	Last Beam Made
MDA	Minimum Detectable Absorption
MDO	Minimum Detectable Object
MLG-2	Measuring automation light grid 2
MOL	Minimum Detectable Object Length
MSB	Most Significant Bit
NBB	Number of Beams Blocked
NBM	Number of Beams Made
NCBB	Number of Consecutive Beams Blocked
NCBM	Number of Consecutive Beams Made
ODI	Outside Dimension
RLC	Run-length code
SDD	SOPAS Device Description
PLC	Programmable logic controller

## 2 Safety information

### 2.1 Requirements for the qualification of personnel

The MLG-2 measuring automation light grid must only be mounted, commissioned, and maintained by authorized personnel.



#### NOTE

Repair work on the MLG-2 may only be performed by qualified and authorized service personnel from SICK AG.

The following qualifications are necessary for the various tasks:

Table 1: Authorized personnel

Task	Qualification
<b>Mounting</b>	<ul style="list-style-type: none"> <li>• Basic practical technical training</li> <li>• Knowledge of the current safety regulations in the work-place</li> </ul>
<b>Electrical installation and device replacement</b>	<ul style="list-style-type: none"> <li>• Practical electrical training</li> <li>• Knowledge of current electrical safety regulations</li> <li>• Knowledge of the operation and control of the devices in their particular application (e. g., industrial robots, storage and conveyor systems)</li> </ul>
<b>Commissioning, operation, and configuration</b>	<ul style="list-style-type: none"> <li>• Knowledge of the current safety regulations and of the operation and control of the devices in their particular application</li> <li>• Knowledge of automation systems</li> <li>• Knowledge of how to use automation software</li> </ul>

### 2.2 Correct use

The MLG-2 measuring automation light grid is a measuring device which is manufactured according to the recognized industrial regulations and which meets the quality requirements stipulated in ISO 9001:2008 as well as those relating to environmental management systems as defined in ISO 14001:2009.

The measuring automation light grids are solely intended for the optical and non-contact detection of objects, animals, and persons.

A measuring automation light grid is designed for mounting and may only be operated according to its intended function. For this reason, it is not equipped with direct safety devices.

The system designer must provide measures to ensure the safety of persons and systems in accordance with the legal guidelines.

In the event of any other usage or modification to the MLG-2 measuring automation light grid (e.g., due to opening the housing during mounting and electrical installation) or in the event of changes made to the SICK software, any claims against SICK AG under the warranty will be rendered void.

#### Foreseeable misuse

The MLG-2 is **not** suitable for the following applications, among others:

- As a safety device to protect persons, their hands, or other body parts
- Under water
- In explosive environments
- Outdoors, without additional protection

### 2.3 General safety notes

---



#### **CAUTION**

**Observe the following to ensure the safe use of the MLG-2 as intended.**

The measuring automation light grid must be installed and maintained by trained, qualified personnel with knowledge of electronics, precision engineering, and control programming. The relevant technical safety standards must be observed.

All persons entrusted with the installation, operation, or maintenance of the devices must follow the safety guidelines:

- The operating instructions must always be available and must be followed.
  - Unqualified personnel must stay away from the system during installation and maintenance.
  - The system must be installed in accordance with the applicable safety regulations and mounting instructions.
  - The work safety regulations of the employers' liability insurance associations and trade associations in the respective country must be observed during installation.
  - Failure to observe the relevant work safety regulations may lead to physical injury or cause damage to the system.
-

### 3 Product description

#### 3.1 Type label of the MLG-2 ProNet

The senders and receivers of the MLG-2 ProNet each have a type label.

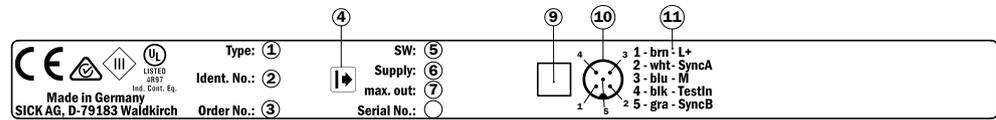


Figure 1: Sender type label

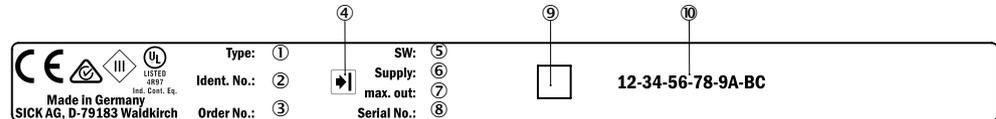


Figure 2: Receiver type label

- ① Type code
- ② Part number for the individual sender or receiver
- ③ Part number for the whole MLG-2 ProNet
- ④ Receiver or sender symbol
- ⑤ Firmware version
- ⑥ Required power supply
- ⑦ Maximum output current
- ⑧ Serial number
- ⑨ Data Matrix code, contains the part numbers of the sender/receiver, the part number of the MLG-2, and the serial numbers
- ⑩ MAC address

The fieldbus module has its own type label.

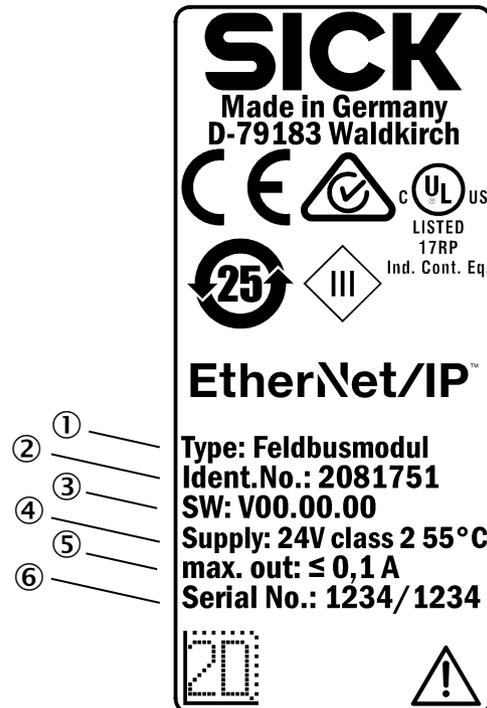


Figure 3: Fieldbus module type label

- ① Type code
- ② Fieldbus module part number
- ③ Firmware version
- ④ Required power supply
- ⑤ Maximum output current
- ⑥ Serial number

## 3.2 Type code

### Example

MLG-2 with 5 mm beam separation, type ProNet, monitoring height 145 mm, Ethernet/IP™ interface with 1 switching output, no options, 5 m sensing range

Table 2: Example of an MLG-2 ProNet type code

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
M	L	G	0	5	N	-	0	1	4	5	H	1	0	5	0	1

Table 3: Meaning of the positions in the type code

Position	Meaning	
1 ... 3	Product family	MLG
4 and 5	Beam separation	02 = 2.5 mm 05 = 5 mm 10 = 10 mm 20 = 20 mm 25 = 25 mm 30 = 30 mm 50 = 50 mm
6	Type	0 = Special type A = Pro N = ProNet
7	Hyphen	-
8 ... 11	Monitoring height	0000 = Special monitoring height <a href="#">see table 4, page 13</a>
12	Interfaces, I/O	C = CANopen + 1 switching output E = EtherCAT® + 1 switching output H = Ethernet/IP™ + 1 switching output N = PROFINET + 1 switching output P = PROFIBUS + 1 switching output
13	Options	1 = none
14 and 15	Optical properties	<a href="#">see table 5, page 13</a>
16 and 17	Preconfiguration of the I/O connections and the software	<a href="#">see table 6, page 13</a>

### 3.2.1 Monitoring height

Table 4: Monitoring height [mm]

	Type						
	MLG02...	MLG05...	MLG10...	MLG20...	MLG25...	MLG30...	MLG50...
Monitoring height [mm]	145	145	140	140	-	-	-
	295	295	290	280	275	270	250
	445	445	440	440	425	420	400
	595	595	590	580	575	570	550
	745	745	740	740	725	720	700
	895	895	890	880	875	870	850
	1045	1045	1040	1040	1025	1020	1000
	1195	1195	1190	1180	1175	1170	1150
	-	1345	1340	1340	1325	1320	1300
	-	1495	1490	1480	1475	1470	1450
	-	1645	1640	1640	1625	1620	1600
	-	1795	1790	1780	1775	1770	1750
	-	1945	1940	1940	1925	1920	1900
	-	2095	2090	2080	2075	2070	2050
	-	2245	2240	2240	2225	2220	2200
	-	2395	2390	2380	2375	2370	2350
	-	2545	2540	2540	2525	2520	2500
	-	-	2690	2680	2675	2670	2650
	-	-	2840	2840	2825	2820	2800
-	-	2990	2980	2975	2970	2950	
-	-	3140	3140	3125	3120	3100	

### 3.2.2 Optical properties

Table 5: Sensing range and minimum detectable object length

Position 14 and 15	Sensing range	Minimum detectable object length
00	Special	Special
32	2 m	2.5 mm
05	5 m	5 mm
08	8.5 m	5 mm

### 3.2.3 Preconfiguration

Table 6: Preconfiguration MLG-2 ProNet with interface E, H, or N

Position 16, 17	Process data
01	System status Status of the switching output NBB LBB FBB ODI IDI

### 3.3 MLG-2 product properties

- Different beam separations from 2.5 mm to 50 mm
- Monitoring heights from 130 to 3,140 mm
- Operating range up to 2 m, 5 m or 8.5 m
- Quick response time
- Convenient configuration using the SOPAS ET software interface
- Detection of transparent objects
- Dust- and sunlight-resistant
- Integrated applications including object detection, height classification, etc.

### 3.4 Setup and function

The MLG-2 is an optical light grid. It comprises a sender and a receiver.

The sender consists of sender optics, several sender elements (LEDs), and actuation electronics. The receiver consists of receiver optics, several receiver elements (photodiodes) and evaluation electronics.

#### 3.4.1 MLG-2 ProNet device components

The MLG-2 ProNet consists of:

- Sender = MLG-2 Pro
- Receiver = MLG-2 ProNet
- Fieldbus module

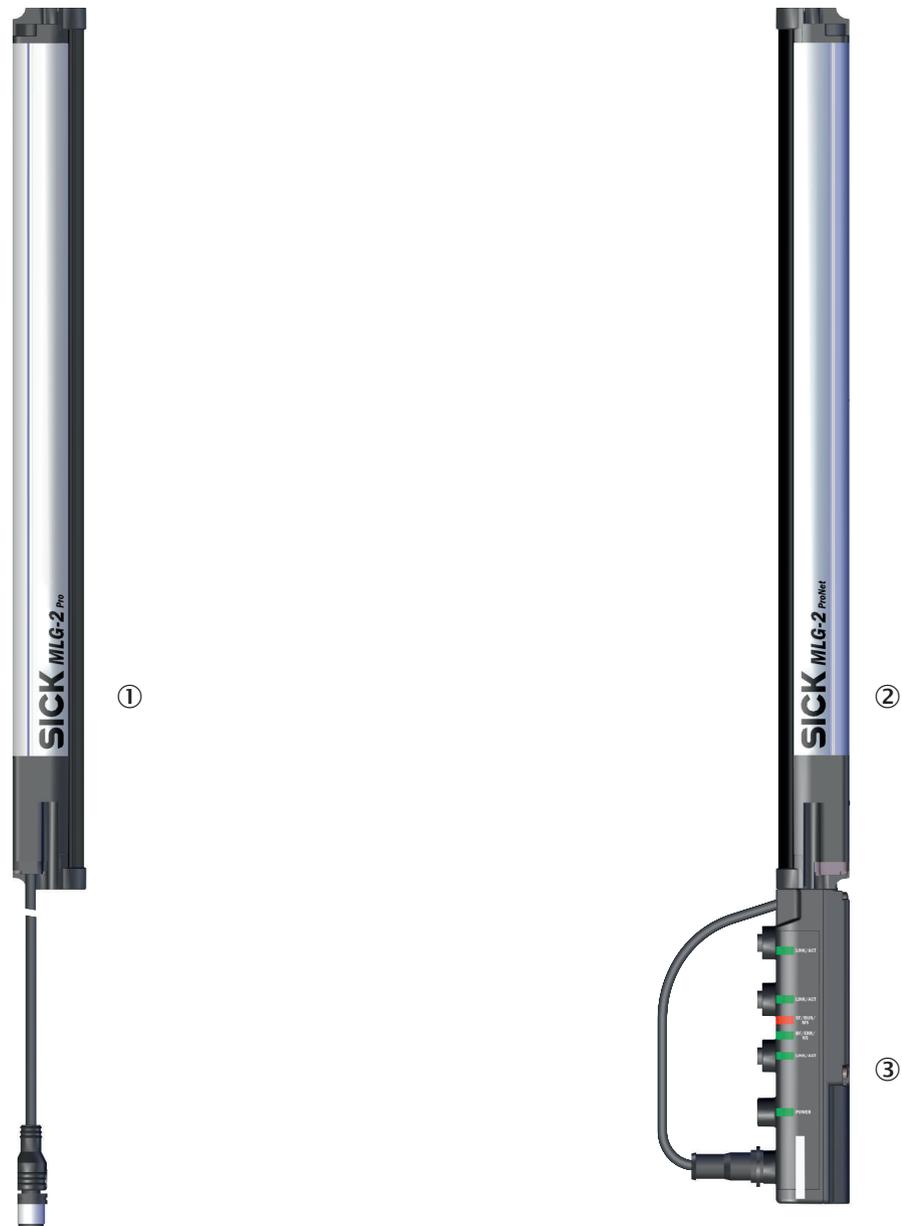


Figure 4: MLG-2 ProNet device components

- ① MLG-2 Pro sender
- ② MLG-2 ProNet receiver
- ③ Fieldbus module

The sender has a connection for the power supply and the synchronization.

The receiver has a connection for the fieldbus module.

The fieldbus module has an Ethernet connection for configuring via PC/notebook, two Ethernet connections for the fieldbus, one connection for the power supply, and one connection for the receiver.

3.4.2 Measurement principle

Provided no object is located between the sender and receiver elements, the light beams from the sender elements will hit the receiver elements.

If an object is located between the sender and receiver elements, the light beams will be blocked, depending on the size of the object.

Detection area

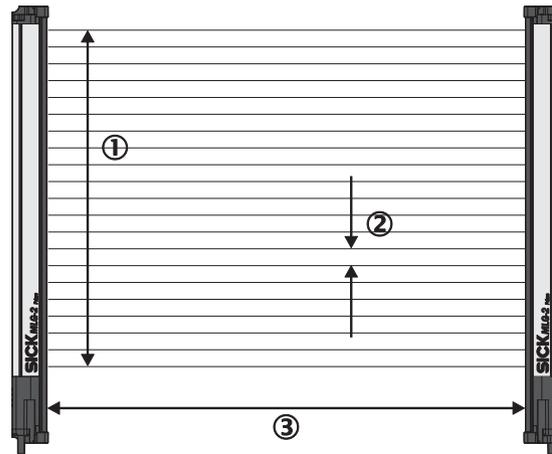


Figure 5: Detection area of the MLG-2

- ① Monitoring height
- ② Beam separation
- ③ Sensing range

The detection area is determined by the monitoring height and the sensing range of the light grid. The monitoring height is determined by the beam separation and the number of beams. The sensing range of the light grid is the distance between sender and receiver.

3.4.3 Beam separations and monitoring height

Beam separations

In order to achieve different levels of measurement accuracy, the MLG-2 is available with different beam separations.

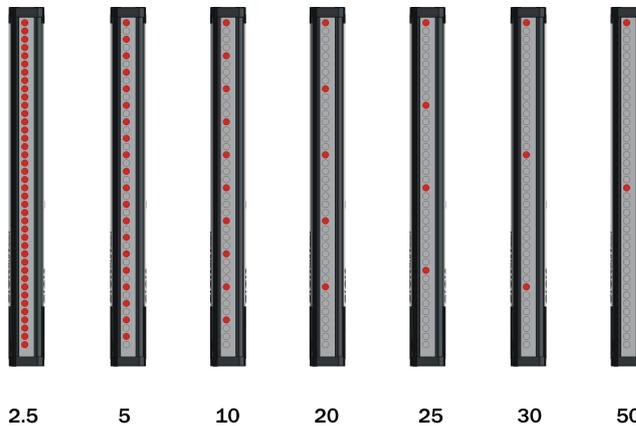


Figure 6: Schematic depiction of available beam separations (mm)

### Maximum and minimum monitoring height

The number of LEDs is limited to 510. This results in different maximum monitoring heights depending on the beam separation. The minimum monitoring height is determined by the beam separation and the smallest module size for this beam separation.

Table 7: Maximum monitoring heights

Beam separation	Maximum monitoring height	Minimum monitoring height
2.5 mm	1195 mm	145 mm
5 mm	2,545 mm	145 mm
10 mm	3,140 mm	140 mm
20 mm	3,130 mm	130 mm
25 mm	3,125 mm	275 mm
30 mm	3,1320 mm	270 mm
50 mm	3,100 mm	250 mm

### 3.4.4 Sensing ranges

#### Operating range

Light grids are generally available with a 2 m range, 5 m range or 8.5 m sensing range. This is referred to as the operating range, which includes an operating reserve.

#### Limiting range

It is also possible to operate the MLG-2 up to its limiting range, which goes beyond the operating range.

Table 8: Limiting range

Operating range	Limiting range
2 m	2.8 m
5 m	7 m
8.5 m	12 m

Operation within the limiting range requires the following conditions:

- Clean ambient conditions
- Front screens are cleaned regularly
- Regular teach-in

The following functions cannot be provided when operating within the limiting range:

- High level of operating reserves
- High measurement accuracy
- Transparent operating mode
- Dust- and sunlight-resistant operating mode

### 3.4.5 Synchronizing the MLG-2

The sender and receiver synchronize with each other electronically, thus **one** electrical connection between the sender and receiver is necessary.

### 3.4.6 Teach-in

During the teach-in process, the switching thresholds for all beams are individually adjusted for the sensing range and the ambient conditions.

After teach-in has been completed, it must be ensured that the setup is no longer changed otherwise another teach-in will have to be carried out.

#### Teach-in quality

The teach-in quality indicates how successful the teach-in process has been. The MLG-2 calculates this value based on the quality of the light level received.

The value remains constant until another teach-in process is carried out.

#### Process quality

The process quality indicates the quality of the light level currently being received. The MLG-2 analyzes the light level received when the light path is unblocked and compares this to the values after the last teach-in process.

If the received values are getting worse, the process quality drops.

Possible causes of a drop in process quality include:

- Contamination or fogging of the front screen of the sender and/or receiver
- Misalignment
- Continuous partial blocking of a light beam or several light beams

#### 3.4.7 Beam blanking

Individual beams can be blanked.

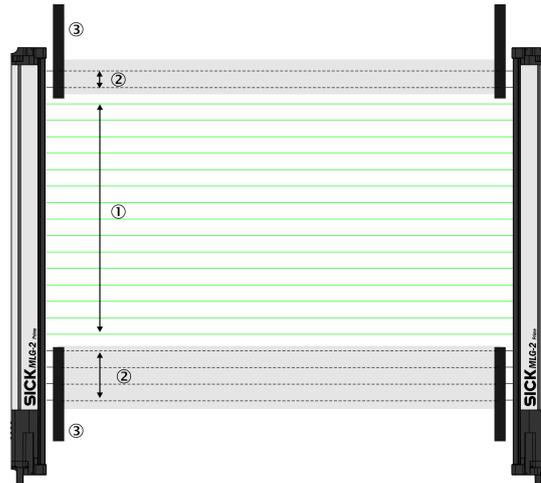


Figure 7: Detection area with beams blanked

- ① Included beams
- ② Blanked beams
- ③ Structural restrictions on the detection area

The MLG-2 offers a variety of options for masking beams.

#### 3.5 Scan time

In the MLG-2, not all light beams are active at the same time, instead one light beam is activated after the other starting from the bottom.



Figure 8: Standard scan method

The scan time increases according to the number of beams of an MLG-2.

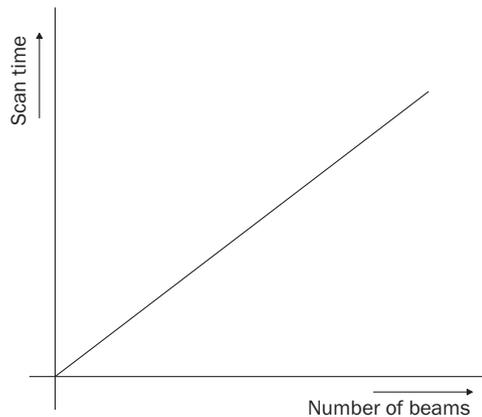


Figure 9: Scan time in relation to the number of beams

The scan time is used to determine the **response times** of the outputs, the **minimum presence time** of an object and the **repeat accuracy of a measurement result (reproducibility)**.

- The **response time** is the time it takes for an output to react following the detection of an object/gap. The maximum response time is  $3 \times$  the scan time plus the transmission time to the outputs.
- The **minimum presence time** is the time an object or a gap has to be in the detection area for it to be detected. The minimum presence time is  $\max. 2 \times$  the scan time.
- The repeat accuracy of a measurement result (**reproducibility**) is the amount of time by which an object detection can differ from a previous or subsequent detection. The reproducibility time is  $1 \times$  the scan time.

### 3.5.1 Response time, minimum presence time and reproducibility of the MLG-2

On the MLG-2, the response time, minimum presence time, and reproducibility are displayed via SOPAS ET. Response time and minimum dwell time can be read off in the diagram see [figure 142, page 157](#).

### 3.5.2 Scan time with cross-beam function

When the cross-beam function is enabled, the light beam from a sender LED is received by three receiver diodes in two scans. This doubles the scan time.

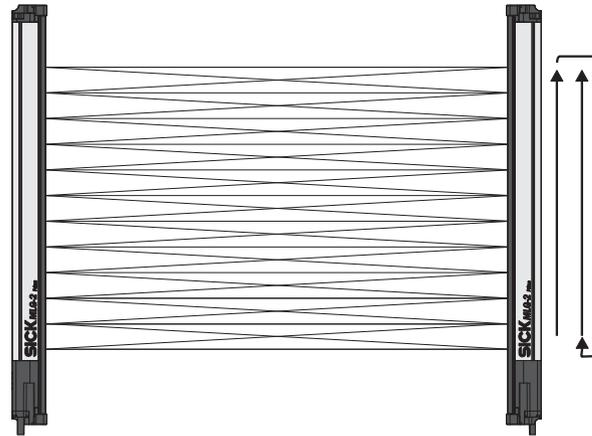


Figure 10: Cross-beam function

### 3.5.3 Scan time with high-speed scan on the MLG-2

With high-speed scan, several beams are active in each cycle. This reduces the scan time by a variable factor.



Figure 11: High-speed scan

The scan time is also dependent on the number of beams. Beyond a certain number of beams, the scan time is reduced because it is possible to use the high-speed scan.

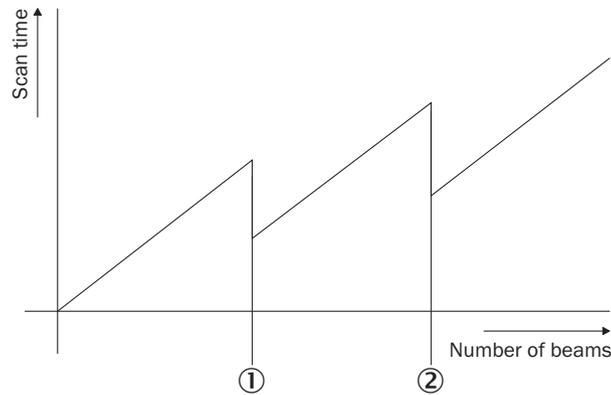


Figure 12: Scan time in relation to the number of beams when using the high-speed scan

- ① High-speed scan with 2 beams active simultaneously

② High-speed scan with 3 beams active simultaneously

The number of beams that can be activated at the same time depends on the size of the detection area (sensing range, beam separation, and number of beams). On the MLG-2, the response time, minimum presence time, and reproducibility are displayed via SOPAS ET. You can also find the response time and minimum presence time when using the high-speed scan in the diagrams in these operating instructions (see "Diagrams", page 157).



**NOTE**

With a beam separation of 2.5 mm, the high-speed scan can only be adjusted in combination with the high measurement accuracy function.

### 3.6 Beam separation and minimum detectable object

The measurement accuracy achieved by the MLG-2 depends on the beam separation.

#### 3.6.1 Minimum detectable object with parallel-beam function

In order for an object to be detected continuously, it must completely cover at least one beam. This is referred to as the minimum detectable object, or MDO.

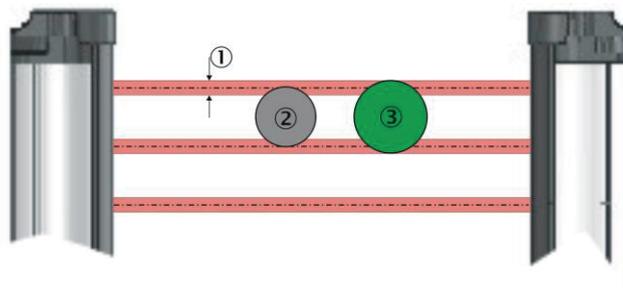


Figure 13: Minimum detectable object

- ① Beam diameter
- ② Object is not completely reliably detected
- ③ Object is reliably detected (meets requirements of minimum detectable object size)



**NOTE**

For moving objects, the minimum detectable object depends on the speed of the object.

Table 9: Minimum detectable object in relation to the beam separation of the MLG-2

Beam separation	Minimum detectable object (stationary object) <sup>12</sup>
2.5 mm	3.5 mm
5 mm	9 mm
10 mm	14 mm
20 mm	24 mm
25 mm	29 mm
30 mm	34 mm

Beam separation	Minimum detectable object (stationary object) <sup>12</sup>
50 mm	54 mm

<sup>1</sup> Only if the object also meets the minimum detectable object length requirements.

<sup>2</sup> All the values are typical values and can be found in the respective setting modes.



#### NOTE

The minimum detectable object size is also dependent on the other performance options, such as the configured response time and operating reserve. The precise minimum detectable object size is displayed in SOPAS ET on the MLG-2 (see "SOPAS ET interface", page 103).

### 3.6.2 Minimum detectable object length

When an object moves through the detection area, it must have a certain length.

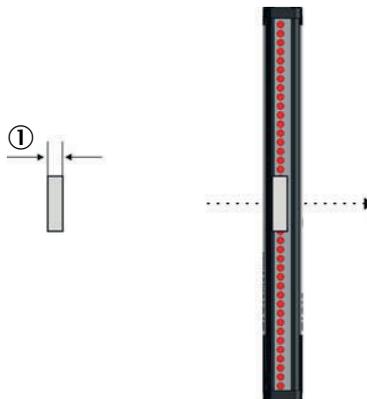


Figure 14: Minimum detectable object length

① Minimum detectable object



#### NOTE

For moving objects, the minimum detectable object length also depends on the speed of the object.

Table 10: Minimum detectable object length with the MLG-2

Beam separation	Minimum detectable object length (stationary object) <sup>1</sup>
2.5 mm	2.5 mm
5 ... 50 mm	5 mm

<sup>1</sup> Only if the object also meets the minimum detectable object requirements.



#### NOTE

The minimum detectable object length is also dependent on the other performance options, such as the configured response time and operating reserve. The precise minimum detectable object length is displayed in SOPAS ET on the MLG-2 (see "SOPAS ET interface", page 103).

### 3.6.3 Minimum detectable object with cross-beam function

The parallel-beam function is used for measuring by default. With the parallel-beam function, each light beam is received only by the receiver element situated directly opposite.

With the cross-beam function, a sender LED projects beams to several receiver diodes. The cross-beam function increases the measurement accuracy and enables the detection of smaller objects.

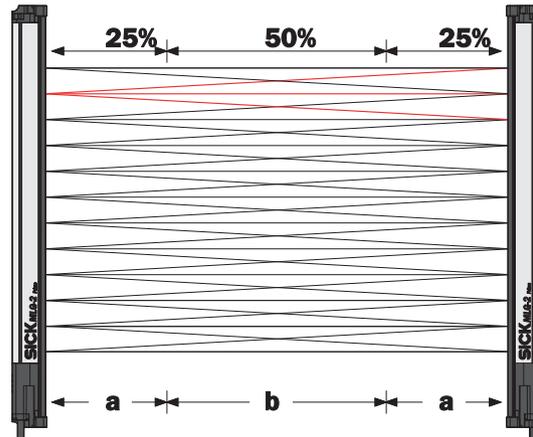


Figure 15: Cross-beam function

A minimum distance between the sender and the receiver is required for the cross-beam function. The minimum detectable object size depends on the position of the object within the detection area. Detection of the smaller minimum detectable object size is therefore only possible in the central area (b) of the detection area.

- The cross-beam function is only useful for object detection ( $NBB \leq 1$ ). For other applications (height classification, object recognition, etc.), the results of the parallel-beam function are used.
- Use of the cross-beam function increases the response time.
- With the cross-beam function, a minimum distance needs to be maintained between sender and receiver. The minimum distance depends on the aperture angle of the light grid.
- For moving objects for the cross-beam function, the minimum detectable object depends on the speed of the object.

Table 11: Minimum detectable object with cross-beam function on the MLG-2

Beam separation	Minimum distance 2 m variant	Minimum distance 5 m variant	Minimum distance 8.5 m variant	Minimum detectable object (stationary object)	
				In area B	In area A
2.5 mm	200 mm	-	-	2.5 mm	4 mm
5 mm	-	110 mm	120 mm	6.5 mm	9 mm
10 mm	-	220 mm	240 mm	9 mm	14 mm
20 mm	-	440 mm	480 mm	14 mm	24 mm
25 mm	-	550 mm	600 mm	16.5 mm	29 mm
30 mm	-	660 mm	720 mm	19 mm	34 mm
50 mm	-	1110 mm	1200 mm	29 mm	54 mm

- High-speed scan is not possible.
- The minimum detectable object size with cross-beam function is also dependent on the other performance options, such as the configured response time and operating reserve. The precise minimum detectable object size is displayed in SOPAS ET on the MLG-2 (see "SOPAS ET interface", page 103).

#### 3.6.4 Minimum detectable object with high measurement accuracy from the MLG-2

On the MLG-2, the measurement accuracy can be increased in SOPAS ET (see "Performance options", page 134). This means that an object can be detected even if it only covers half of a beam.

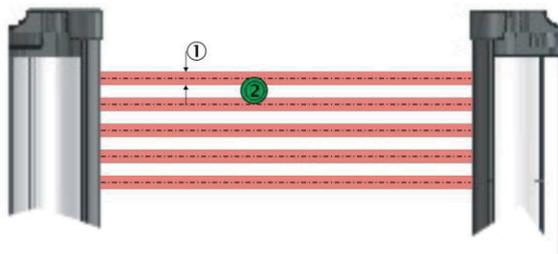


Figure 16: Minimum detectable object size with high measurement accuracy

- ① Beam diameter
- ② Object is reliably detected (meets requirements of minimum detectable object size)

Table 12: Minimum detectable object size with high measurement accuracy

Beam separation	Minimum detectable object (stationary object) <sup>1</sup>
2.5 mm	2.5 mm
5 mm	5 mm
10 mm	10 mm
20 mm	20 mm
25 mm	25 mm
30 mm	30 mm
50 mm	50 mm

<sup>1</sup> Only if the object also meets the minimum detectable length requirements (see table 10, page 22).

#### Minimum detectable object length

Table 13: Minimum detectable object length with high measurement accuracy

Beam separation	Minimum detectable object length (stationary object) <sup>1</sup>
2.5 mm	1 mm
5 ... 50 mm	2 mm

<sup>1</sup> Only if the object also meets the minimum detectable length requirements (see table 9, page 21).

- When using high measurement accuracy to detect moving objects, the minimum detectable object length also depends on the speed of the object and the other performance options, such as the configured response time and operating reserve. The precise minimum detectable object length is displayed in SOPAS ET on the MLG-2 (see "SOPAS ET interface", page 103).
- Sensing ranges larger than the operating range are not possible when using high measurement accuracy.
- High measurement accuracy can cause the operating reserve to decrease in the event of large sensing ranges and imperfect alignment.

## 3.7 Operating reserve

The operating reserve defines the operational safety before contamination, vibrations, misalignment, temperature fluctuations, etc. cause the MLG-2 to produce incorrect measurements.

The MLG-2 is subject to a certain level of contamination depending on its environment and application. In principle, the MLG-2 must be cleaned regularly and a teach-in should be carried out after cleaning.

### 3.7.1 Operating reserves on the MLG-2

On the MLG-2, the operating reserve can be adjusted according to the operating mode.

#### Standard operating reserve

The standard setting for the operating reserve is the best setting for most applications.

#### High level of operating reserves

Setting the operating reserve high makes the MLG-2 very resistant to contamination. However, it is not possible to activate high measurement accuracy in this case.



#### NOTE

In order to achieve a high operating reserve, the input sensitivity must be increased. This increases the risk of reflection. If there are reflective surfaces near the detection area, the light beams from the LEDs may reflect off these surfaces and reach the receiver, even though there is an object in the detection area.

The high input sensitivity means that only opaque objects can be detected. Transparent or semi-transparent objects are not detected.

#### Low operating reserve

Setting the measurement accuracy high reduces the operating reserve. When the operating reserve is low, the MLG-2 must be cleaned more frequently and a teach-in process must be carried out.

## 3.8 MLG-2 operating modes

The MLG-2 has the operating modes **Standard**, **Transparent** and **Dust and Sunlight-Resistant**.

Within the operating modes, the performance options can be used to modify the response time, minimum detectable object size, minimum detectable absorption (in Transparent operating mode), and operating reserve.

- The configurable performance options depend on the operating mode selected.
- When the operating mode is changed, a new teach-in process must be performed.

### 3.8.1 Standard operating mode

Standard operating mode is the mode in which most measuring applications can be carried out.

- Only opaque objects can be detected.
- There must not be a high level of constant light irradiation.

### 3.8.2 Transparent operating mode

Transparent operating mode enables the detection of transparent objects, such as those made of glass, PET, etc.

Transparent objects do not completely cover the light beam. In order to detect these objects, they must have what is known as a minimum detectable absorption (MDA).



#### NOTE

It is not possible to use the cross-beam function, high operating reserve or high-speed scan in the Transparent operating mode.

#### Minimum detectable absorption

In order to detect a transparent object, it must absorb a certain percentage of the energy from the light beam. Depending on the objects being measured, an object can be detected with 30% absorption, 15% absorption, or 10% absorption.



#### NOTE

The minimum detectable absorption that an object needs in order to be detected increases with the sensing range (see "[Minimum detectable absorption](#)", page 159).

Examples of the signal attenuation of transparent objects<sup>1)</sup>:

- Approx. 10% signal attenuation:  
Clean PET bottles, clear glass, thin and clear films (e.g., cellophane), household plastic film, plastic wrapping
- Approx. 15% signal attenuation:  
Clean clear glass bottles, thick films, film and wrapping folded multiple times
- Approx. 30% signal attenuation:  
Green and brown glass, colored glass bottles

The following prerequisites must be met:

- The sender and receiver must be aligned precisely with one another.
- The sender and receiver elements must be kept clean at all times.

#### AutoAdapt

The AutoAdapt function is active in the Transparent operating mode. AutoAdapt adjusts the switching threshold at which objects are detected in accordance with the level of contamination on the MLG-2. As a result, the MLG-2 thus becomes less sensitive as the level of contamination increases.

### 3.8.3 Dust- and sunlight-resistant operating mode

Dust and sunlight-resistant operating mode is intended for applications when there is a large amount of dust in the environment or a high level of solar radiation.

- Dust and sunlight-resistant operating mode reduces the maximum sensing range
  - To 1.2 m for devices with a 2 m operating range
  - To 3 m for devices with a 5 m operating range
  - To 5 m for devices with an 8.5 m operating range
- This operating mode can only be configured on an MLG-2 with fewer than 240 beams.

### 3.9 Interfaces, functions and process data

The MLG-2 has a number of different interfaces that can be used to output a measurement result or configure the MLG-2.

<sup>1)</sup> Examples are for illustrative purposes only. The signal attenuation and the minimum detectable absorption to be configured must be determined for each individual application.

### 3.9.1 Interfaces

- Two Ethernet interfaces for integration into an Ethernet/IP™ fieldbus (see "The MLG-2 on the Ethernet/IP™ network", page 56)
- One Ethernet interface for configuration with SOPAS ET (see "Configuration with SOPAS ET", page 102) or with the integrated web server (see "Configuration of MLG-2 with the internal web server", page 149).
- One switching output (push-pull)  
The functions of this switching output can be configured in SOPAS ET (see "Measuring and diagnostic functions for switching outputs", page 114). These functions can also be configured using Ethernet/IP™ (see "Manufacturer-specific classes", page 84).

### 3.9.2 Configurable functions

The MLG-2's functions can be configured using SOPAS ET, the integrated web server, or via the respective fieldbus. The tables below show which application is used to configure each function.

Table 14: Functions available for or during teach-in

Name	Function	Available for		
		SOPAS ET	Web server	Fieldbus
Teach-in	Starts a teach-in	■	■	■
Teach-in result	Result of the teach-in	■	■	■
Teach-in required	Teach-in required for further operation	■	-	■
Teach-in with blanking	Activate beam blanking for each teach-in	■	-	■
Auto teach-in	Starts a teach-in every time when switching on	■	-	-
Exclude blanking beams	Excludes all blanking beams during the teach-in	■	■	■
Exclude made beams	Excludes all beams made during the teach-in	■	■	■
Beam mask	Any defined beams will be excluded from the measurement. In SOPAS ET by clicking the mouse In the fieldbus via a bit-coded beam mask	■	-	■

Table 15: Functions available for operating modes and performance options

Name	Description	Available for		
		SOPAS ET	Web server	Fieldbus
Operating mode	Selection of the operating mode	■	■	■
Performance options	Defines the performance options	■	■	■
Minimum detectable absorption	Sets the minimum detectable absorption for Transparent operating mode	■	■	■
Configuration Q1	Function programming for switching output Q1	■	■	■
Alarm Q1	Defines various diagnostic settings for Q1	■	-	-

Name	Description	Available for		
		SOPAS ET	Web server	Fieldbus
I/O configuration	Defines the function of Q1	■	–	–
Energy saving mode	Puts the MLG-2 on standby	■	–	■
Scanning method	Specifies the parallel beam function, cross beam function or high-speed scan	■ <sup>1)</sup>	–	■ <sup>1)</sup>
Switch-off delay Q1, Q2, Q3 or Q4	Delays the corresponding output	■	–	■
Switch-off delay Q5 through Q16	Delays outputs Q5 through Q16	■	–	■

<sup>1)</sup> Available via the performance options.

Table 16: Configurable measuring and diagnostic functions for switching output Q1

Name	Available for		
	SOPAS ET	Web server	Fieldbus
Function programming for switching output Q1	■	■	■
Alarm Q1 Defines various diagnostic settings for Q1	■	–	–
I/O configuration Defines the function of Q1	■	–	–
Height classification	■	–	■
Object recognition	■	–	■
Object detection/object width	■	–	■
Hole detection/hole size	■	–	■
Outside/inside dimension	■	–	■
Classification of the object position	■	–	■
Classification of the hole position	■	–	■
Height classification within a zone	■	–	■
Object detection/object width within a zone	■	–	■
Classification of the object position within a zone	■	–	■
Measuring within zones	■	–	■
Diagnostics (display of warnings/errors)	■	–	■

Table 17: Auxiliary resources and diagnostic options

Name	Description	Available for		
		SOPAS ET	Web server	Fieldbus
Alignment aid	Activates the alignment aid	■	■	■
Values for alignment aid	Returns the values from three beams	■	–	■
“Find Me” function	Activates the “Find Me” function	■	–	■
Pushbutton lock	Activates/deactivates the pushbutton lock	■	–	■

Name	Description	Available for		
		SOPAS ET	Web server	Fieldbus
Beam numbering	Reverses the beam numbering	■	-	■
Factory settings	Resets the MLG-2 to its factory settings	■	■	■
Cloning upload	The device parameter set is saved to the fieldbus module	■	■	■
Cloning download	The device parameter set is loaded from the fieldbus module	■	■	■
Cloning status	The cloning status shows the status of the stored parameters in the fieldbus module	■	■	■

Table 18: System information

Name	Description	Available for		
		SOPAS ET	Web server	Fieldbus
Device name	“MLG-2 ProNet” device name	■	■	■
Manufacturer name	“SICK AG” manufacturer name	■	■	■
Part number	Part number for the MLG-2 ProNet	■	-	■
Serial number	MLG-2 ProNet serial number	■	■	■
Product text	Description of MLG-2 ProNet	■	■	■
Mounting location	Option to enter the mounting location	■	■	■
Device characteristics	Display of the device characteristics and system boundaries	■	■	■
Hardware revision	Status of the hardware	■	■	■
Firmware version	The version of firmware	■	■	■

Table 19: Beam evaluation

Name	Description	Available for		
		SOPAS ET	Web server	Fieldbus
Zone measuring	Combines beams into zones and assigns them to a beam function and an output	■	-	■
Cross beam measuring	Activates the “Cross beam measuring” function	■	-	■
Blocked Beams Hold	Evaluation mode for all selected beam functions	■	-	■
Lost Beams Hold	Evaluation mode for all process data	■	-	■

Table 20: Settings for the interfaces

Name	Description	Available for		
		SOPAS ET	Web server	Fieldbus
IP address	Defines the IP address for the configuration interface	■	-	-

Name	Description	Available for		
		SOPAS ET	Web server	Fieldbus
MAC address	Displays the MAC address for the configuration interface	■	-	-
Subnet mask	Defines the subnet mask for the configuration interface	■	-	-
Gateway address	Defines the gateway address for the configuration interface	■	-	-
DHCP	Activates DHCP for the configuration interface	■	-	-

Table 21: Settings for SOPAS ET

Name	Description	Available for		
		SOPAS ET	Web server	Fieldbus
Rotate the MLG-2 display	Rotates the display of the MLG-2 on the SOPAS interface	■	-	-
User level	Sets the user level in SOPAS ET	■	-	-

#### 3.9.3 Available process data

The MLG-2 provides a series of process data. The following table shows which process data is available for the individual applications.

Table 22: Available process data

Name	Function	Available for		
		SOPAS ET	Web server	Fieldbus
NBB	Number of beams blocked Total number of beams blocked (e.g., for object detection)	■	■	■
NBM	Number of beams made Total number of beams made (e.g., for hole detection)	■	-	■
NCBB	Number of consecutive beams blocked (e.g., for object detection). If there are multiple objects in the detection area, the greatest number of consecutive beams blocked is displayed.	■	-	■
NCBM	Number of consecutive beams made (e.g., for hole detection). If there are multiple gaps in the detection area, the greatest number of consecutive beams made is displayed.	■	-	■
LBB	Last beam blocked Beam number of the last beam blocked (e.g., for object height measurement)	■	■	■
LBM	Last beam made Beam number of the last beam made	■	-	■
FBB	First beam blocked Beam number of the first beam blocked (e.g., for height classification of a hanging object)	■	■	■
FBM	First beam made Beam number of the first beam made	■	■	■

Name	Function	Available for		
		SOPAS ET	Web server	Fieldbus
ODI	Outside dimension Total number of beams between the first and last beams blocked (e.g., for measuring the outside dimension)	■	–	■
IDI	Inside dimension Total number of beams made between the first and last beams blocked (e.g., for measuring the inside dimension)	■	–	■
CBB	Central beam blocked Beam number of the central beam blocked (e.g., for measuring an object position)	■	–	■
CBM	Central beam made Beam number of the central beam made (e.g., for measuring a hole position)	■	–	■
NBB Zone X (X = 1, 2, 3 or 4)	Number of beams blocked in the indicated zone Total number of beams blocked (e.g., for object detection)	■	–	■
NCBB Zone X (X = 1, 2, 3 or 4)	Number of consecutive beams blocked (e.g., for object detection) in the indicated zone. If there are multiple objects in the detection area, the greatest number of consecutive beams blocked is displayed.	■	–	■
FBB Zone X (X = 1, 2, 3 or 4)	First beam blocked in the indicated zone Beam number of the first beam blocked (e.g., for height classification of a hanging object)	■	–	■
LBB Zone X (X = 1, 2, 3 or 4)	Last beam blocked in the indicated zone Beam number of the last beam blocked (e.g., for object height measurement)	■	–	■
CBB Zone X (X = 1, 2, 3 or 4)	Central beam blocked in the indicated zone Beam number of the central beam blocked (e.g., for measuring an object position)	■	–	■
RLC1 ... 16	Run-length code Outputs the value of the relevant change	■	■	■
Beam status	Beam status Outputs the value of each individual beam	■	–	■
QS	Status of the switching output	■	–	■
SYS	System status Consists of several status messages	■	■	■
QoR	Process quality Shows the quality of the light level currently being received	■	■	■
QoT	Teach-in quality Shows the quality after the teach-in	■	–	■

Name	Function	Available for		
		SOPAS ET	Web server	Fieldbus
Control	Used for control	-	-	■

## 3.10 Display and operating elements

### 3.10.1 Sender

The sender has three LEDs on its front. The LEDs are located on the connection side.

The section [Anzeigen und Fehleranzeigen der LEDs](#) on [page 151](#) explains the meaning of the LED indicators.

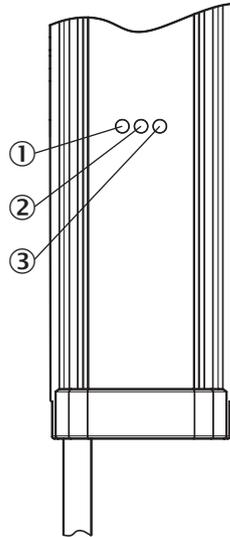


Figure 17: LEDs on the sender

- ① Yellow
- ② Red
- ③ Green

### 3.10.2 Empfänger

Der Empfänger verfügt auf der Vorderseite über drei LEDs und auf der Rückseite über ein Bedienfeld mit LED und Folientasten. Die LEDs und das Bedienfeld befinden sich an der Anschlussseite.

Der Abschnitt [Anzeigen und Fehleranzeigen der LEDs](#) auf [page 151](#) zeigt die Bedeutung der LED-Anzeigen.

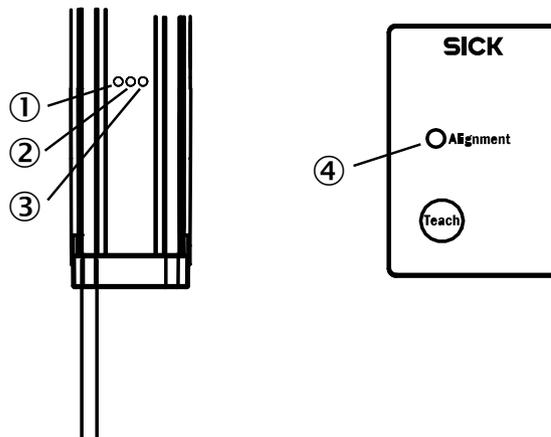


Figure 18: LEDs auf der Vorderseite und am Bedienfeld

- ① Yellow
- ② Red
- ③ Green
- ④ Alignment LED

### Bedienfeld

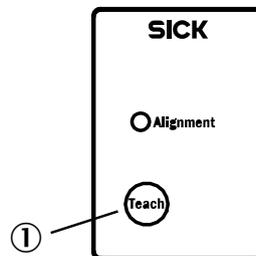


Figure 19: Bedienfeld auf der Rückseite

- ① Teach-in button

Das Teach-in des MLG-2 kann mit der Taste **Teach** gestartet werden.

Die Taste kann gesperrt werden, um Fehlbedienung zu vermeiden. Die Sperre kann über SOPAS ET, die Feldbusfunktionen und durch Drücken der Taste aktiviert und deaktiviert werden.

### Sperren des Bedienfeldes

- ▶ Drücken Sie die Taste **Teach** für 15 s.
- ✓ Das Bedienfeld wird gesperrt, die Konfiguration kann nicht geändert werden.
- ✓ Wenn eine Taste am Bedienfeld gedrückt wird, dann leuchtet die LED **Alignment** kurz auf.

#### Sperre aufheben

- ▶ Drücken Sie die Taste Teach für 15 s.
- ✓ Die Sperre wird wieder aufgehoben.

#### 3.10.3 Fieldbus module

The fieldbus module has six LEDs.

The section [Troubleshooting](#) on [page 151](#) explains the meaning of the LED indicators.



Figure 20: LEDs on the fieldbus module

- ① POWER
- ② LINK/ACT
- ③ BF/ERR/NS
- ④ SF/RUN/MS
- ⑤ LINK/ACT
- ⑥ LINK/ACT

### 3.11 Application examples

#### 3.11.1 Application examples for the MLG2

The MLG-2 is suitable for complex applications including e. g. start and end detection, detection of small or transparent objects, traffic applications, volume measurement, or contour measurement.

Table 23: Application examples for the MLG-2

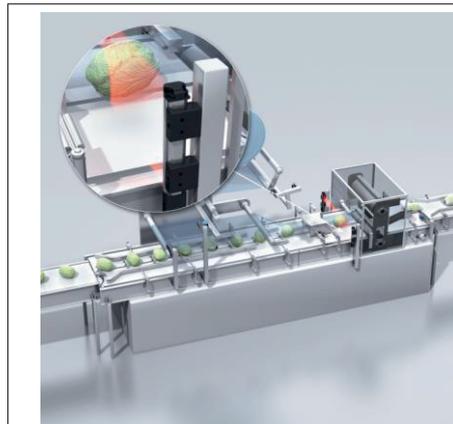


Figure 21: Start and end detection



Figure 22: Detection of transparent objects

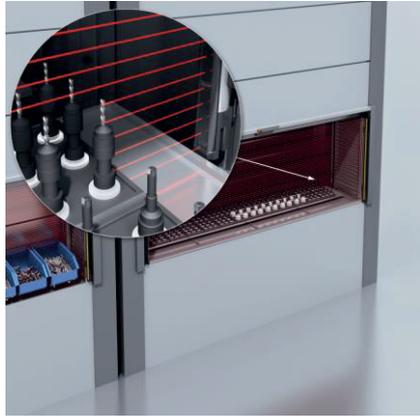


Figure 23: Detection of small objects

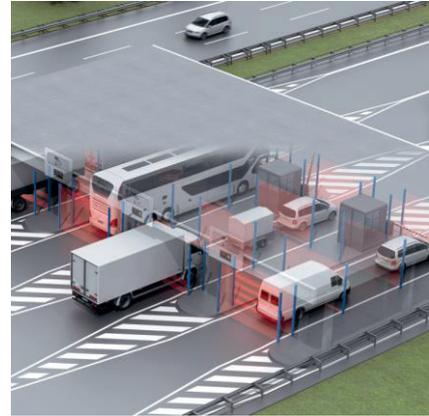


Figure 24: Traffic applications



Figure 25: Volume measurement

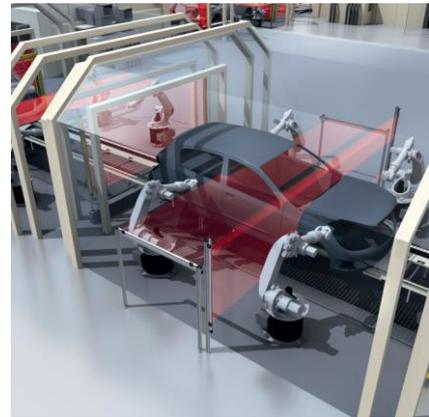


Figure 26: Contour measurement

## 4 Mounting

### 4.1 Scope of delivery

- 1 × sender
- 1 × receiver
- 4/6 x QuickFix brackets<sup>2)</sup>
- 1 x mounting bracket for the fieldbus module
- 1 × Quick Start Guide

### 4.2 Recommended mounting arrangements

When several MLG-2s are mounted close to one another, there is a risk of mutual interference. This is particularly likely if there are shiny surfaces nearby or if the objects being detected are shiny.

Therefore, when mounting two MLG-2s close to one another, their light beams should be oriented in opposite directions.

#### 4.2.1 Mounting with light in opposite directions

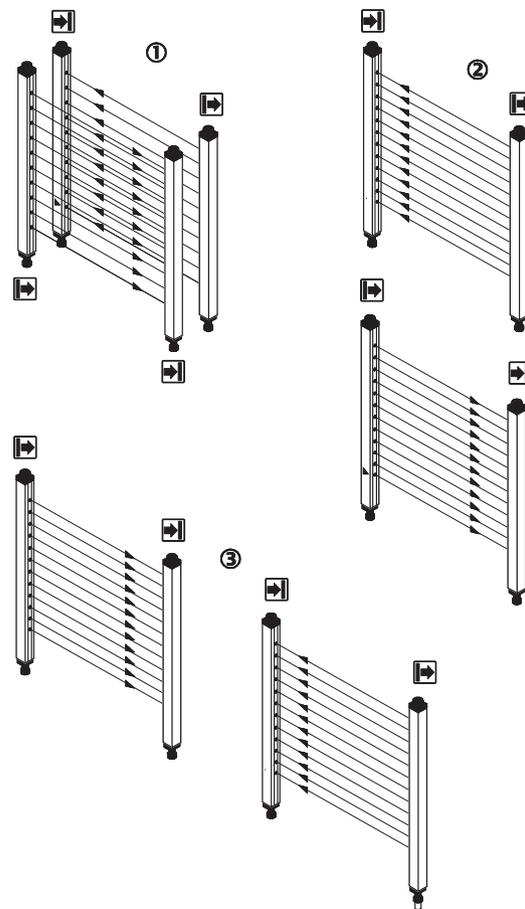


Figure 27: Placement with light in opposite directions

- ① Two MLG-2s, one behind the other
- ② Two MLG-2s, one above the other

<sup>2)</sup> 6 x FlexFix brackets for monitoring heights above 2 m.

- ③ Two MLG-2s, one next to the other



**NOTE**

When two MLG-2s are placed opposite one another and their light beams are in opposite directions, ① reflections may occur from sender 1 to receiver 2 in the case of shiny objects.

#### 4.2.2 Mounting with light in the same direction

When several MLG-2s are mounted with their light beams oriented in the same direction, a minimum distance must be maintained between the MLG-2s. The minimum distance increases as the distance between the sender and receiver increases and is dependent on the operating range.

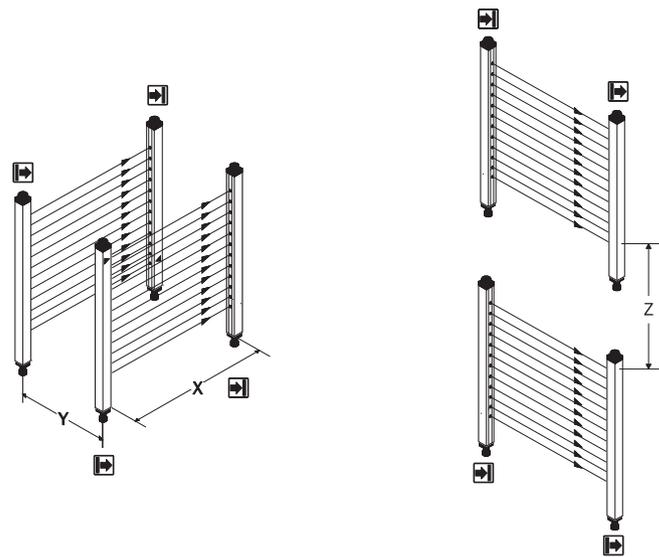


Figure 28: Distances when light is in the same direction

- X Operating range
- Y Minimum distance of the MLG-2
- Z Minimum distance of the MLG-2

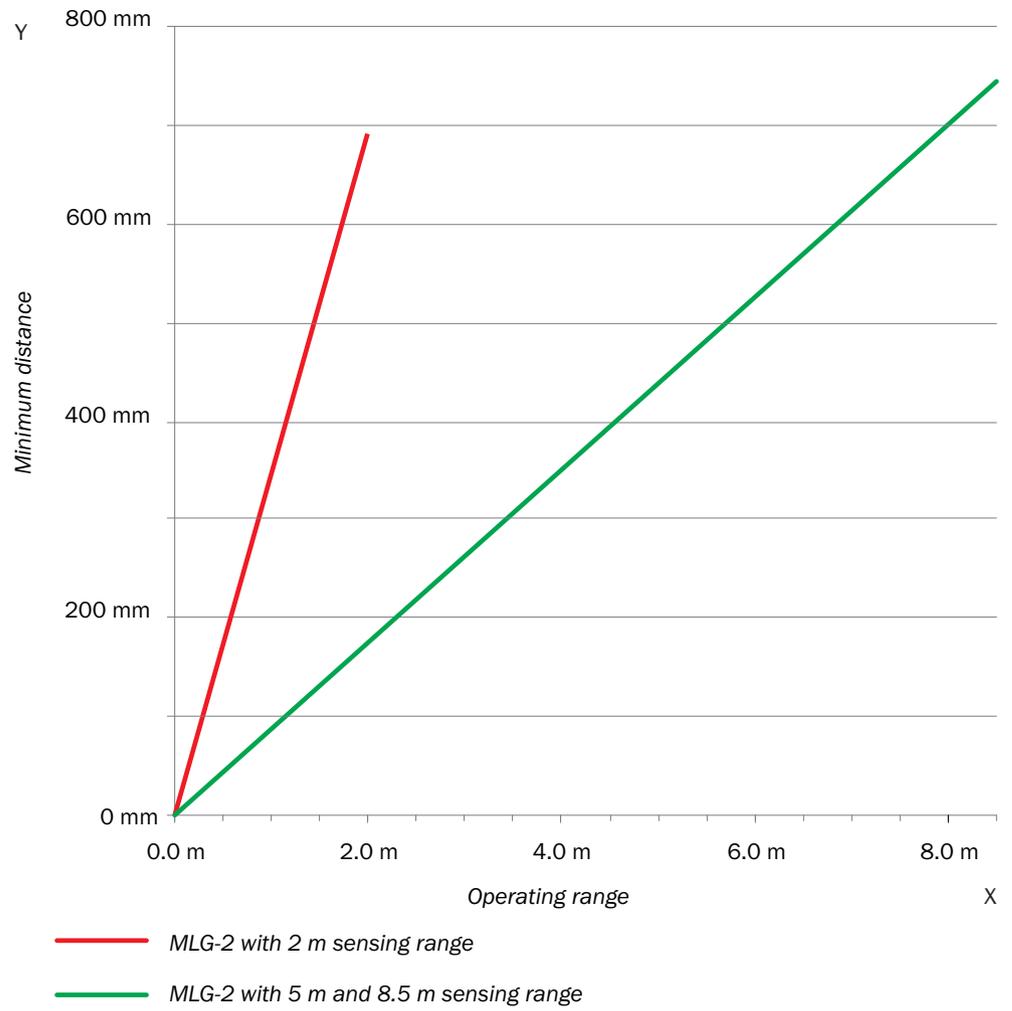


Figure 29: Graph, distances when light is in the same direction

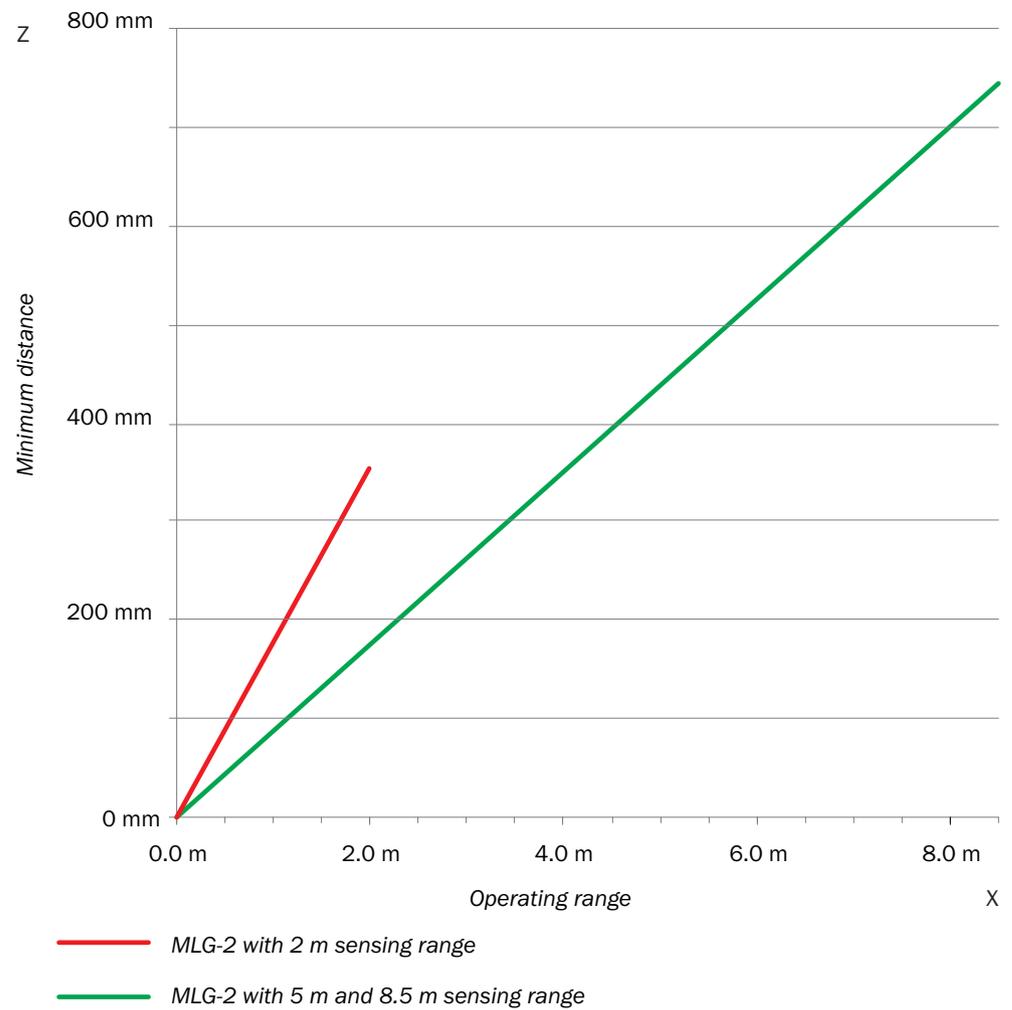


Figure 30: Graph, distances when light is in the same direction (XZ)

### 4.2.3 Placement of two light grids at right angles

Light grids are placed at right angles for volume detection or operator guidance, for example.



Figure 31: Placement of two light grids at right angles

**Test inputs solution**

Activate the test inputs of both senders alternately. The beams will be switched off in each case for as long as the test input is active.

**Mounting solution**

Mount the two MLG-2 as far apart as possible.

**4.2.4 Minimum distance from reflective surfaces**

Reflective surfaces between the sender and receiver may result in disruptive reflections and beams being deflected and, hence, result in a failure to detect objects.

In the case of reflective surfaces, a minimum distance must be maintained between the reflective surface and the light beams to ensure reliable operation.

This minimum distance depends on the distance between sender and receiver and on the operating range.

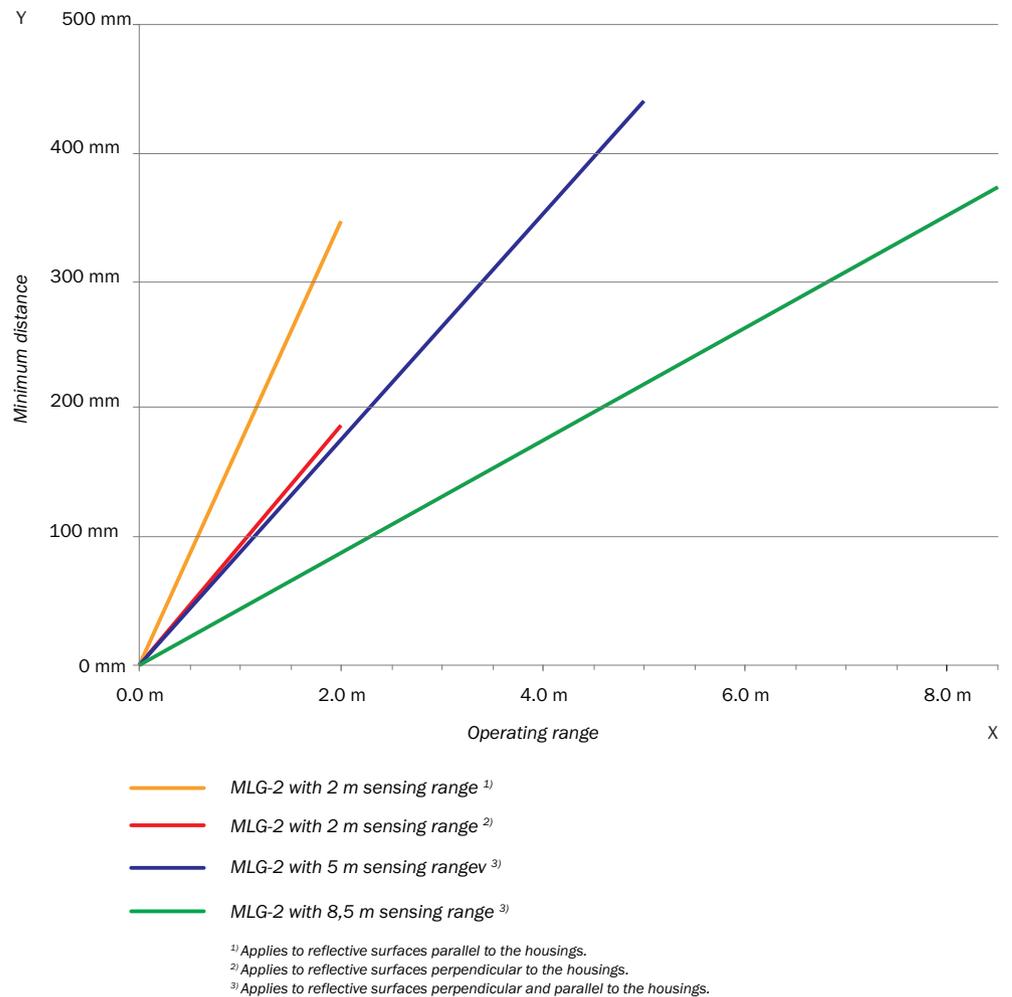


Figure 32: Graph, minimum distance from reflective surfaces

This distance also applies to reflective surfaces located next to the light grid (parallel to the sending/receiving axis).

### 4.3 Mounting procedure

- ▶ Mount the sender and receiver at the same height. For minor adjustments when aligning, the sender and receiver can be adjusted in the brackets.
- ▶ If possible, mount the top bracket at a height such that the offset in the housing of the MLG-2 sits on the bracket. This prevents the MLG-2 from sliding down.

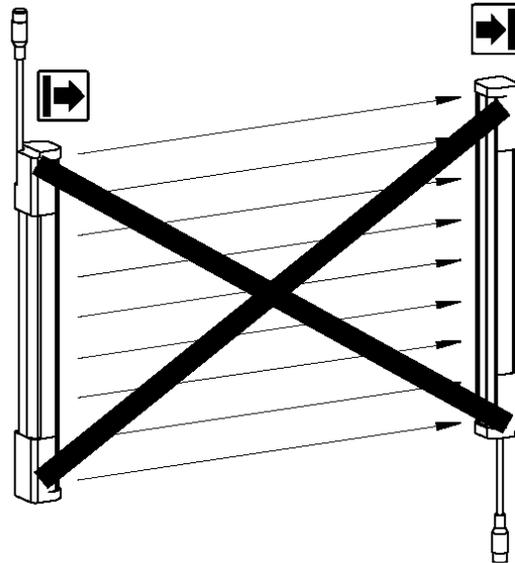


Figure 33: The sender and receiver are aligned incorrectly

The end with the cable connection must point in the same direction for both devices. Sender and receiver must **not be installed at 180° rotated relative to each other**.

Tighten the screws used to mount the bracket to a torque of 5 to 6 Nm. Tighten the screws used to secure the MLG-2 in the bracket to a torque of 2.5 to 3 Nm. Higher torques can damage the bracket while lower torques do not provide adequate fixation to prevent the MLG-2 from moving in the event of vibrations.

When mounting, make sure that sender and receiver are aligned correctly. The optical lens systems of sender and receiver must be located opposite one another. If necessary, use a water level to check the components are parallel.

#### 4.3.1 Mounting the QuickFix bracket

QuickFix brackets can be mounted in two ways:

- On the side
- On the back

The two mounting surfaces for the brackets of the sender or receiver must not be angled more than  $\pm 2^\circ$  to each other. If this is not possible, use the optional FlexFix bracket.

##### Mounting the QuickFix bracket on the side of a machine or profile frame

Up to a monitoring height of 2 m, the sender and receiver are mounted with two QuickFix brackets each.

For a monitoring height of more than 2 m, the sender and receiver are mounted with three QuickFix brackets each.

The QuickFix bracket consists of two parts, which are pushed into each other. An M5 screw is used to join both parts and to clamp the housing (sender or receiver).

Mounting can be carried out in two ways:

- With the M5 screw through the QuickFix bracket to the machine or profile frame. A screw nut or threaded hole is required on the machine or profile frame.
- With the M5 screw through the machine or profile frame to the QuickFix bracket. A screw nut is required for each QuickFix bracket.

When choosing the length of the M5 screw (hexagon head or cylinder head screw), consider the QuickFix bracket and the machine or profile frame.



### CAUTION

#### Risk of injury from protruding screw thread!

When mounting through the machine or profile frame to the QuickFix bracket, the M5 screw can present an injury risk if too long.

- ▶ Select an appropriate screw length to prevent any risk of injury from an overrun.

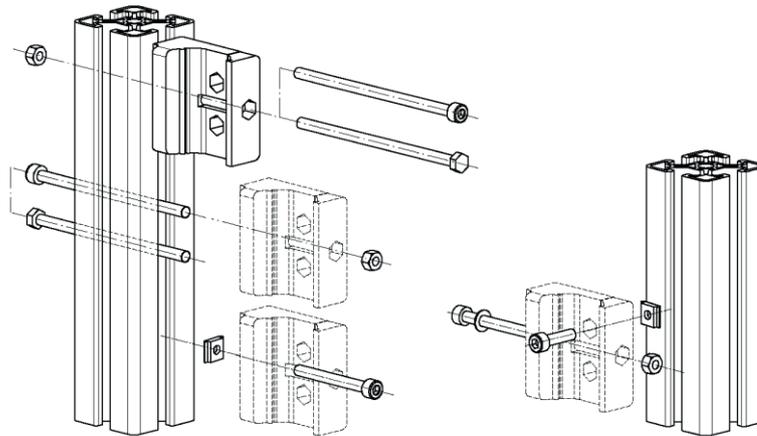


Figure 34: Mount QuickFix bracket to a profile frame

### Mount QuickFix bracket to the back of a device column



### NOTE

The QuickFix bracket has cable routing. Depending on the installation, the cable routing can make mounting easier.

The sender and receiver are each mounted with two QuickFix brackets.

The QuickFix bracket consists of two parts, which are pushed into each other. An M5 screw is used to join both parts and to clamp the housing (sender or receiver).

You need two M5 screws per bracket if mounting them on the back.

- ▶ Choose the length of the M5 screw such that it is possible to clamp the housing (sender or receiver) in the QuickFix bracket.

### QuickFix bracket for the fieldbus module

If you are using the QuickFix bracket, you will need one more QuickFix bracket for the fieldbus module.

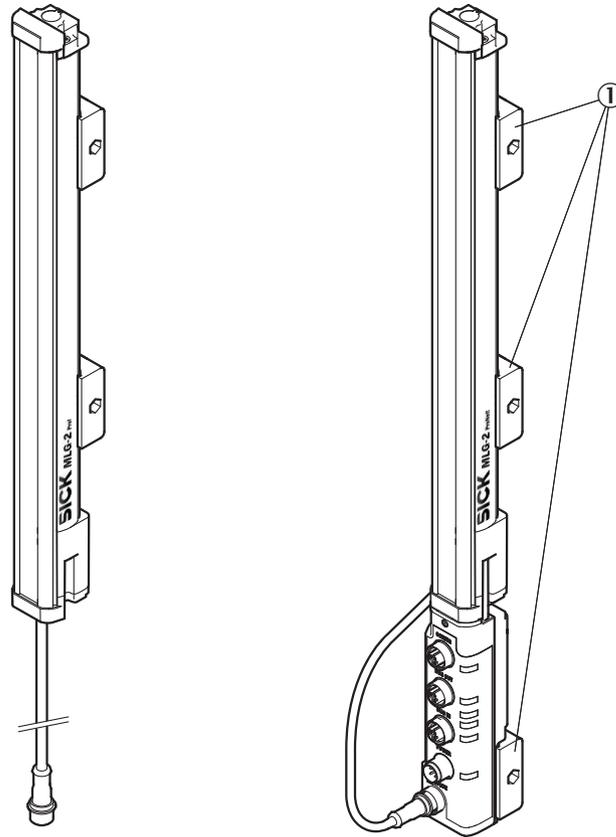


Figure 35: QuickFix bracket for the fieldbus module

① QuickFix brackets

#### 4.3.2 Mounting the FlexFix bracket

In the FlexFix bracket, sender and receiver can be flexibly rotated by  $\pm 15^\circ$ .

FlexFix brackets can be mounted in two ways:

- On the side
- On the back

##### Mounting the FlexFix bracket on a profile frame

The sender and receiver are mounted at the designated points using two FlexFix brackets in each case.

M5 screws are inserted through the FlexFix bracket and into the machine or profile frame for mounting. A screw nut or threaded hole is required on the machine or profile frame.

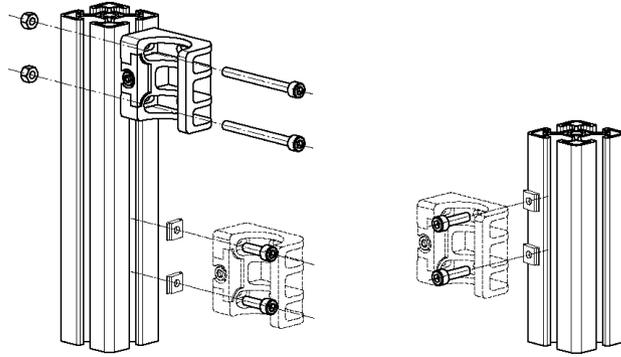


Figure 36: Mounting the FlexFix bracket on a profile frame

**Screwing the sender or receiver into the FlexFix brackets**

After mounting the FlexFix brackets, screw the sender or receiver into the FlexFix brackets from the front. Then align the sender and receiver.



**NOTE**

The MLG-2 can only be screwed in when both FlexFix brackets are in alignment. If necessary, use a water level to check the components are parallel.

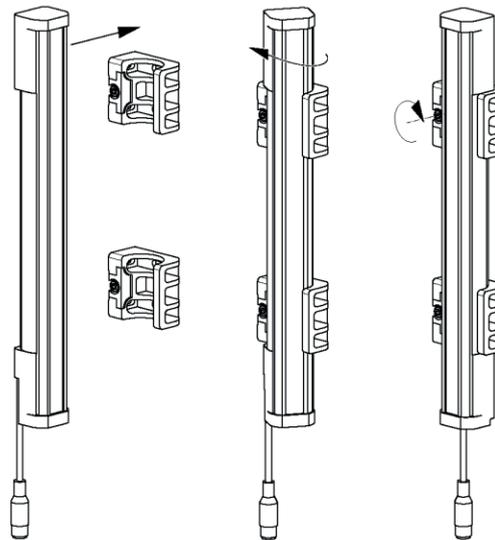


Figure 37: Inserting the MLG-2 in the FlexFix brackets

- ▶ Use an M5 screw to fix the position of the sender and receiver in the FlexFix bracket.

**Mounting bracket for the fieldbus module**

If you are using the FlexFix bracket, you will need a mounting bracket for the fieldbus module.

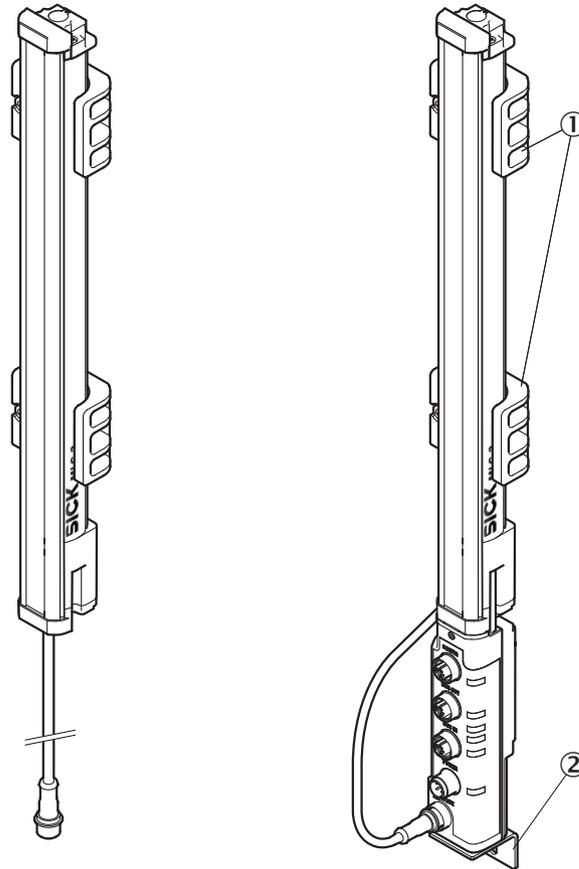


Figure 38: Mounting bracket for the fieldbus module

- ① FlexFix bracket
- ② Mounting bracket

1. Use the M5 x 6 screw provided to fasten the mounting bracket on the fieldbus module.
2. Use an M5 screw with a sliding nut, for example, to mount the mounting bracket on an industrial profile.

### 4.3.3 Turning the fieldbus module on the MLG-2

All connections of the fieldbus module are provided on one side. You can mount the fieldbus module rotated by 180° so you can feed the cables in from the front or the back.

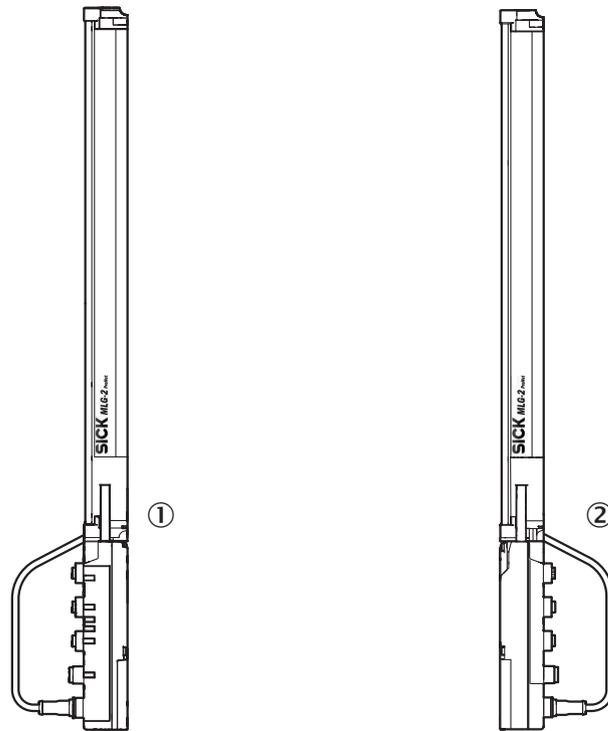


Figure 39: Mounting directions of the fieldbus module

- ① Mounting with the connections to the front side
- ② Mounting with the connections to the rear side

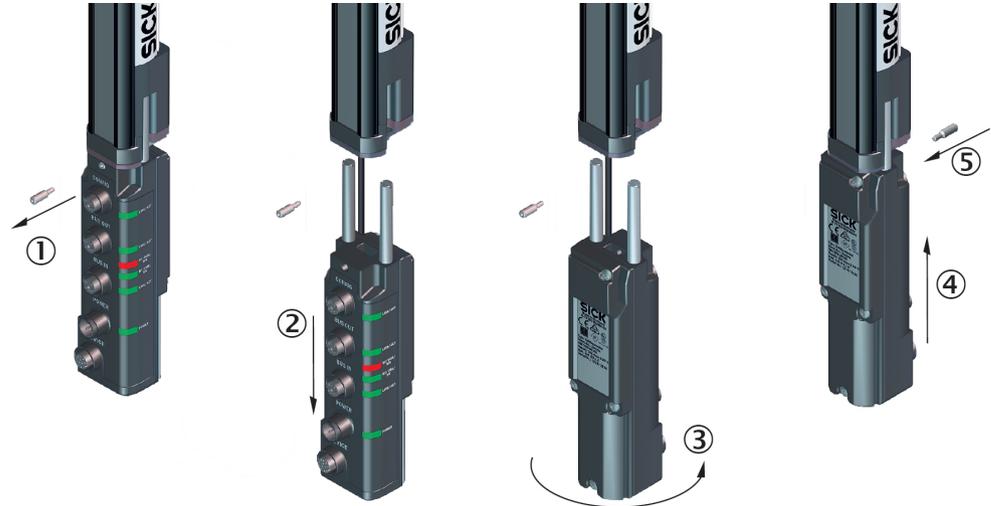


Figure 40: Turn the fieldbus module by 180°

- ① Unscrew the Torx T20 mounting screw
- ② Pull the fieldbus module downwards and away
- ③ Turn the fieldbus module by 180°
- ④ Insert the fieldbus module again
- ⑤ Tighten the mounting screw

#### 4.3.4 Feldbusmodul vom MLG-2 abgesetzt montieren

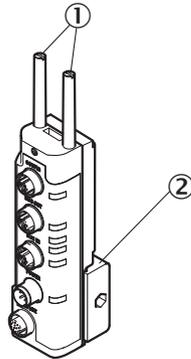


Figure 41: Feldbusmodul mit QuickFix-Halterung abgesetzt montieren

- ① Mounting pins
- ② QuickFix bracket

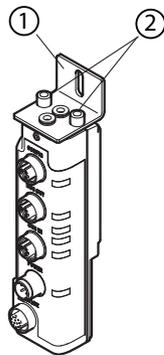


Figure 42: Feldbusmodul mit Befestigungswinkel abgesetzt montieren

- ① Mounting bracket
- ② M4 × 16

Sie können das Feldbusmodul abgesetzt montieren.

- ▶ Demontieren Sie das Feldbusmodul, wie beschrieben (see figure 40, page 46).
- ▶ Schrauben Sie die Montagestifte ab.
- ▶ Montieren Sie das Feldbusmodul mit einer QuickFix-Halterung.  
Oder:
- ▶ Montieren Sie das Feldbusmodul alternativ mit einem Befestigungswinkel. Montieren Sie den Befestigungswinkel am Feldbusmodul mit zwei M4-Schrauben mit maximal 16 mm Länge.
- ▶ Verwenden Sie z. B. eine M5-Schraube mit Nutzenstein, um den Befestigungswinkel an einem Industrieprofil zu montieren.



#### NOTE

Die Maximale Leitungslänge zwischen MLG-2 Empfänger und Feldbusmodul FBM / Anschlussbox AFB darf 2,7 m nicht überschreiten.

## 5 Electrical installation



### CAUTION

#### De-energize the system!

The system could inadvertently start while you are connecting the devices.

- ▶ Make sure that the entire system is disconnected from the power supply during the electrical installation work.



### NOTE

- The MLG-2 complies with the EMC regulations for the industrial sector (Radio Safety Class A). It may cause radio interference if used in a residential area.
- Do not lay cables parallel to other cables, especially not to devices with a high level of radiated emission, such as a frequency converter.
- When using cables over 15 m in length, or in locations with a high level of interference, we recommend using a T-distributor in order to connect the sender and receiver via a short synchronization cable wherever possible.



### CAUTION

These devices must be fused with a 1 A/30 V DC fuse.

Table 24: Overcurrent protection

Wire cross-section		Maximum amperage for over-current protection
AWG	mm <sup>2</sup>	
20	0.52	5
22	0.32	3
24	0.20	2
26	0.13	1
28	0.08	0.8
30	0.05	0.5

### 5.1 Fieldbus module connections

All cables for the MLG-2 are connected to the fieldbus module.

Pre-assembled cables are available for the MLG-2 (see "Accessories", page 166).

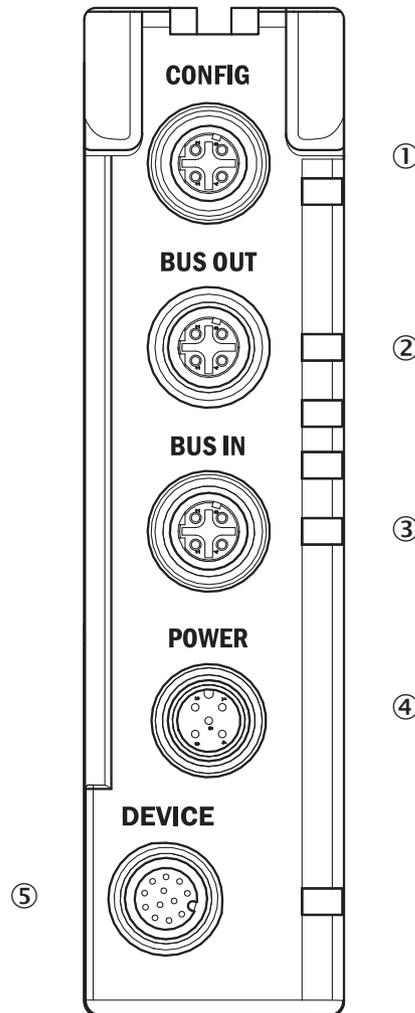


Figure 43: Fieldbus module connections

- ① CONFIG – Ethernet connection for configuring via PC/notebook
- ② BUS OUT – Ethernet connection of the fieldbus
- ③ BUS IN – Ethernet connection of the fieldbus
- ④ POWER – Power supply connection
- ⑤ DEVICE – Connection for the MLG-2 ProNet



#### NOTE

Protect all unused connections with a plastic cap!

#### CONFIG connection

The CONFIG connection is used to connect a notebook or a PC. You can connect the MLG-2 via this connection using SOPAS ET or using the integrated web server.


Table 25: Pin assignment, CONFIG connection of the fieldbus module

Female connector	Pin	Signal	Meaning
	1	TX+	Ethernet
	2	RX+	Ethernet
	3	TX-	Ethernet
	4	RX-	Ethernet

### Connection BUS OUT

Connect the respective fieldbus to the BUS OUT connection.


Table 26: Pin assignment, BUS OUT connection of the fieldbus module

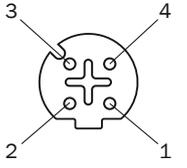Female connector	Pin	Signal	Meaning
	1	TX+	Ethernet
	2	RX+	Ethernet
	3	TX-	Ethernet
	4	RX-	Ethernet

### Connection BUS IN

Connect the respective fieldbus to the BUS IN connection.


Table 27: Pin assignment, BUS IN connection of the fieldbus module

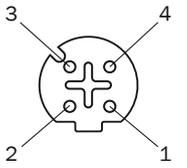Female connector	Pin	Signal	Meaning
	1	TX+	Ethernet
	2	RX+	Ethernet
	3	TX-	Ethernet
	4	RX-	Ethernet

### POWER connection

Connect the power supply and the sender of the MLG-2 to the POWER connection. If you are using the switching output, then connect it to the I/O connection of a programmable logic controller, for example. A T-connector is available for the connection (see "T-Verteiler zum Anschluss des MLG-2 ProNet", page 51).

Table 28: Pin assignment, POWER connection of the fieldbus module

Male connector	Pin	Signal	Meaning	Color
	1	L+	24 V supply voltage	Brown
	2	Sync_A	Synchronization	White
	3	M	GND supply voltage	Blue
	4	Q1	Switching output	Black
	5	Sync_B	Synchronization	Gray


## 5.2 Sender connections

In the case of the MLG-2, the sender and receiver synchronize with each other electronically. This means that **cabling is required** between the sender and fieldbus module.

You must connect the Sync\_A signal on the sender to Sync\_A on the fieldbus module, and Sync\_B on the sender to Sync\_B on the fieldbus module. You will find the Sync\_A and Sync\_D signals at the POWER connection of the fieldbus module.

**Sender connection: M12/5-pin, A-coded**

Table 29: Pin assignment, sender connection

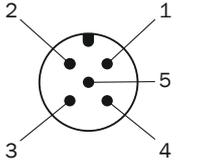Male connector	Pin	Signal	Meaning	Color
	1	L+	24 V supply voltage	Brown
	2	Sync_A	Synchronization	White
	3	M	GND supply voltage	Blue
	4	Test_In	Test input	Black
	5	Sync_B	Synchronization	Gray

### 5.3 T-Verteiler zum Anschluss des MLG-2 ProNet

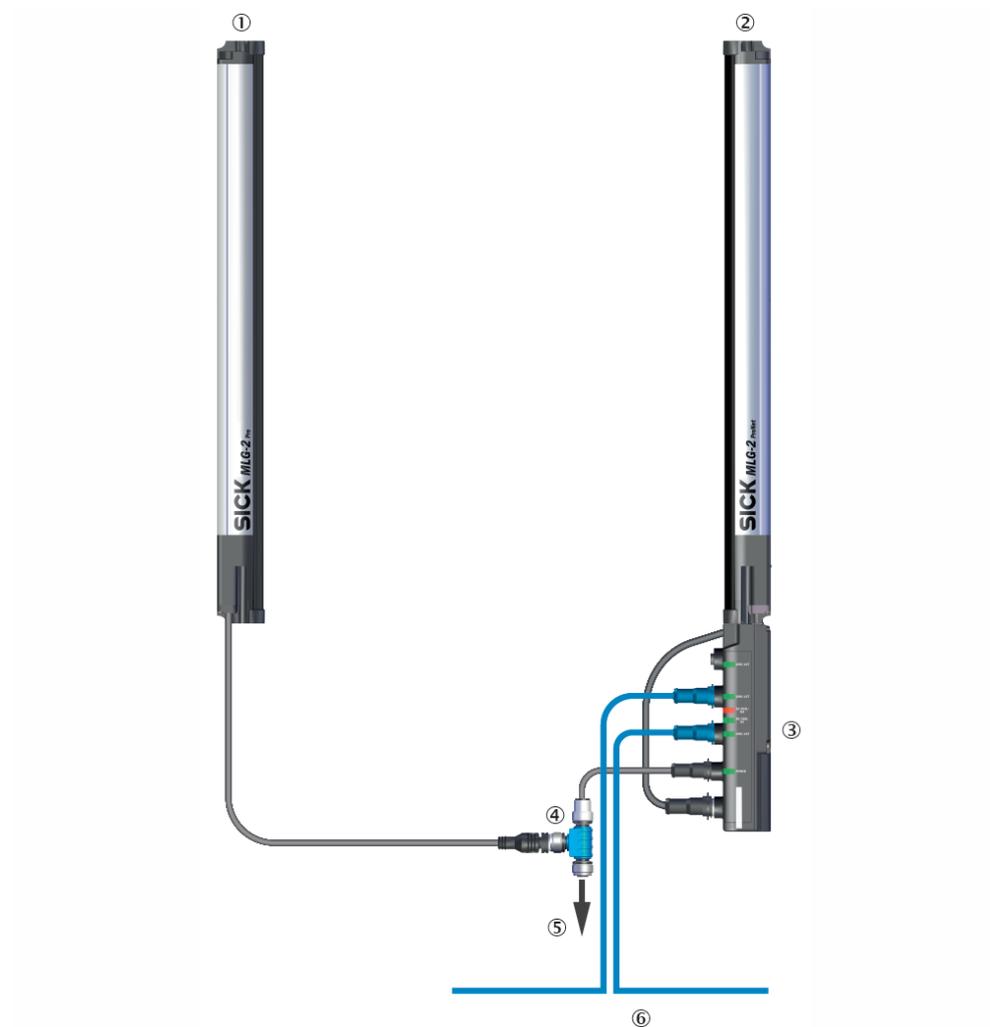


Figure 44: Anschluss mit T-Verteiler

- ① Sender
- ② Receiver
- ③ Fieldbus module
- ④ T-distributor
- ⑤ Power supply
- ⑥ Fieldbus

Für das MLG-2 ProNet steht ein T-Verteiler zur Verfügung, der zum einen Sender und Feldbusmodul miteinander verbindet und zum anderen die Anschlussmöglichkeiten für die Spannungsversorgung, den Schaltausgang 1 und den Testeingang bietet.

Verbindung Sender und Feldbusmodul

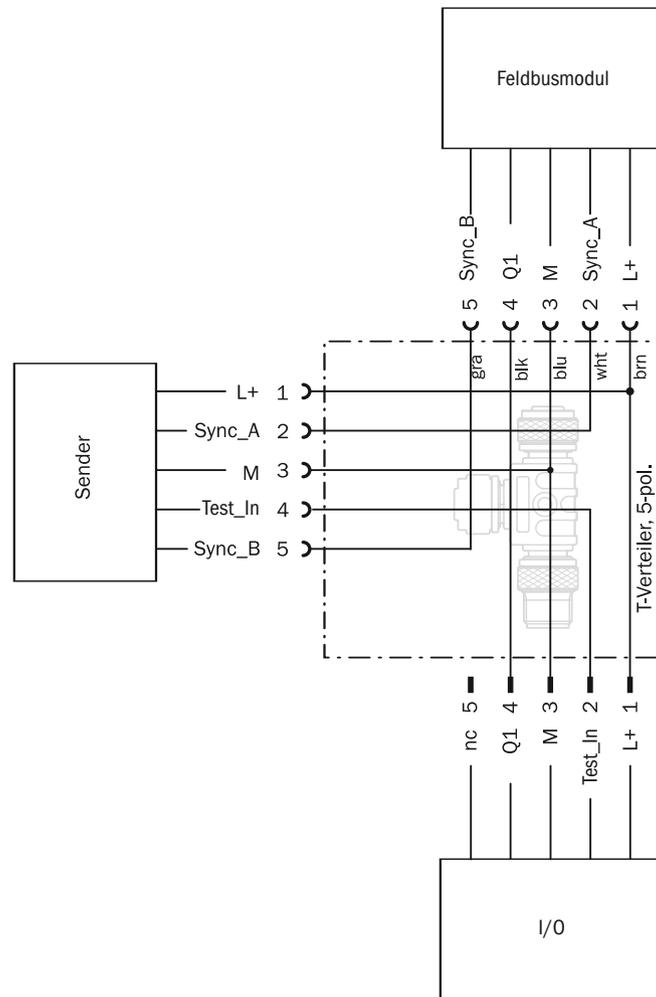


Figure 45: T-Verteiler Sender und Feldbusmodul

Table 30: Pinbelegung I/O-Anschluss des T-Verteilers

Stecker	Pin	Signal	Bedeutung
	1	L+	24 V Versorgungsspannung
	2	Test_In	Testeingang
	3	M	GND-Versorgungsspannung
	4	Q1	Schaltausgang 1
	5	Not connected	nicht belegt

## 6 Commissioning

### 6.1 Mechanical alignment of sender and receiver

After mounting and electrical installation, the sender and receiver must be aligned with each other. No objects should be located between the sender and the receiver. The light path must be clear.

#### Alignment with the QuickFix bracket

You have the following adjustment options with the QuickFix bracket:

- Adjust vertically (H)

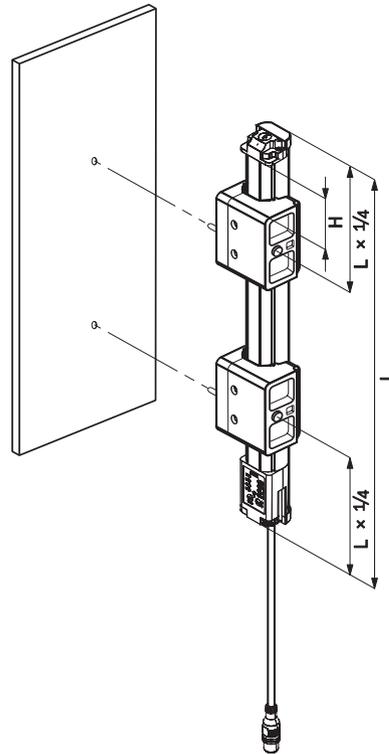


Figure 46: Alignment with the QuickFix bracket

#### Alignment with the FlexFix bracket

You have the following adjustment options with the FlexFix bracket:

- Adjust vertically (H)
- Rotate ( $\pm 15^\circ$ )

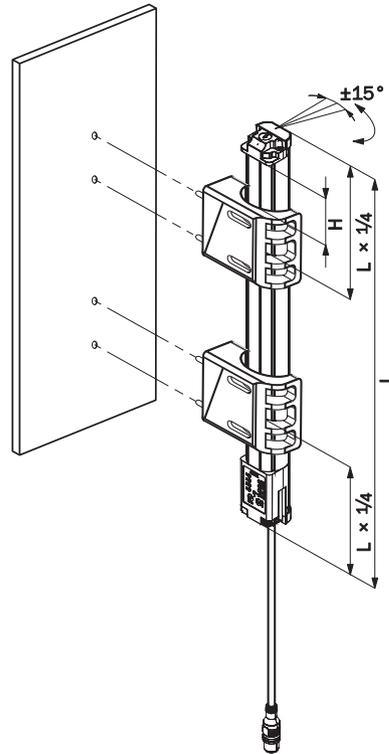


Figure 47: Alignment with the FlexFix bracket

## 6.2 Alignment and teach-in

To ensure the alignment aid works perfectly, the device should be rotated once from the left bracket stop to the right stop. This makes the best possible settings for the input sensitivity and ensures that the alignment aid shows the most helpful values.

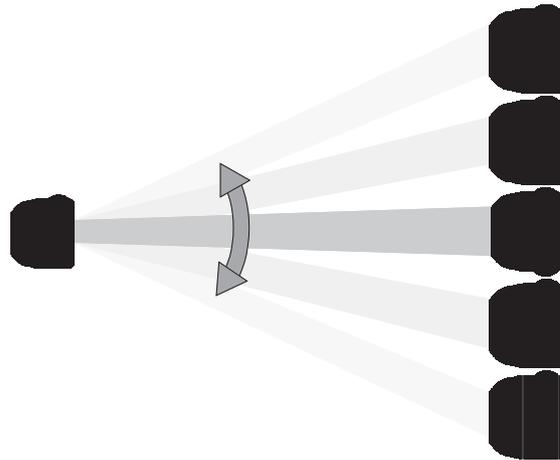


Figure 48: Rotate the receiver once

The yellow LED on the front of the receiver and the **Alignment LED** show the rough alignment.

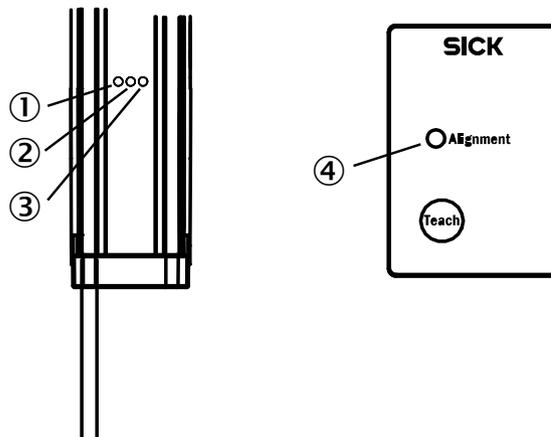


Figure 49: Control panel

- ① Yellow
- ② Red
- ③ Green
- ④ Alignment LED

**3 Hz yellow**

The yellow LED on the front and the **Alignment** LED on the control panel flash quickly.

- ▶ Improve the alignment of the MLG-2.
- ✓ When the yellow LED and the **Alignment** LED go out, the MLG-2 is optimally aligned.
- ▶ Now fix the position of the sender and receiver.<sup>3)</sup>

**Teach-in**

- ▶ Press the **Teach** pushbutton (< 1 s).<sup>4)</sup>
- ✓ **1 Hz yellow**
- ✓ The yellow LED on the front and the **Alignment** LED flash slowly.

If the teach-in process is successful, the yellow LED on the front and the **Alignment** LED go out. The MLG-2 is operational.

If the teach-in process is unsuccessful, the **Alignment** LED flashes rapidly, as does the red LED on the front of the device.

- ▶ Check that the MLG-2 is correctly aligned, that the front screens are clean, and that there are no objects located in the light path.
- ▶ Then carry out the teach-in process again.

<sup>3)</sup> You can also use the installation wizards in SOPAS ET to perform the alignment work (see "System boundaries and status", page 104).  
<sup>4)</sup> The teach-in process can also be initiated via SOPAS ET, the integrated web server, or the PLC.

## 7 The MLG-2 on the Ethernet/IP™ network

### 7.1 Overview

The MLG-2 supports the following Ethernet/IP™ features:

- DLR (Media Redundancy)
- EDS support
- Device configuration via CIP objects
- Address conflict detection (ACD)
- BOOTP/DHCP support

#### Architecture

The network components are usually integrated in a star or line structure.

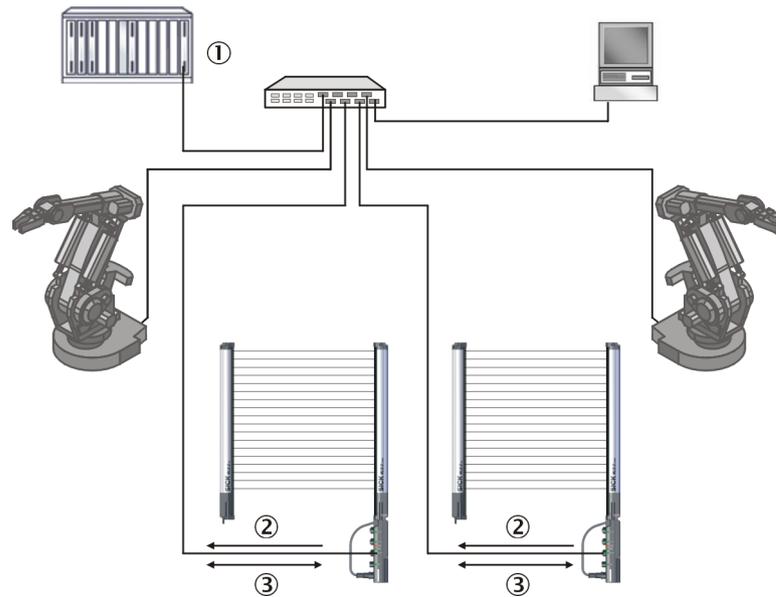


Figure 50: Example of an Ethernet/IP network in a star structure

- ① PLC
- ② Cyclic data (process data)
- ③ Acyclic data (service data)

However, to achieve greater availability and reduce the wiring work required, the MLG-2 can also be integrated in a device level ring (DLR).

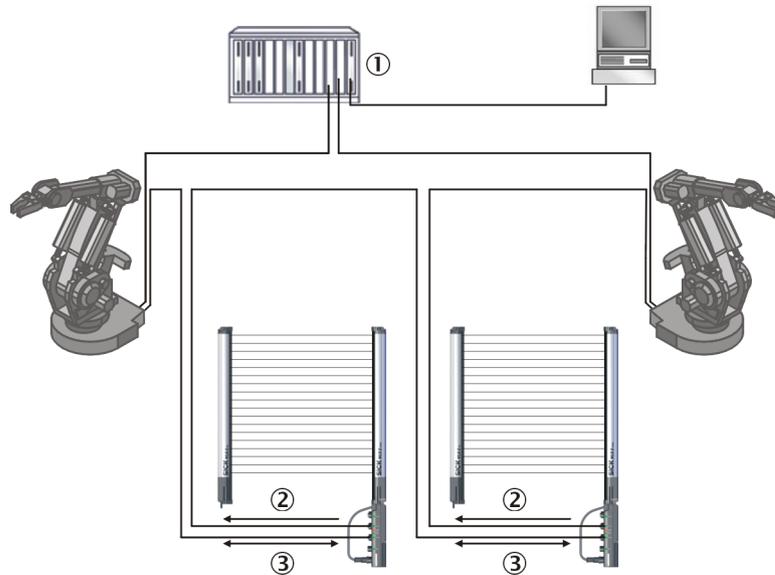


Figure 51: Example of an Ethernet/IP network in a device level ring

- ① PLC
- ② Cyclic data (process data)
- ③ Acyclic data (service data)

#### Cyclic data (process data)

The MLG-2 supports **implicit messaging** via UDP/IP. Using process data, the MLG-2 can offer different I/O assemblies.

A configuration assembly can be used to configure the MLG-2.

#### Acyclic data (service data)

The MLG-2 supports **explicit messaging** via TCP/IP. Manufacturer-specific classes 100, 101, 102, 103, and 104 enable access to the MLG-2.

#### Prerequisites

The following prerequisites must be met:

- The MLG-2 must be connected correctly to the control (see "[T-Verteiler zum Anschluss des MLG-2 ProNet](#)", page 51).
- A correct address must be configured for the MLG-2 (see "[Address configuration for Ethernet/IP](#)", page 130).

### 7.1.1 Common industrial protocol (CIP)

Ethernet/IP uses the CIP at the process level. This protocol is used to control processes in a similar way to how FTP serves to send files, for example.

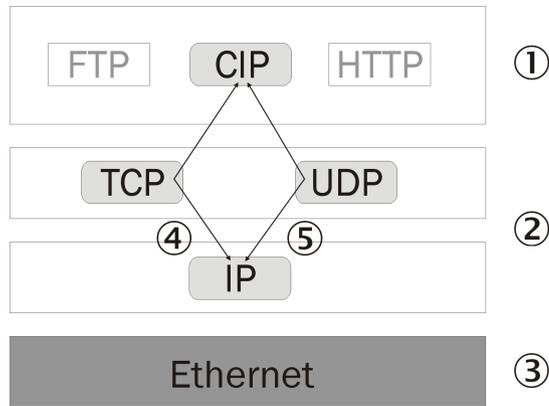


Figure 52: CIP and other services

- ① Process level
- ② Communication levels
- ③ Physical level
- ④ Explicit messaging
- ⑤ Implicit messaging

The MLG-2 meets the guidelines of the Ethernet/IP protocol according to IEC 61784-1.

**CIP object model**

For network communication, Ethernet/IP uses an “object model”, in which all the functions and data of a device are defined.

The most important terms are explained below:

- **Class**  
A class contains related objects of a device, organized into instances.
- **Instance**  
An instance consists of various attributes, which describe the properties of this instance. Different instances in a class have the same services and the same attributes. They can, however, have different attribute values.
- **Attribute**  
Attributes represent the data which a device makes available via Ethernet/IP. This data contains the current values of a configuration or an input, for example. Typical attributes are, e.g., configuration or status information.
- **Service**  
Services are used to access classes or attributes of a class and to generate certain events. These services perform specified actions, e.g., reading attributes.

Table 31: Example CIP object model

	Class	Instance	Attribute	Value
<b>Code</b>	100h	1h	01h	MLG-2 ProNet
<b>Designation</b>	System information	This class has an instance	Device name	Content of the attribute

**7.1.2 Integration and configuration options**

The MLG-2 can be integrated in Ethernet/IP in various ways and can be configured independently of the integration.

## Integration in Ethernet/IP

The MLG-2 can be integrated in Ethernet/IP:

- As a generic module:  
You enter all module settings manually.
- Using an EDS file:  
The MLG-2 module settings have been predefined.

## Configuration

The parameters are configured offline, then written to the MLG-2 and activated on switching to online mode.

The following options are available for configuring the MLG-2:

- The configuration assembly
- The controller tags in the controller organizer
- SOPAS ET
- The web server integrated in the MLG-2

## Configuration options when integrating as a generic module

If you have integrated the MLG-2 as a generic module, then you can configure it dependent on the **Connection Parameters** entered.

- If the configuration assembly is **activated** under **Connection Parameters**, you must perform the configuration using the configuration assembly.  
In addition, you can configure the parameters which are not contained in the configuration assembly using SOPAS ET or the web server integrated in the MLG-2.
- If the configuration assembly is **not activated** under **Connection Parameters**, you can use SOPAS ET or the web server to configure all parameters.



## NOTE

If the configuration assembly is active, the parameters entered there overwrite those which have been configured via SOPAS ET or the integrated web server.

## Configuration options when integrating using the EDS file

If you have integrated the MLG-2 using the EDS file, then you can configure it dependent on the selected instances of the I/O assemblies.

Table 32: Overview of connection types

Connection type	Assembly	Description	Comments
Exclusive owner with config	I/O assembly: 101 through 111 Configuration assembly: 154 or 153	This connection type sends and receives process data and contains a configuration assembly.	Parameters previously configured in SOPAS ET or with the integrated web server are overwritten by the configuration assembly. Parameters that are only available via SOPAS ET or the integrated web server are not overwritten.
Exclusive owner without config	I/O assembly: 101 through 111 Configuration assembly: -	This connection type sends and receives process data and does not contain a configuration assembly.	Parameters previously configured in SOPAS ET or with the integrated web server are not overwritten.

Connection type	Assembly	Description	Comments
Input only with config	I/O assembly: 101 through 111 Configuration assembly: 154 or 153	This connection type sends process data and contains a configuration assembly.	Parameters previously configured in SOPAS ET or with the integrated web server are overwritten by the configuration assembly. Parameters that are only available via SOPAS ET or the integrated web server are not overwritten.
Input only without config	I/O assembly: 101 through 111 Configuration assembly: -	This connection type sends process data and does not contain a configuration assembly.	Parameters previously configured in SOPAS ET or with the integrated web server are not overwritten.
Listen only	I/O assembly: 101 through 111 Configuration assembly: -	This connection type can only be used if another master has already subscribed to the required assembly. Output data and the configuration assemblies are not available.	Parameters previously configured in SOPAS ET or with the integrated web server are not overwritten.

7.1.2.1 Integration as a generic module

- ▶ Right-click on the **Ethernet** icon and select the **New Module...** command.
- ✓ The **Select Module** dialog box opens.
- ▶ In the **Select Module** dialog box, select the **By Category** index card.
- ▶ Open the **Communication** structure tree.
- ▶ In the **Communication** structure tree, select the **ETHERNET-MODULE (Generic Ethernet Module)** module and click on **OK**.
- ✓ The **Module Properties [module name]** dialog box opens.

**Module settings**

- ▶ In the **Module Properties [module name]** dialog box, enter a name and the IP address assigned for the MLG-2 (see "IP address of the MLG-2", page 62).
- ▶ Enter the settings for **Input**, **Output**, and **Configuration** as follows:

When using the generic module, 4 bytes of header data must be added to the payload lengths stated in table 44.

**Example:**

- **Input:** Assembly instance: 108; length according to table 44: 8 bytes  
Information stated in the generic module:  
Size: 12 bytes



**NOTE**

When stating the data length, pay attention to the data type selected under **Comm Format!**

When using the generic assembly, header information is now transmitted in bytes 0:3 in the MLG-2 input data:

- Bit 0: Run/Idle (1 = Run Mode | 0 = Idle Mode)
  - Bit 1: Claim Output Ownership (COO) Flag - not used for MLG-2
  - Bit 2..3: Ready for Ownership of Outputs (ROO) Flags - not used for MLG-2
  - Bit 4..31: Reserved by CIP
- The actual MLG-2 payload starts at byte 4.

- **Output:** Assembly instance: 198

Select this instance if you **do not** want to write any output data. The output parameter is set to 198 (input only).

- **Output:** Assembly instance: 180; size: 2 bytes  
Select this instance if you want to send output data.  
The composition of the **Control** output data can be found in [chapter 7.4.3](#).



#### NOTE

When stating the data length, pay attention to the data type selected under **Comm Format!**

- **Configuration:** Assembly instance: 154; size: 132  
Configuration assembly for MLG-2 devices from software version 2.1.2 (≥ 2.1.2). Instance 154 of the assembly object is hereby selected. The size is 132 × 8 bits (= 132 bytes).
- **Configuration:** Assembly instance: 153; size: 76  
Configuration assembly for MLG-2 devices up to software version 2.1.2 (< 2.1.2). Instance 153 of the assembly object is hereby selected. The size is 76 × 8 bits (= 76 bytes).



#### NOTE

The assembly object contains a configuration assembly. The configuration assemblies are represented by instances 153 and 154. Before the configuration assembly can be called up by the control, valid data must be written to it. An empty configuration assembly or a configuration assembly containing invalid data can lead to a control error.

#### Downloading the configuration to the control

- ▶ Load the configuration to the control.
- ▶ The status displays for **Run Mode**, **Controller OK**, and **I/O OK** turn green.

#### Checking communication

The data received by the control from the MLG-2 can be displayed in order to check that communication between the control and the MLG-2 is working correctly.

- ▶ In the **Controller Organizer**, open the **Controller Test Setup**, **Controller Tags** folder.
- ▶ In the **Name** column of the **Controller Tags**, open the node with the name previously entered for the MLG-2.

### 7.1.2.2 Integration using an EDS file

Common configuration tools can import an EDS file for integration of the MLG-2 into the Ethernet/IP™ network.

The EDS file for the MLG-2 is available for download from [www.sick.de](http://www.sick.de) (MLG-2 ProNet EDS file).

Refer to your configuration tool's documentation for how to import the file into your system.

#### Prerequisites

- You are using an Allen Bradley control system with “RSLogix 5000” control software V22 or higher (or another control that facilitates integration using an EDS file).
- The MLG-2 has an IP address (see ["IP address of the MLG-2"](#), page 62).
- The EDS file has been integrated into the control software using the Rockwell Hardware Installation Tool.

#### Setting up communication

- ▶ Right-click on the **Ethernet** icon and select the **New Module...** command.
- ✓ The **Select Module Type** dialog box opens.

- ▶ Select the MLG-2 on the **Catalog** index card.
- ▶ Click **OK**.
- ✓ The **Module Properties [module name]** dialog box opens.
- ▶ Enter a name (freely selectable) in the **Name** field and the IP address defined for the MLG-2 in the **IP Address** field.
- ✓ In the **Module Definition** area, the default connection Input Only (109) is shown as **Connections**. This is instance 109 of the assembly object.
- ▶ If you want to change this instance, click on **Change....**
- ▶ Select, e.g., **Input Only 101**.
- ▶ Under **Size**, select the data format DINT.

### Checking communication

The data received by the control from the MLG-2 can be displayed in order to check that communication between the control and the MLG-2 is working correctly.

- ▶ In the **Controller Organizer**, open the **Controller Test Setup, Controller Tags** folder.
- ▶ In the **Name** column of the **Controller Tags**, open the node with the name previously entered for the MLG-2.

### 7.1.2.3 IP address of the MLG-2

The IP address of the MLG-2 can be assigned as follows:

- Using SOPAS ET
- Via DHCP

#### Without DHCP server

If you have entered a fixed IP address (see ["Address configuration for Ethernet/IP", page 130](#)), then you must use this IP address in the control.

#### Assigning the IP address via DHCP

If your control has a DHCP server, you can assign an IP address to the MLG-2 via this DHCP server.

- ▶ Start up the BOOTP/DHCP server (usually in the Start menu of your PC/Notebook under Rockwell Software, BOOTP-DHCP Server, BOOTP-DHCP Server).
- ▶ The MLG-2 appears as a node in the program window of the BOOTP/DHCP server; its MAC address is also displayed, but not its assigned IP address.
- ▶ Double-click to open the MLG-2 in the BOOTP/DHCP server.
- ▶ In the **IP Address** field, enter a valid and available address and click **OK**.
- ▶ Click on **Clear History**.
- ✓ After a while, the MLG-2 appears with the entered IP address under **Request History**, as well as under **Relation List**.

#### Freezing the assigned IP address



#### NOTE

The procedure below will allow you to ensure that the MLG-2 retains the IP address assigned via DHCP, even after a restart:

- ▶ Deactivate the DHCP function in the MLG-2.
- ▶ To do this, set attribute 3 of the TCP/IP interface object to 0.
- ▶ You can do this in the Rockwell BOOTP/DHCP server, for example, by clicking the **Disable BOOTP/DHCP** button.
- ▶ After a restart, the MLG-2 starts up with the IP address that was previously assigned and backed up in the non-volatile memory.

The **RSLinx Classic** tool can be used to check again whether the control detects the set IP address.

- ▶ Start up **RSLinx Classic** (usually in the Start menu of your PC/Notebook under **Rockwell Software, RSLinx, RSLinx Classic**).
- ▶ In the program, click the **RSWho** button.
- ▶ Then open the path **AB\_ETHIP1, Ethernet**. The MLG-2 can be seen below its IP address.

#### 7.1.2.4 Function block

You can use a function block for communication between an Allen Bradley control and the MLG-2.

##### Prerequisites

- The function block (Logix5000 Ethernet/IP for MLG-2 ProNet function block) and its documentation is available for download from [www.sick.de](http://www.sick.de).
- The MLG-2 must be integrated in the control using an EDS file or as a generic module.

##### Import and wiring

In order to be able to use the function block in the RSLogix 5000 software, you need to import the component into a project as an “add-on instruction”.

Then call up the function block and wire it. It is only possible to read parameters out from or write them into the MLG-2 after valid wiring has been completed.

#### 7.1.3 Error messages of the Allen Bradley control system

If the MLG-2 is integrated in an Allen Bradley control system, certain error messages may occur whose message texts cannot be clearly assigned.

The following error messages come from the RSLogix 5000 software.

Table 33: Error messages from the RSLogix 5000 software

Error code	Message	Possible cause
16#0108	Connection Request Error Connection Type (Multicast/Unicast) not supported.	Check whether the configuration assembly (instance 153 or instance 154 of the assembly object) is activated. If it is, check whether the configuration data within it is correct and has been fully configured.
16#0114	Electronic Keying Mismatched: Electronic keying product code and/or vendor ID mismatched.	Check whether the incorrect EDS file has perhaps been selected.
16#0127	Connection Request Error: Invalid output size.	Check whether the correct communication format is being used for the control. The control's default value is “Data DINT”. The MLG-2 needs the “Input Data DINT” communication format.
16#0204	Connection Request Error: Connection timed out.	Check the supply voltage at the MLG-2. Check the Ethernet cables of the MLG-2 for interruptions. Check whether the IP address of the MLG-2 matches the IP address stored in the control. Possible causes: Following a restart, the MLG-2 has lost the IP address assigned to it ( <a href="#">see "IP address of the MLG-2", page 62</a> ).

## 7.2 Supported classes

The MLG-2 supports the following classes:

Table 34: Supported classes

Class code	Class	Description	Services	Instances
01h	Identity object	Contains all device-specific data (e.g., ID, device type, device status, etc.)	Get_Attribute_Single Get_Attribute_All Reset	1
02h	Message router object	Contains all supported class codes for the MLG-2 and the max. number of connections	-	1
04h	Assembly object	Groups together the data for several objects into a single object	Get_Attribute_Single Set_Attribute_Single	10
06h	Connection manager object	Contains connection-specific attributes for triggering, transport, connection type, etc.	Get_Attribute_Single	1
F5h	TCP/IP interface object	Contains the attributes for TCP/IP, such as IP address, subnet mask, and gateway or reference for the IP address via DHCP or hardware switch	Get_Attribute_Single Set_Attribute_Single Get_Attribute_All	1
F6h	Ethernet link object	Contains connection-specific attributes, such as transmission speed, interface status, and MAC address	Get_Attribute_Single Set_Attribute_Single Get_and_Clear	2
47h	Device level ring (DLR) object	Contains the status and configuration attributes of the DLR protocol	Get_Attribute_Single Get_Attribute_All	1
48h	Quality of service (QoS) object	Contains mechanisms for processing data flows with different priorities	Get_Attribute_Single Set_Attribute_Single	1
100h	System information	Contains attributes with system information, such as device and manufacturer name or software version	Get_Attribute_Single	1
101h	Operating mode and performance options	Contains attributes for defining operating mode and performance options	Get_Attribute_Single Set_Attribute_Single	1
102h	Auxiliary resources and diagnostic options	Contains attributes with auxiliary resources	Get_Attribute_Single Set_Attribute_Single	1
103h	Teach-in	Contains attributes for the teach-in function	Get_Attribute_Single Set_Attribute_Single	1
104h	Beam evaluation	Contains attributes for beam evaluation	Get_Attribute_Single Set_Attribute_Single	1

## 7.3 Identity object

### Class code 01h

Table 35: Class services of the identity object

Service code	Service	Description
01h	Get_Attribute_All	Returns the values of all attributes
0Eh	Get_Attribute_Single	Returns the values of an attribute

Table 36: Class attributes of the identity object

Attribute ID	Access	Description	Data type
1	Get	Object revision index	UINT
2	Get	Highest instance number in this class	UINT
3	Get	Number of object instances in this class	UINT
4	Get	Optional attributes list	STRUCT
6	Get	Highest class attribute ID that appears	UINT
7	Get	Highest instance attribute implemented	UINT



#### NOTE

The class attribute 5 has not been implemented.

Table 37: Instance services of the identity object

Service code	Service	Description
01h	Get_Attribute_All	Returns the values of all attributes
0Eh	Get_Attribute_Single	Returns the values of an attribute
05h	Reset	Resets the device: 0 = The device is reinitialized (power on) 1 = The device is reinitialized (power on) and reset to factory settings

**If you reset to factory settings, you will lose all data that has already been configured.**



#### NOTE

- The factory settings are restored as soon as 1 is written.
- The MLG-2 will be reset too. Therefore, the control reports, where necessary, an error that the MLG-2 is no longer available.
- The following applies after resetting to factory settings:
  - No process data such as beam functions or beam status is output.
  - The alignment aid is active.
  - A teach-in is required. All functions become available again only after a successful teach-in process.

Table 38: Instance attributes of the identity object

Attribute ID	Access	Data type	Name	Default value
01h	R	UINT	Vendor ID	0328h Corresponds to the SICK vendor ID
02h	R	UINT	Device type	002Bh Signifies a generic device
03h	R	UINT	Product code	4000h

Attribute ID	Access	Data type	Name	Default value
04h	R	STRUCT UINT UINT	Revision Contains the firmware revision number	0001h 0001h
05h	R	WORD	Status	<a href="#">see table 39, page 66</a>
06h	R	UDINT	Serial number	15280010
07h	R	Short_ String	Product name	MLG-2 ProNet

The identity object supports the following services:

- 01h = Get\_Attribute\_All
- 0Eh = Get\_Attribute\_Single
- 05h = Reset

Table 39: Bits of the status instance attribute

Bit	Name	Description	Default value
0	Owned	0 = no connection with the master 1 = connection established with the master	0
1	-	Reserved	0
2	Configured	0 = device with standard configuration 1 = no standard configuration	0
3	-	Reserved	0
4 ... 7	Extended device Status field	Manufacturer-specific status bits	<a href="#">see table 40, page 66</a>
8	Minor recover- able status	0 = no error 1 = error that can be reset (device not in error status)	0
9	Minor unrecover- able status	0 = no error 1 = error that can be reset (device not in error status)	0
10	Major recover- able status	0 = no major error 1 = major error that can be reset (device in error status)	0
11	Major unrecover- able status	0 = no major error 1 = major error that cannot be reset (device in error status)	0
12 ... 15	-	Reserved	0000

Table 40: Bits 4 to 7 of the status instance attribute

Possible combinations Bit 4 ... 7	Description
0000	Device in self-test
0001	Firmware update in progress
0010	At least one connection error
0011	No I/O connection established
0100	Configuration in non-volatile memory (EEPROM) failed
0101	Major error, bit 10 or bit 11 = 1
0110	At least one connection in “Run” operating mode
0111	At least one connection present, all in “Idling” operating mode
1000 ... 1111	Reserved

## 7.4 Assembly object

### Class code 04h

The assembly object enables data attributes from different objects to be grouped together into one single object. The MLG-2 supports the static assembly of attributes only, hence why the number of instances is fixed.

Table 41: Class services of the assembly object

Service code	Service	Description
01h	Get_Attribute_All	Returns the values of all attributes
0Eh	Get_Attribute_Single	Returns the values of an attribute

Table 42: Class attributes of the assembly object

Attribute ID	Access	Description	Data type
1	Get	Object revision index	UINT
2	Get	Highest instance number in this class	UINT
3	Get	Number of object instances in this class	UINT
6	Get	Highest class attribute ID that appears	UINT
7	Get	Highest instance attribute implemented	UINT



### NOTE

- The class attributes 4 and 5 have not been implemented.
- The MLG-2 supports “Input only” and “List only” connections only.

Table 43: Instance services of the assembly object

Service code	Service	Description
01h	Get_Attribute_All	Returns the values of all attributes
0Eh	Get_Attribute_Single	Returns the values of an attribute

Table 44: Instance attributes of the assembly object

Instance	Attribute ID	Access	Description	Length in bytes
100	3	Set	Process data (see "I/O-Assemblies", page 68)	2
101	3	Get	Process data (see "I/O-Assemblies", page 68)	30
102	3	Get	Process data (see "I/O-Assemblies", page 68)	18
103	3	Get	Process data (see "I/O-Assemblies", page 68)	38
104	3	Get	Process data (see "I/O-Assemblies", page 68)	22
105	3	Get	Process data (see "I/O-Assemblies", page 68)	38
106	3	Get	Process data (see "I/O-Assemblies", page 68)	54
107	3	Get	Process data (see "I/O-Assemblies", page 68)	70
108	3	Get	Process data (see "I/O-Assemblies", page 68)	8
109	3	Get	Process data (see "I/O-Assemblies", page 68)	14
110	3	Get	Process data (see "I/O-Assemblies", page 68)	46
111	3	Get	Process data (see "I/O-Assemblies", page 68)	14
153	3	Set/Get	Configuration data (see "Configuration assemblies", page 82)	76
154	3	Set/Get	Configuration data (see "Configuration assemblies", page 82)	132

## 7.4.1 I/O-Assemblies

Für das MLG-2 ProNet stehen verschiedene I/O-Assemblies zur Verfügung. Die untenstehende Tabelle (see table 45) zeigt in einer Matrix die Inhalte der Assemblies.



### NOTE

- Die I/O-Assembly 109 ist werkseitig ausgewählt.
- Die I/O-Assembly wählen Sie in den **Module Properties** als **Connection** aus.
- Es können grundsätzlich mehrere Verbindungen von der Steuerung zum MLG-2 hergestellt werden. Die Bereitstellung von Daten durch das MLG-2 ist aber grundsätzlich begrenzt. Das MLG-2 weist Verbindungen zurück, wenn das Limit erfüllt ist. In diesem Fall gibt das MLG-2 folgende Fehlercodes aus:
  - 01h = genereller Fehlercode
  - 0113h = erweiterter Fehlercode

Table 45: I/O-Assemblies

Inhalte	Datentyp	Assembly												
		180	101	102	103	104	105	106	107	108	109	110	111	
NBB – Number of Beams Blocked	UINT-16		■	■							■			
NBM – Number of Beams Made	UINT-16		■	■										
FBB – First Beam Blocked	UINT-16		■	■							■			
FBM – First Beam Made	UINT-16		■	■										
LBB – Last Beam Blocked	UINT-16		■	■							■			
LBM – Last Beam Made	UINT-16		■	■										
NCBB – Number of Consecutive Beams Blocked	UINT-16		■											
NCBM – Number of Consecutive Beams Made	UINT-16		■											
CBB – Central Beam Blocked	UINT-16		■											
CBM – Central Beam Made	UINT-16		■											
ODI – Outside Dimension	UINT-16		■								■			
IDI – Inside Dimension	UINT-16		■								■			
QS – Status des Schaltausgangs und der virtuellen Schaltausgänge	UINT-16		■	■	■	■	■	■	■	■	■	■	■	
QoR – Prozessqualität	UINT-16		■	■	■	■	■	■	■	■		■	■	
QoT – Teach-in-Qualität	UINT-16									■				
SYS – Systemstatus	UINT-16		■	■	■	■	■	■	■	■	■	■	■	
RLC – Run-Length-Code 1 ... 16	UINT-16 [16]				■									
Strahlstatus 1 ... 32	UINT-32					■	■	■	■					
Strahlstatus 33 ... 64	UINT-32					■	■	■	■					
Strahlstatus 65 ... 96	UINT-32					■	■	■	■					
Strahlstatus 97 ... 128	UINT-32					■	■	■	■					
Strahlstatus 129 ... 160	UINT-32						■	■	■					
Strahlstatus 161 ... 192	UINT-32						■	■	■					
Strahlstatus 193 ... 224	UINT-32						■	■	■					
Strahlstatus 225 ... 256	UINT-32						■	■	■					
Strahlstatus 257 ... 288	UINT-32							■	■					
Strahlstatus 289 ... 320	UINT-32							■	■					
Strahlstatus 321 ... 352	UINT-32							■	■					
Strahlstatus 353 ... 384	UINT-32							■	■					
Strahlstatus 385 ... 416	UINT-32								■					

Inhalte	Datentyp	Assembly											
		180	101	102	103	104	105	106	107	108	109	110	111
Strahlstatus 417 ... 448	UINT-32								■				
Strahlstatus 449 ... 480	UINT-32								■				
Strahlstatus 481 ... 512	UINT-32								■				
NBB Zone 1	UINT-16											■	
FBB Zone 1	UINT-16											■	
LBB Zone 1	UINT-16											■	
NCBB Zone 1	UINT-16											■	
CBB Zone 1	UINT-16											■	
NBB Zone 2	UINT-16											■	
FBB Zone 2	UINT-16											■	
LBB Zone 2	UINT-16											■	
NCBB Zone 2	UINT-16											■	
CBB Zone 2	UINT-16											■	
NBB Zone 3	UINT-16											■	
FBB Zone 3	UINT-16											■	
LBB Zone 3	UINT-16											■	
NCBB Zone 3	UINT-16											■	
NBB Zone 4	UINT-16											■	
FBB Zone 4	UINT-16											■	
LBB Zon 4	UINT-16											■	
NCBB Zone 4	UINT-16											■	
CBB Zone 4	UINT-16											■	
User Defined 1	UINT-16												■
User Defined 2	UINT-16												■
User Defined 3	UINT-16												■
User Defined 4	UINT-16												■
Control	UINT-8	■											

**Datenfolge der I/O-Assemblies**

Die einzelnen Inhalte der I/O-Assemblies werden in der Reihenfolge von oben nach unten ausgegeben.

EtherNet/IP™ folgt der Byte-Reihenfolge **Little-Endian**.

Table 46: Datenfolge am Beispiel der I/O-Assembly 109

Inhalt	Format	Byte	Type	Beispiel	
				Inhalt	Bedeutung
NBB	UINT-16	0	Niedrigstwertiges Byte	FE	510 Strahlen unterbrochen
		1	Höchstwertiges Byte	01	
FBB	UINT-16	2	Niedrigstwertiges Byte	01	Erster unterbrochener Strahl = 1
		3	Höchstwertiges Byte	00	
LBB	UINT-16	4	Niedrigstwertiges Byte	FE	Letzter unterbrochener Strahl = 510
		5	Höchstwertiges Byte	01	
ODI	UINT-16	6	Niedrigstwertiges Byte	FE	Außenmaß = 510
		7	Höchstwertiges Byte	01	

Inhalt	Format	Byte	Type	Beispiel	
				Inhalt	Bedeutung
IDI	UINT-16	8	Niedrigstwertiges Byte	00	Innenmaß = 0
		9	Höchstwertiges Byte	00	
QS	UINT-16	10	Niedrigstwertiges Byte	01	Schaltausgang Q1 geschaltet
		11	Höchstwertiges Byte	00	
SYS	UINT-16	12	Niedrigstwertiges Byte	10	Ver- schmutzungswar- nung
		13	Höchstwertiges Byte	00	

7.4.2 I/O assemblies with process data

7.4.2.1 Beam functions

**NBB – Number of Beams Blocked**

Table 47: NBB

Access	Data type	Description
R	UINT-16	This part of the instance transfers the number of beams blocked.

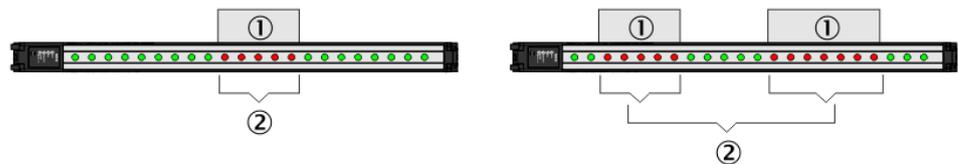


Figure 53: Beam function NBB

- ① Objects in detection area
- ② Number of beams blocked

The beam function facilitates object detection, for example.

- If there are several objects in the detection area (example on right), then all blocked beams are totaled.

**NBM – Number of Beams Made**

Table 48: NBM

Access	Data type	Description
R	UINT-16	This part of the instance transfers the number of beams made.

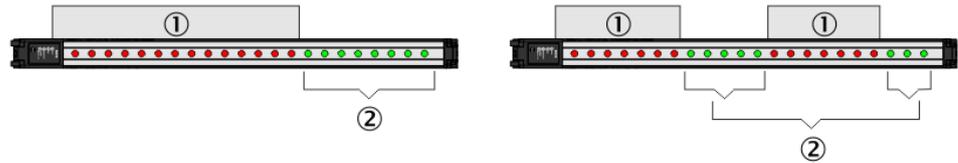


Figure 54: Beam function NBM

- ① Objects in detection area
- ② Number of beams made

The beam function facilitates hole detection, for example.

- If there are several gaps in the detection area (example on right), then all beams made are totaled.

**FBB – First Beam Blocked**

Table 49: FBB

Access	Data type	Description
R	UINT-16	This part of the instance transfers the number of the first beam blocked.

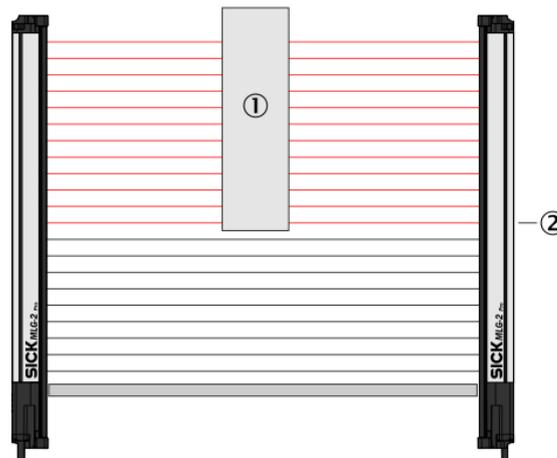


Figure 55: Beam function FBB

- ① Object in detection area
- ② First Beam Blocked

The beam function facilitates the height classification of a hanging object, for example.

- The count direction of the beams depends on the configured beam numbering.

**FBM – First Beam Made**

Table 50: FBM

Access	Data type	Description
R	UINT-16	This part of the instance transfers the number of the first beam made.

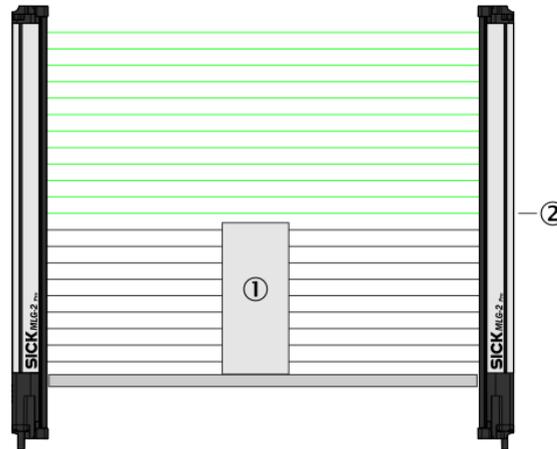


Figure 56: Beam function FBM

- ① Object in detection area
- ② First Beam Made

The beam function facilitates the height classification of a standing object, for example.

- The count direction of the beams depends on the configured beam numbering.

**LBB – Last Beam Blocked**

Table 51: LBB

Access	Data type	Description
R	UINT-16	This part of the instance transfers the number of the last beam blocked.

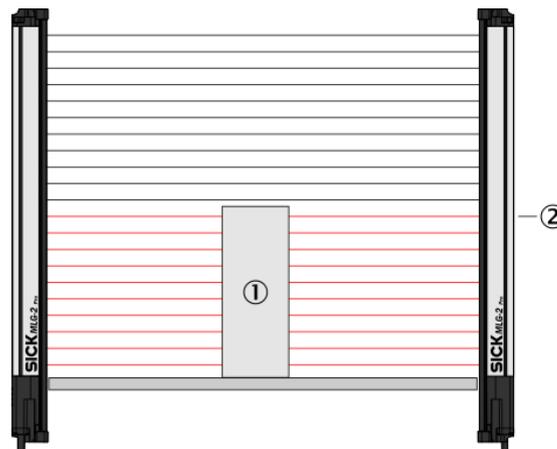


Figure 57: Beam function LBB

- ① Object in detection area
- ② Last Beam Blocked

The beam function facilitates object height measurement, for example.

- The count direction of the beams depends on the configured beam numbering.

**LBM – Last Beam Made**

Table 52: LBM

Access	Data type	Description
R	UINT-16	This part of the instance transfers the number of the last beam made.

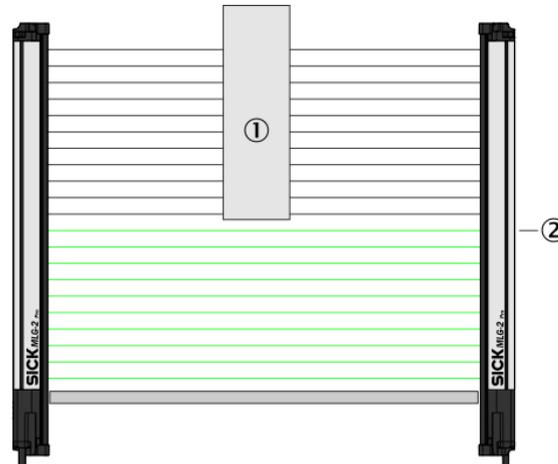


Figure 58: Beam function LBM

- ① Object in detection area
- ② Last beam made

The beam function facilitates the object measurement of a hanging object, for example.

- The count direction of the beams depends on the configured beam numbering.

**NCBB – Number of Consecutive Beams Blocked**

Table 53: NCBB

Access	Data type	Description
R	UINT-16	This part of the instance transfers the number of consecutive beams blocked.

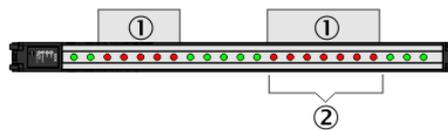


Figure 59: Beam function NCBB

- ① Objects in detection area
- ② Total number of consecutive beams blocked

The beam function facilitates object detection, for example.

- If there are several objects in the detection area, the number of beams of the largest object is output.
- If there are several objects of the same size in the detection area, the object with the lowest-value beam is used for the measurement.



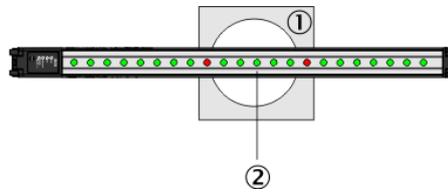


Figure 62: Beam function CBM

- ① Object in detection area
- ② Central beam made

The beam function facilitates hole position measurement, for example.

- The count direction of the beams depends on the configured beam numbering.
- If the hole makes an even number of beams, the lowest-value beam of the “two central beams” is rated as the central beam made.
- If there are several holes in the detection area, the largest hole is used for the measurement.

**ODI – Outside Dimension**

Table 57: ODI

Access	Data type	Description
R	UINT-16	This part of the instance transfers the outside dimension of an object.

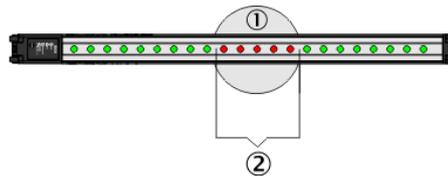


Figure 63: Beam function ODI

- ① Object in detection area
- ② Outside dimension

The beam function facilitates outside dimension measurement, for example.

- If there are several objects in the detection area, then the blocked beams of the objects are totaled.

**IDI – Inside Dimension**

Table 58: IDI

Access	Data type	Description
R	UINT-16	This part of the instance transfers the inside dimension of an object.

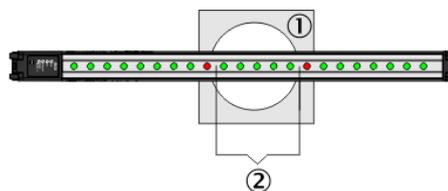


Figure 64: Beam function IDI

- ① Object in detection area
- ② Inside dimension

The beam function facilitates inside dimension measurement of a hole, for example.

- If there are several holes in the detection area, then the beams made within the objects are totaled.

7.4.2.2 Status of the switching output and the virtual switching outputs

**QS – Switching output status**

Table 59: QS – Switching output status

Access	Data type	Description
R	UINT-16	This part of the instance transfers the status of the switching output Q1 and the status of the virtual switching outputs Q2 ... Q16. Bit 0 = Q1 (physical switching output) Bit 1 ... 15 = Q2 ... Q16 (virtual switching outputs) 0 = output not active 1 = output active

The status of a switching output depends on the following factors:

- The application assigned in SOPAS ET
- The function programming assigned in SOPAS ET or in the fieldbus functions

The following is set at the factory:

- Switching output Q1 = NBB ≥ 1
- Virtual switching outputs = no function



**NOTE**

These virtual switching outputs can only be configured in SOPAS ET (see "Measuring and diagnostic functions for switching outputs", page 114).

7.4.2.3 System status

**SYS – System status**

Table 60: SYS – System status

Access	Data type	Description
R	UINT-16	This part of the instance transfers the system status.

The system status is stored in 8 bit:

Table 61: Details of the system status

Bit 15 ... 8	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Reserved	Synchronization error	Teach-in error	Hardware error	Contamination	Teach-in active	Overtemperature	Process data invalid	Short-circuit at switching output

7.4.2.4 Process quality

**QoR – Quality of Run (process quality)**

Table 62: QoR – Quality of Run (process quality)

Access	Data type	Description
R	UINT-16	This part of the instance transfers the MLG-2's process quality. 00h = 0% 64h = 100%

The process quality indicates the quality of the light level currently being received. The MLG-2 analyzes the light level received when the light path is unblocked and compares this to the values after the last teach-in process.

If the received values are getting worse, the process quality drops.

Possible causes of a drop in process quality include:

- Contamination or fogging of the front screen of the sender and/or receiver
- Misalignment
- Continuous partial blocking of a light beam or several light beams

7.4.2.5 Teach-in-Qualität

**QoT – Quality of Teach (Teach-in-Qualität)**

Table 63: QoT – Quality of Teach (Teach-in-Qualität)

Zugriff	Datentyp	Beschreibung
R	UINT-16	Der Teil der Instanz überträgt den Erfolg des letzten Teach-in. 00h = nicht erfolgreich 64h = erfolgreich

The teach-in quality indicates how successful the teach-in process has been. The MLG-2 calculates this value based on the quality of the light level received.

The value remains constant until another teach-in process is carried out.

7.4.2.6 Run-length code

**RLC – Run-length code**

This part of the instance transfers the MLG-2's run-length code. The individual RLCs are transmitted as 16 data words, at 2 bytes each.

Table 64: RLC1 ... 16 transmission

Contents	Format	Byte	Type
RLC1	UINT-16	0	Lowest-order byte
		1	Highest-order byte
...			
RLC16	UINT-16	30	Lowest-order byte
		31	Highest-order byte

The “run-length code” can be output instead of the complete status of all beams. This code only contains the status change of the beams.



**NOTE**

The run-length code can contain a maximum of 16 values, i.e., 15 status changes. It is therefore only useful for measuring objects with a small number of parts, e.g., a pallet. Objects such as pallet cages are not suitable as they involve too many status changes.

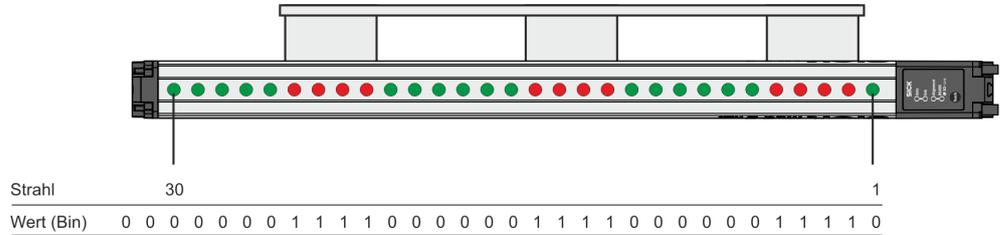


Figure 65: Beam status – Example 1

- The green beams have been made.
- The red beams have been blocked.
- The bits represent the status of the beams on the MLG-2 (made = logical 0, broken = logical 1).
- The count direction of the beams depends on the configured beam numbering (in the example, beam 1 on the connection side).

The run-length code indicates how many beams currently have the same status.

Table 65: Example run-length code with 30 beams

		Beams 1 ... 30																																								
		0	1	1	1	1	0	0	0	0	0	0	0	1	1	1	1	0	0	0	0	0	0	0	1	1	1	1	0	0	0	0	0	1	1	1	1	0	0	0	0	0
R		RLC2				RLC3						RLC4				RLC5						RLC6				RLC8																
L																																										
C																																										
1		4				6						4				6						4				5																

RLC = 1464645

The example shows: 1 beam made, 4 beams blocked, 6 beams made, 4 beams blocked, 6 beams made, 4 beams blocked, 5 beams made.

Table 66: Example run-length code with the first beam blocked

		Beams 1 ... 30																																								
		-	1	1	1	1	1	0	0	0	0	0	0	1	1	1	1	0	0	0	0	0	0	0	1	1	1	1	0	0	0	0	0	1	1	1	1	0	0	0	0	0
R		RLC2				RLC3						RLC4				RLC5						RLC6				RLC8																
L																																										
C																																										
1																																										
0		5				6						4				6						4				5																

RLC = 0564645

The RLC1 **always** indicates the number of beams **made**. If the first beam is blocked, the RLC1 will therefore be zero. Only the RLC2 indicates how many beams are blocked; in the example, this value = 5.



Access	Data type	Name	Description
R	UINT-16	NCBB Zone 1 – Number of consecutive beams blocked in Zone 1	This part of the instance transfers the number of all consecutive beams blocked in Zone 1.
R	UINT-16	CBB Zone 1 – Central beam blocked in Zone 1	This part of the instance transfers the beam number of the central beam blocked in Zone 1.
R	UINT-16	NBB Zone 2 – Number of beams blocked in Zone 2	This part of the instance transfers the number of beams blocked in Zone 2.
R	UINT-16	FBB Zone 2 – First beam blocked in Zone 2	This part of the instance transfers the number of the first beam blocked in Zone 2.
R	UINT-16	LBB Zone 2 – Last beam blocked in Zone 2	This part of the instance transfers the number of the last beam blocked in Zone 2.
R	UINT-16	NCBB Zone 2 – Number of consecutive beams blocked in Zone 2	This part of the instance transfers the number of all consecutive beams blocked in Zone 2.
R	UINT-16	CBB Zone 2 – Central beam blocked in Zone 2	This part of the instance transfers the beam number of the central beam blocked in Zone 2.
R	UINT-16	NBB Zone 3 – Number of beams blocked in Zone 3	This part of the instance transfers the number of beams blocked in Zone 3.
R	UINT-16	FBB Zone 3 – First beam blocked in Zone 3	This part of the instance transfers the number of the first beam blocked in Zone 3.
R	UINT-16	LBB Zone 3 – Last beam blocked in Zone 3	This part of the instance transfers the number of the last beam blocked in Zone 3.
R	UINT-16	NCBB Zone 3 – Number of consecutive beams blocked in Zone 3	This part of the instance transfers the number of all consecutive beams blocked in Zone 3.

Access	Data type	Name	Description
R	UINT-16	CBB Zone 3 – Central beam blocked in Zone 3	This part of the instance transfers the beam number of the central beam blocked in Zone 3.
R	UINT-16	NBB Zone 4 – Number of beams blocked in Zone 4	This part of the instance transfers the number of beams blocked in Zone 4.
R	UINT-16	FBB Zone 4 – First beam blocked in Zone 4	This part of the instance transfers the number of the first beam blocked in Zone 4.
R	UINT-16	LBB Zone 4 – Last beam blocked in Zone 4	This part of the instance transfers the number of the last beam blocked in Zone 4.
R	UINT-16	NCBB Zone 4 – Number of consecutive beams blocked in Zone 4	This part of the instance transfers the number of all consecutive beams blocked in Zone 4.
R	UINT-16	CBB Zone 4 – Central beam blocked in Zone 4	This part of the instance transfers the beam number of the central beam blocked in Zone 4.

#### 7.4.2.9 User-defined beam functions

This part of the instance is reserved for use at a later point in time and currently cannot be used.

Table 69: User-defined beam functions

Access	Data type	Name
R	UINT-16	User defined 1
R	UINT-16	User defined 2
R	UINT-16	User defined 3
R	UINT-16	User defined 4

### 7.4.3 I/O assemblies for initiating operating functions

#### 7.4.3.1 Control

Table 70: Control

Access	Data type	Description
R/W	UINT-8	This part of the instance is used to initiate operating functions on the MLG-2.

The object's individual functions are stored in 8-bit:

Table 71: Details

<b>Bit 7</b>	TEST – Sender dark switching <ul style="list-style-type: none"> <li>• 0 = normal light grid function</li> <li>• 1 = TEST active, i.e., the sender is switched off</li> </ul>
<b>Bit 6</b>	LEARN – Sensitivity teach-in <ul style="list-style-type: none"> <li>• 0 = one-time sensitivity teach-in not active</li> <li>• 1 = one-time sensitivity teach-in active</li> </ul>
<b>Bit 5</b>	BBH – Blocked Beams Hold (saves blocked beams) <ul style="list-style-type: none"> <li>• 0 = Blocked Beams Hold deactivated</li> <li>• 1 = Blocked Beams Hold activated</li> </ul>
<b>Bit 4</b>	Reserved
<b>Bit 3</b>	Reserved
<b>Bit 2</b>	SB – Standby (The sender is switched off. The beam status, basic functions, and switching output are maintained. These are invalid, since the light grid does not perform measurements.) <ul style="list-style-type: none"> <li>• 0 = standby deactivated</li> <li>• 1 = standby activated</li> </ul>
<b>Bit 1</b>	Reserved
<b>Bit 0</b>	Reserved

#### 7.4.4 Configuration assemblies

The I/O assemblies contain a configuration assembly, which is sent to the MLG-2 when a cyclic connection is being set up. The values are then adopted by the MLG-2.

Use instance 154 for MLG-2 devices with software version 2.1.2 and higher ( $\geq 2.1.2$ ). Use instance 153 for MLG-2 devices up to software version 2.1.2 ( $< 2.1.2$ ). If you use configuration assembly 153 for MLG-2 devices with software version 2.1.2 and higher, not all functions are available to the MLG-2.



**NOTE**

Functions previously configured with, e.g., SOPAS ET or the internal web server are overwritten by the configuration assembly.

#### Instance 154 configuration assembly

Table 72: Instance 154 configuration assembly

Byte	Designation	Data length	Data type	Description
0	Teach-in with blanking	1 byte	BOOL	Bit 0 of the byte determines the function (see "Teach-in with blanking", page 97).
1	Performance options	1 byte	ENUM8	This byte defines a performance option (see "Performance options", page 88).
2	Operating mode	1 byte	ENUM8	This byte defines an operating mode (see "Operating mode", page 88).
3 ... 66	Beam mask	64 bytes	UINT-32 16]	Each bit represents a beam. (see "Beam mask", page 99).
67	Beam numbering	1 byte	BOOL	Bit 0 of the byte determines the function (see "Beam numbering", page 94).
68	Minimum detectable absorption	1 byte	ENUM8	This byte defines a minimum detectable absorption for Transparent operating mode (see "Minimum detectable absorption", page 89).

Byte	Designation	Data length	Data type	Description
69	Pushbutton lock	1 byte	BOOL	Bit 0 of the byte determines the function (see "Pushbutton lock", page 94).
70 ... 73	Configuration Q1	4 bytes	STRUCT	These bytes represent function programming (see "Configuration Q1", page 89). Byte 70 specifies operand 1 Byte 71 specifies an operator Bytes 72 and 73 specify operand 2
74	Energy saving mode	1 byte	BOOL	Bit 0 of the byte determines the function (see "Energy saving mode", page 92).
75	Switch-off delay Q1	2 bytes	UINT-16	Switch-off delay Q1 in ms (see "Switch-off delay", page 92)
77	Switch-off delay Q2	2 bytes	UINT-16	Switch-off delay Q2 in ms (see "Switch-off delay", page 92)
79	Switch-off delay Q3	2 bytes	UINT-16	Switch-off delay Q3 in ms (see "Switch-off delay", page 92)
81	Switch-off delay Q4	2 bytes	UINT-16	Switch-off delay Q4 in ms (see "Switch-off delay", page 92)
83	Switch-off delay Qx	2 bytes	UINT-16	Switch-off delay Q5 through Q16 in ms (see "Switch-off delay", page 92)
84	Zone measuring	16 bytes	STRUCT (8 x UINT-16)	Defines lower and upper zone boundary for the 4 zones (see "Zone measuring", page 99).
100	Activate Cross beam measuring	1 byte	BOOL	Activates the "Cross beam measuring" function (see "Cross beam measuring", page 100).
101	Activate BBH – Blocked Beams Hold	1 byte	ENUM8	Evaluation mode for all selected beam functions (see "BBH and LBH evaluation modes", page 100)
102	BBH, beam function selection	28 bytes	STRUCT (28 x UINT-8)	Evaluation mode for all process data (see "BBH and LBH evaluation modes", page 100)
132	Reserved	1 byte	UINT-8	–

### Instance 153 configuration assembly

Table 73: Instance 153 configuration assembly

Byte	Designation	Data length	Data type	Description
0	Teach-in with blanking	1 byte	BOOL	Bit 0 of the byte determines the function (see "Teach-in with blanking", page 97).
1	Performance options	1 byte	ENUM8	This byte defines a performance option (see "Performance options", page 88).
2	Operating mode	1 byte	ENUM8	This byte defines an operating mode (see "Operating mode", page 88).
3 ... 66	Beam mask	64 bytes	UINT-32 16]	Each bit represents a beam. (see "Beam mask", page 99).
67	Beam numbering	1 byte	BOOL	Bit 0 of the byte determines the function (see "Beam numbering", page 94).

Byte	Designation	Data length	Data type	Description
68	Minimum detectable absorption	1 byte	ENUM8	This byte defines a minimum detectable absorption for Transparent operating mode (see "Minimum detectable absorption", page 89).
69	Pushbutton lock	1 byte	BOOL	Bit 0 of the byte determines the function (see "Pushbutton lock", page 94).
70 ... 73	Configuration Q1	4 bytes	STRUCT	These bytes represent function programming (see "Configuration Q1", page 89). Byte 70 specifies operand 1 Byte 71 specifies an operator Bytes 72 and 73 specify operand 2
74	Energy saving mode	1 byte	BOOL	Bit 0 of the byte determines the function (see "Energy saving mode", page 92).
75	Reserved	1 byte	UINT-8	-

## 7.5 Manufacturer-specific classes

Table 74: Access and data type nomenclature

Abbreviation	Meaning
R	Read only access
R/W	Read/write access
STRG	String = a chain of characters of varying length
BOOL	Boolean = logical value 0 or 1
ENUM	Freely selectable values within a limited value range
UINT	Unsigned integer value (e. g., UINT-32 = 0 ... 4.294.967.295)
STRUCT	Sequence of data containing different data types (e. g., UINT-8, UINT-32, UINT-32, UINT-16)



### NOTE

In Ethernet/IP, a string consists of 2 bytes of length information, followed by one byte container of the specified length.

### Class 100 with system information

Table 75: Class 100 with system information

Instance	Attribute ID	Access	Data type	Name
1	01h	R	STRG (18)	Device name
1	02h	R	STRG (32)	Manufacturer name
1	03h	R	STRG (7)	Part number
1	04h	R/W	STRG (32)	Mounting location
1	05h	R	STRUCT	Device characteristics
1	06h	R	STRG (4)	Hardware revision
1	07h	R	STRG (12)	Firmware version

**Class 101 for definition of operating mode and performance options***Table 76: Class 101 for definition of operating mode and performance options*

Instance	Attribute ID	Access	Data type	Name
1	01h	R/W	ENUM8	Operating mode
1	02h	R/W	ENUM8	Performance options
1	03h	R/W	ENUM8	Minimum detectable absorption
1	04h	R/W	STRUCT	Configuration Q1
1	05h	R/W	BOOL	Energy saving mode
1	06h	R/W	UINT-16	Switch-off delay Q1 in ms
1	07h	R/W	UINT-16	Switch-off delay Q2 in ms
1	08h	R/W	UINT-16	Switch-off delay Q3 in ms
1	09h	R/W	UINT-16	Switch-off delay Q4 in ms
1	0Ah	R/W	UINT-16	Switch-off delay Q5 through Q16 in ms

**Class 102 with auxiliary resources and diagnostic options***Table 77: Class 102 with auxiliary resources and diagnostic options*

Instance	Attribute ID	Access	Data type	Name
1	01h	R/W	BOOL	Alignment aid
1	02h	R	STRUCT	Values for alignment aid
1	03h	R/W	ENUM8	“Find Me” function
1	04h	R/W	BOOL	Pushbutton lock
1	05h	R/W	BOOL	Beam numbering
1	06h	R/W	BOOL	Cloning upload
1	07h	R/W	BOOL	Cloning download
1	08h	R	ENUM8	Cloning status

**Class 103 for the teach-in function***Table 78: Class 103 for the teach-in function*

Instance	Attribute ID	Access	Data type	Name
1	01h	R/W	BOOL	Teach-in
1	02h	R	UINT-8	Teach-in result
1	03h	R	BOOL	Teach-in required
1	04h	R/W	BOOL	Teach-in with blanking
1	05h	R/W	BOOL	Blanks blocked beams
1	06h	R/W	BOOL	Blanks beams made
1	07h	R/W	UINT-32[16]	Beam mask

**Class 104 for beam evaluation***Table 79: Class 104 for beam evaluation*

Instance	Attribute ID	Access	Data type	Name
1	01h ... 08h	R/W	STRUCT (8 x UINT-16)	Zone measuring
1	09h	R/W	BOOL	Activate Cross beam measuring
1	0Ah	R/W	ENUM8	Activate BBH – Blocked Beams Hold

Instance	Attribute ID	Access	Data type	Name
1	0Bh ... 26h	R/W	STRUCT (28 x UINT-8)	BBH, beam function selection

### 7.5.1 Class 100 with system information



#### NOTE

This class has no class services.

Table 80: Instance services of class 100

Service code	Service <sup>1</sup>	Description
0Eh	Get_Attribute_Single	Returns the values of an attribute
10h	Set_Attribute_Single	Sets the value of an attribute

<sup>1</sup> The available instance service depends on the type of access for the respective attribute.

#### 7.5.1.1 Device name

##### Class 100 – Attribute 01h

Table 81: Class 100 – Attribute 01h

Instance	Attribute ID	Access	Data type	Description
1	01h	R	STRG (18)	This attribute contains the device name, MLG-2 ProNet.

#### 7.5.1.2 Manufacturer name

##### Class 100 – Attribute 02h

Table 82: Class 100 – Attribute 02h

Instance	Attribute ID	Access	Data type	Description
1	02h	R	STRG (32)	This attribute contains the manufacturer's name, SICK AG.

#### 7.5.1.3 Part number

##### Class 100 – Attribute 03h

Table 83: Class 100 – Attribute 03h

Instance	Attribute ID	Access	Data type	Description
1	03h	R	STRG (7)	This attribute contains the MLG-2's part number.

#### 7.5.1.4 Mounting location

##### Class 100 – Attribute 04h

Table 84: Class 100 – Attribute 04h

Instance	Attribute ID	Access	Data type	Description
1	04h	R/W	STRG (32)	You can save the mounting location of the MLG-2 in this attribute.

Entering a mounting location makes it easier to identify where the MLG-2 is mounted.

## 7.5.1.5 Geräteeigenschaften und Systemgrenzen

**Class 100 – Attribute 05h**

Table 85: Class 100 – Attribute 05h

Instanz	Attribute-ID	Zugriff	Datentyp	Beschreibung
1	05h	R	STRUCT	Dieses Attribut enthält die folgenden Geräteeigenschaften des MLG-2. Byte 0 = Strahlanzahl Byte 1 = Strahlabstand Byte 2 = Wiederholgenauigkeit Byte 3 = Mindestverweildauer Byte 4 = Ansprechzeit

- The **beam number** reflects the number of beams from the MLG-2. Depending on the model, the MLG-2 can have between 6 and 510 beams, only 250 beams for the DPVO.
- **Beam separation:** In order to achieve different levels of measurement accuracy, the MLG-2 is available with different beam separations. (see "[Beam separations and monitoring height](#)", page 16).
- The repeat accuracy of a measurement result (**reproducibility**) is the amount of time by which an object detection can differ from a previous or subsequent detection. The reproducibility time is 1 × the scan time. (see "[Scan time](#)", page 18). The reproducibility is output as an integer in µs.
- The **minimum presence time** is the amount of time an object or gap must be in the detection area in order to be detected. The minimum presence time is no more than 2 × the scan time (see "[Scan time](#)", page 18). The minimum presence time is output as an integer in µs.
- The **response time** is the time it takes for an output to react following the detection of an object/gap. The maximum response time is 3 × the scan time plus the transmission time to the outputs (see "[Scan time](#)", page 18). The response time is output as an integer in µs.

## 7.5.1.6 Hardware revision

**Class 100 – Attribute 06h**

Table 86: Class 100 – Attribute 06h

Instance	Attribute ID	Access	Data type	Description
1	06h	R	STRG (4)	This attribute contains the revision status of the hardware.

## 7.5.1.7 Firmware version

**Class 100 – Attribute 07h**

Table 87: Class 100 – Attribute 07h

Instance	Attribute ID	Access	Data type	Description
1	07h	R	STRG (12)	This attribute contains the version of the firmware.

The version of firmware in its delivery state can be found on the type label.

## 7.5.2 Class 101 for definition of operating mode and performance options

**NOTE**

This class has no class services

Table 88: Instance services of class 101

Service code	Service <sup>1</sup>	Description
0Eh	Get_Attribute_Single	Returns the values of an attribute
10h	Set_Attribute_Single	Sets the value of an attribute

<sup>1</sup> The available instance service depends on the type of access for the respective attribute.

## 7.5.2.1 Operating mode

### Class 101 – Attribute 01h

Table 89: Class 101 – Attribute 01h

Instance	Attribute ID	Access	Data type	Description
1	01h	R/W	ENUM8	You use this attribute to set the MLG-2 to the respective operating mode. 0 = standard 1 = transparent 2 = dust- and sunlight-resistant

The MLG-2 has the following operating modes:

- **Standard**  
For normal measuring tasks involving opaque objects (recommended for the majority of applications)
- **Transparent**  
For transparent objects, e.g., made of glass, PET, etc.
- **Dust- and sunlight-resistant**  
For applications when there is a large amount of dust in the environment or a high level of solar radiation



#### NOTE

When the operating mode is changed, a new teach-in process must be performed.

## 7.5.2.2 Performance options

### Class 101 – Attribute 02h

Table 90: Class 101 – Attribute 02h

Instance	Attribute ID	Access	Data type	Description
1	02h	R/W	ENUM8	You use this attribute to specify performance options for the MLG-2. 0 = standard measurement accuracy 1 = high measurement accuracy 2 = high operating reserve 3 = cross-beam function 4 = cross-beam function with high operating reserve 5 = high-speed scan 6 = high-speed scan with high measurement accuracy 7 = high-speed scan with high operating reserve

#### Standard measurement accuracy

In order for an object to be detected, it must completely cover at least one beam (see ["Minimum detectable object with parallel-beam function"](#), page 21).

**High measurement accuracy**

On the MLG-2, the measurement accuracy can be increased in SOPAS ET. This means that an object can be detected even if it only covers half of a beam (see ["Minimum detectable object with high measurement accuracy from the MLG-2"](#), page 24). When the configured measurement accuracy is high, the MLG-2 cleaning and teach-in processes must be performed more frequently.

**High operating reserve**

Setting the operating reserve high makes the MLG-2 very resistant to contamination (see ["Operating reserve"](#), page 25). However, it is not possible to activate high measurement accuracy in this case.

**Cross beam function**

When the cross-beam function is enabled, the light beam from a sender LED is received by three receiver diodes in two scans. This doubles the scan time.(see ["Minimum detectable object with cross-beam function "](#), page 23).

**High-speed scan**

With high-speed scan, several beams are active in each cycle. This reduces the scan time by a variable factor (see ["Scan time with high-speed scan on the MLG-2"](#), page 20).

## 7.5.2.3 Minimum detectable absorption

**Class 101 – Attribute 03h**

Table 91: Class 101 – Attribute 03h

Instance	Attribute ID	Access	Data type	Description
1	03h	R/W	ENUM8	You use this attribute to specify the minimum detectable absorption for Transparent operating mode (see <a href="#">"Transparent operating mode"</a> , page 25). 0 = signal attenuation 30% 1 = signal attenuation 15% 2 = signal attenuation 10%

## 7.5.2.4 Configuration Q1

**Class 101 – Attribute 04h**

Table 92: Class 101 – Attribute 04h

Instance	Attribute ID	Access	Data type	Description
1	04h	R/W	STRUCT	You use this attribute to define program functions for switching output Q1.

Table 93: Details of Q1 configuration

Byte 0	Byte 1	Byte 2	Byte 3
Operand 1	Operator	Operand 2	
ENUM8	ENUM8	UINT-16	

You can use operands and operators to realize functions for the switching output.

Example:

Operand 1 = 2; equates to the number of beams made (NBM)

Operator = 1; equates to  $\geq$

Operand 2 = 30

Output Q1 switches when the total number of beams made is greater than or equal to 30.

### Operand 1

Table 94: Selectable beam functions

Value	Name	Description
0	NBB	Total number of beams blocked (e.g., for object detection)
1	NBM	Total number of beams made (e.g., for hole detection)
2	FBB	Beam number of the first beam blocked (e.g., for height classification of a hanging object)
3	FBM	Beam number of the first beam made
4	LBB	Beam number of the last beam blocked (e.g., for object height measurement)
5	LBM	Beam number of the last beam made
6	NCBB	Number of consecutive beams blocked (e.g., for object detection). If there are multiple objects in the detection area, the greatest number of consecutive beams blocked is displayed.
7	NCBM	Number of consecutive beams made (e.g., for hole detection). If there are multiple gaps in the detection area, the greatest number of consecutive beams made is displayed.
8	CBB	Beam number of the central beam blocked (e.g., for measuring an object position)
9	CBM	Beam number of the central beam made (e.g., for measuring a hole position)
10	ODI	Total number of beams between the first and last beams blocked (e.g., for measuring the outside dimension)
11	IDI	Total number of beams made between the first and last beams blocked (e.g., for measuring the inside dimension)
12	BNB	True when a predefined beam is blocked
13	BNM	True when a predefined beam is made
14	ALARM Q1	Configuration same as with SOPAS ET
15	QoR (process quality)	0 ... 100 in percent
16	QoT (teach-in quality)	0 or 100 in percent 0 = teach-in was unsuccessful 100 = teach-in was successful
17 ... 32	RLC1 ... 16	Outputs the value of the relevant change
33	NBB Zone 1	Total number of beams blocked in Zone 1 (e.g., for object detection)
34	FBB Zone 1	Beam number of the first beam blocked in Zone 1 (e.g., for height classification of a hanging object)
35	LBB Zone 1	Beam number of the last beam blocked in Zone 1 (e.g., for object height measurement)

Value	Name	Description
36	NCBB Zone 1	Number of consecutive beams blocked in Zone 1 (e.g., for object detection). If there are multiple objects in the detection area, the greatest number of consecutive beams blocked is displayed.
37	CBB Zone 1	Beam number of the central beam blocked in Zone 1 (e.g., for measuring an object position)
38	NBB Zone 2	Total number of beams blocked in Zone 2 (e.g., for object detection)
39	FBB Zone 2	Beam number of the first beam blocked in Zone 2 (e.g., for height classification of a hanging object)
40	LBB Zone 2	Beam number of the last beam blocked in Zone 2 (e.g., for object height measurement)
41	NCBB Zone 2	Number of consecutive beams blocked in Zone 2 (e.g., for object detection). If there are multiple objects in the detection area, the greatest number of consecutive beams blocked is displayed.
42	CBB Zone 2	Beam number of the central beam blocked in Zone 2 (e.g., for measuring an object position)
43	NBB Zone 3	Total number of beams blocked in Zone 3 (e.g., for object detection)
44	FBB Zone 3	Beam number of the first beam blocked in Zone 3 (e.g., for height classification of a hanging object)
45	LBB Zone 3	Beam number of the last beam blocked in Zone 3 (e.g., for object height measurement)
46	NCBB Zone 3	Number of consecutive beams blocked in Zone 3 (e.g., for object detection). If there are multiple objects in the detection area, the greatest number of consecutive beams blocked is displayed.
47	CBB Zone 3	Beam number of the central beam blocked in Zone 3 (e.g., for measuring an object position)
48	NBB Zone 4	Total number of beams blocked in Zone 4 (e.g., for object detection)
49	FBB Zone 4	Beam number of the first beam blocked in Zone 4 (e.g., for height classification of a hanging object)
50	LBB Zone 4	Number of consecutive beams blocked in Zone 4 (e.g., for object detection). If there are multiple objects in the detection area, the greatest number of consecutive beams blocked is displayed.
51	NCBB Zone 4	Beam number of the central beam blocked in Zone 4 (e.g., for measuring an object position)
52	CBB Zone 4	Total number of beams blocked in Zone 4 (e.g., for object detection)
53	User defined 1	User defined 1
54	User defined 2	User defined 2
55	User defined 3	User defined 3
56	User defined 4	User defined 4

**Operator**

- 0 equates to =
- 1 equates to ≥
- 2 equates to ≤
- 3 equates to ≠

**Operand 2**

0 ... 510

7.5.2.5 Energy saving mode

**Class 101 – Attribute 05h**

Table 95: Class 101 – Attribute 05h

Instance	Attribute ID	Access	Data type	Description
1	05h	R/W	BOOL	You use this attribute to activate standby mode. 0 = standby not active 1 = standby active

In order to reduce energy consumption, the MLG-2 can be set to standby mode.

Standby mode freezes the status of the outputs, i.e., they do not change their status even when objects enter or leave the detection area.

7.5.2.6 Switch-off delay

**Class 101 – Attributes 06h through 0Ah**

You can use the switch-off delay to adjust the output from the switching outputs so that it matches the installed PLC. You can set one individual switch-off delay each for switching outputs Q1 through Q4, and one shared switch-off delay for switching outputs Q5 through Q16.

The delays set here will also affect the bits in the “QS- Switching output status” process data.

Table 96: Class 101 – Attributes 06h through 0Ah

Instance	Attribute ID	Access	Data type	Description
1	06h	R/W	UINT-16	This attribute is used to set a delay for switching output Q1.
1	07h	R/W	UINT-16	This attribute is used to set a delay for switching output Q2.
1	08h	R/W	UINT-16	This attribute is used to set a delay for switching output Q3.
1	09h	R/W	UINT-16	This attribute is used to set a delay for switching output Q4.
1	0Ah	R/W	UINT-16	This attribute is used to set a shared delay for switching outputs Q5 through Q16.

7.5.3 Class 102 with auxiliary resources and diagnostic options



**NOTE**

This class has no class services

Table 97: Instance services of class 102

Service code	Service <sup>1</sup>	Description
0Eh	Get_Attribute_Single	Returns the values of an attribute
10h	Set_Attribute_Single	Sets the value of an attribute

<sup>1</sup> The available instance service depends on the type of access for the respective attribute.

### 7.5.3.1 Alignment aid

#### Class 102 – Attribute 01h

Table 98: Class 102 – Attribute 01h

Instance	Attribute ID	Access	Data type	Description
1	01h	R/W	BOOL	You use this attribute to activate the alignment aid for the MLG-2. 0 = alignment aid not active 1 = alignment aid active

### 7.5.3.2 Values for alignment aid

#### Class 102 – Attribute 02h

Table 99: Class 102 – Attribute 02h

Instance	Attribute ID	Access	Data type	Description
1	02h	R	STRUCT	You use this attribute to read the values for certain beams on the MLG-2. Byte 0 contains the value for the beam on the connection side. Byte 1 contains the value for the beam on the end cap. Byte 2 contains the value for the beam most heavily contaminated.

100% signal strength equates to value 100d

0% signal strength equates to value 0d

### 7.5.3.3 “Find Me” function

#### Class 102 – Attribute 03h

Table 100: Class 102 – Attribute 03h

Instance	Attribute ID	Access	Data type	Description
1	03h	R/W	ENUM8	You use this attribute to activate the “Find Me” function for the MLG-2. 0 = function not active 1 = function active

The three LEDs on the front of the receiver flash when the “Find Me” function is activated.

If multiple MLG-2s are installed in one application, you can use the “Find Me” function to identify a certain MLG-2.

7.5.3.4 Pushbutton lock

**Class 102 – Attribute 04h**

Table 101: Class 102 – Attribute 04h

Instance	Attribute ID	Access	Data type	Description
1	04h	R/W	BOOL	You use this attribute to activate the pushbutton lock for the “Teach” pushbutton on the receiver of the MLG-2. 0 = pushbutton released 1 = pushbutton locked

7.5.3.5 Beam numbering

**Class 102 – Attribute 05h**

Table 102: Class 102 – Attribute 05h

Instance	Attribute ID	Access	Data type	Description
1	05h	R/W	BOOL	You use this attribute to reverse the beam numbering. 0 = beam 1 begins at the connection 1 = beam 1 begins at the head

On delivery, beam 1 is located on the connection side of the MLG-2. You can choose to configure the MLG-2 so that the beam numbering begins at the top.



Figure 67: Beam numbering

This might be a good idea, for example, if you mount the MLG-2 with the connections facing upward, but still want to measure height classification from the bottom.



**NOTE**

Beam numbering has consequences for the beam functions FBB, FBM, LBB, LBM, CBB, CBM, RLC, and on the beam status.

## 7.5.3.6 Cloning upload

**Class 102 – Attribute 06h**

Table 103: Class 102 – Attribute 06h

Instance	Attribute ID	Access	Data type	Description
1	06h	R/W	BOOL	You use this attribute to save the parameters of the MLG-2 to the fieldbus module. 0 = parameters are not saved 1 = parameters are saved A change from 0 to 1 always initiates saving of the parameters to the fieldbus module. If the parameters are to be saved to the fieldbus module again, a value of 0 must first be written to this attribute.

The “Cloning upload” function writes the parameter set configured to the fieldbus module. Following device replacement, the parameters can be loaded back into the light grid from the fieldbus module using the “Cloning download” function.

## 7.5.3.7 Cloning download

**Class 102 – Attribute 07h**

Table 104: Class 102 – Attribute 07h

Instance	Attribute ID	Access	Data type	Description
1	07h	R/W	BOOL	This attribute is used to load the parameters saved in the fieldbus module to the MLG-2. 0 = parameters are not loaded 1 = parameters are loaded A change from 0 to 1 always initiates loading of the parameters into the MLG-2. If the parameters are to be loaded into the MLG-2 again, a value of 0 must first be written to this attribute.

**NOTE**

The MLG-2 restarts after the download. Existing bus connections or connections with SOPAS ET are interrupted briefly.

Any initial configurations for starting up the MLG-2 which have been set in the control overwrite the values that the cloning download has restored.

## 7.5.3.8 Cloning status

**Class 102 – Attribute 08h**

Table 105: Class 102 – Attribute 08h

Instance	Attribute ID	Access	Data type	Description
1	08h	R	ENUM8	You use this attribute to read the status of the “Cloning” function. 0 = LOCKED 1 = EMPTY 2 = VALID 3 = ACTIVE

The cloning status shows the status of the stored parameters in the fieldbus module

- LOCKED: Uploading and downloading not possible.
- EMPTY: No valid set of parameters available.  
Uploading parameters is the only option.
- VALID: A valid set of parameters is available in the fieldbus module.  
Parameters can be uploaded or downloaded.
- ACTIVE: An upload or download is currently active.

7.5.4 Class 103 for the teach-in function



**NOTE**

This class has no class services

Table 106: Instance services of class 103

Service code	Service <sup>1</sup>	Description
0Eh	Get_Attribute_Single	Returns the values of an attribute
10h	Set_Attribute_Single	Sets the value of an attribute

<sup>1</sup> The available instance service depends on the type of access for the respective attribute.

7.5.4.1 Teach-in

**Class 103 – Attribute 01h**

Table 107: Class 103 – Attribute 01h

Instance	Attribute ID	Access	Data type	Description
1	01h	R/W	BOOL	You use this attribute to start a teach-in on the MLG-2. 0 = no teach-in 1 = start teach-in A change from 0 to 1 always initiates teach-in. If an additional teach-in is to be initiated, a value of 0 must first be written to this attribute.

During the teach-in process, the switching thresholds for all beams are individually adjusted for the sensing range and the ambient conditions.

A teach-in process must be carried out when commissioning, when changing operating mode or performance options, and at regular intervals in general.

7.5.4.2 Teach-in result

**Class 103 – Attribute 02h**

Table 108: Class 103 – Attribute 02h

Instance	Attribute ID	Access	Data type	Description
1	02h	R	UINT-8	You use this attribute to read the result of the last teach-in.

The teach-in result is stored in 8 bit:

Table 109: Teach-in result – Stored in 8 bit

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Warning: no automatic teach-in possible	Error: occurred when blanking beams during teach-in	Warning: high-speed scan not possible	Error: occurred with cross-beam function during teach-in	Warning: beam signal strength too high	Warning: beam signal strength too low	Error: occurred with parallel-beam function during teach-in	Error: general error occurred during teach-in

7.5.4.3 Teach-in required

**Class 103 – Attribute 03h**

Table 110: Class 103 – Attribute 03h

Instance	Attribute ID	Access	Data type	Description
1	03h	R	BOOL	You use this attribute to read whether a teach-in is required. 0 = no teach-in required 1 = teach-in required

7.5.4.4 Teach-in with blanking

**Class 103 – Attribute 04h**

Table 111: Class 103 – Attribute 04h

Instance	Attribute ID	Access	Data type	Description
1	04h	R/W	BOOL	This attribute activates a beam blanking with each teach-in. 0 = no blanking 1 = with blanking You define whether the beams made or blocked are blanked using attributes 05h and 06h.

To show the blanked beams again, proceed as follows:

1. Remove all objects from the detection area.
2. Activate the **Blank blocked beams** function.
3. Activate the **Teach-in with blanking** function.
4. Perform a teach-in.

7.5.4.5 Blanking blocked beams

**Class 103 – Attribute 05h**

Table 112: Class 103 – Attribute 05h

Instance	Attribute ID	Access	Data type	Description
1	05h	R/W	BOOL	You use this attribute to blank the blocked beams for later measurements. 0 = no blanking 1 = blank the beams A change from 0 to 1 always initiates blanking of blocked beams. If the beams are to be blanked again, a value of 0 must first be written to this attribute.

The beams from the MLG-2 that are **not** to be accounted for in the measurement must be blocked.

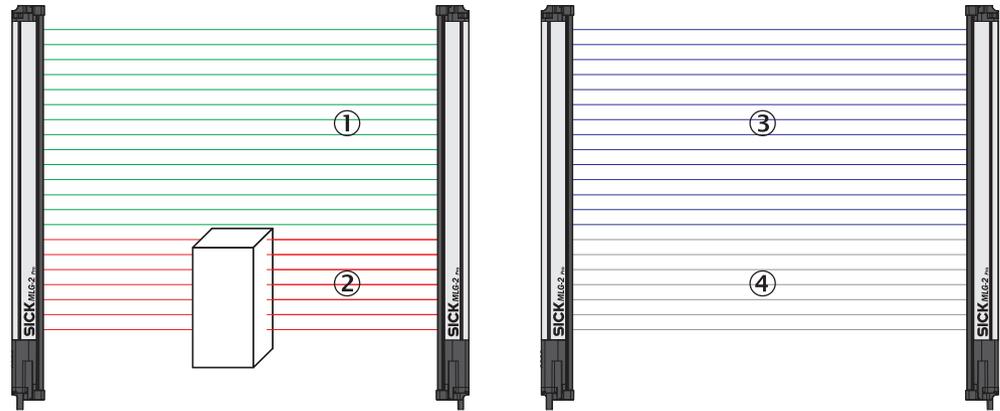


Figure 68: Example of the blanking of blocked beams

- ① Made beams
- ② Blocked beams
- ③ Beams included in the measurement
- ④ Excluded beams

7.5.4.6 Blanking beams made

**Class 103 – Attribute 06h**

Table 113: Class 103 – Attribute 06h

Instance	Attribute ID	Access	Data type	Description
1	06h	R/W	BOOL	You use this attribute to blank the made beams for later measurements. 0 = no blanking 1 = blank the beams A change from 0 to 1 always initiates blanking of free beams. If the beams are to be blanked again, a value of 0 must first be written to this attribute.

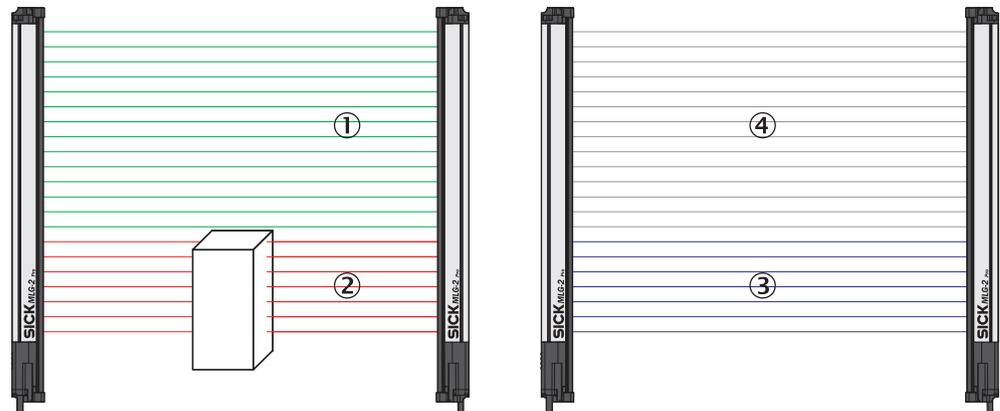


Figure 69: Example of blanking made beams

- ① Made beams
- ② Blocked beams
- ③ Beams included in the measurement
- ④ Excluded beams

The made beams will not be taken into account in the measurement.

7.5.4.7 Beam mask

**Class 103 – Attribute 07h**

Table 114: Class 103 – Attribute 07h

Instance	Attribute ID	Access	Data type	Description
1	07h	R/W	UINT-32[16]	You use this attribute to blank the beams from the MLG-2 for measurement purposes. The first component contains beams 1 ... 32. The second component contains beams 33 ... 64. ... The 16th component contains beams 481 ... 512. 0 = beam is blanked 1 = beam is included in the measurement

The beams can be blanked using a bit-coded beam mask. This example shows the bit-coded beam mask for an MLG-2, with 30 beams.

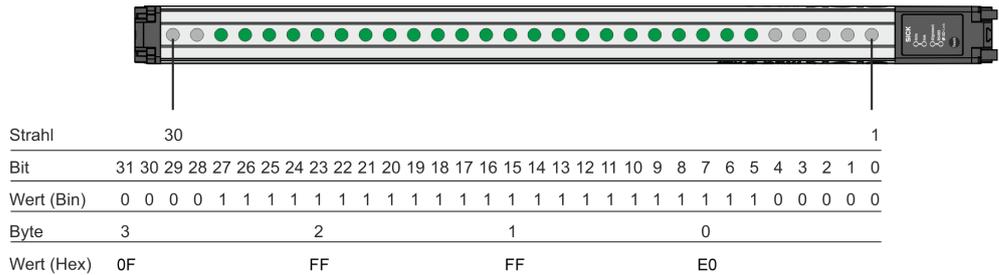


Figure 70: Bit-coded beam mask for an MLG-2, with 30 beams

**7.5.5 Class 104 for beam evaluation**

7.5.5.1 Zone measuring

**Class 104 – Attributes 01h through 08h**

The beams of the MLG-2 can be divided into four zones. Each zone can be assigned one beam function or application. Zones and beam functions are assigned using the outputs. The beam functions NBB Zone n, LBB Zone n, FBB Zone n, CBB Zone n, and NCBB Zone n are available for each zone (n = 1, 2, 3, or 4).

For additional information, see ["Zone measuring" function](#), page 128

Table 115: Class 104 – Attributes 01h through 08h

Instance	Attribute ID	Access	Data type	Description
1	01h	R/W	UINT-16	Zone 1 First Beam: Sets lower zone boundary for Zone 1
1	02h	R/W	UINT-16	Zone 1 Last Beam: Sets upper zone boundary for Zone 1
1	03h	R/W	UINT-16	Zone 2 First Beam: Sets lower zone boundary for Zone 2
1	04h	R/W	UINT-16	Zone 2 Last Beam: Sets upper zone boundary for Zone 2

Instance	Attribute ID	Access	Data type	Description
1	05h	R/W	UINT-16	Zone 3 First Beam: Sets lower zone boundary for Zone 3
1	06h	R/W	UINT-16	Zone 3 Last Beam: Sets upper zone boundary for Zone 3
1	07h	R/W	UINT-16	Zone 4 First Beam: Sets lower zone boundary for Zone 4
1	08h	R/W	UINT-16	Zone 4 Last Beam: Sets upper zone boundary for Zone 4

7.5.5.2 Cross beam measuring

**Class 104 – Attribute 09h**

Table 116: Class 104 – Attribute 09h

Instance	Attribute ID	Access	Data type	Description
1	09h	R/W	BOOL	If the “Cross beam function” option is activated via Class 101 Attribute 02h “Performance options”, you can use this Class 104 Attribute 09h to choose between the “Cross beam measuring” and “Cross beam switching” options. 0 = “Cross beam measuring” function deactivated. “Cross beam switching” function is active. 1 = “Cross beam measuring” function activated.

7.5.5.3 BBH and LBH evaluation modes

**Class 104 – Attributes 0Ah through 26h**

For a description of the “Blocked Beams Hold (BBH)” evaluation mode, see [“Blocked Beams Hold \(BBH\)” evaluation mode](#), page 140

For a description of the “Lost Beams Hold (LBH)” evaluation mode, see [“Lost Beams Hold \(LBH\)” evaluation mode](#), page 141

Table 117: Class 104 – Attributes 0Ah through 26h

Instance	Attribute ID	Access	Data type	Description
1	0Ah	R/W	ENUM-8	This attribute is used to select an evaluation mode. 0: OFF, no BBH mode or LBH mode active 1: BBH mode active 2: LBH mode active

Instance	Attribute ID	Access	Data type	Description
1	0Bh ... 26h	R/W	STRUCT (28 x UINT-8)	This attribute is used to activate and deactivate the beam functions that will be used for the evaluation mode.
	0Bh (byte 0)		UINT-8	NBB
	0Ch (byte 1)		UINT-8	NBM
	0Dh (byte 2)		UINT-8	FBB
	0Eh (byte 3)		UINT-8	FBM
	0Fh (byte 4)		UINT-8	LBB
	10h (byte 5)		UINT-8	LBM
	11h (byte 6)		UINT-8	NCBB/CBB
	12h (byte 7)		UINT-8	NCBM/CBM
	13h (byte 8)		UINT-8	ODI
	14h (byte 9)		UINT-8	IDI
	15h (byte 10)		UINT-8	RLC
	16h (byte 11)		UINT-8	BS
	17h (byte 12)		UINT-8	NBB Zone 1
	18h (byte 13)		UINT-8	NBB Zone 2
	19h (byte 14)		UINT-8	NBB Zone 3
	1Ah (byte 15)		UINT-8	NBB Zone 4
	1Bh (byte 16)		UINT-8	FBB Zone 1
	1Ch (byte 17)		UINT-8	FBB Zone 2
	1Dh (byte 18)		UINT-8	FBB Zone 3
	1Eh (byte 19)		UINT-8	FBB Zone 4
	1Fh (byte 20)		UINT-8	LBB Zone 1
	20h (byte 21)		UINT-8	LBB Zone 2
	21h (byte 22)		UINT-8	LBB Zone 3
	22h (byte 23)		UINT-8	LBB Zone 4
	23h (byte 24)		UINT-8	NCBB/CBB Zone 1
	24h (byte 25)		UINT-8	NCBB/CBB Zone 2
	25h (byte 26)		UINT-8	NCBB/CBB Zone 3
26h (byte 27)		UINT-8	NCBB/CBB Zone 4	

# 8 Configuration with SOPAS ET

## 8.1 Preparation

### 8.1.1 Installing the software

SOPAS ET 3.0 or higher is required for configuring the MLG-2.

The latest version of SOPAS ET can be found at [www.sick.de](http://www.sick.de) > Search > SOPAS.

Observe the system requirements for SOPAS ET. These are mentioned on the download website:

- ▶ Run the setup.exe from the download website.
- ▶ Follow the instructions in the Setup wizard.

#### Ethernet settings

The MLG-2 is shipped with the following IP network configuration:

- Static IP address. DHCP deactivated.
- IP address: 192.168.200.100
- Subnet mask: 255.255.255.0

You can change the IP network configuration in SOPAS ET.

If you would like the MLG-2 to acquire an IP address from a DHCP server, DHCP must be activated. If the MLG-2 is unable to locate a DHCP server, the MLG-2 will use the IP address 192.168.200.100.

#### Starting the software

Use the application **SICK > SOPAS Engineering Tool > Sopas** from the Start menu to configure the MLG-2.

### 8.1.2 Device selection

A SOPAS Device Description (SDD) is required in order to configure the MLG-2.

#### Detecting a connected device

When an MLG-2 is connected to the PC/notebook via Ethernet, the SDD can be loaded directly from the device and SOPAS ET will detect the MLG-2 type automatically.

#### Configuring a device offline

Alternatively, you can select the MLG-2 type offline using the device selection wizard. To do this, you must load the SDD from the Internet. This requires an Internet connection.

You can either enter the type code of the MLG-2 directly into the device selection wizard or define the following criteria:

- Monitoring height
- Maximum sensing range
- Interface (number and type of inputs and outputs)
- Size of the smallest object in the application

Once you have selected the desired MLG-2, the configuration interface/wizard starts up.



#### NOTE

If you configure a device offline, you must then connect the PC to the MLG-2 and download the MLG-2 configuration.

---

## 8.2 SOPAS ET interface

At the top of the interface, you can change the MLG-2 type, the operating mode, and the user level.



Figure 71: Device selection, operating mode and user level

### Device selection

If you carry out the configuration offline (without a connected MLG-2), you can change the MLG-2 type via the button shown on the left.

If the MLG-2 is online, the type code of the MLG-2 will be displayed.

### Operating modes

The MLG-2 has the following operating modes:

- Standard  
For normal measuring tasks involving opaque objects (recommended for the majority of applications)
- Transparent  
For transparent objects, e.g., made of glass, PET, etc.
- Dust- and sunlight-resistant  
For applications when there is a large amount of dust in the environment or a high level of solar radiation



### NOTE

When the operating mode is changed, a new teach-in process must be performed.

The choice of operating mode affects the performance options.

### User level

The configuration is divided into two user levels.

The user level **EASY** shows only the parameters that are absolutely necessary and is a quick way of completing the task. This level is automatically activated when SOPAS ET starts up.

For experienced users or those with more complex requirements, the user level **EXPERT** allows you to configure all of the parameters.

Three-part interface

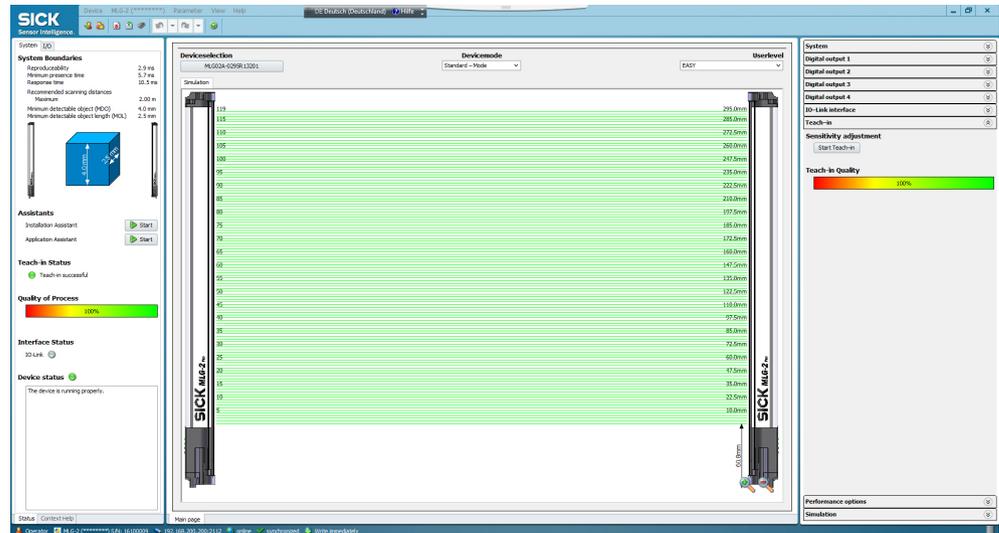


Figure 72: SOPAS ET interface

The **left-hand side** of the graphical interface provides information on the system boundaries, the status and the interfaces of the connected MLG-2.

The **central area** shows a simulation of the light grid and its beams.

The **right-hand side** of the interface lists the available options in expandable menus.

8.2.1 System boundaries and status

System boundaries

System boundaries

Reproduceability	0.7 ms
Minimum presence time	1.4 ms
Response time	3.6 ms
Max. recommended scanning distance	5.0 m
Minimum detectable object (MDO)	14 mm
Minimum detectable object length (MOL)	7 mm

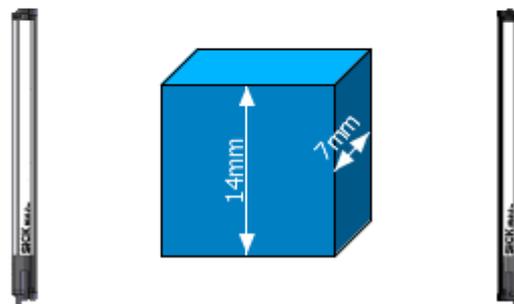


Figure 73: Display of the system boundaries

Under “System boundaries”, SOPAS ET displays the reproducibility, minimum presence time, and response time (see "Scan time", page 18).

SOPAS ET displays the maximum recommended sensing range with which the MLG-2 can be safely operated.

The minimum detectable object (MDO) and the minimum detectable object length (MOL) are specified in millimeters as well as shown graphically.

The system boundaries are largely dependent on the configured performance options (see "Performance options", page 134).

## Wizards

### Wizards



Figure 74: Wizards

You can start the Installation Wizard or Application Wizard under **Wizards**.

- The **Installation Wizard** helps you to align the MLG-2 and carry out the teach-in process.
- The **Application Wizard** helps you to configure the settings for the outputs. Only the necessary adjustments for the MLG-2 are offered, according to the choice of application.

### Recommendation

Use this wizard for the initial configuration of a device. The separate adjustments available in the main interface allow the user to make specific changes to the configuration.

### Teach-in status

If a teach-in becomes necessary because of a change to a parameter, the LED symbol will light red, indicating **teach-in required**.

### Process quality



Figure 75: Display of the process quality

SOPAS ET shows the process quality as a percentage and as a colored bar.

### Interface status

SOPAS ET displays the communication status via the respective interface.

- Green = communication active
- Gray = communication not active

### Device status

SOPAS ET displays the device status via a colored indicator and in the form of plain text:

- Green = MLG-2 functions reliably
- Yellow = warning pending
- Red = error has occurred

## 8.2.2 Basic functions and status of the output

### Basic functions

Under **Basic functions**, you will find the following information:

- The current values for the beam functions (see "Beam functions", page 147)
- The current values for the run-length code

System
E/A

### Basisfunktionen

NBB = 0 (Anzahl unterbrochener Strahlen)  
 NBM = 30 (Anzahl freier Strahlen)  
 FBB = n° - (Erster unterbrochener Strahl)  
 FBM = n° 1 (Erster freier Strahl)  
 LBB = - (Letzter unterbrochener Strahl)  
 LBM = 30 (Letzter freier Strahl)  
 NCBB = 0 (Anzahl zusammenhängender unterb. Strahlen)  
 NCBM = 30 (Anzahl zusammenhängender freier Strahlen)  
 CBB = n° - (Zentraler unterbrochener Strahl)  
 CBM = n° 15 (Zentraler freier Strahl)  
 ODI = 0 (Außenmaß)  
 IDI = 0 (Innenmaß)

RLC-Werte (Run Length Code)

RLC0	RLC1	RLC2	RLC3	RLC4	RLC5	RLC6	RLC7
30	0	0	0	0	0	0	0
RLC8	RLC9	RLC10	RLC11	RLC12	RLC13	RLC14	RLC15
0	0	0	0	0	0	0	0

### Status Ein- /Ausgänge

Q1 ● NBB ≥ 0

Figure 76: Basic functions and status of the output

### Status inputs/outputs

Under Status inputs/outputs, SOPAS ET shows the status of the switching output. Next to the indicator, you will find the function configured for the output.

## 8.2.3 Representation of the detection area

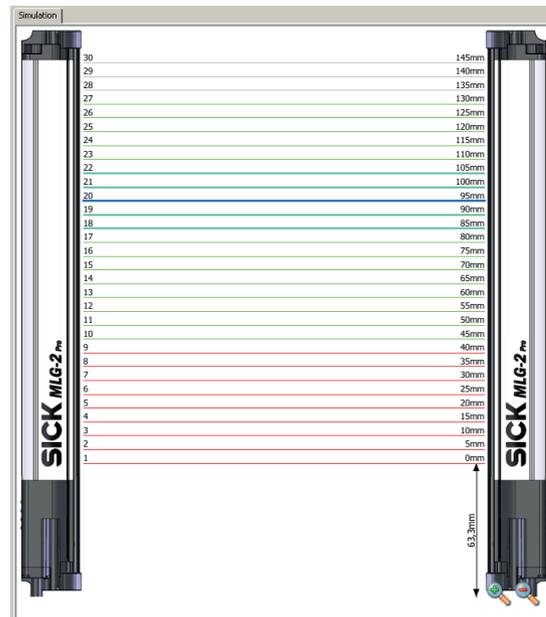


Figure 77: Detection area – Simulation

The **central** area of the SOPAS ET interface shows a simulation of the MLG-2 and its beams:

- Green = Made beams
- Red = Blocked beams
- Gray = Blanked beams
- Blue = Beams selected with the mouse
- Turquoise = Configured tolerance

You can use the context menu to perform certain actions with the selected beams.

**Context menu – Combining beams into zones**

- ▶ Select multiple consecutive beams.
- ▶ In the context menu, select the command **Combine to a zone > Zone X**.

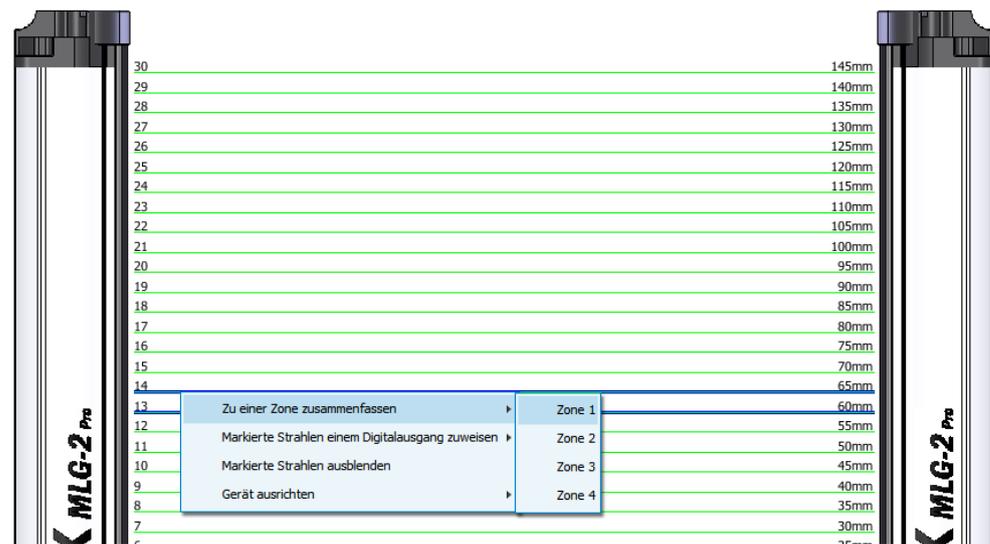


Figure 78: Combining beams into zones

First, configure a zone in the beam window. In the example, beams 13 and 14 are combined into one zone. Next, assign an application and a zone to the desired output (see ["Zone measuring" function](#), page 128).

**Context menu – Using beams for object recognition**

- ▶ Select several beams (by pressing the Ctrl key).
- ▶ In the context menu, select the command **Assign selected beams to a switching output > For object recognition > Use Qx**.

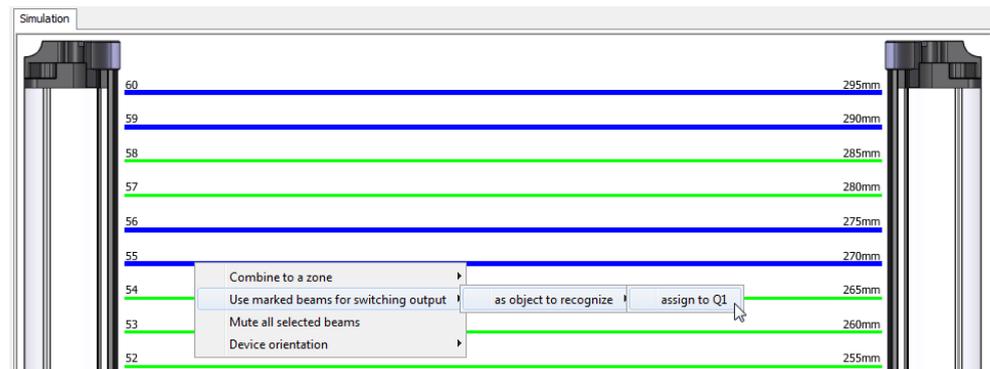


Figure 79: Using beams for object recognition

In the example, beams 10 and 11 and beams 14 and 15 are assigned to output Q1. If these beams are blocked, output Q1 switches. The object size may vary positively or negatively by the number of tolerance beams set (see "Object recognition", page 116).

**Context menu – Using beams for height classification**

- ▶ Select a beam.
- ▶ In the context menu, select the command **Assign selected beams to a switching output > As maximum height > Use Qx.**

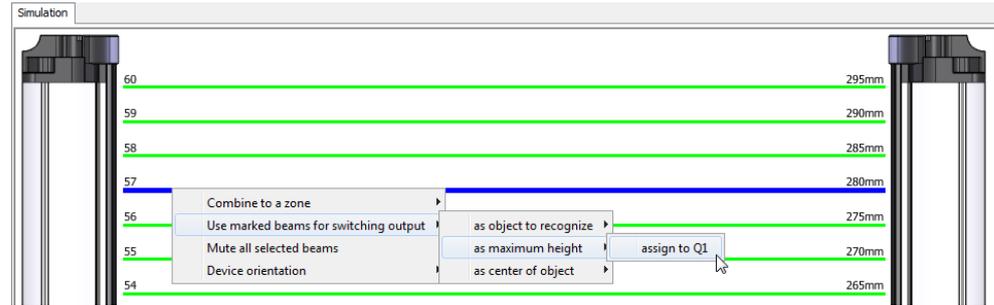


Figure 80: Using beams for height classification

In the example, beam 12 is assigned to output Q1. If the last beam blocked is greater than or equal to beam 12, output Q1 switches.

**Context menu – Using beams to classify the object position**

- ▶ Select a beam.
- ▶ In the context menu, select the command **Assign selected beams to a switching output > As center of object > Use Qx.**

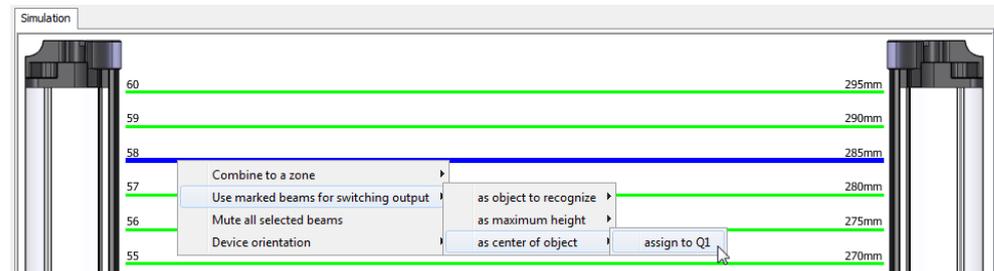


Figure 81: Using beams to classify the object position

In the example, beam 13 is assigned to output Q1. If beam 13 is detected as the center of the object (e.g., beams 12, 13, 14 or beams 11, 12, 13, 14, 15 are blocked), output Q1 switches.

**Context menu – Blanking beams**

- ▶ Select one or more beams (press the Ctrl key to select several beams).
- ▶ In the context menu, select the command **Blank all selected beams.**

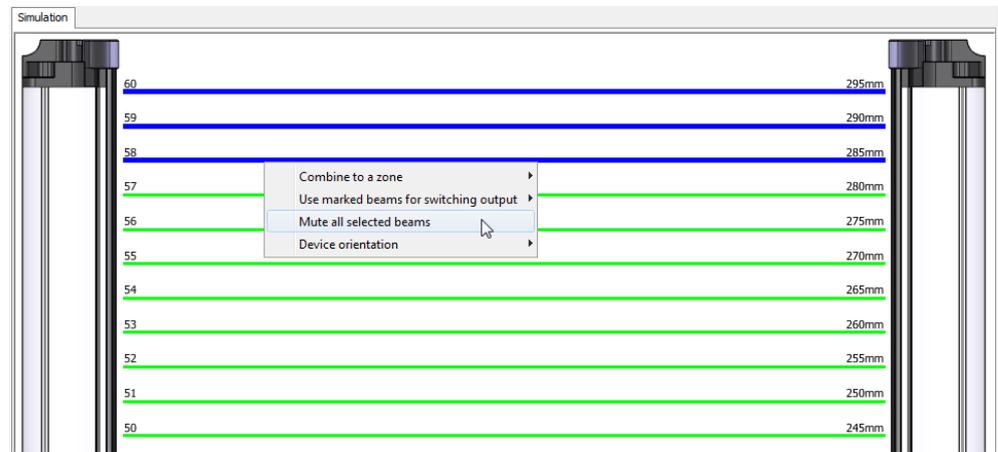


Figure 82: Blanking beams

In the example, beams 13, 14, and 15 are selected and blanked. They are shown in gray and excluded from the measurement.

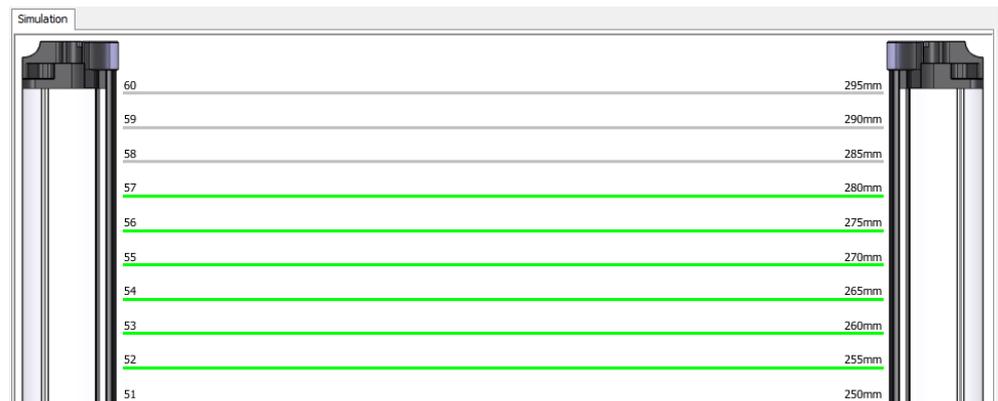


Figure 83: Blanked beams

### Context menu - Rotating the image of the MLG-2

The image of the MLG-2 can be adapted for particular applications.

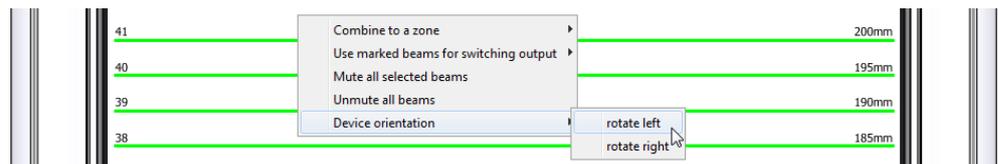


Figure 84: Rotating the image of the MLG-2

- In the context menu, select the command **Device orientation** > **rotate left** or > **rotate right**.

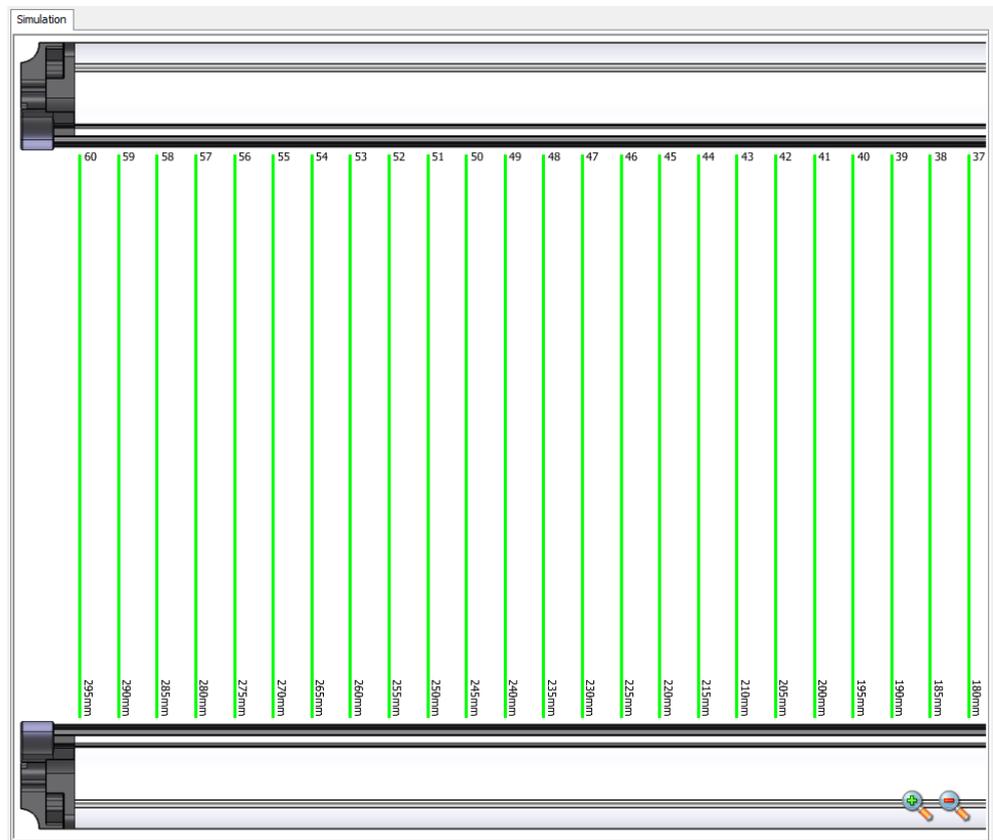


Figure 85: Image of the MLG-2 rotated

Repeat this process until you are happy with how the image appears.

### 8.2.4 Expandable menus

The expandable menus on the right-hand side help you to configure the MLG-2.



Figure 86: Expandable menus for configuration

- ▶ Click on the double arrow to open the expandable menu.
- ▶ To close the expandable menu, click the double arrow – which is now inverted – again.

### Configuring the outputs

When the MLG-2 is online, the configuration of the outputs is written to the device and transferred immediately to the status indicator for the outputs. You will see the response of the outputs immediately in the status indicator.

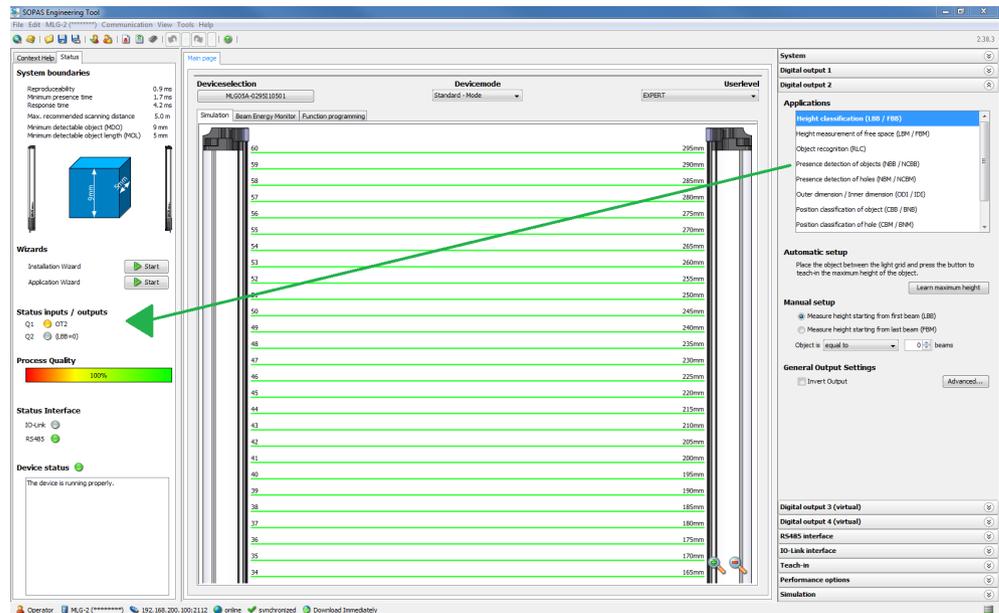


Figure 87: Effect of the output configuration on the status indicator

### Configuring the performance options

When the MLG-2 is online, the performance options are written to the device and displayed immediately in the system boundaries (it may be necessary to perform a teach-in process after changing the performance options).

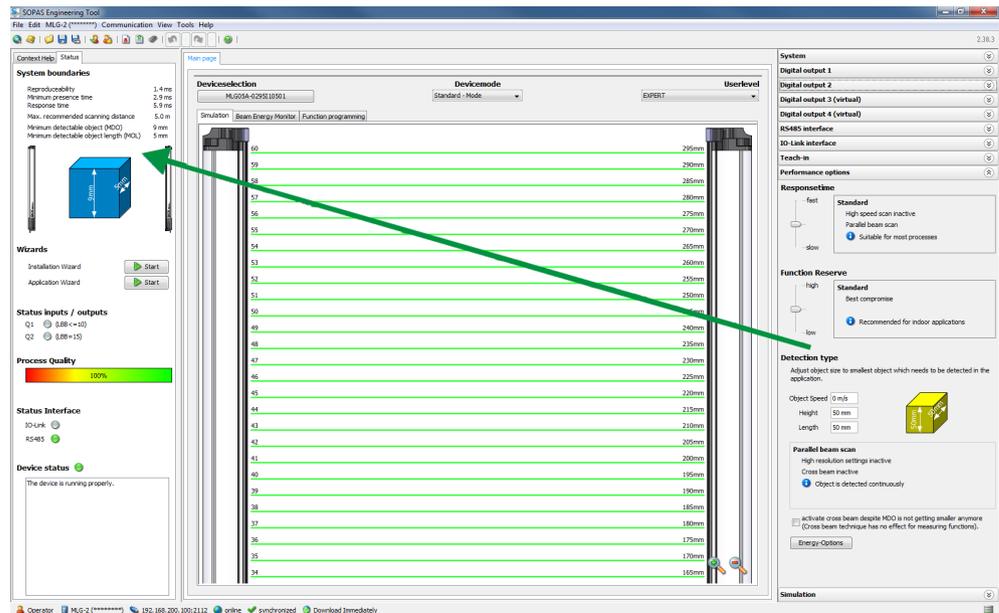


Figure 88: Effects of the performance options on the system boundaries

## 8.3 System settings

### 8.3.1 System settings for the user levels EASY and EXPERT

#### Identification

The **Identification** area contains the following information:

- Type code
- Optional: Current type code  
This field is only displayed when the current system constellation is different from the original one delivered.  
The MLG-2 consists of a receiver, fieldbus module and sender. These components are defined by the type code in the receiver. If a different field bus module or/and another sender is being used, the type code resulting from this is shown as the **current type code**.
- Part number
- Manufacturer
- Serial number
- Individual device name  
You can enter a description of the MLG-2's application or usage here.

#### Version

The **Version** area contains the following information:

- Hardware version
- Software version
- Fieldbus module hardware version
- Fieldbus module software version

#### Pushbutton lock

You can use the pushbutton lock to set two options for the teach-in button on the device:

- Released: A teach-in process can be triggered using the button.
- Locked: The teach-in button is locked to prevent inadvertent actuation, for example.

### 8.3.2 System settings for the EXPERT user level

#### I/O configuration

I/O configuration		
I/O No.	Pin No.	Pin configuration
1	4	OUTPUT
2	6	INPUT

Figure 89: I/O configuration

You can view the MLG-2's output and the pin on the connection in this figure.

#### Beam numbering

On delivery, beam 1 is located on the connection side of the MLG-2. You can choose to configure the MLG-2 so that the beam numbering begins at the top.

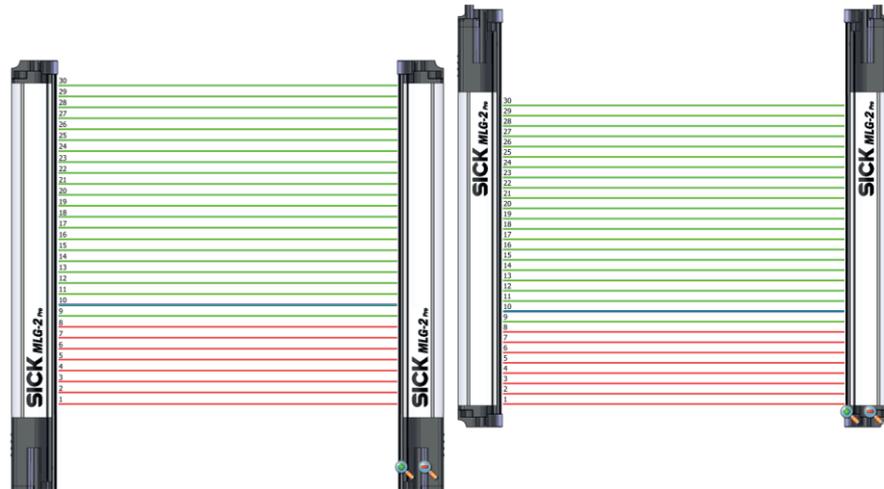


Figure 90: Beam numbering

This might be a good idea, for example, if you mount the MLG-2 with the connections facing upward, but still want to measure height classification from the bottom.



#### NOTE

Beam numbering has consequences for the beam functions FBB, FBM, LBB, LBM, CBB, CBM, RLC, and on the beam status.



#### NOTE

This affects measuring functions that have already been configured. In the example, a height classification is configured with the 10th beam (blue).

### Pushbutton lock

You can use the pushbutton lock to set two options for the teach-in button on the device:

- Released: A teach-in process can be triggered using the button.
- Locked: The teach-in button is locked to prevent inadvertent actuation, for example.

### Reset

You have the option to reset the MLG-2 to the factory settings.

**If you reset to factory settings, you will lose all data that has already been configured.**



#### NOTE

- The factory settings are restored as soon as 1 is written.
- The MLG-2 will be reset too. Therefore, the control reports, where necessary, an error that the MLG-2 is no longer available.
- The following applies after resetting to factory settings:
  - No process data such as beam functions or beam status is output.
  - The alignment aid is active.
  - A teach-in is required. All functions become available again only after a successful teach-in process.

The **Reset** command sets the MLG-2 back to the **factory settings**.

## Ethernet

In the **Ethernet** area, you make communication interface TCP/IP settings for SOPAS ET or the integrated web server.

First of all, select the **DHCP** or **Static** option from the **Addressing mode** field.

With the **Static** addressing mode, you can change the **IP address**, the **subnet mask**, and the **gateway address**. The **MAC address** is also displayed.



### NOTE

Only make changes if you know your network very well and you know what effect the changes will have on the settings!

## 8.4 Measuring and diagnostic functions for switching outputs

A measuring or diagnostic function can be configured for each switching output on the MLG2. If the criteria configured for the function are met, this is signaled on the relevant output.

All measuring functions can be configured manually. The configurable details are shown for the selected measuring function.

For the **height classification** and **object recognition** measuring functions, objects that are actually in the detection area can be defined automatically.

The measuring functions that have been set are shown graphically in the Simulation area and can be edited here using the mouse.

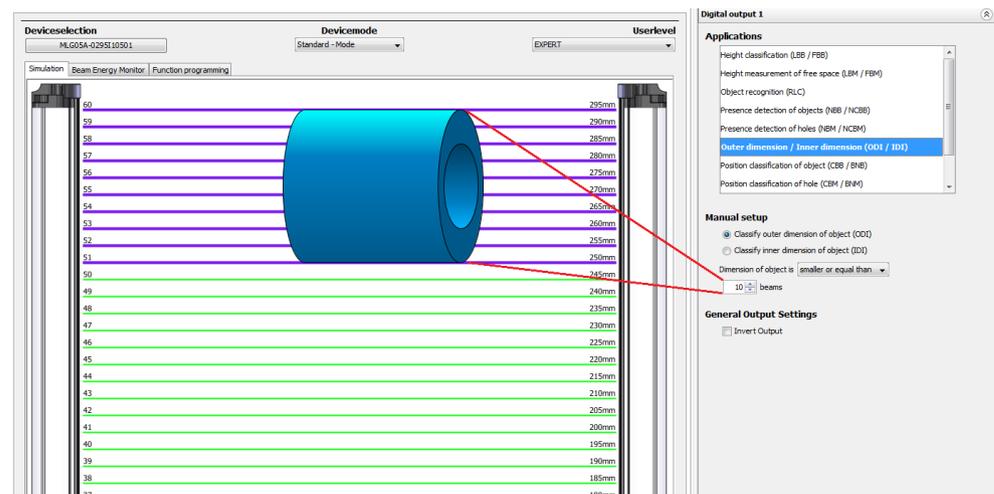


Figure 91: Example representation of the outer dimension

The results of the measuring functions are shown on the status display for the outputs (see "Basic functions and status of the output", page 105).



### NOTE

The configuration of the switching outputs is linked to the function programming option (only visible in the **EXPERT** user level). Settings made when configuring the outputs are also shown in the function programming option. If very complex configurations are created for an output in the function programming option, these can no longer be changed in the configuration of the switching outputs.

### 8.4.1 Height classification

A switching output switches when the measured object corresponds to the configured or defined height.

#### Automatic configuration

SOPAS ET can teach in the maximum object height automatically.

The output becomes active when an object is larger than the defined object. The device checks, therefore, whether an object exceeds a certain height.

- ▶ Place or hang the object in the detection area of the MLG-2.
- ▶ Click **Teach-in maximum height**.  
The measurement is taken from the top or bottom automatically, depending on the alignment of the object.  
The algorithm first checks whether the first or last beam is blocked:
  - If the first beam is blocked, the height is measured from the bottom.<sup>5)</sup>
  - If the last beam is blocked, the height is measured from the top.<sup>5)</sup>
 If both the first and last beams are made or blocked, the optical center of gravity is determined.
  - If more beams are blocked on the side of the first beam, the height is measured from the bottom.
  - If more beams are blocked on the side of the last beam, the height is measured from the top.



#### NOTE

Blocked beams are shown in the simulation in red and made beams are shown in green. The automatically defined object height can be further adjusted afterward.

#### Manual configuration

- ▶ Select the beam from which the height is to be measured:
  - Height measured from last beam
  - Height measured from first beam
- ▶ Select one of the following settings for the height classification and enter the number of beams  $n$ :



Figure 92: Settings for height classification

- $\geq$  Object is larger than or equal to  $n$  beams:

<sup>5)</sup> Applies when light grid is mounted upright with the connection side facing down and beam numbering beginning on the connection side (factory setting).

The output becomes active when an object covers the beam defined as the top beam or reaches beyond this beam.

- **≤ Object is smaller than or equal to n beams:**  
The output becomes active when an object covers the beam defined as the top beam or falls short of this beam.
- **= Object is equal to n beams:**  
The output becomes active when an object is the exact same size as the beam defined as the top beam.

The beam that has been set is shown in blue in the **Simulation** area. It can be moved using the mouse.

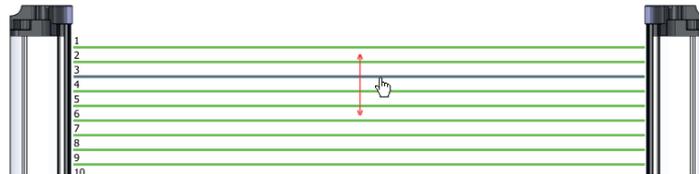


Figure 93: Setting the height with the mouse

### Zone selection

For additional information, see "[Zone measuring function](#)", page 128 .

### Output settings

General options for switching outputs see "[Advanced settings for the outputs](#)", page 127.

## 8.4.2 Object recognition

The MLG-2 memorizes the pattern of configured or defined objects. The output switches when the MLG-2 recognizes objects or gaps with the configured size.



### NOTE

The maximum number of beam status changes may not exceed the half number of beams, but at least 16 and a maximum of 120.

### Defining an object automatically

You can define the object to be detected automatically.

- ▶ Place the object(s) in the detection area of the MLG-2.
- ▶ Then click **Teach-in object**.

The size of the objects and the size of the gaps between the objects are shown in the simulation. The sizes can be further adjusted afterward.

### Manual configuration

In the simulation, you can determine the size of the object(s) by selecting corresponding beams.



Figure 94: Beams highlighted in color in the simulation

The blue beams in the Simulation area represent the object; the beams shown in turquoise are the tolerance.

**Settings for automatic and manual configuration**

► Select one of the following settings for object recognition:

• **Static**

An object will be recognized if it is in the exact location in which the object was configured or automatically defined. This also applies to multiple objects, e.g., the feet of a pallet.

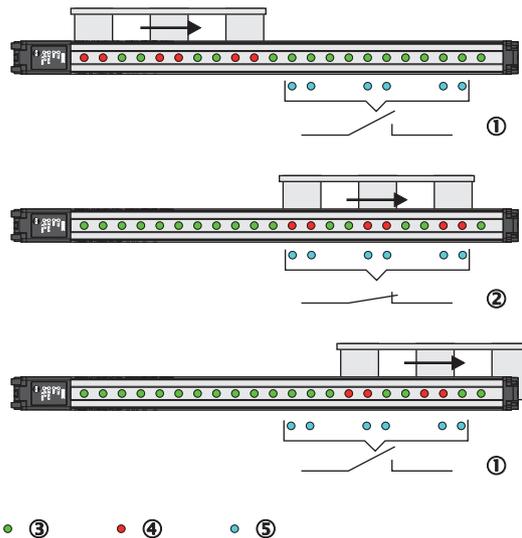


Figure 95: Object recognition, static

- ① Output not switched
- ② Output switched
- ③ Made beam
- ④ Blocked beam
- ⑤ Configured beam

- Dynamic**  
 An object will be recognized at every point in the detection area. The object is allowed to move within the detection area. This also applies to multiple objects, e.g., the feet of a pallet.

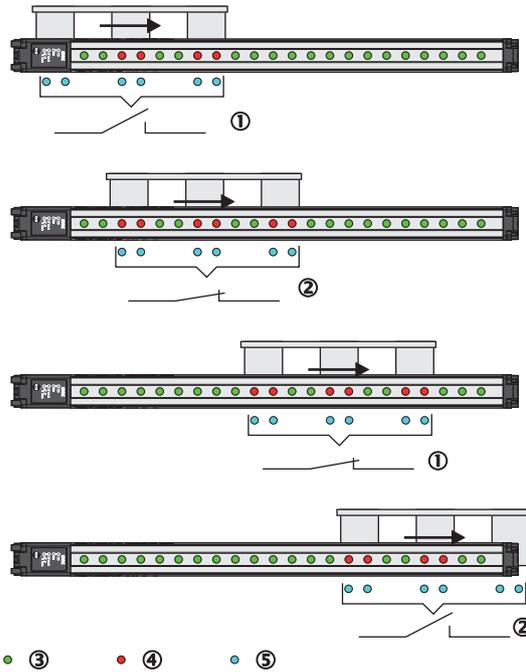


Figure 96: Object recognition, dynamic

- ① Output not switched
- ② Output switched
- ③ Made beam
- ④ Blocked beam
- ⑤ Configured beam

- Tolerance**  
 Without a tolerance, objects will only be recognized if they block exactly the configured number of beams. If you enter a tolerance, the object size can vary positively or negatively by the number of tolerance beams.

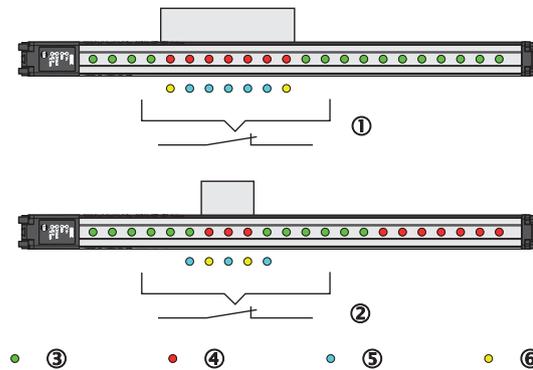


Figure 97: Object recognition with tolerance

- ① Positive tolerance
- ② Negative tolerance
- ③ Made beam
- ④ Blocked beam

- ⑤ Configured beam
- ⑥ Tolerated beams

When a tolerance is set, it is shown in the simulation with turquoise beams.

### Output settings

General options for switching outputs see "Advanced settings for the outputs", page 127.

## 8.4.3 Object detection/object width

A switching output switches when an object of a particular size is present in the detection area.

A corresponding setting is configured which requires a certain number of beams or a certain number of **consecutive** beams to be blocked.

The number of beams is configured in the settings or configured graphically in the **Simulation** area using the mouse.

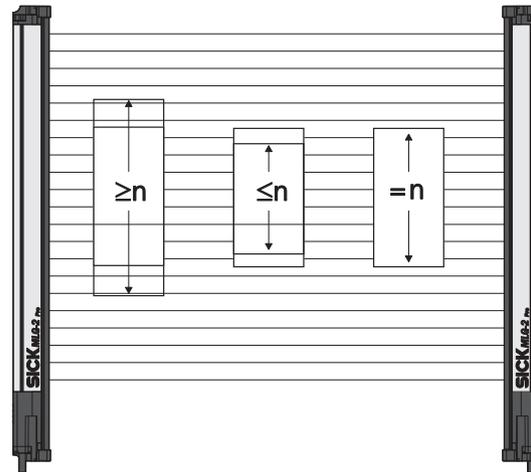


Figure 98: Object detection/object width

- ▶ Select one of the following  $n$  settings for the object detection/object width and enter the number of  $n$  beams:
  - **$\geq n$  object is larger than or equal to  $n$  beams:**  
The output becomes active when the configured number of beams or more has been blocked.
  - **$\leq n$  object is smaller than or equal to  $n$  beams:**  
The output becomes active when the configured number of beams or less has been blocked.
  - **$= n$  object is equal to  $n$  beams:**  
The output becomes active if the exact number of configured beams is blocked.

The object size that has been set is shown in the **Simulation** area. It can be changed using the mouse.



Figure 99: Setting the object size with the mouse

Only take into account consecutive beams:

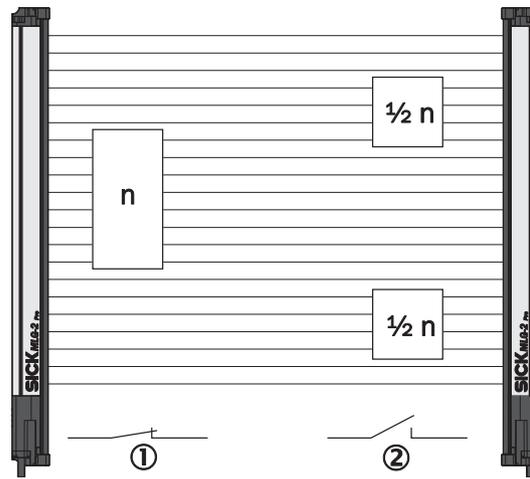


Figure 100: Object detection of consecutive objects

- ① Criterion met
- ② Criterion not met

The output becomes active when consecutive beams are covered. If this option is not activated, the number of blocked beams can also be made up of several objects or objects with gaps.

**Zone selection**

For additional information, see "[Zone measuring" function](#)", page 128 .

**Output settings**

General options for switching outputs see "[Advanced settings for the outputs](#)", page 127.

**8.4.4 Hole detection/hole size**

A switching output switches when an object with a hole of a particular size is present in the detection area.

A corresponding setting is configured which requires a certain number of beams or a certain number of **consecutive** beams to be made.

The number of beams is configured in the settings.

The measuring function can be used for **hole detection**, e.g., in a metal sheet, by configuring a number of made beams  $\geq 1$

- ▶ Select one of the following settings for the hole detection and enter the number of n beams:

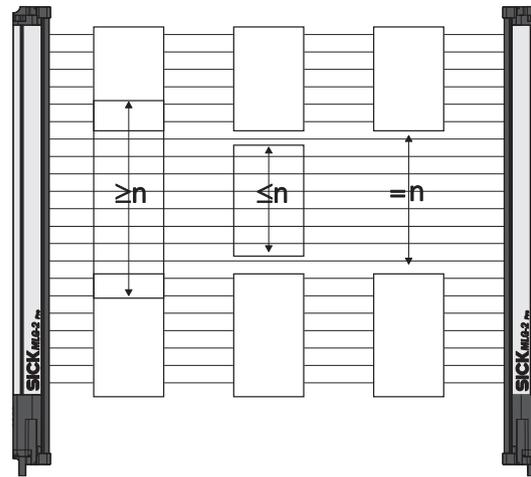


Figure 101: Hole detection/hole size

- $\geq n$  hole is larger than or equal to n beams:  
The output becomes active when the configured number of beams or more are made.
- $\leq n$  hole is smaller than or equal to n beams:  
The output becomes active when the configured number of beams or fewer are made.
- $= n$  hole is equal to n beams:  
The output becomes active if the exact number of configured beams are made.

The hole size that has been set is shown in the **Simulation** area. It can be changed using the mouse.



Figure 102: Setting the hole size with the mouse

Only take into account consecutive beams:

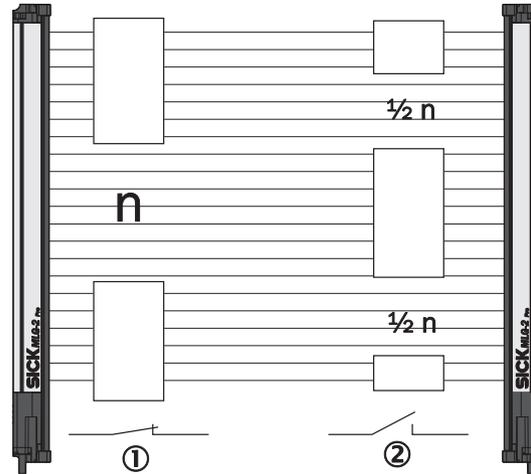


Figure 103: Detection of consecutive beams

- ① Criterion met
- ② Criterion not met

The output becomes active when the beams are made through a single hole. If this option is not activated, the number of made beams can also be made up of several gaps.

**Output settings**

General options for switching outputs see ["Advanced settings for the outputs", page 127.](#)

**8.4.5 Outside/inside dimension**

A switching output switches when an object with a particular outside or inside dimension is detected.



**NOTE**

If there are several objects in the detection area, the largest object determines the measured value.

The following settings are possible for measuring the outside or inside dimension:

- Configure whether you want to measure the **outside dimension** or **inside dimension**.

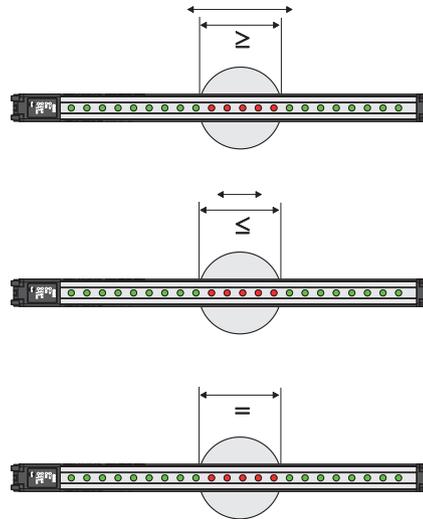


Figure 104: Measurement of the outside dimension

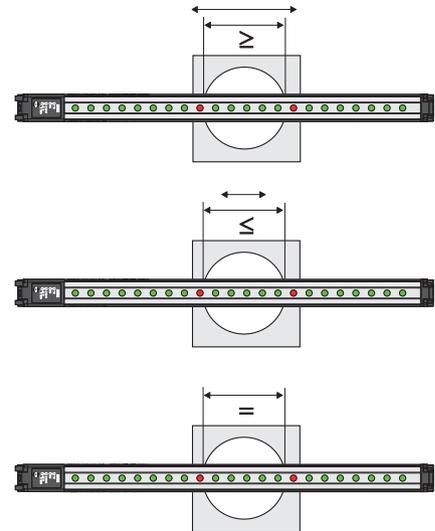


Figure 105: Measurement of the inside dimension

- ▶ Select one of the following settings:
  - **$\geq$  Object diameter is greater than or equal to n beams:**  
The output becomes active if the configured number of beams or more were blocked/made.
  - **$\leq$  Object diameter is less than or equal to n beams:**  
The output becomes active if the configured number of beams or less were blocked/made.
  - **$=$  Object dimension is equal to n beams:**  
The output becomes active if precisely the configured number of beams was blocked/made.

A particular number of beams is configured for the outside or inside dimension in the settings. The object size is shown in the **Simulation** area and can be changed here using the mouse.

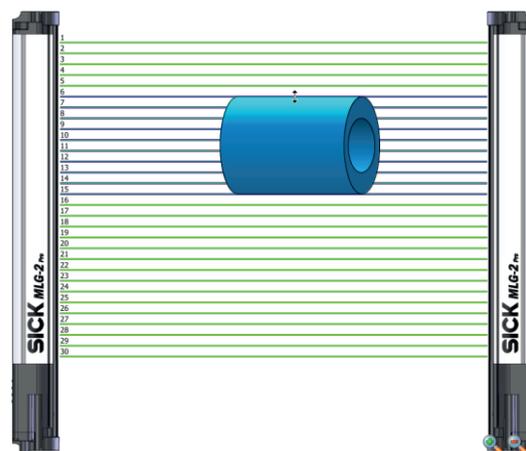


Figure 106: Setting the outside dimension with the mouse

### Output settings

General options for switching outputs see ["Advanced settings for the outputs"](#), page 127.

8.4.6 Classification of an object position

A switching output switches when the center of an object is located exactly on the beam configured as the position.



**NOTE**

If there are several objects in the detection area, the central beam of the largest object determines the object position.

A particular beam is configured for the classification of the object position in the settings.

► Select one of the following settings:

- The object center is greater than or equal to the position of beam number n.

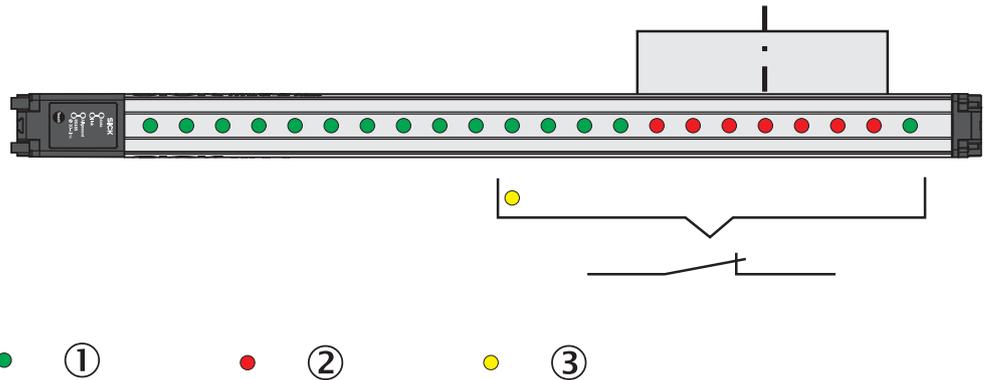


Figure 107: Classification of the object position – object center is greater than or equal to n beam

- ① Made beam
- ② Blocked beam
- ③ Configured beam

- The object center is less than or equal to the position of beam number n.

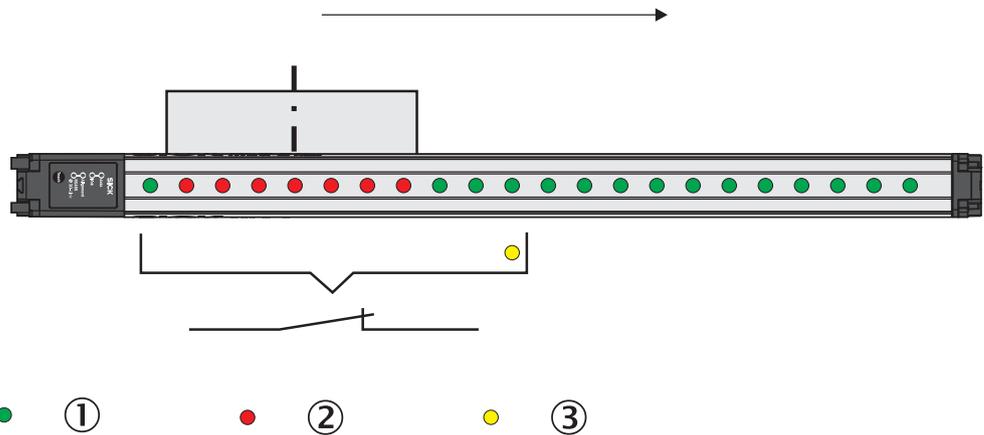


Figure 108: Classification of the object position – object center is smaller than or equal to n beam

- ① Made beam
- ② Blocked beam
- ③ Configured beam

- The object center is equal to the position of beam number n.

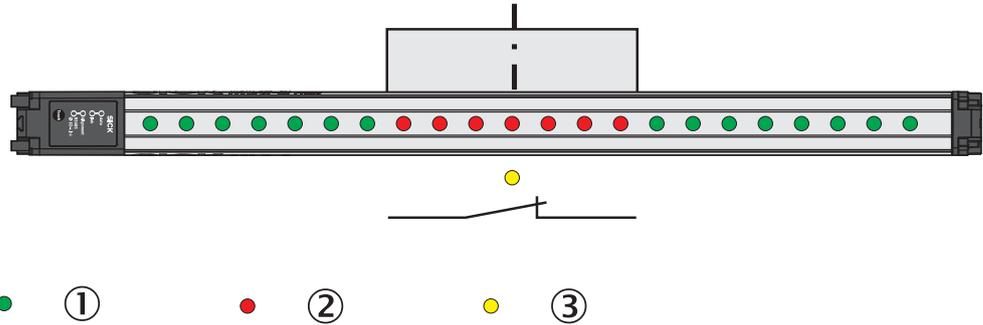


Figure 109: Classification of the object position – object center is equal to n beam

- ① Made beam
- ② Blocked beam
- ③ Configured beam

General options for switching outputs see "Advanced settings for the outputs", page 127.

The object position that has been set is shown in the **Simulation** area. It can be changed using the mouse.

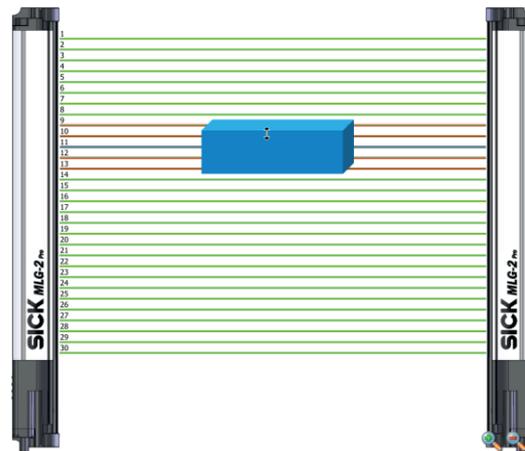


Figure 110: Setting the object position with the mouse

**Zone selection**

For additional information, see "“Zone measuring” function", page 128 .

**8.4.7 Classification of a hole position**

A switching output switches when the center of a hole is located on the beam configured as the hole position.



**NOTE**

If there are several holes in the detection area, the central beam of the largest hole determines the hole position.

A particular beam is configured for the classification of a hole position in the settings.

- ▶ In addition, select one of the following settings:
  - **The hole center is greater than or equal to the position of beam number n.**  
The number of the beam located in the center of the hole is greater than or equal to the number of the configured beam.

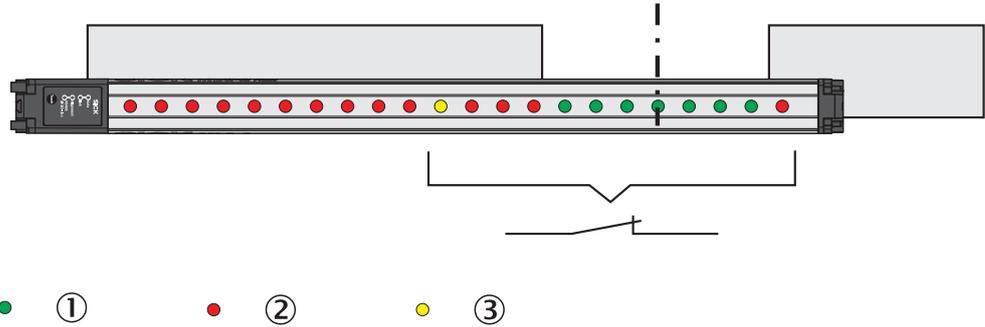


Figure 111: Classification of the hole position – larger than or equal to hole center

- ① Made beam
- ② Blocked beam
- ③ Configured beam

- **The hole center is smaller than or equal to the position of beam number n.**  
The number of the beam located in the center of the hole is smaller than or equal to the number of the configured beam.

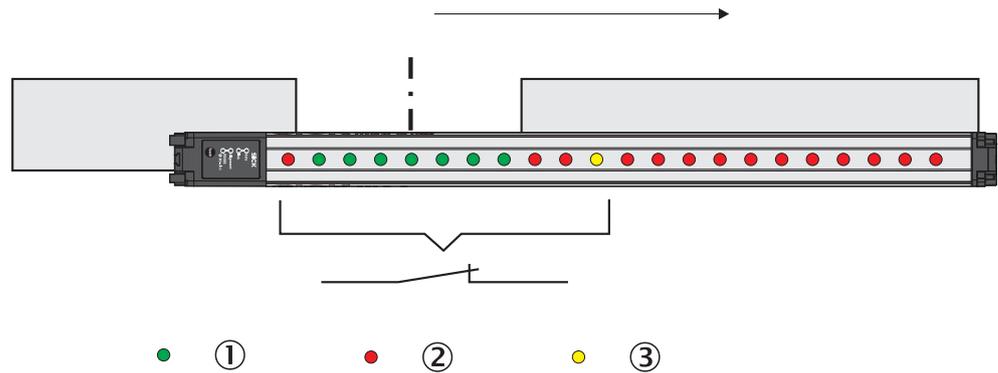


Figure 112: Classification of the hole position – smaller than or equal to hole center

- ① Made beam
- ② Blocked beam
- ③ Configured beam

- **The hole center is equal to the position of beam number n.**  
The center of the hole is located exactly at the configured beam.

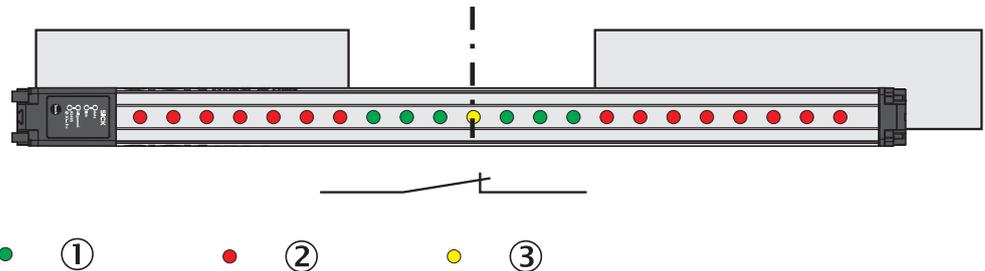


Figure 113: Classification of the hole position – equal to hole center

- ① Made beam
- ② Blocked beam
- ③ Configured beam

The hole position that has been set is shown in the **Simulation** area. It can be changed using the mouse.

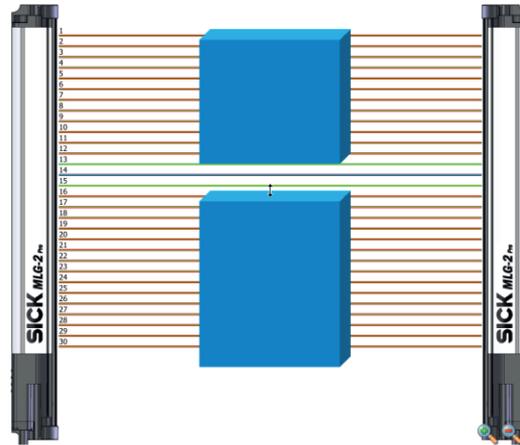


Figure 114: Setting the hole position with the mouse

### Output settings

General options for switching outputs see "[Advanced settings for the outputs](#)", page 127.

## 8.4.8 Diagnostics

As well as measuring functions, diagnostic functions can also be assigned to the outputs. Depending on the configuration, the output will respond when certain faults occur or when the teach-in quality or process quality fall below a configured percentage.

### Diagnostic settings

- **Activate Qn in the event of the following error messages:**
  - **Contamination**  
The output is activated when a contamination warning occurs.
  - **Electrical short-circuit**  
The output is activated when a short-circuit occurs in the wiring.
  - **Teach-in error**  
The output is activated when an error occurs during the teach-in process.
  - **Hardware error**  
The output is activated when an error occurs with the hardware. Possible cause: LED defective, receiver element defective, etc.
  - **Synchronization error**  
Output is activated when there is an error in the connection to the server.
- **Activate Qn if the teach-in quality is under ... %**  
The output is activated when the teach-in quality falls below a certain percentage (see "[Teach-in](#)", page 17).  
You can define the percentage in increments of 1%.
- **Activate Qn if the process quality is under ... %**  
The output is activated when the process quality falls below a certain percentage (see "[Teach-in](#)", page 17).  
You can define the percentage in increments of 1%.

### Output settings

General options for switching outputs see "[Advanced settings for the outputs](#)", page 127.

## 8.4.9 Advanced settings for the outputs

For switching outputs, you can select the option **Invert output**.

At the EXPERT user level, you can also enter a **minimum pulse width** for the output signal in ms.

Very fast or small objects trigger a short output signal. Under some circumstances, these may not be detected by slow controls. Via the minimum pulse width, you can set a pulse width that your control will detect.

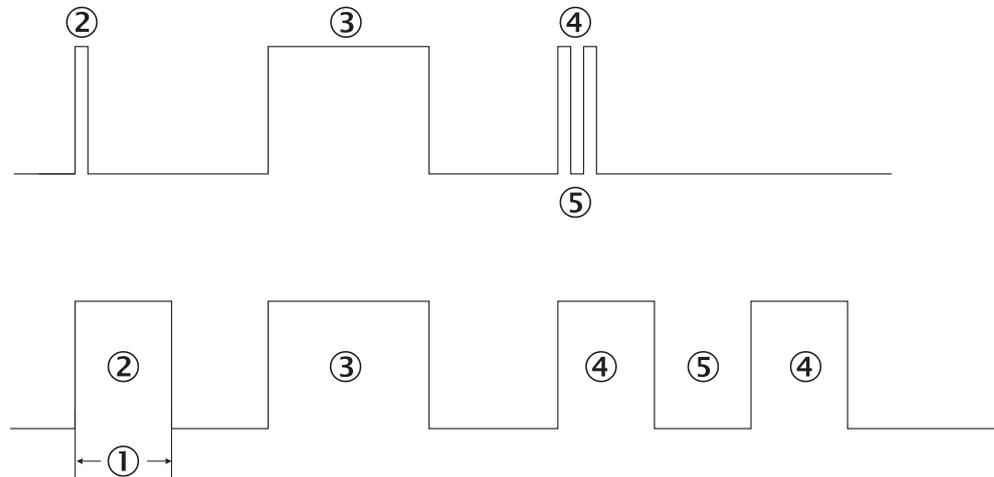


Figure 115: Examples of the effect of a configured minimum pulse width

- ① Minimum pulse width
- ② A pulse that is too short is extended.
- ③ A long output pulse remains unchanged.
- ④ Two short output pulses are extended.
- ⑤ The break also corresponds to the minimum pulse width (1).

### Activating the output (only at the EXPERT user level)

At the EXPERT user level, you can also configure a setting so that an output only changes its status when a particular input is activated. This method can be used to switch the measuring function on or off.

- ▶ Click **Advanced...**
- ▶ Activate the option **Use input to activate or deactivate output**.
- ▶ Select which input is to be used.
- ▶ You should also configure whether the input is to be **high active** or **low active**.



#### NOTE

This function is only available if the inputs have not been configured for other functions (see "System settings for the EXPERT user level", page 112).

## 8.5 Zones

### 8.5.1 "Zone measuring" function

#### Prerequisites

- "Expert" user level

#### Description of operation

The beams of the MLG-2 can be divided into four zones. Each zone can be assigned one beam function or application. Zones and beam functions are assigned using the outputs. The functions NBB Zone n, LBB Zone n, FBB Zone n, CBB Zone n and NCBB Zone n are available for each zone (n = 1, 2, 3 or 4).

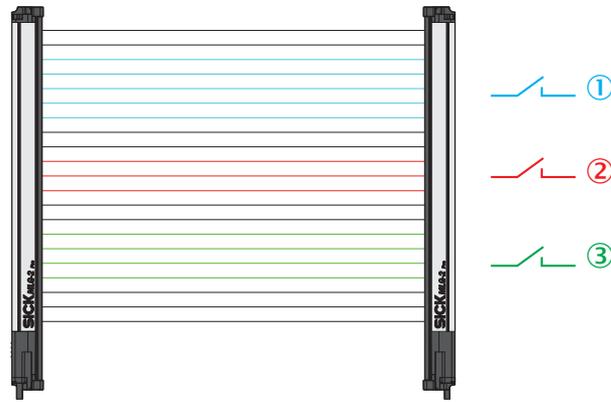


Figure 116: Measuring within zones

- ① e.g. Zone 1 (NBB Zone 1, LBB Zone 1, FBB Zone 1, CBB Zone 1 or NCBB Zone 1)
- ② e.g. Zone 2 (NBB Zone 2, LBB Zone 2, FBB Zone 2, CBB Zone 2 or NCBB Zone 2)
- ③ e.g. Zone 3 (NBB Zone 3, LBB Zone 3, FBB Zone 3, CBB Zone 3 or NCBB Zone 3)

**Configuring the “Zone measuring” function using SOPAS ET**

Example: You would like to assign Zone 1 and the application “Object detection/Object width (NBB/NCBB)” to digital output 1.

First, configure one or more zones. Next, assign an application and a zone to the desired output. You can configure the zones either in the beam window or via the **Zones** expandable menu.

**Configuring zones in the beam window**

- ▶ Click the **Zones** expandable menu.
- ▶ In the middle section of SOPAS ET (beam window), mark the beams that you would like to combine into a zone.
- ▶ Using **Combine to a zone** from the context menu, select the zone that the beams will be assigned to – in this case **Zone 1**.

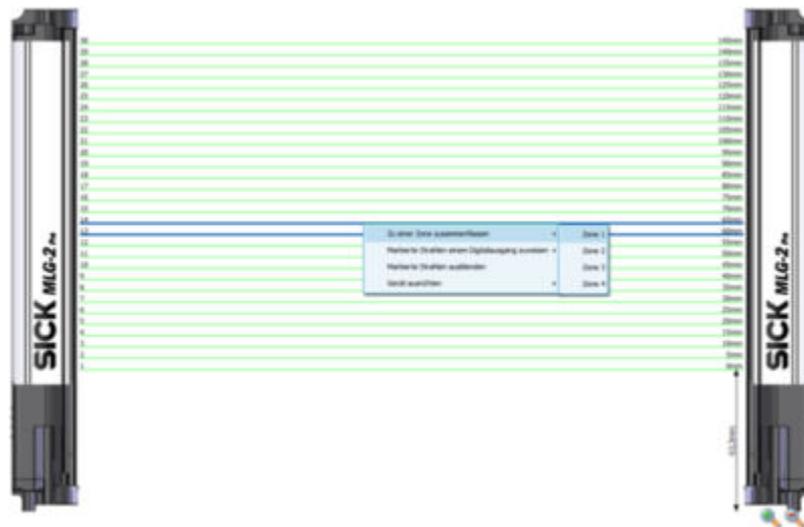


Figure 117: SOPAS ET beam window – Combining beams into zones

- ✓ The configured zones are indicated in the **Zones** expandable menu.

**Configuring Zones in the expandable menu**

- ▶ Click the **Zones** expandable menu.
- ▶ In the **Zone selection** area, define the “Zone no.,” “First beam” and “Last beam” for the zone.

Zone Nr.	Erster St...	Letzter S...
1	30	30
2	19	19
3	9	9
4	4	4

- ▶ Activate the zone you wish to assign to an output.

Configuring an output

- ▶ Click the **Digital output 1** expandable menu, for example.

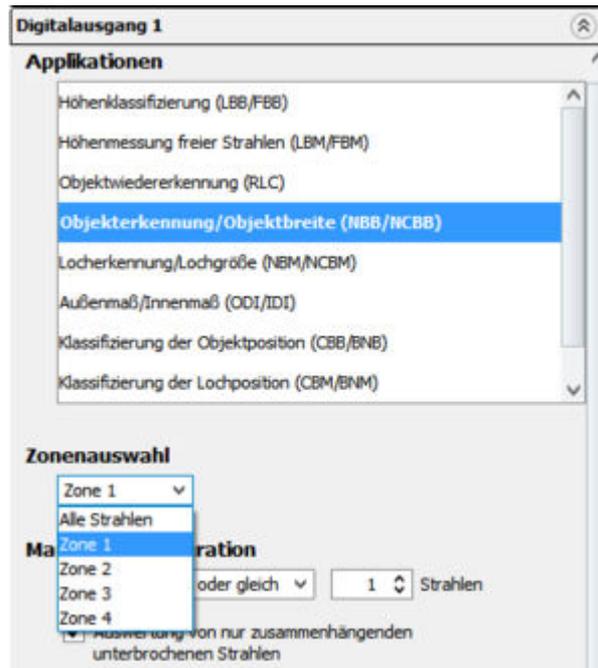


Figure 118: SOPAS ET – Assigning an application and zone to an output

- ▶ In the **Applications** area, select an application such as **Object detection/Object width (NBB/NCBB)**.
- ▶ Using the drop-down list from the **Zone selection** area, select the zone that the application will apply to – in this case **Zone 1**.
- ✓ The configured basic function (beam function) and the related status are displayed in the **Basic functions** area of the **I/O** tab in the left-hand window, e.g., **NBB Zone 1 = 0** (number of blocked beams in Zone 1).

## 8.6 Address configuration for Ethernet/IP™

In the **Addressing Mode** field, select the form the addressing will take:

- Dynamic (via DHCP server)
- Static

With static addressing, you can change the **IP address**, the **subnet mask**, and the **gateway address**.

The **MAC address** of the MLG-2 is also displayed.

Address configuration	
Addressing mode	Static
IP Address	192 . 168 . 0 . 50
Sub Net	255 . 255 . 255 . 0
Gateway	0 . 0 . 0 . 0
Mac Address	00 : 06 : 77 : 00 : 00 : 01

Figure 1.19: Address configuration for Ethernet/IP™

- ▶ Click **Apply** after making any change.
- ✓ The new address configuration is adopted for the fieldbus configuration. The MLG-2 then restarts. Existing bus connections or connections with SOPAS ET are interrupted briefly.



#### NOTE

Only make changes if you know your network very well and you know what effect the changes will have on the settings!

## 8.7 Cloning (only at the EXPERT user level)

The fieldbus module has a cloning store where the parameter set can be saved.

### Status of stored cloning

Under **Status of stored cloning**, you can view status options for the storage.

The cloning status shows the status of the stored parameters in the fieldbus module

- **LOCKED:** Uploading and downloading not possible.
- **EMPTY:** No valid set of parameters available. Uploading parameters is the only option.
- **VALID:** A valid set of parameters is available in the fieldbus module. Parameters can be uploaded or downloaded.
- **ACTIVE:** An upload or download is currently active.

### Saving parameters in the fieldbus module

- ▶ Click **Upload**.

The “Cloning upload” function writes the parameter set configured to the fieldbus module. Following device replacement, the parameters can be loaded back into the light grid from the fieldbus module using the “Cloning download” function.

### Loading parameters from the fieldbus module

- ▶ Click **Download**.



#### NOTE

The MLG-2 restarts after the download. Existing bus connections or connections with SOPAS ET are interrupted briefly.

Any initial configurations for starting up the MLG-2 which have been set in the control overwrite the values that the cloning download has restored.

## 8.8 Teach-in

During the teach-in process, the switching thresholds for all beams are individually adjusted for the sensing range and the ambient conditions.

A teach-in process must be carried out when commissioning, when changing operating mode or performance options, and at regular intervals in general.

- ▶ Click **Teach-in**.
- ✓ The teach-in process starts. If the teach-in process is successful, a corresponding message is displayed.

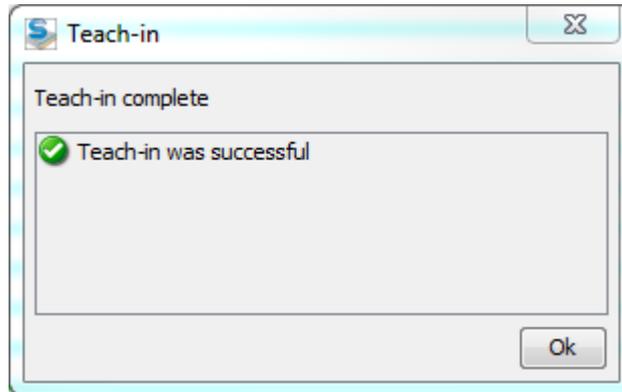


Figure 120: Teach-in successful

Similarly, if any errors occur, a corresponding message is displayed.

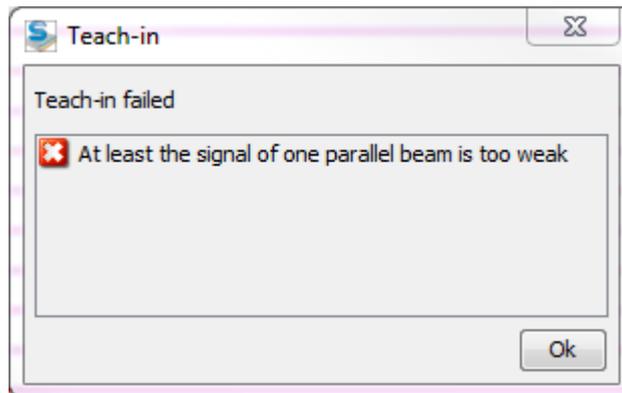


Figure 121: Teach-in failed

- ▶ Then check that the MLG-2 is correctly aligned, that the front screens are clean, and that there are no objects located in the light path.
- ▶ Then carry out the teach-in process again.

### Teach-in when switching on

If you activate the **Automatic teach-in when switching on device** option, the teach-in process will be performed every time you switch on the device.

### Teach-in quality



Figure 122: Teach-in quality

The teach-in quality indicates how successful the teach-in process has been. The MLG-2 calculates this value based on the quality of the light level received.

The value remains constant until another teach-in process is carried out.

**Beam blanking (only at the EXPERT user level)**

If you do not want to evaluate certain beams for your application, you can exclude them from the teach-in process.

**Blank blocked beams as follows:**

The beams from the MLG-2 that are **not** to be accounted for in the measurement must be blocked.

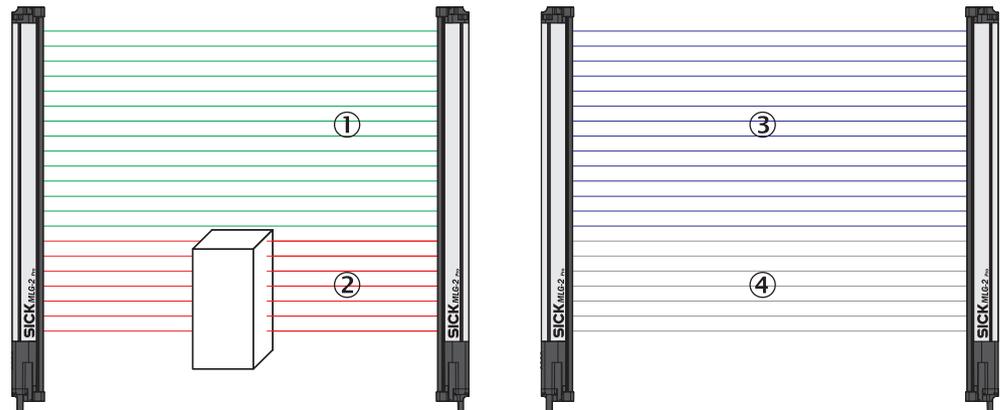


Figure 123: Example of the blanking of blocked beams

- ① Made beams
- ② Blocked beams
- ③ Beams included in the measurement
- ④ Excluded beams

- ▶ Click **Blank all blocked beams**.
- ✓ The blocked beams will not be taken into account in the measurement.
- ▶ Activate the **Activate beam blanking for every teach-in** option too.
- ✓ The blocked beams will be excluded from every teach-in process in the future.



**NOTE**

You will never be notified that beams are blocked during the teach-in process.

**Blank made beams as follows:**

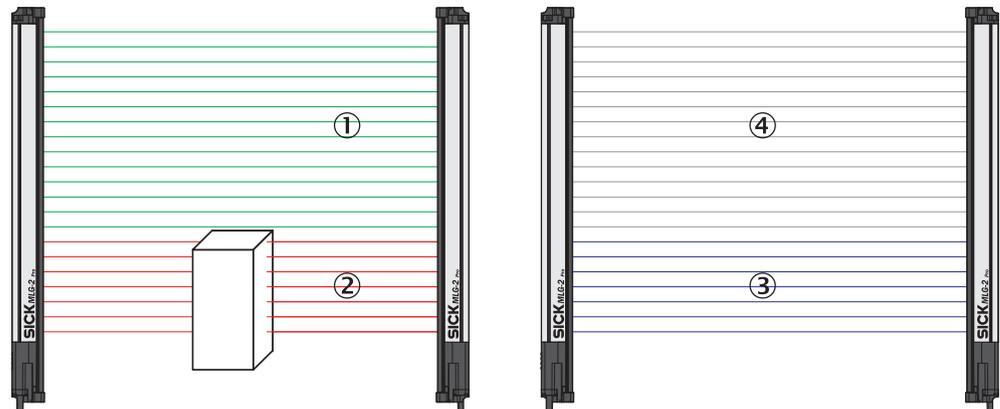


Figure 124: Example of blanking made beams

- ① Made beams
- ② Blocked beams

- ③ Beams included in the measurement
- ④ Excluded beams
- ▶ Click **Blank all made beams**.
- ✓ The made beams will not be taken into account in the measurement.
- ▶ Activate the **Activate beam blanking for every teach-in** option too.
- ✓ The made beams will be excluded from every teach-in process in the future.

## 8.9 Performance options

The performance options can be used to modify the response time, operating reserve, detection type, and (in Transparent operating mode), minimum detectable absorption of an object.

**Responsetime**

fast

—

—slow

**High speed**

High speed scan active

Cross beam inactive

i Recommended for high speed processes

**Function Reserve**

—high

—

—low

**Standard**

Best compromise

i Recommended for indoor applications

**Detection type**

Adjust object size to smallest object which needs to be detected in the application.

Object Speed

Height

Length



Figure 125: Performance options for Standard operating mode and Dust- and sunlight-resistant operating mode

**Responsetime**

– fast  
– slow

**Standard**

High speed scan inactive  
Parallel beam scan

**i** Suitable for most processes

**Minimum Detectable Absorption**

– 30%  
– 10%

**Approx. 15% signal attenuation**

AutoAdapt active

**i** Regular Teach-in recommended

**Detection type**

Adjust object size to smallest object which needs to be detected in the application.

Object Speed

Height

Length

50mm  
50mm  
50mm

Figure 126: Performance options for Transparent operating mode

You can change the response time, operating reserve, or minimum detectable absorption by moving the slider up or down.



#### NOTE

- The configurable performance options depend on the operating mode selected.
- The performance options are dependent on each other.
- A teach-in process must be performed after most changes. A button is provided in the performance options for this purpose.
- ▶ Click the button to perform the teach-in process and to apply the modified performance options.
- ✓ The system boundaries resulting from the performance options are displayed on the left in SOPAS ET (see "System boundaries and status", page 104).

#### Response time

The response time depends on the scan method and the beam function. A short response time requires a **high-speed scan** and the **parallel-beam function**.

- ▶ Select one of the following options:
  - **Fast** – High-speed scan and parallel-beam function are active
  - **Medium** – High-speed scan not active and parallel-beam function active

**NOTE**

- If **High-speed scan** is deactivated in the energy options, you cannot switch to **Fast**.
- Only **Medium** can be set in Transparent operating mode.
- If the cross beam function is activated via **Detection type**, the system switches to **Slow**.
- For MLG-2 with a 2 m sensing range, the high measurement accuracy function must be used for **High-speed scan**.

**Operating reserve**

The operating reserve affects how long the measurement can be performed correctly in the event of adverse ambient conditions or contamination.

- **High** – Highly resistant to contamination, risk of reflection with shiny objects
- **Medium** – Best compromise between reflection resistance and operating reserve
- **Low** – High measurement accuracy

**NOTE**

It is not possible to set an operating reserve in **Transparent** operating mode.

**Minimum detectable absorption of an object (only in Transparent operating mode)**

The minimum detectable absorption (MDA) of an object must be configured in **Transparent** operating mode. In order to detect a transparent object, it must absorb a certain percentage of the energy from the light beam.

The following options are available for configuring the minimum detectable absorption<sup>6)</sup>:

- Approx. 10% signal attenuation:  
clean PET bottles, clear glass, thin and clear films (e.g., cellophane), household plastic film, plastic wrapping
- Approx. 15% signal attenuation:  
clean clear glass bottles, thick films, film and wrapping folded multiple times
- Approx. 30% signal attenuation:  
green and brown glass, colored glass bottles

**NOTE**

The minimum detectable absorption that an object needs in order to be detected increases with the sensing range (see "[Minimum detectable absorption](#)", page 159).

**Detection type**

With the help of the mapped object, you can set the minimum detectable object size and minimum detectable object length, and enter the speed of the object through the detection area.

The object speed and size determine which scanning procedure is to be used.

- ▶ Enter the speed at which the object being detected will move through the detection area in the **Object speed** field.
- ▶ Enter the height of the smallest object to be detected in the **Height** field.
- ▶ Enter the length of the smallest object to be detected in the **Length** field.

The figure to the right of the fields shows the entered values in proportion.

<sup>6)</sup> Examples are for illustrative purposes only. The signal attenuation and the minimum detectable absorption to be configured must be determined for each individual application.



Figure 127: Illustration of the measuring object

### 8.9.1 “Cross beam” function

#### Prerequisites

- “Expert” user level
- Reasonable beam separation:  $\geq 10$  mm
- Possible operating modes: standard or dust- and sunlight-resistant
- High-speed scan is deactivated.
- The object being detected is located in the center section of the detection area.
- Only for “Cross beam measuring”:  $\leq 255$  beams

#### Notes

- [see "Minimum detectable object with cross-beam function ", page 23](#)

#### Description of operation

The MLG-2 offers the following beam functions: “Parallel beam”, “Cross beam switching” and “Cross beam measuring.” The system automatically selects the “Parallel beam” or “Cross beam switching” function depending on the specific object size that is to be detected. As an alternative, the user also has the option of manually activating the “Cross beam switching” or “Cross beam measuring” function.

In the “Cross beam switching” option, the crossed beams are also used for object detection. The crossed beams do not affect the beam status, beam functions or blanked beams.

In the “Cross beam measuring” function, a group of crossed beams is combined into a single virtual beam. Virtual beams are treated as additional real beams and do not have any affect on the beam status, beam functions or blanked beams. If the “Cross beam measuring” function is activated, the real and virtual beams are renumbered, which means that the number of beams is nearly doubled.

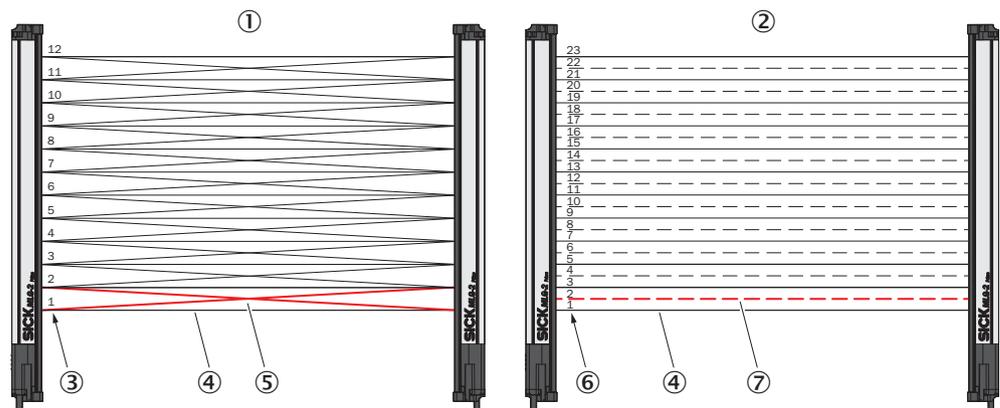


Figure 128: Left: “Cross beam switching”, right: “Cross beam measuring”

- ① Cross beam switching
- ② Cross beam measuring
- ③ Beam numbering for “Cross beam switching”
- ④ Parallel beam
- ⑤ Crossing beams

- ⑥ Beam numbering for “Cross beam measuring”
- ⑦ Crossing beams, displayed as a virtual beam

**Example with “Cross beam measuring”**

When the “Cross beam switching” function is used, a light grid with a beam separation of 20 mm can detect a wide object with a thickness of 1 mm, but cannot output a measured value for the height, for example. With the “Cross beam measuring” function, it is also possible to output a measured value for the height.

**Configuring the “Cross beam switching” function using SOPAS ET**

- ▶ In SOPAS ET, click on the **Performance options** expandable menu in the right-hand window.
- ▶ In the **Operating reserve** area, enable the **Activate cross beam mode** function.

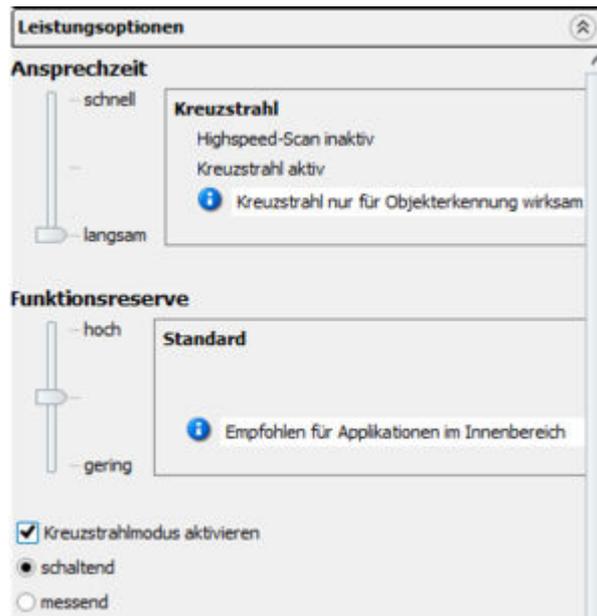


Figure 129: SOPAS ET – Activating cross beam switching mode

- ▶ Select the **switching** function.
- ✓ The “Cross beam switching” function is now activated.

**Configuring the “Cross beam measuring” function using SOPAS ET**



**NOTICE**

If the “Cross beam measuring” function is activated, the real and virtual beams are renumbered. Existing configurations are not converted. Check the existing configuration for the “Cross beam measuring” function. Adjust the configuration accordingly.

- ▶ In SOPAS ET, click on the **Performance options** expandable menu in the right-hand window.
- ▶ In the **Operating reserve** area, enable the **Activate cross beam mode** function.

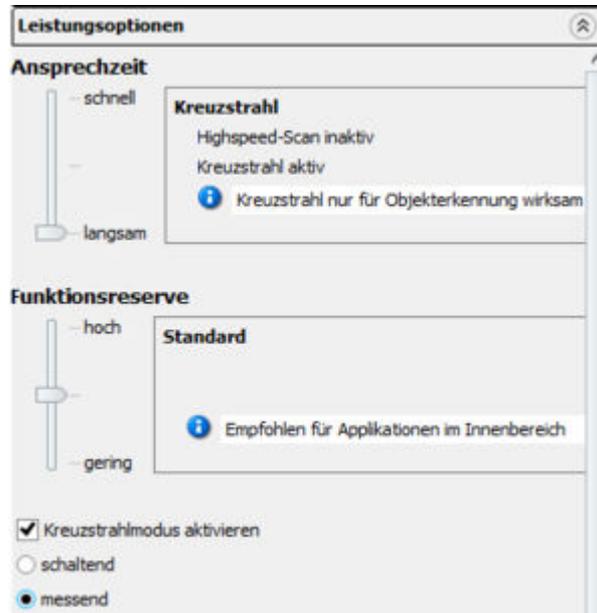


Figure 130: SOPAS ET – Activating cross beam measuring mode

- ▶ Select the **measuring** function.
- ✓ The following dialog box will open: **Warning. Activating this function will increase the number of beams. All beam-dependent settings must be adjusted accordingly.**

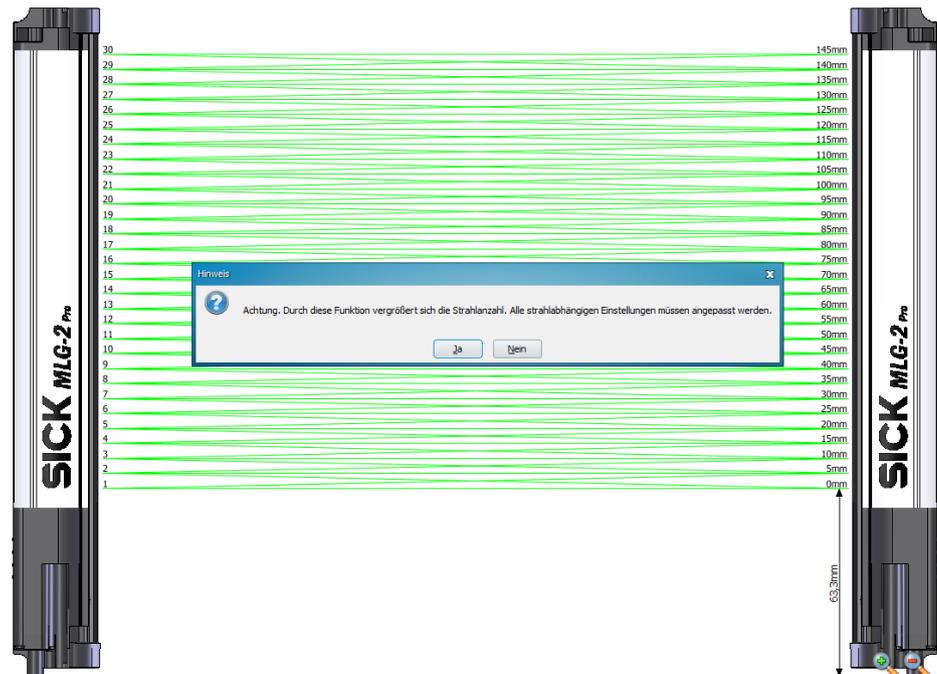


Figure 131: SOPAS ET, beam window – “Cross beam measuring” display

- ▶ Click **Yes** to activate the **Cross beam measuring mode**. Click **No** to cancel.
- ✓ The light grid display is adjusted in the middle section (beam window). The real and virtual beams are renumbered and, as a result, the number of beams is nearly doubled. The virtual beams are displayed as dashed lines.
- ▶ Check the existing configuration for the “Cross beam measuring” function.
- ▶ Adjust the configuration for the “Cross beam measuring” function accordingly.

## 8.9.2 Energy option (only at the EXPERT user level)

### Deactivating the high-speed scan function

Since the high-speed scan function results in a higher current consumption, it can be deactivated. In this case, the function cannot be activated again via the response time slider.

## 8.10 Beam evaluation

### 8.10.1 “Blocked Beams Hold (BBH)” evaluation mode

#### Prerequisites

- “Expert” user level

#### Notes

- You can choose one of the following evaluation modes: Standard, Blocked Beams Hold (BBH) or Lost Beams Hold (LBH).
- You can select the “Blocked Beams Hold (BBH)” evaluation mode for one beam function or for multiple beam functions simultaneously.

#### Description of operation

The “Blocked Beams Hold (BBH)” evaluation mode is activated by a trigger signal on the hardware input or via a trigger command from the fieldbus. If this evaluation mode has been activated, any beams that have been blocked are saved and displayed as blocked beams. Once the evaluation mode is deactivated by a withdrawal of the trigger signal, the blocked beams are reset to made beams.

You can select the “Blocked Beams Hold (BBH)” evaluation mode for each individual beam function or for multiple beam functions simultaneously. As a result, beam functions for which the “Blocked Beams Hold (BBH)” evaluation mode was configured are calculated based on this evaluation mode.

#### Configuring the “Blocked Beams Hold (BBH)” function using SOPAS ET

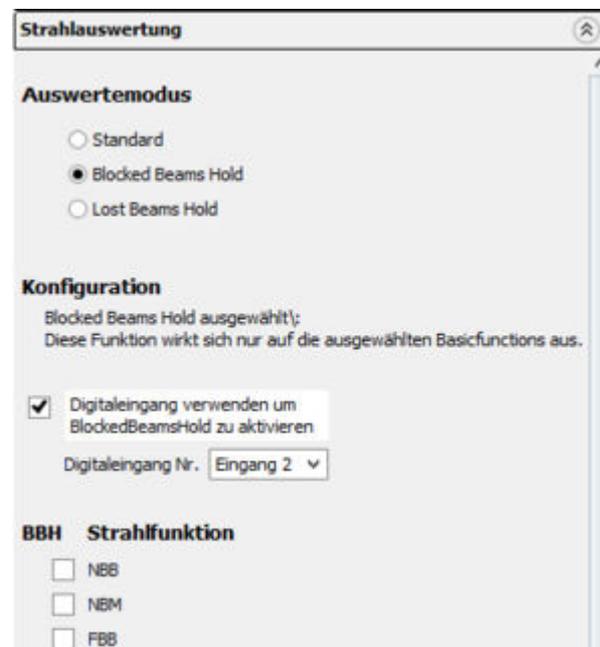


Figure 132: SOPAS ET – “Blocked Beams Hold (BBH)” function

- ▶ In SOPAS ET, click on the **Beam evaluation** expandable menu in the right-hand window.
- ▶ In the **Evaluation mode** area, select the **Blocked Beams Hold (BBH)** evaluation mode.
- ✓ The message **Blocked Beams Hold selected.** is displayed in the **Configuration** area. **This function only affects the selected basic functions.**
- ▶ In the **BBH beam function** area, activate the beam functions for which the Blocked Beams Hold evaluation mode will be used.
- ▶ If the evaluation mode is to be activated and deactivated using a hardware input, check the **Use digital input to activate BlockedBeamsHold** box.
- ▶ Select the desired digital input from the drop-down list.  
Please note that you can only assign one function to an input. If necessary, you must deactivate the **Use digital input to start teach process** option in the **Teach-in** expandable menu.
- ✓ In the **I/O** tab in the left-hand window, the beam functions for which the output mode was selected are marked by **(BBH)**. The message **TRIGGER\_BBH\_MODE** is displayed in the **Input/Output status** area if the “BBH” evaluation mode was activated by an input.

### 8.10.2 “Lost Beams Hold (LBH)” evaluation mode

#### Prerequisites

- “Expert” user level

#### Notes

- You can choose one of the following evaluation modes: Standard, Blocked Beams Hold (BBH) or Lost Beams Hold (LBH).
- The “Lost Beams Hold (LBH)” evaluation mode affects all beam functions.

#### Description of operation

In the “Lost Beams Hold (LBH)” evaluation mode, a blocked beam is displayed as a blocked beam until a new beam is blocked. This allows the position to be determined for objects that are smaller than the minimum detectable object.

This evaluation mode assumes that the object being detected is always positioned within the detection area. This means that the object must be located either above or below the last beam blocked when a previously blocked beam is no longer blocked and a different beam is not yet blocked. Once the object blocks a different beam, this new position is detected and the saved last beam blocked is deleted. If the object moves outside the detection area, the last beam blocked remains blocked.

#### Example

The “Lost Beams Hold (LBH)” output mode is used to detect the position of thin objects that are no longer detected by a parallel beam.

## Configuring the “Lost Beams Hold (LBH)” function using SOPAS ET

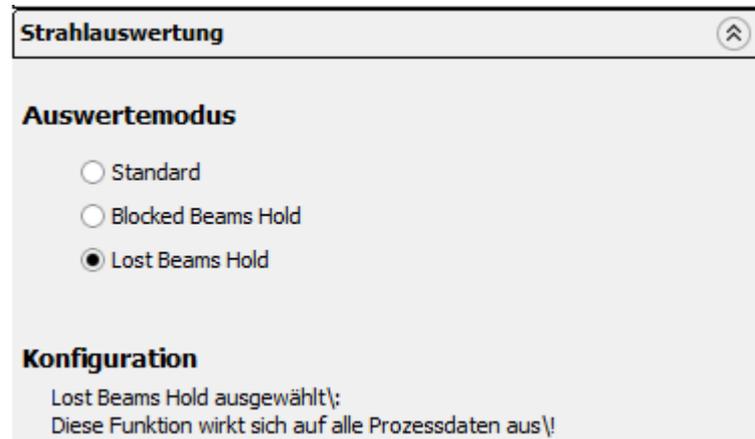


Figure 133: SOPAS ET – “Lost Beams Hold (LBH)” function

- ▶ In SOPAS ET, click on the **Beam evaluation** expandable menu in the right-hand window.
- ▶ In the **Evaluation mode** area, select the **Lost Beams Hold (LBH)** evaluation mode.
- ✓ The message **Lost Beams Hold selected.** is displayed in the **Configuration** area. **This function affects all process data.**
- ✓ At the bottom of the **I/O** tab in the left-hand window, the beam evaluation mode OFF, Blocked Beams Hold or Lost Beams Hold is displayed.

## 8.11 Simulation

If you configure an MLG-2 offline – i.e., without a connection to the device – you can simulate the operation of the MLG-2 using simulation objects. The objects required for the simulation can be set via the expandable **Simulation** menu. This includes the number of objects, their shape, size, and speed.

- ▶ Click on the plus sign to add a simulation object.

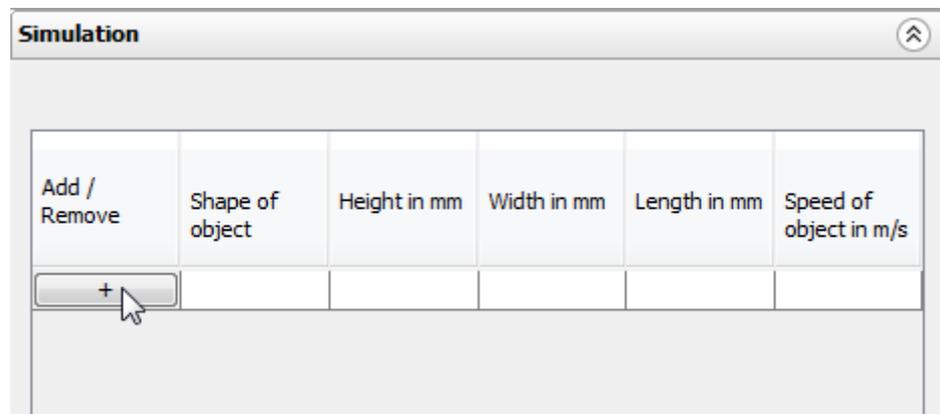


Figure 134: Add simulation object

- ▶ Select the object shape.

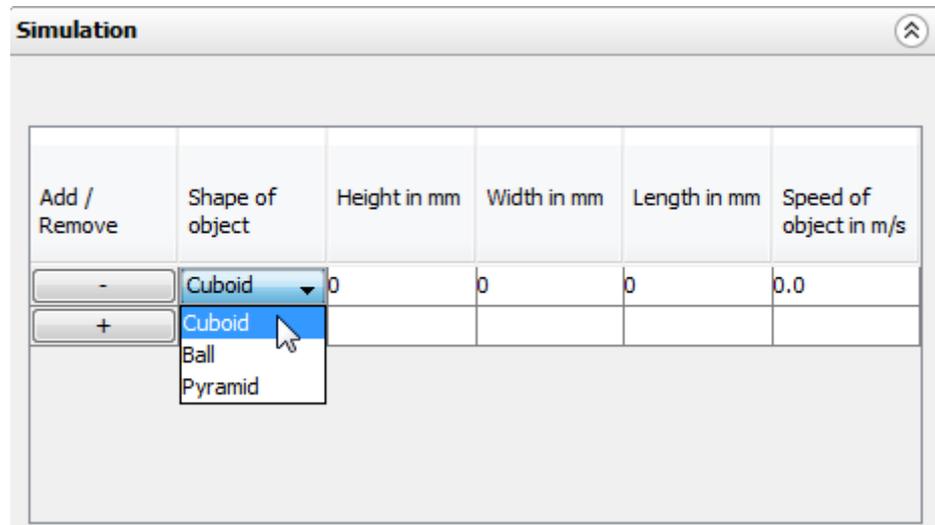


Figure 135: Determine the shape of the simulation object

- ▶ Enter the height, width, and length in mm. Enter the object speed in m/s.

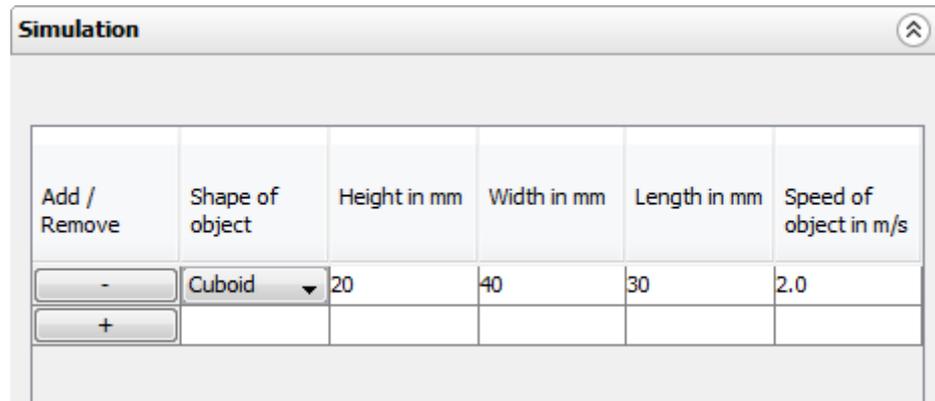


Figure 136: Determine the size of the simulation object

- ▶ Click **Start simulation**.

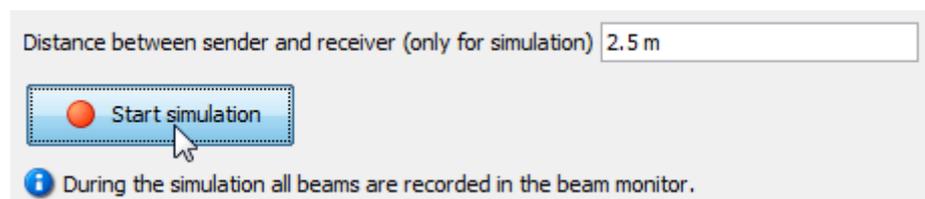


Figure 137: Start simulation

- ✓ The configured simulation object is moved through the MLG-2 in the **Simulation** area.

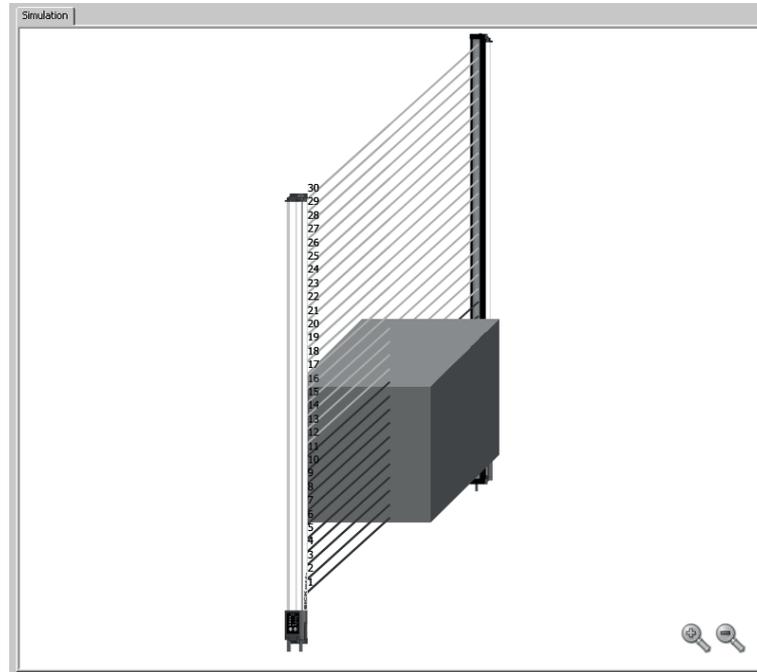


Figure 138: Simulation object in Simulation area

### 8.12 Beam monitor (only in the EXPERT user level)

If SOPAS ET is connected to an MLG-2, the **Beam monitor** tab shows the current beam status as a function of time as well as the status of the configured outputs.

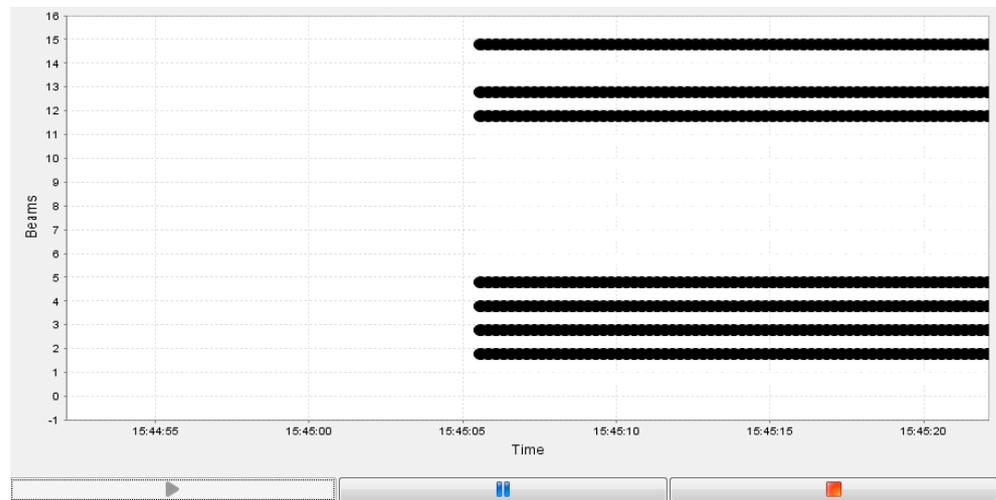


Figure 139: Beam status

This not only shows whether the beam is blocked or made, but also indicates partial coverage of the beam using grayscale, i.e., a half-blocked beam is shown in 50% gray.

If an object is moved through the detection area within the simulation while offline, the made and blocked beams are recorded just as in online operation. If the object is moved using the mouse, only the static beam status is displayed.

## 8.13 Function programming (in the EXPERT user level)

Function programming can be used to carry out complex applications with variables, operands, and functions in the **EXPERT** user level.

### 1st option:

“Beam function variables” can be defined in the **Beam function variables** area using the beam functions (see ["Beam functions", page 147](#)).

Example:

BFVar 1: Total number of beams made (NBM)  $\geq$  30

These variables can be linked directly to the outputs in the **Switching outputs** area.

Example:

Q1 = BFVar 1 = true

Output Q1 switches when the total number of beams made is greater than or equal to 30.

### 2nd option:

Multiple beam function variables can be defined in the **Beam function variables** area using the beam functions (see ["Beam functions", page 147](#)).

Example:

BFVar 1: Number of beams made (NBM)  $\geq$  30

BFVar 2: Number of consecutive beams blocked (NCBB) = 5

These can be linked to logical variables in the **Logical variables** area.

Example:

LogVar1 = BFVar 1 OR BFVar 2

The logical variables can be linked in turn to the outputs (Q) in the **Switching outputs** area.

Example:

Q1 = LogVar1

The output Q1 switches when the total number of beams made is greater than or equal to 30 or when the number of consecutive beams blocked equals 5.



### NOTE

If outputs have already been configured using the operating elements available in the **Easy** user level, these settings will be automatically transferred to the **Function programming** view.

Beam function variables				
Name	Beam Function	Operation	Value	Result
BFVar1	ODI	≤	10	
BFVar2	LBB	=	15	
BFVar3	NBB	=	0	
BFVar4	NBB	=	0	
BFVar5	NBB	=	0	
BFVar6	NBB	=	0	
BFVar7	NBB	=	0	
BFVar8	NBB	=	0	
BFVar9	NBB	=	0	
BFVar10	NBB	=	0	

Combination of logical variables				
Name	BFVar/Input	Operation	BFVar/Input	Result
LogVar1	BFVar1	AND	BFVar1	
LogVar2	BFVar1	AND	BFVar1	
LogVar3	BFVar1	AND	BFVar1	
LogVar4	BFVar1	AND	BFVar1	
LogVar5	BFVar1	AND	BFVar1	
LogVar6	BFVar1	AND	BFVar1	
LogVar7	BFVar1	AND	BFVar1	
LogVar8	BFVar1	AND	BFVar1	
LogVar9	BFVar1	AND	BFVar1	
LogVar10	BFVar1	AND	BFVar1	

Digital outputs/virtual outputs		
Name	Connection	Variable
Q1	=	ZONE1
Q2 (virtual)	=	BFVar2
Q3 (virtual)	=	BFVar3
Q4 (virtual)	=	BFVar4
Q5 (virtual)	=	OT1
Q6 (virtual)	=	OT1
Q7 (virtual)	=	OT1
Q8 (virtual)	=	OT1
Q9 (virtual)	=	OT1
Q10 (virtual)	=	OT1
Q11 (virtual)	=	OT1
Q12 (virtual)	=	OT1
Q13 (virtual)	=	OT1
Q14 (virtual)	=	OT1
Q15 (virtual)	=	OT1
Q16 (virtual)	=	OT1

Figure 140: Function programming

## 8.13.1 Beam functions

Table 118: Beam functions for preliminary evaluation

Name	Function (English)	Function (German)	Description
NBB	Number of Beams Blocked	Anzahl unterbrochener Strahlen	Total number of beams blocked (e.g., for object detection)
NBM	Number of Beams Made	Anzahl freier Strahlen	Total number of beams made (e.g., for hole detection)
NCBB	Number of Consecutive Beams Blocked	Anzahl zusammenhängender unterbrochener Strahlen	If there are multiple objects in the detection area, the greatest number of consecutive beams blocked is displayed.
NCBM	Number of Consecutive Beams Made	Anzahl zusammenhängender freier Strahlen	If there are multiple gaps in the detection area, the greatest number of consecutive beams made is displayed.
LBB	Last Beam Blocked	Letzter unterbrochener Strahl	Beam number of the last beam blocked (e.g., for object height measurement)
LBM	Last Beam Made	Letzter freier Strahl	Beam number of the last beam made
FBB	First Beam Blocked	Erster unterbrochener Strahl	Beam number of the first beam blocked (e.g., for height classification of a hanging object)
FBM	First Beam Made	Erster freier Strahl	Beam number of the first beam made
ODI	Outside Dimension	Außenmaß	Total number of beams between the first and last beams blocked (e.g., for measuring the outside dimension)
IDI	Inside Dimension	Innenmaß	Total number of beams made between the first and last beams blocked (e.g., for measuring the inside dimension)
CBB	Central Beam Blocked	Zentraler unterbrochener Strahl	Beam number of the central beam blocked (e.g., for measuring an object position)
CBM	Central Beam Made	Zentraler freier Strahl	Beam number of the central beam made (e.g., for measuring a hole position)
BNB	Beam Number Blocked	Strahlnummer x unterbrochen	True when a predefined beam is blocked
BNM	Beam Number Made	Strahlnummer x frei	True when a predefined beam is made
ALARM Q1	-	-	Configuration same as with SOPAS ET
QoR	Quality of Run	Process quality	0 ... 100 percent
QoT	Quality of Teach	Teach-in quality	0 or 100 in percent 0 = teach-in was unsuccessful 100 = teach-in was successful
RLC1 ... 16	Run-length code	-	Outputs the value of the relevant change
NBB Zone X (X = 1, 2, 3 or 4)	Number of Beams Blocked Zone X	Number of Beams Blocked Zone X	Total number of beams blocked (e.g., for object detection) in the indicated zone

Name	Function (English)	Function (German)	Description
NCBB Zone X (X = 1, 2, 3 or 4)	Number of Consecutive Beams Blocked Zone X	Number of Consecutive Beams Blocked Zone X	If there are multiple objects in the detection area, the greatest number of consecutive beams blocked in the indicated zone is displayed.
FBB Zone X (X = 1, 2, 3 or 4)	First Beam Blocked Zone X	First Beam Blocked Zone X	Beam number of the first beam blocked (e.g., for object height measurement) in the indicated zone
LBB Zone X (X = 1, 2, 3 or 4)	Last Beam Blocked Zone X	Last Beam Blocked Zone X	Beam number of the last beam blocked (e.g., for object height measurement) in the indicated zone
CBB Zone X (X = 1, 2, 3 or 4)	Central Beam Blocked Zone X	Central beam blocked in Zone X	Beam number of the central beam blocked (e.g., for measuring an object position) in the indicated zone

## 9 Configuration of MLG-2 with the internal web server

The MLG-2 has an integrated web server which can be used to configure the MLG-2 even without SOPAS ET. However, not all parameters can be configured, and the web server does not provide the same diagnostics options.



### NOTE

The interface is only available in English.

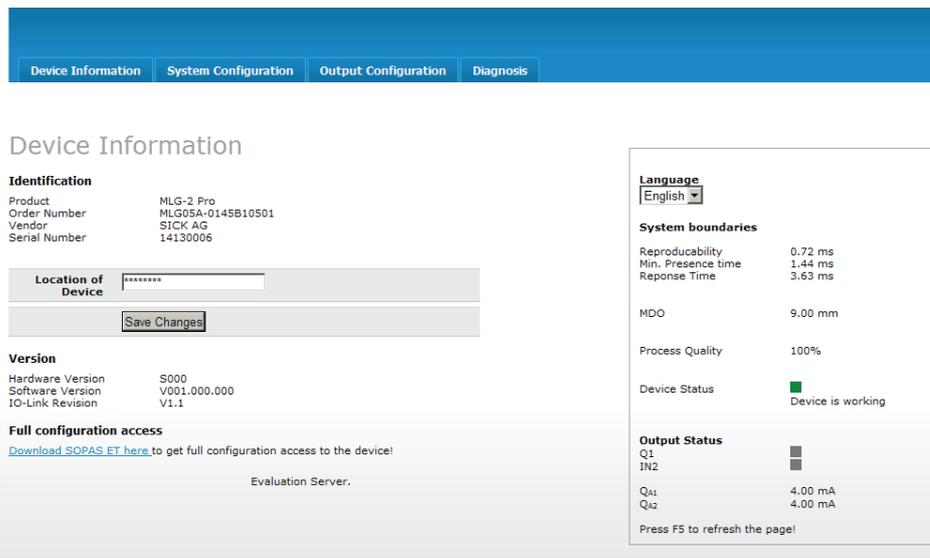


Figure 141: Interface of the integrated web server

### Accessing the web server

The MLG-2 web server is accessed via the IP address of the MLG-2. On delivery, DHCP is deactivated and the static IP address 192.168.200.100 is set. If DHCP is activated and a DHCP server is on the network, the MLG-2 obtains the IP address from this server. You can look up the IP address there.

The MLG-2 supports universal plug and play. This means that you can also find the IP address in the system settings of your Windows PC/notebook.

### Working with the web server

The displayed values are not always updated automatically. The browser page may therefore need to be refreshed (e.g., by pressing F5).

### 10 Servicing

The MLG-2 measuring automation light grid is maintenance-free. Depending on the ambient conditions, regular cleaning is required.

Depending on the ambient conditions of the MLG-2, the front screens must be cleaned regularly and in the event of contamination. Static charges can cause dust particles to be attracted to the front screen.



#### NOTE

- ▶ Do not use aggressive cleaning agents.
  - ▶ Do not use abrasive cleaning agents.
  - ▶ Do not use cleaning agents that contain alcohol, e.g., window cleaner.
- 

We recommend anti-static cleaning agents.

We recommend the use of anti-static plastic cleaner (SICK part number 5600006) and the SICK lens cloth (SICK part number 4003353).

#### How to clean the front screen:

- ▶ Use a clean, soft brush to remove dust from the front screen.
- ▶ Then wipe the front screen with a clean, damp cloth.
- ▶ Check the position of the sender and receiver after cleaning.
- ▶ Perform the teach-in process on the MLG-2 again. To do this, press the **Teach** push-button.

## 11 Troubleshooting

This chapter describes how to identify faults on the MLG-2.

### 11.1 Response to faults



#### CAUTION

Cease operation if the cause of the malfunction has not been clearly identified.

Immediately put the machine out of operation if you cannot clearly identify the fault and if you cannot safely remedy the problem.

### 11.2 SICK support

If you cannot remedy the error with the help of the information provided in this chapter, please contact your respective SICK subsidiary.

### 11.3 Anzeigen und Fehleranzeigen der LEDs

Dieser Abschnitt erklärt, was die Fehleranzeigen der LEDs bedeuten. Die Anzeigeelemente sind in einem separaten Abschnitt beschrieben [see "Display and operating elements", page 32.](#)

#### LEDs on the front of the sender

Table 119: LED indicators on the sender

Red LED	Yellow LED	Green LED	Meaning
○	○	○	Supply voltage off or too low
○	○	●	Supply voltage on
○	● 1Hz	●	Test input active
●	○	○	Hardware error

#### LEDs on the front of the receiver

Table 120: LED indicators on the receiver

Red LED	Yellow LED	Green LED	Meaning
○	○	○	Supply voltage off or too low
○	○	●	Supply voltage on
○	●	●	Light path blocked (at least one beam blocked)
○	● 1Hz	●	Teach-in active
○	● 3 Hz	●	Contamination warning or alignment aid active
●	●	●	"Find Me" function active If multiple MLG-2s are installed in one application, you can activate the "Find Me" function to identify a certain MLG-2.
● 10 Hz	●	●	Error occurred during teach-in, at least one beam blocked
●	○	○	Hardware error
●	●	○	Synchronization error: both sync beams blocked
●	○	●	Short-circuit

## LEDs am Feldbusmodul

Table 121: LEDs am Feldbusmodul

LED	Bedeutung
<b>POWER</b>	
●	Versorgungsspannung an
○	Versorgungsspannung aus oder zu gering
<b>LINK/ACT</b>	
●	Ethernet-Verbindung besteht
○	Keine Ethernet-Verbindung
● 1 Hz	Daten werden empfangen oder gesendet
<b>NS (Network Status)<sup>7)</sup></b>	
● Grün	Gerät hat eine IP-Adresse und eine CIP-Verbindung
○ Grün	Keine Verbindung Gerät hat eine IP-Adresse, aber keine CIP-Verbindung
● Rot	Fehler: IP-Adresse ist bereits an anderes Gerät vergeben
○ Rot	Warnung, Verbindungs-Time-out Wird durch Reset oder neue Verbindung zurückgesetzt
○ Rot/grün	Selbsttest beim Einschalten
○	Keine Betriebsspannung oder Keine IP-Adresse
<b>MS (Module Status)<sup>8)</sup></b>	
● Grün	Gerät in Betrieb
○ Grün	Stand-by/Gerät nicht konfiguriert, keine IP-Adresse zugeteilt
○ Rot	Warnung, Gerät aber weiter betriebsbereit oder Firmware-Update läuft
● Rot	Fehler, Gerät nicht betriebsbereit
○ Rot/grün	Selbsttest beim Einschalten

### 11.4 Advanced diagnostics on the MLG-2

The supplied SOPAS ET software contains advanced diagnostics options. These options allow you to further isolate the problem if the error situation is unclear or if there are availability issues. You can find detailed information:

- In the Status field (in the bottom left of the main screen)
- In the system boundaries display (minimum detectable object for the current configuration, minimum presence time, reproducibility, response time)

<sup>7)</sup> Die LED NS folgt der jeweiligen Feldbusspezifikation.

<sup>8)</sup> Die LED MS folgt der jeweiligen Feldbusspezifikation.

## 12 Decommissioning

### 12.1 Disposal

Always dispose of serviceability devices in compliance with local/national rules and regulations with respect to waste disposal.



#### NOTE

We would be pleased to be of assistance on the disposal of this device. Please contact us.

---

### 12.2 Returns

To enable efficient processing and allow us to determine the cause quickly, please include the following when making a return:

- Details of a contact person
- A description of the application
- A description of the fault that occurred

## 13 Technical data

### 13.1 Data sheet

#### General data

Table 122: MLG-2 data sheet – General data

Protection class	III (EN 61140)
Enclosure rating	IP 65 and IP 67 (EN 60529) <sup>1)</sup>
Ambient operating temperature	-30 ... +55 °C
Storage temperature	-40 ... +70 °C
Vibration resistance	5 g, 10 ... 55 Hz (EN 60068-2-6)
Shock resistance (EN 60068-2-27)	<ul style="list-style-type: none"> <li>• Single shock</li> <li>• Continuous shock</li> </ul>
Electromagnetic compatibility	According to EN 61000-6-2 Interference immunity for industrial environments and EN 61000-6-4 Emission standard for industrial environments
MTTF MTBF	15 years 15 years
Dimensions	<a href="#">see "Dimensional drawings", page 160</a>
Weight	Sender + receiver approx. 2 kg/m + 0.1 kg
Materials	<ul style="list-style-type: none"> <li>• Housing</li> <li>• Front screen</li> </ul>
	<ul style="list-style-type: none"> <li>• Aluminum, anodized</li> <li>• PMMA</li> </ul>

<sup>1)</sup> Do not use light grids outdoors unless protected (condensation will form).

#### Electrical specifications (for 24 V DC and 25 °C ambient temperature)

Table 123: MLG-2 data sheet – Electrical specifications

Supply voltage $V_S$	24 V DC $\pm$ 20%
Residual ripple (within $V_S$ )	< 10%
Current consumption of sender	<ul style="list-style-type: none"> <li>• Typical</li> <li>• Maximum</li> <li>• With 3x high-speed scan</li> </ul>
Current consumption of receiver	<ul style="list-style-type: none"> <li>• Typical</li> <li>• Maximum</li> <li>• In Dust- and sunlight-resistant operating mode, where a beam of 150 klx is sent to all receiver optics</li> </ul>
Required overcurrent protection when using the following wire gages	<ul style="list-style-type: none"> <li>• AWG 20/0.52 mm<sup>2</sup></li> <li>• AWG 22/0.32 mm<sup>2</sup></li> <li>• AWG 24/0.20 mm<sup>2</sup></li> <li>• AWG 26/0.13 mm<sup>2</sup></li> <li>• AWG 28/0.08 mm<sup>2</sup></li> <li>• AWG 30/0.05 mm<sup>2</sup></li> </ul>
	<ul style="list-style-type: none"> <li>• 5 A</li> <li>• 3 A</li> <li>• 2 A</li> <li>• 1 A</li> <li>• 0.8 A</li> <li>• 0.5 A</li> </ul>

#### Output signal switching device

Table 124: MLG-2 data sheet – Switching outputs

Switching type	Push-pull
Logic level switching points <ul style="list-style-type: none"> <li>• HIGH</li> <li>• LOW</li> </ul>	<ul style="list-style-type: none"> <li>• <math>V_S - 3\text{ V}</math></li> <li>• <math>&lt; 3\text{ V}</math></li> </ul>
Maximum output current per output	100 mA
Output load per output <ul style="list-style-type: none"> <li>• Capacitive</li> <li>• Inductive</li> </ul>	<ul style="list-style-type: none"> <li>• 100 nF</li> <li>• 1 H</li> </ul>
Response time	see figure 142, page 157

**Technical measurement data**

Table 125: MLG-2 data sheet – Technical measurement specifications

Wavelength	850 nm
Ambient light immunity <ul style="list-style-type: none"> <li>• Standard operating mode</li> <li>• Dust- and sunlight-resistant operating mode<sup>1)</sup></li> </ul>	<ul style="list-style-type: none"> <li>• 150,000 lx (constant light, indirect)</li> <li>• 150,000 lx (constant light, direct and indirect)</li> </ul>
Minimum detectable object for devices with 5 mm, 10 mm, 20 mm, 25 mm, 30 mm, 50 mm beam separation <ul style="list-style-type: none"> <li>• With normal measurement accuracy</li> <li>• With high measurement accuracy</li> <li>• In Transparent operating mode</li> <li>• Cross beam function</li> </ul>	<ul style="list-style-type: none"> <li>• Beam separation + 4 mm</li> <li>• Beam separation</li> <li>• Beam separation<sup>2)</sup></li> <li>• <math>0.5 \times \text{beam separation} + 4\text{ mm}</math></li> </ul>
Minimum detectable object for devices with 2.5 mm beam separation <ul style="list-style-type: none"> <li>• With normal measurement accuracy</li> <li>• With high measurement accuracy</li> <li>• In Transparent operating mode</li> <li>• Cross beam function</li> </ul>	<ul style="list-style-type: none"> <li>• Beam separation + 1 mm</li> <li>• Beam separation</li> <li>• Beam separation<sup>3)</sup></li> <li>• <math>0.5 \times \text{beam separation} + 3.5\text{ mm}</math></li> </ul>
Beam separation	2.5 mm, 5 mm, 10 mm, 20 mm, 25 mm, 30 mm, 50 mm
Number of beams	6 ... 510
Detection height	130 ... 3140 mm
Limiting range	2.8 m / 7 m / 12 m depending on device type <sup>4)</sup>
Operating range	2 m / 5 m / 8.5 m depending on device type <sup>5)</sup>
Minimum sensing range <ul style="list-style-type: none"> <li>• With parallel-beam function</li> <li>• With cross-beam function</li> </ul>	<ul style="list-style-type: none"> <li>• 0 mm</li> <li>• 0.2 ... 1.20 m (see table 126, page 156)</li> </ul>
Initialization time after switch-on	<3 s
Response time	see "Response time and minimum presence time without high-speed scan", page 157
Minimum presence time	see "Minimum detectable absorption", page 159

Cycle time	8 ... 48 µs per beam <sup>6)</sup>
------------	------------------------------------

- 1) Only possible for devices with < 240 beams.
- 2) For opaque objects. For transparent objects + 4 mm
- 3) For opaque objects. For transparent objects + 1 mm
- 4) In Dust- and sunlight-resistant operating mode depending on device type.
- 5) In Dust- and sunlight-resistant operating mode: 3 m / 5 m depending on device type.
- 6) Depending on device version and operating mode.

Table 126: Minimum sensing range with cross-beam function

MLG-2 with sensing range	Beam separation						
	2.5 mm	5 mm	10 mm	20 mm	25 mm	30 mm	50 mm
2 m	0.20 m	-	-	-	-	-	-
5 m	-	0.11 m	0.22 m	0.44 m	0.55 m	0.66 m	1.10 m
8.5 m	-	0.12 m	0.24 m	0.48 m	0.60 m	0.72 m	1.20 m

## 13.2 Data sheet - fieldbus module

### General data

Table 127: Fieldbus module data sheet – General data

Protection class	III (EN 61140)
Enclosure rating	IP 65 and IP 67 (EN 60529) <sup>1)</sup>
Ambient operating temperature	-30 ... +55 °C
Storage temperature	-40 ... +70 °C
Vibration resistance	5 g, 10 ... 55 Hz (EN 60068-2-6)
Shock resistance (EN 60068-2-27)	<ul style="list-style-type: none"> <li>• Single shock</li> <li>• Continuous shock</li> </ul> <ul style="list-style-type: none"> <li>• 15 g, 11 ms</li> <li>• 10 g, 16 ms</li> </ul>
Electromagnetic compatibility	According to EN 61000-6-2 Interference immunity for industrial environments and EN 61000-6-4 Emission standard for industrial environments
MTTF MTBF	15 years 15 years
Firmware version	<a href="#">see "Type label of the MLG-2 ProNet", page 11</a>
Dimensions	<a href="#">see "Dimensional drawing MLG-2 ProNet", page 160</a>
Weight	350 g
Materials	<ul style="list-style-type: none"> <li>• Housing</li> </ul> <ul style="list-style-type: none"> <li>• Zinc, painted</li> </ul>

1) Do not use light grids outdoors unless protected (condensation will form).

### Electrical specifications (for 24 V DC and 25 °C ambient temperature)

Table 128: Fieldbus module data sheet – Electrical specifications

Supply voltage $V_S$	24 V DC $\pm$ 20%
Residual ripple (within $V_S$ )	< 10%
Current consumption	<ul style="list-style-type: none"> <li>• Typical</li> <li>• Maximum</li> </ul> <ul style="list-style-type: none"> <li>• 115 mA</li> <li>• &lt; 160 mA</li> </ul>

<b>Required overcurrent protection when using the following wire gages</b>	
<ul style="list-style-type: none"> <li>• AWG 20/0.52 mm<sup>2</sup></li> <li>• AWG 22/0.32 mm<sup>2</sup></li> <li>• AWG 24/0.20 mm<sup>2</sup></li> <li>• AWG 26/0.13 mm<sup>2</sup></li> <li>• AWG 28/0.08 mm<sup>2</sup></li> <li>• AWG 30/0.05 mm<sup>2</sup></li> </ul>	<ul style="list-style-type: none"> <li>• 5 A</li> <li>• 3 A</li> <li>• 2 A</li> <li>• 1 A</li> <li>• 0.8 A</li> <li>• 0.5 A</li> </ul>

**Ethernet interface**

Table 129: Fieldbus module data sheet – Ethernet interface

Data transmission rate	100 Mbit/s
Default IP address	192.168.200.100
Subnet mask	255.255.255.0
Protocol	TCP/IP
Maximum length of cable	According to IEE802.3 (typ. 100 m)

**13.3 Diagrams**

**13.3.1 Response time and minimum presence time without high-speed scan**

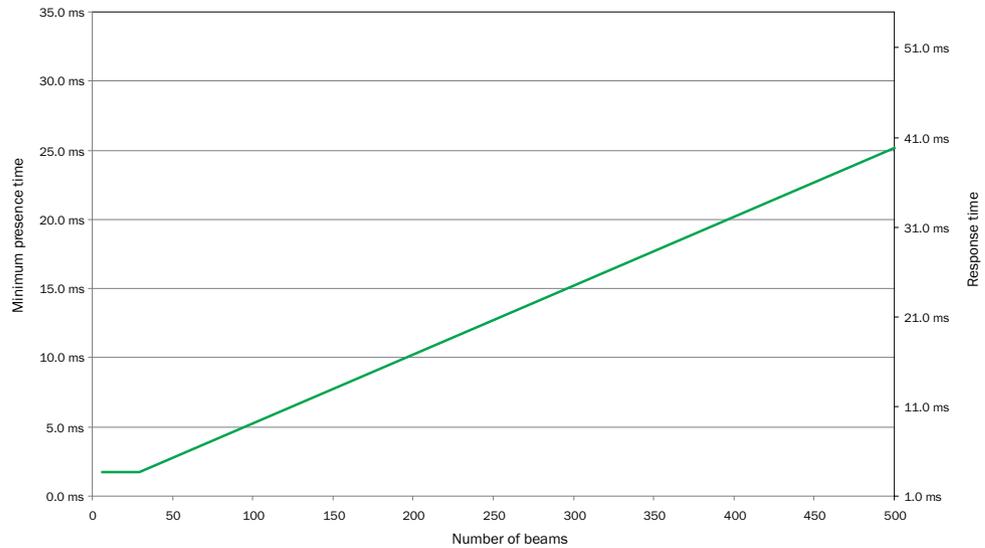


Figure 142: Graph, MLG-2 Pro response time and minimum presence time



**NOTE**

If the cross-beam function is configured, multiply the minimum presence time and the response time by 2.

13.3.2 Response time and minimum presence time during high-speed scan with 2,5 mm resolution

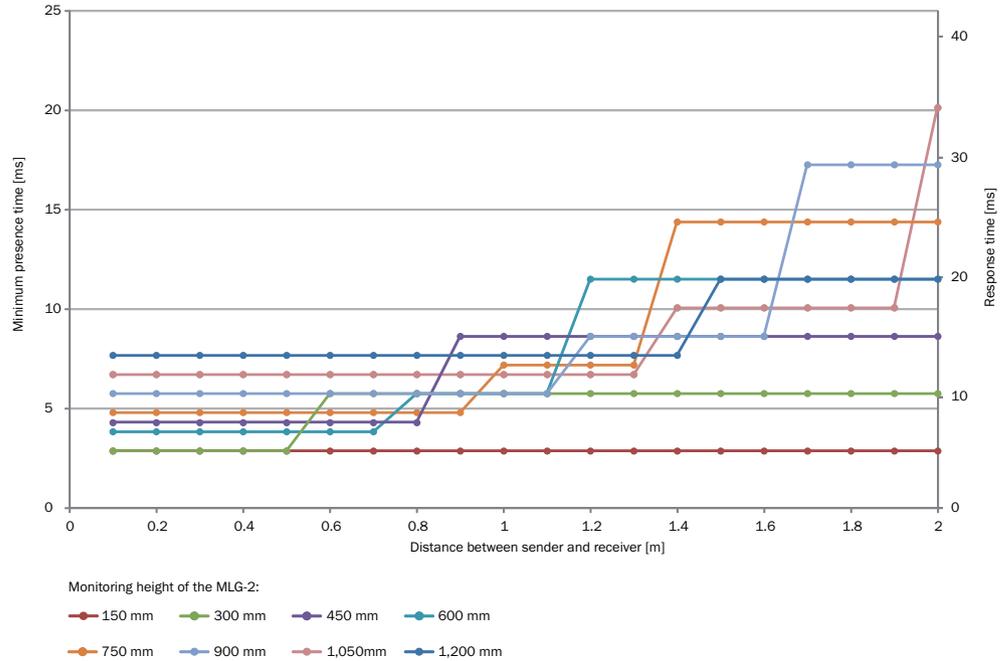


Figure 143: Response time and minimum presence time up to 2 m sensing range



**NOTE**

Only applies for the “High measurement accuracy” operating mode since only this operating mode can be set via the SDD, special for 2.5 mm raster devices.

13.3.3 Response time and minimum presence time during high-speed scan with up to 3.5 m sensing range

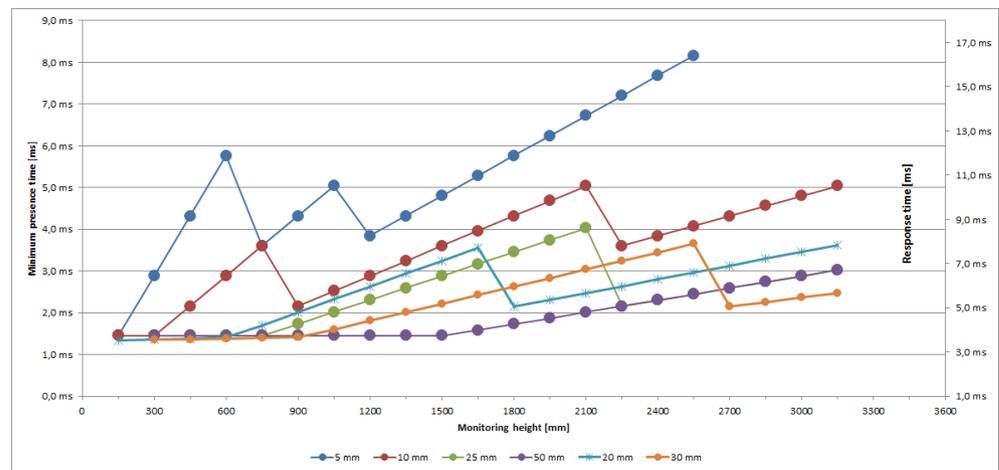


Figure 144: Response time and minimum presence time up to 3.5 m sensing range

### 13.3.4 Response time and minimum presence time during high-speed scan with up to 8.5 m sensing range

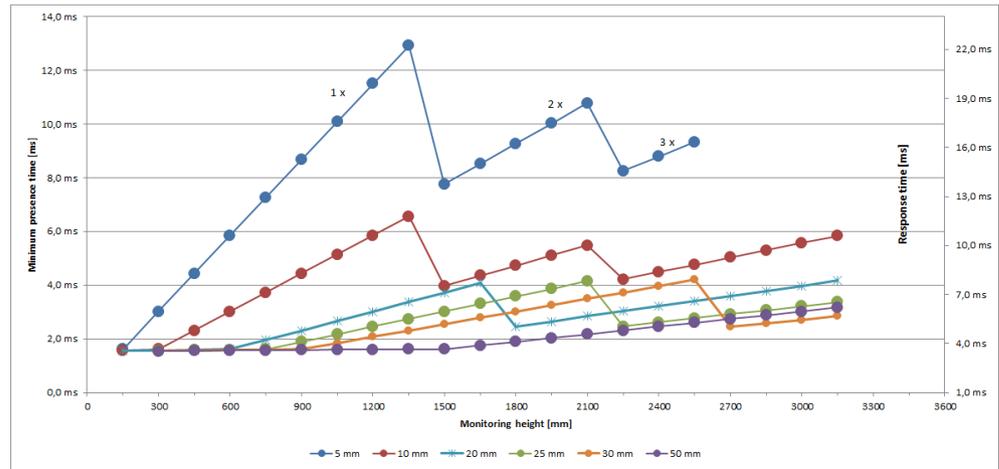


Figure 145: Response time and minimum presence time up to 8.5 m sensing range

### 13.3.5 Minimum detectable absorption

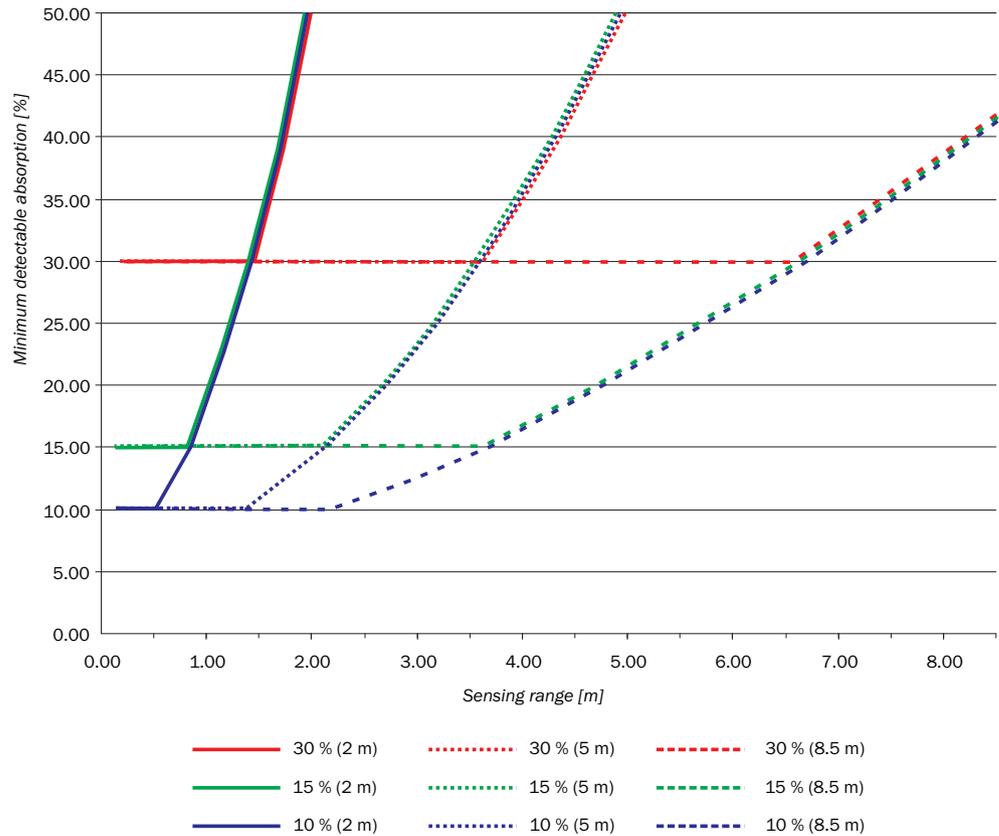


Figure 146: Minimum detectable absorption required for devices with 2 m, 5 m and 8.5 m sensing range



**NOTE**

The minimum detectable absorption which can be read from the diagram applies after the teach-in process with clean ambient conditions. The minimum detectable absorption increases with the level of contamination. Clean the front screens of the sender and receiver regularly, then perform a teach-in process.

**13.4 Dimensional drawings**

**13.4.1 Dimensional drawing MLG-2 ProNet**

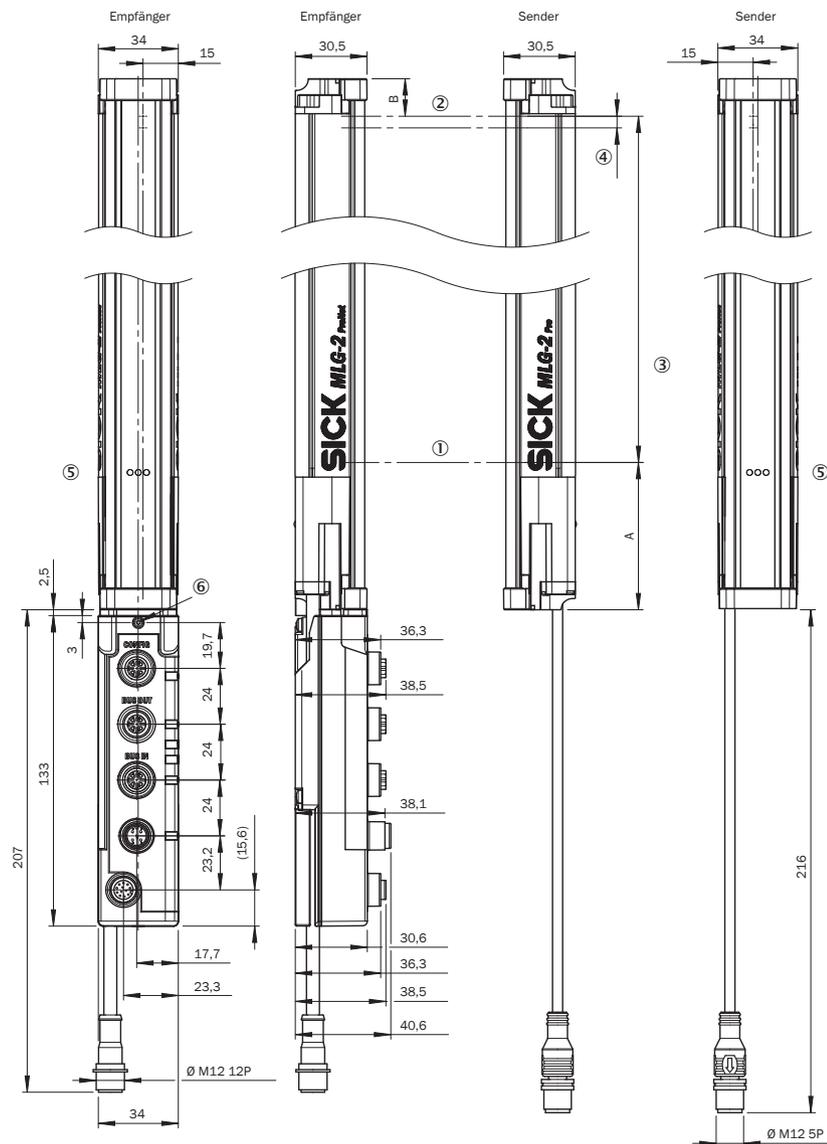


Figure 147: Dimensional drawing MLG-2 ProNet (mm)

- ① Detection height<sup>9)</sup> = (n × SA) - 1 SA (see table 130, page 161)
- ② Distance from MLG-2 edge to last beam  
With 5, 10, 20, 25, 30 and 50 mm beam separation = 16.1 mm  
With 2.5 mm beam separation = 17.15 mm
- ③ Distance from MLG-2 edge to first beam
- ④ Distance from MLG-2 head to MLG-2 edge
- ⑤ LEDs
- ⑥ Fieldbus module fixing screw
- A Distance from MLG-2 connection side to first beam (see table 131, page 162)

**Total height of the devices**

Total height of the devices with 5, 10, 20, 25, 30 and 50 mm beam separation = A + ① + ④+ 16.1 mm (equates to ②).

Total height of the devices with 2.5 mm beam separation = A + ① + ④+ 17.15 mm (equates to ②).

**13.4.2 Measurement tables**

Table 130: Detection height (mm)/number of beams

	Type/beam separation						
	MLG02.../ 2.5 mm	MLG05.../ 5 mm	MLG10.../ 10 mm	MLG20.../ 20 mm	MLG25.../ 25 mm	MLG30.../ 30 mm	MLG50.../ 50 mm
<b>Detection height [mm]/number of beams</b>	145/59	145/30	140/15	140/8 <sup>1</sup>	-	-	-
	295/119	295/60	290/30	280/15 <sup>2</sup>	275/12	270/10	250/6
	445/179	445/90	440/45	440/23 <sup>1</sup>	425/18	420/15	400/9
	595/239	595/120	590/60	580/30 <sup>2</sup>	575/24	570/20	550/12
	745/299	745/150	740/75	740/38 <sup>1</sup>	725/30	720/25	700/15
	895/359	895/180	890/90	880/45 <sup>2</sup>	875/36	870/30	850/18
	1045/419	1045/210	1040/105	1040/53 <sup>1</sup>	1025/42	1020/35	1000/21
	1195/479	1195/240	1190/120	1180/60 <sup>2</sup>	1175/48	1170/40	1150/24
	-	1345/270	1340/135	1340/68 <sup>1</sup>	1325/54	1320/45	1300/27
	-	1495/300	1490/150	1480/75 <sup>2</sup>	1475/60	1470/50	1450/30
	-	1645/330	1640/165	1640/83 <sup>1</sup>	1625/66	1620/55	1600/33
	-	1795/360	1790/180	1780/90 <sup>2</sup>	1775/72	1770/60	1750/36
	-	1945/390	1940/195	1940/98 <sup>1</sup>	1925/78	1920/65	1900/39
	-	2095/420	2090/210	2080/105 <sup>2</sup>	2075/84	2070/70	2050/42
	-	2245/450	2240/225	2240/113 <sup>1</sup>	2225/90	2220/75	2200/45
	-	2395/480	2390/240	2380/120 <sup>2</sup>	2375/96	2370/80	2350/48
	-	2545/510	2540/255	2540/128 <sup>1</sup>	2525/102	2520/85	2500/51
	-	-	2690/270	2680/135 <sup>2</sup>	2675/108	2670/90	2650/54
	-	-	2840/285	2840/143 <sup>1</sup>	2825/114	2820/95	2800/57
	-	-	2990/300	2980/150 <sup>2</sup>	2975/120	2970/100	2950/60
-	-	3140/315	3140/158 <sup>1</sup>	3125/126	3120/105	3100/63	

<sup>1</sup> Distance from MLG-2 connection side to first beam = 68.3 mm.  
<sup>2</sup> Distance from MLG-2 connection side to first beam = 78.3 mm.

<sup>9)</sup> See type code.

Table 131: Distance from MLG-2 connection side to first beam

Beam separation	Distance from MLG-2 connection side to first beam
2.5 mm	62.25 mm
5 mm	63.3 mm
10 mm	68.3 mm
20 mm	68.3 mm / 78.3 mm <sup>1</sup>
25 mm	83.3 mm
30 mm	88.3 mm
50 mm	108.3 mm

<sup>1</sup> see table 130.

13.4.3 Dimensional drawings for the MLG-2 fieldbus module

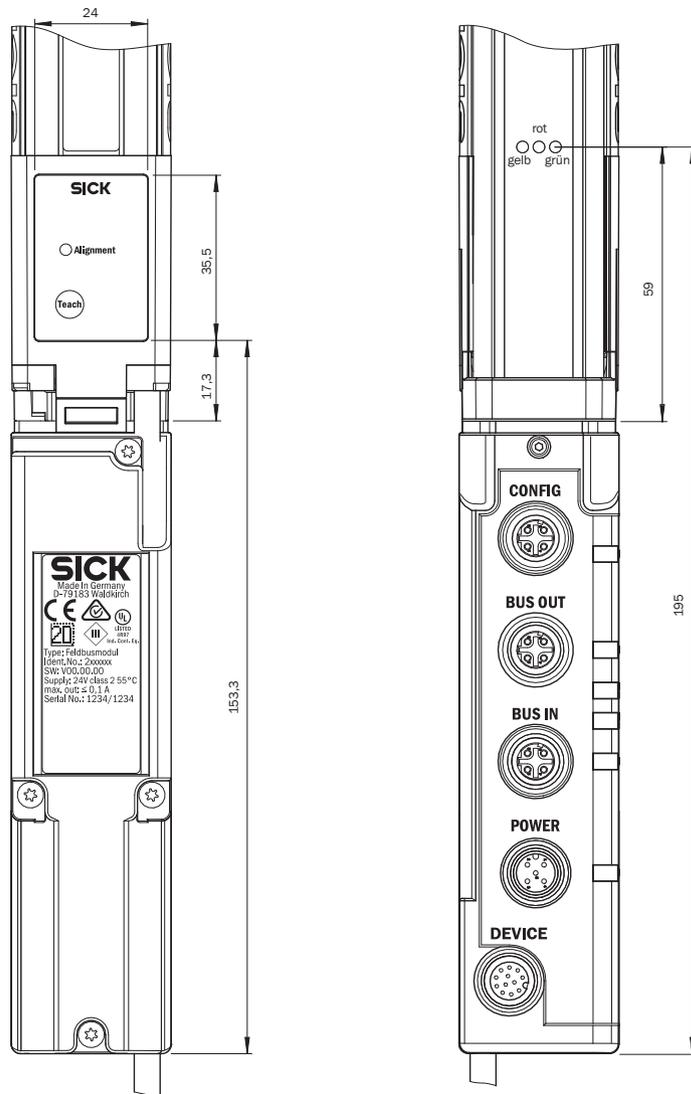


Figure 148: Dimensional drawing 1 MLG-2 fieldbus module

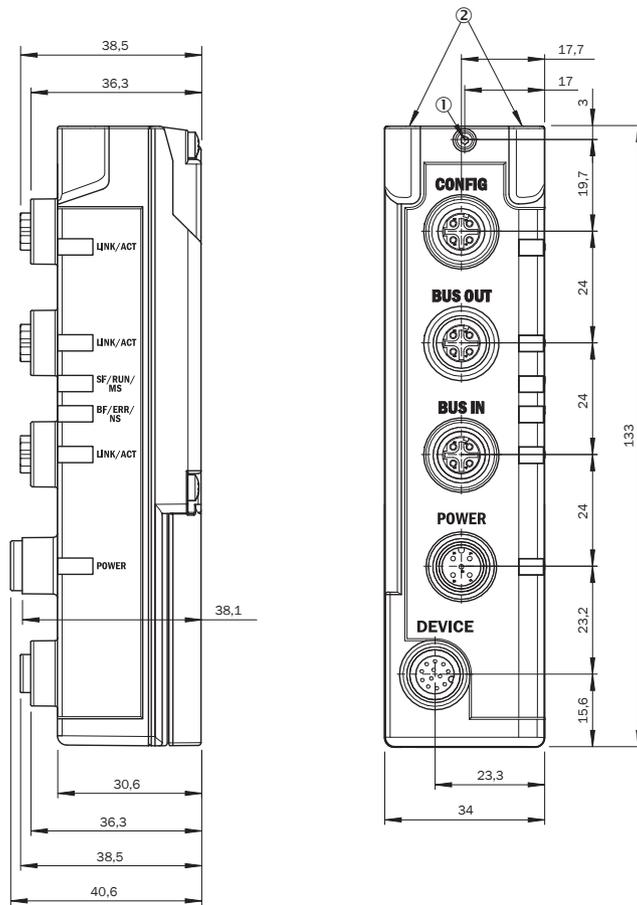


Figure 149: Dimensional drawing 2 MLG-2 fieldbus module

- ① Fieldbus module fixing screw
- ② Openings for mounting pins

## **14**      **Ordering information**

Ordering information for the MLG-2 can be found in the MLG-2 product information, SICK part number 8017054.

## 15 Accessories

### 15.1 Auxiliary equipment

Table 132: Equipment part numbers

Type	Description	Part no.
AR60	Laser alignment aid for various sensors, laser class 2 (IEC 60825). Do not look into the beam.	1015741
Adapter AR60	Adapter AR60 for MLG-2	4070854
Lens cloth	Cloth for cleaning the front screen	4003353
Plastic cleaner	Plastic cleaner and polish, anti-static, 0.5 liters	5600006

### 15.2 Mounting materials

Table 133: Mounting material part numbers

Type	Description	Part no.
BEF-1SHABP004	Mounting kit for replacement of swivel mount brackets 2019649 and 2019659 or side bracket 2019506 with the FlexFix bracket when using the bore holes provided	2071021
BEF-1SHABPKU4	FlexFix bracket, plastic	2066614
BEF-1SHABPKU4-SET2	Set with 4 × FlexFix bracket, plastic and 1 × mounting bracket	2083452
BEF-3SHABPKU2	QuickFix bracket, plastic	2066048
BEF-3SHABPKU2-SET1	Set with 6 × QuickFix bracket, plastic	2085604
BEF-WN-FBM-SET1	1 × mounting bracket and 1 × screw M5 × 6	2082322
BEF-WN-FBM-SET2	2 × mounting bracket and 3 × screw M5 × 6	2083323

Table 134: Sliding nut part numbers

Type	Description	Part no.
T-nuts	Sliding nut	4031411
Sliding nut	Sliding nut, M5	5305719
Sliding nuts	Sliding nut set, M5, 4 pieces	2017550
UH sliding nut	Sliding nut, item profile, M6	5305615

### 15.3 Anschlussmaterial

Table 135: Artikelnummern T-Verteiler

Typ	Beschreibung	Artikelnr.
SBO-02G12-SM	T-Verteiler M12, 5-polig, Stecker M12, 5-polig, gerade, A-kodiert auf 2 × Dose M12, 5-polig, gerade, A-kodiert	6029305

Table 136: Artikelnummern Anschlussleitung mit Dose

Typ	Anschlussart Kopf A	Anschlussart Kopf B	Anschlussleitung	Artikelnr.
DOL-1205-G05MAC	Dose, M12, 5-polig, gerade, geschirmt	Leitung, lose Leitungsenden	5 m, 5-adrig	6036384

Typ	Anschlussart Kopf A	Anschlussart Kopf B	Anschlussleitung	Artikelnr.
DOL-1205-G02M	Dose, M12, 5-polig, gerade, ungeschirmt	Leitung, lose Leitungsenden	2 m, 5-adrig	6008899
DOL-1205-G05M			5 m, 5-adrig	6009868
DOL-1205-G10M			10 m, 5-adrig	6010544
DOL-1205-G15M			15 m, 5-adrig	6029215

Table 137: Artikelnummern Dosen

Typ	Anschlussart Kopf A	Anschlussart Kopf B	Artikelnr.
DOS-1205-G	Dose, M12, 5-polig, gerade, ungeschirmt	Schraubklemmen	6009719

Table 138: Artikelnummern Ethernet-Anschlussleitung (Feldbus)

Typ	Anschlussart Kopf A	Anschlussart Kopf B	Anschlussleitung	Artikelnr.
SSL-2J04-G02ME	Stecker, M12, 4-polig, D-kodiert, geschirmt	Stecker, RJ-45, 8-polig, gerade	2 m, 4-adrig, AWG26	6034414
SSL-2J04-G10ME			10 m, 4-adrig, AWG26	6030928
SSL-1204-G02ME	Stecker, M12, 4-polig, D-kodiert	Stecker, M12, 4-polig, D-kodiert	2 m, 4-adrig	6034420
SSL-1204-G03ME			3 m, 4-adrig	6034421
SSL-1204-G05ME			5 m, 4-adrig	6034422

Table 139: Artikelnummern Ethernet-Anschlussleitung (Konfiguration)

Typ	Anschlussart Kopf A	Anschlussart Kopf B	Anschlussleitung	Artikelnr.
SSL-1204-G02ME	Stecker, M12, 4-polig, D-kodiert, geschirmt	Stecker, M12, 4-polig, D-kodiert	2 m, 4-adrig	6034420
SSL-1204-G05ME			5 m, 4-adrig	6034422
Verbindungsleitung (Stecker-Stecker)	Stecker, M12, 4-polig, gerade, D-kodiert, geschirmt	Stecker, RJ-45, 8-polig, gerade	5 m, 4-adrig, AWG26	6034415
SSL-2J04-G02ME	Stecker, M12, 4-polig, gerade, D-kodiert, geschirmt	Stecker, RJ-45, 8-polig, gerade	2 m, 4-adrig, AWG26	6034414

Table 140: Artikelnummern Verbindungsleitung MLG-2 zu Feldbusmodul

Typ	Anschlussart Kopf A	Anschlussart Kopf B	Anschlussleitung	Artikelnr.
DSL-1212-G2M7AC	Dose, M12, 12-polig, gerade	Stecker, M12, 12-polig, gerade	2,7 m, 12-adrig, geschirmt, geschirmt, PUR, halogenfrei	6056903

## 16 Annex

### 16.1 Compliance with EU directive

#### EU declaration of conformity (extract)

The undersigned, who represents the manufacturer below, hereby declares that the product complies with the regulations of the EU directive(s) below (including all relevant changes), and that it is based on the relevant standards and/or technical specifications.

Complete EU declaration of conformity for download: [www.sick.de](http://www.sick.de)

## 17 List of figures

1.	Sender type label.....	11
2.	Receiver type label.....	11
3.	Fieldbus module type label .....	11
4.	MLG-2 ProNet device components.....	15
5.	Detection area of the MLG-2.....	16
6.	Schematic depiction of available beam separations (mm).....	16
7.	Detection area with beams blanked.....	18
8.	Standard scan method.....	19
9.	Scan time in relation to the number of beams.....	19
10.	Cross-beam function.....	20
11.	High-speed scan.....	20
12.	Scan time in relation to the number of beams when using the high-speed scan..	20
13.	Minimum detectable object.....	21
14.	Minimum detectable object length.....	22
15.	Cross-beam function.....	23
16.	Minimum detectable object size with high measurement accuracy.....	24
17.	LEDs on the sender.....	32
18.	LEDs auf der Vorderseite und am Bedienfeld.....	33
19.	Bedienfeld auf der Rückseite.....	33
20.	LEDs on the fieldbus module .....	34
21.	Start and end detection.....	34
22.	Detection of transparent objects.....	34
23.	Detection of small objects.....	35
24.	Traffic applications.....	35
25.	Volume measurement.....	35
26.	Contour measurement.....	35
27.	Placement with light in opposite directions.....	36
28.	Distances when light is in the same direction.....	37
29.	Graph, distances when light is in the same direction.....	38
30.	Graph, distances when light is in the same direction (XZ).....	39
31.	Placement of two light grids at right angles.....	39
32.	Graph, minimum distance from reflective surfaces.....	40
33.	The sender and receiver are aligned incorrectly.....	41
34.	Mount QuickFix bracket to a profile frame.....	42
35.	QuickFix bracket for the fieldbus module.....	43
36.	Mounting the FlexFix bracket on a profile frame.....	44
37.	Inserting the MLG-2 in the FlexFix brackets.....	44
38.	Mounting bracket for the fieldbus module .....	45
39.	Mounting directions of the fieldbus module .....	46
40.	Turn the fieldbus module by 180° .....	46
41.	Feldbusmodul mit QuickFix-Halterung abgesetzt montieren.....	47
42.	Feldbusmodul mit Befestigungswinkel abgesetzt montieren.....	47
43.	Fieldbus module connections.....	49
44.	Anschluss mit T-Verteiler.....	51
45.	T-Verteiler Sender und Feldbusmodul.....	52
46.	Alignment with the QuickFix bracket.....	53
47.	Alignment with the FlexFix bracket.....	54
48.	Rotate the receiver once.....	54
49.	Control panel.....	55
50.	Example of an Ethernet/IP network in a star structure.....	56
51.	Example of an Ethernet/IP network in a device level ring.....	57
52.	CIP and other services.....	58
53.	Beam function NBB.....	70
54.	Beam function NBM.....	71

55. Beam function FBB.....71

56. Beam function FBM.....72

57. Beam function LBB.....72

58. Beam function LBM.....73

59. Beam function NCBB.....73

60. Beam function NCBM.....74

61. Beam function CBB.....74

62. Beam function CBM.....75

63. Beam function ODI.....75

64. Beam function IDI.....75

65. Beam status – Example 1.....78

66. Beam status – Example 2.....79

67. Beam numbering.....94

68. Example of the blanking of blocked beams.....98

69. Example of blanking made beams.....98

70. Bit-coded beam mask for an MLG-2, with 30 beams.....99

71. Device selection, operating mode and user level.....103

72. SOPAS ET interface.....104

73. Display of the system boundaries.....104

74. Wizards.....105

75. Display of the process quality.....105

76. Basic functions and status of the output.....106

77. Detection area – Simulation.....106

78. Combining beams into zones.....107

79. Using beams for object recognition.....107

80. Using beams for height classification.....108

81. Using beams to classify the object position.....108

82. Blanking beams.....109

83. Blanked beams.....109

84. Rotating the image of the MLG-2.....109

85. Image of the MLG-2 rotated.....110

86. Expandable menus for configuration.....110

87. Effect of the output configuration on the status indicator.....111

88. Effects of the performance options on the system boundaries.....111

89. I/O configuration.....112

90. Beam numbering.....113

91. Example representation of the outer dimension.....114

92. Settings for height classification.....115

93. Setting the height with the mouse.....116

94. Beams highlighted in color in the simulation.....117

95. Object recognition, static.....117

96. Object recognition, dynamic.....118

97. Object recognition with tolerance.....118

98. Object detection/object width.....119

99. Setting the object size with the mouse.....120

100. Object detection of consecutive objects.....120

101. Hole detection/hole size.....121

102. Setting the hole size with the mouse.....121

103. Detection of consecutive beams.....122

104. Measurement of the outside dimension.....123

105. Measurement of the inside dimension.....123

106. Setting the outside dimension with the mouse.....123

107. Classification of the object position – object center is greater than or equal to n beam.....124

108. Classification of the object position – object center is smaller than or equal to n beam.....124

109. Classification of the object position – object center is equal to n beam.....125

110. Setting the object position with the mouse.....	125
111. Classification of the hole position – larger than or equal to hole center.....	126
112. Classification of the hole position – smaller than or equal to hole center.....	126
113. Classification of the hole position – equal to hole center.....	126
114. Setting the hole position with the mouse.....	127
115. Examples of the effect of a configured minimum pulse width.....	128
116. Measuring within zones.....	129
117. SOPAS ET beam window – Combining beams into zones.....	129
118. SOPAS ET – Assigning an application and zone to an output.....	130
119. Address configuration for Ethernet/IP™ .....	131
120. Teach-in successful.....	132
121. Teach-in failed.....	132
122. Teach-in quality.....	132
123. Example of the blanking of blocked beams.....	133
124. Example of blanking made beams.....	133
125. Performance options for Standard operating mode and Dust- and sunlight-resis- tant operating mode.....	134
126. Performance options for Transparent operating mode.....	135
127. Illustration of the measuring object.....	137
128. Left: “Cross beam switching”, right: “Cross beam measuring” .....	137
129. SOAPS ET – Activating cross beam switching mode.....	138
130. SOAPS ET – Activating cross beam measuring mode.....	139
131. SOAPS ET, beam window – “Cross beam measuring” display.....	139
132. SOPAS ET – “Blocked Beams Hold (BBH)” function.....	140
133. SOPAS ET – “Lost Beams Hold (LBH)” function.....	142
134. Add simulation object.....	142
135. Determine the shape of the simulation object.....	143
136. Determine the size of the simulation object.....	143
137. Start simulation.....	143
138. Simulation object in Simulation area.....	144
139. Beam status.....	144
140. Function programming.....	146
141. Interface of the integrated web server.....	149
142. Graph, MLG-2 Pro response time and minimum presence time.....	157
143. Response time and minimum presence time up to 2 m sensing range.....	158
144. Response time and minimum presence time up to 3.5 m sensing range.....	158
145. Response time and minimum presence time up to 8.5 m sensing range.....	159
146. Minimum detectable absorption required for devices with 2 m, 5 m and 8.5 m sensing range.....	159
147. Dimensional drawing MLG-2 ProNet (mm).....	160
148. Dimensional drawing 1 MLG-2 fieldbus module.....	163
149. Dimensional drawing 2 MLG-2 fieldbus module.....	164

## 18 List of tables

1.	Authorized personnel.....	9
2.	Example of an MLG-2 ProNet type code.....	12
3.	Meaning of the positions in the type code.....	12
4.	Monitoring height [mm].....	13
5.	Sensing range and minimum detectable object length.....	13
6.	Preconfiguration MLG-2 ProNet with interface E, H, or N.....	13
7.	Maximum monitoring heights.....	17
8.	Limiting range.....	17
9.	Minimum detectable object in relation to the beam separation of the MLG-2.....	21
10.	Minimum detectable object length with the MLG-2.....	22
11.	Minimum detectable object with cross-beam function on the MLG-2.....	23
12.	Minimum detectable object size with high measurement accuracy.....	24
13.	Minimum detectable object length with high measurement accuracy.....	24
14.	Functions available for or during teach-in.....	27
15.	Functions available for operating modes and performance options.....	27
16.	Configurable measuring and diagnostic functions for switching output Q1.....	28
17.	Auxiliary resources and diagnostic options.....	28
18.	System information.....	29
19.	Beam evaluation.....	29
20.	Settings for the interfaces.....	29
21.	Settings for SOPAS ET.....	30
22.	Available process data.....	30
23.	Application examples for the MLG-2.....	34
24.	Overcurrent protection.....	48
25.	Pin assignment, CONFIG connection of the fieldbus module.....	49
26.	Pin assignment, BUS OUT connection of the fieldbus module.....	50
27.	Pin assignment, BUS IN connection of the fieldbus module.....	50
28.	Pin assignment, POWER connection of the fieldbus module.....	50
29.	Pin assignment, sender connection.....	51
30.	Pinbelegung I/O-Anschluss des T-Verteilers.....	52
31.	Example CIP object model.....	58
32.	Overview of connection types.....	59
33.	Error messages from the RSLogix 5000 software.....	63
34.	Supported classes.....	64
35.	Class services of the identity object.....	65
36.	Class attributes of the identity object.....	65
37.	Instance services of the identity object.....	65
38.	Instance attributes of the identity object.....	65
39.	Bits of the status instance attribute.....	66
40.	Bits 4 to 7 of the status instance attribute.....	66
41.	Class services of the assembly object.....	67
42.	Class attributes of the assembly object.....	67
43.	Instance services of the assembly object.....	67
44.	Instance attributes of the assembly object.....	67
45.	I/O-Assemblies .....	68
46.	Datenfolge am Beispiel der I/O-Assembly 109.....	69
47.	NBB.....	70
48.	NBM.....	70
49.	FBB.....	71
50.	FBM.....	71
51.	LBB.....	72
52.	LBM.....	73
53.	NCBB.....	73
54.	NCBM.....	74

55.	CBB.....	74
56.	CBM.....	74
57.	ODI.....	75
58.	IDI.....	75
59.	QS – Switching output status.....	76
60.	SYS – System status.....	76
61.	Details of the system status.....	76
62.	QoR – Quality of Run (process quality).....	77
63.	QoT – Quality of Teach (Teach-in-Qualität).....	77
64.	RLC1 ... 16 transmission.....	77
65.	Example run-length code with 30 beams.....	78
66.	Example run-length code with the first beam blocked.....	78
67.	Beam status.....	79
68.	Beam functions for Zone measuring.....	79
69.	User-defined beam functions.....	81
70.	Control.....	81
71.	Details.....	82
72.	Instance 154 configuration assembly.....	82
73.	Instance 153 configuration assembly.....	83
74.	Access and data type nomenclature.....	84
75.	Class 100 with system information.....	84
76.	Class 101 for definition of operating mode and performance options.....	85
77.	Class 102 with auxiliary resources and diagnostic options.....	85
78.	Class 103 for the teach-in function.....	85
79.	Class 104 for beam evaluation.....	85
80.	Instance services of class 100.....	86
81.	Class 100 – Attribute 01h.....	86
82.	Class 100 – Attribute 02h.....	86
83.	Class 100 – Attribute 03h.....	86
84.	Class 100 – Attribute 04h.....	86
85.	Class 100 – Attribute 05h.....	87
86.	Class 100 – Attribute 06h.....	87
87.	Class 100 – Attribute 07h.....	87
88.	Instance services of class 101.....	88
89.	Class 101 – Attribute 01h.....	88
90.	Class 101 – Attribute 02h.....	88
91.	Class 101 – Attribute 03h.....	89
92.	Class 101 – Attribute 04h.....	89
93.	Details of Q1 configuration.....	89
94.	Selectable beam functions.....	90
95.	Class 101 – Attribute 05h.....	92
96.	Class 101 – Attributes 06h through 0Ah.....	92
97.	Instance services of class 102.....	93
98.	Class 102 – Attribute 01h.....	93
99.	Class 102 – Attribute 02h.....	93
100.	Class 102 – Attribute 03h.....	93
101.	Class 102 – Attribute 04h.....	94
102.	Class 102 – Attribute 05h.....	94
103.	Class 102 – Attribute 06h.....	95
104.	Class 102 – Attribute 07h.....	95
105.	Class 102 – Attribute 08h.....	95
106.	Instance services of class 103.....	96
107.	Class 103 – Attribute 01h.....	96
108.	Class 103 – Attribute 02h.....	96
109.	Teach-in result – Stored in 8 bit.....	97
110.	Class 103 – Attribute 03h.....	97
111.	Class 103 – Attribute 04h.....	97

112. Class 103 – Attribute 05h.....	97
113. Class 103 – Attribute 06h.....	98
114. Class 103 – Attribute 07h.....	99
115. Class 104 – Attributes 01h through 08h.....	99
116. Class 104 – Attribute 09h.....	100
117. Class 104 – Attributes 0Ah through 26h.....	100
118. Beam functions for preliminary evaluation.....	147
119. LED indicators on the sender.....	151
120. LED indicators on the receiver.....	151
121. LEDs am Feldbusmodul.....	152
122. MLG-2 data sheet – General data.....	154
123. MLG-2 data sheet – Electrical specifications.....	154
124. MLG-2 data sheet – Switching outputs.....	155
125. MLG-2 data sheet – Technical measurement specifications.....	155
126. Minimum sensing range with cross-beam function.....	156
127. Fieldbus module data sheet – General data.....	156
128. Fieldbus module data sheet – Electrical specifications.....	156
129. Fieldbus module data sheet – Ethernet interface.....	157
130. Detection height (mm)/number of beams.....	161
131. Distance from MLG-2 connection side to first beam.....	162
132. Equipment part numbers.....	166
133. Mounting material part numbers.....	166
134. Sliding nut part numbers.....	166
135. Artikelnummern T-Verteiler.....	166
136. Artikelnummern Anschlussleitung mit Dose.....	166
137. Artikelnummern Dosen.....	167
138. Artikelnummern Ethernet-Anschlussleitung (Feldbus).....	167
139. Artikelnummern Ethernet-Anschlussleitung (Konfiguration).....	167
140. Artikelnummern Verbindungsleitung MLG-2 zu Feldbusmodul.....	167



**Australia**

Phone +61 (3) 9457 0600  
1800 33 48 02 – tollfree  
E-Mail sales@sick.com.au

**Austria**

Phone +43 (0) 2236 62288-0  
E-Mail office@sick.at

**Belgium/Luxembourg**

Phone +32 (0) 2 466 55 66  
E-Mail info@sick.be

**Brazil**

Phone +55 11 3215-4900  
E-Mail comercial@sick.com.br

**Canada**

Phone +1 905.771.1444  
E-Mail cs.canada@sick.com

**Czech Republic**

Phone +420 2 57 91 18 50  
E-Mail sick@sick.cz

**Chile**

Phone +56 (2) 2274 7430  
E-Mail chile@sick.com

**China**

Phone +86 20 2882 3600  
E-Mail info.china@sick.net.cn

**Denmark**

Phone +45 45 82 64 00  
E-Mail sick@sick.dk

**Finland**

Phone +358-9-25 15 800  
E-Mail sick@sick.fi

**France**

Phone +33 1 64 62 35 00  
E-Mail info@sick.fr

**Germany**

Phone +49 (0) 2 11 53 01  
E-Mail info@sick.de

**Hong Kong**

Phone +852 2153 6300  
E-Mail ghk@sick.com.hk

**Hungary**

Phone +36 1 371 2680  
E-Mail ertekesites@sick.hu

**India**

Phone +91-22-6119 8900  
E-Mail info@sick-india.com

**Israel**

Phone +972-4-6881000  
E-Mail info@sick-sensors.com

**Italy**

Phone +39 02 27 43 41  
E-Mail info@sick.it

**Japan**

Phone +81 3 5309 2112  
E-Mail support@sick.jp

**Malaysia**

Phone +603-8080 7425  
E-Mail enquiry.my@sick.com

**Mexico**

Phone +52 (472) 748 9451  
E-Mail mario.garcia@sick.com

**Netherlands**

Phone +31 (0) 30 229 25 44  
E-Mail info@sick.nl

**New Zealand**

Phone +64 9 415 0459  
0800 222 278 – tollfree  
E-Mail sales@sick.co.nz

**Norway**

Phone +47 67 81 50 00  
E-Mail sick@sick.no

**Poland**

Phone +48 22 539 41 00  
E-Mail info@sick.pl

**Romania**

Phone +40 356-17 11 20  
E-Mail office@sick.ro

**Russia**

Phone +7 495 283 09 90  
E-Mail info@sick.ru

**Singapore**

Phone +65 6744 3732  
E-Mail sales.gsg@sick.com

**Slovakia**

Phone +421 482 901 201  
E-Mail mail@sick-sk.sk

**Slovenia**

Phone +386 591 78849  
E-Mail office@sick.si

**South Africa**

Phone +27 (0)11 472 3733  
E-Mail info@sickautomation.co.za

**South Korea**

Phone +82 2 786 6321  
E-Mail info@sickkorea.net

**Spain**

Phone +34 93 480 31 00  
E-Mail info@sick.es

**Sweden**

Phone +46 10 110 10 00  
E-Mail info@sick.se

**Switzerland**

Phone +41 41 619 29 39  
E-Mail contact@sick.ch

**Taiwan**

Phone +886-2-2375-6288  
E-Mail sales@sick.com.tw

**Thailand**

Phone +66 2 645 0009  
E-Mail marcom.th@sick.com

**Turkey**

Phone +90 (216) 528 50 00  
E-Mail info@sick.com.tr

**United Arab Emirates**

Phone +971 (0) 4 88 65 878  
E-Mail info@sick.ae

**United Kingdom**

Phone +44 (0)17278 31121  
E-Mail info@sick.co.uk

**USA**

Phone +1 800.325.7425  
E-Mail info@sick.com

**Vietnam**

Phone +65 6744 3732  
E-Mail sales.gsg@sick.com

Further locations at [www.sick.com](http://www.sick.com)