### Safety light curtain

# SLC30-1050/151





#### **Model Number**

### SLC30-1050/151

with 2 separate fail-safe semiconductor outputs

#### **Features**

- ٠ Sensing range up to 15 m
- Resolution 30 mm (hand protection) ٠
- Self-monitoring (type 4 according to IEC/EN 61496-1)
- Master/Slave detection, Plug and • Play
- Start/Restart disable ٠
- Degree of protection IP67 •
- Integrated function display •
- Pre-fault indication .
- Optional with relay monitor (Option • 129)
- Connection via appliance socket M12 x b1
- Safety outputs OSSD in potential-se-٠ parated semiconductor version
- Protective field height up to 1800 mm •

# Accessories


PG SLC-1050

Protective glass panes for SLC series


### **BA SLC**

laser alignment aid for safety light cutrtains series SLC

Dimensions

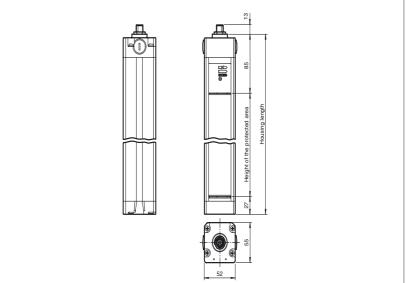

## **Electrical connection**

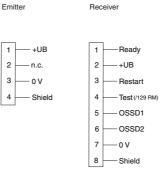


### **Pinout**

1

2

з

4

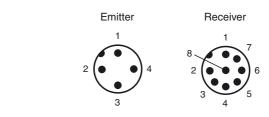



Refer to "General Notes Relating to Pepperl+Fuchs Product Information" USA: +1 330 486 0001

Germany: +49 621 776 4411 fa-info@us.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



Pepperl+Fuchs Group www.pepperl-fuchs.com

fa-info@de.pepperl-fuchs.com

1

Date of issue: 2017-12-11

199751\_eng.xml

Technical data	
System components	
Emitter	SLC30-1050-T/92
Receiver	SLC30-1050-R/151
General specifications	
Effective detection range	0.2 15 m
Light source	IRED
Light type	modulated infrared light
LED risk group labelling	exempt group
Tests	IEC/EN 61496
Safety type according to IEC/EN 614	
Width of protected area	0.2 15 m
Protection field height	1050 mm
Number of beams	56 can be selected with or without start/restart disable
Operating mode Optical resolution	30 mm
Angle of divergence	<5 °
Functional safety related parameter	
Safety Integrity Level (SIL)	SIL 3
Performance level (PL)	PL e
Category	Cat. 4
Mission Time (T <sub>M</sub> )	20 a
PFH <sub>d</sub>	1.5 E-8
Туре	4
Indicators/operating means	
Operation indicator	7-segment display in emitter
Diagnostics indicator	7-segment display in receiver
Function indicator	in receiver:
	LED red: OSSD off
	LED green: OSSD on LED yellow: Protected area free, system start-ready
Pre-fault indicator	LED orange
Control elements	switch for start/restart disable, transmission coding
Electrical specifications	
Operating voltage U	24 V DC (-30 %/+25 %)
No-load supply current	Emitter: ≤ 100 mA receiver: ≤ 150 mA
Protection class	III
Input	
Activation current	approx. 10 mA
Activation time	0.03 1 s
Test input	Reset-input for system test (not for option /129)
Function input	Start release
Output	
Safety output	2 separated fail safe semiconductor outputs
Signal output	1 PNP, max. 100 mA for start readiness
Switching voltage	Operating voltage -2 V
Switching current	max. 0.5 A
Response time	20 ms
Conformity	
Functional safety	ISO 13849-1
Product standard	EN 61496-1 ; IEC 61496-2
Ambient conditions	
	0 55 %C (20 121 %E)
Ambient temperature Storage temperature	0 55 °C (32 131 °F) -25 70 °C (-13 158 °F)
Relative humidity	max. 95 %, not condensing
Mechanical specifications	man oo rej not oondonoing
Housing length L	1160 mm
Degree of protection	IP67
Connection	Emitter: M12 connector, 4-pin Receiver: M12 connector, 8-pin
Material	·····, p ···· ·····
Housing	extruded aluminum profile, RAL 1021 (yellow) coated
Optical face	Plastic pane
Mass	Per 3450 g
Approvals and certificates	
CE conformity	CE
UL approval	cULus Listed
CCC approval	CCC approval / marking not required for products rated ≤36 V
TÜV approval	


2


Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com


Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



### **Curves/Diagrams**

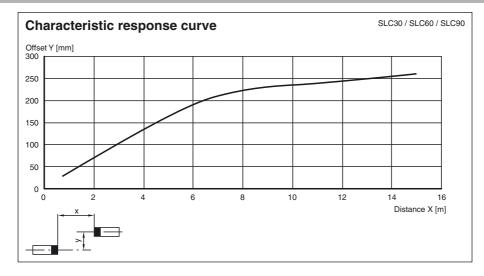

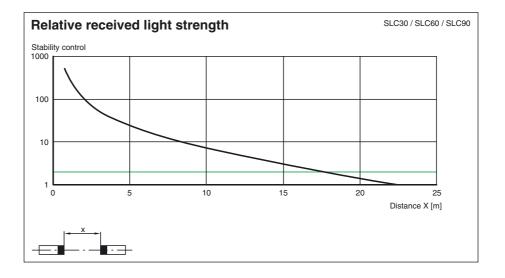

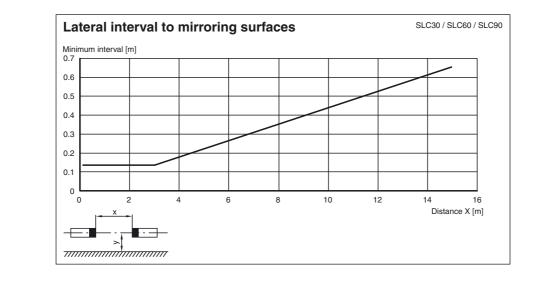

#### Notes

#### Master slave mode

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



Master:	SLC (semiconductor)
	or
	SLC/31 (relay)
Slave:	SLCS

Using slaves makes it possible to lengthen protective fields or to form protective fields that lie in more than just one level. When you select slaves that can be connected, you should take into consideration that the maximum number of 96 light rays must not be exceeded.

There are slaves for transmitters and receivers. These may simply be connected to the master light curtain. As many as 2 slaves may be connected respectively to the transmitter and receiver unit.

Installation:

- The end cap should be screwed off for the light curtain (without cable gland). 1
- 2 The plug-in jumper on the connectors of the printed circuit board, which is now visible, should be removed.
- 3 The slave is designed so that the cap located on the cable connector can be plugged directly onto the open end of the light curtain with the printed circuit board.
- 4 After you have screwed on the connection cap, the system is complete.

#### System accessories

- Mounting set SLC •
- Test rods SLC14/SLC30/SLC60
- Protective glass pieces for SLC (to protect the optically functional surface)
- Lateral screwed connection SLC
- Profile alignment aid
- Laser alignment aid SLC
- Mirror for SLC (for securing hazardous areas on multiple sides)
- Ground pillar UC SLP/SLC
- Housing for pillar Enclosure UC SLP/SLC
- Collision protector Damping UC SLP/SLC

4

