









Model Number

SLC30-1350/31

with 2 relay outputs with two force-guided normally open contacts

Features

- Sensing range up to 15 m
- Resolution 30 mm (hand protection)
- · Protective field height up to 1800 mm
- Self-monitoring (type 4 according to IEC/EN 61496-1)
- Master/Slave detection, Plug and Play
- Start/Restart disable
- Degree of protection IP67
- · Integrated function display
- Pre-fault indication
- Safety outputs OSSD in potential-separated semiconductor design or with monitored, compelled connection NC-contacts
- Optional with relay monitor (Option 129)

Accessories


PG SLC-1350

Protective glass panes for SLC series


BA SLC

laser alignment aid for safety light cutrtains series SLC

Dimensions

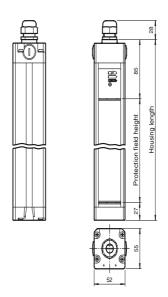

Electrical connection

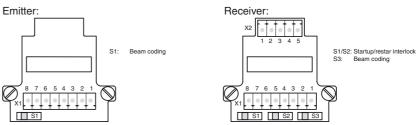

terminal	emitter	receiver SLCR/31 (relay output)	receiver SLCR/31 (Relay monitor)
X1:1	Functional earth	Functional earth	Functional earth
X1:2		test (input)	Relay monitor
X1:3		OSSD2.2 (output)	OSSD2.2 (output)
X1:4		OSSD1.2 (output)	OSSD1.2 (output)
X1:5		OSSD2.1 (output)	OSSD2.1 (output)
X1:6		OSSD1.1 (output)	OSSD1.1 (output)
X1:7	0 V AC/DC	0 V AC/DC	0 V AC/DC
X1:8	24 V AC/DC	24 V AC/DC	24 V AC/DC
X2:1		Start release (output)	Start release (output)
X2:2		Status OSSD (output)	Status OSSD (output)
X2:3	Not placed on board	24 V reference potential for I/O	24 V reference potential for I/O
X2:4		0 V reference potential for I/O	0 V reference potential for I/O
x2:5		Startup readiness (input)	Startup readiness (input)

ase date: 2017-12-11 10:37 Date of issue: 2017-12-11 417945_eng.xml

PEPPERL+FUCHS

Mass

CE conformity UL approval

CCC approval

TÜV approval


Approvals and certificates


Per 4350 g

cULus Listed

CCC approval / marking not required for products rated ≤36 V

SLC30 / SLC60 / SLC90 Characteristic response curve Offset Y [mm] 200 150 100 50 10 12 16 Distance X [m]

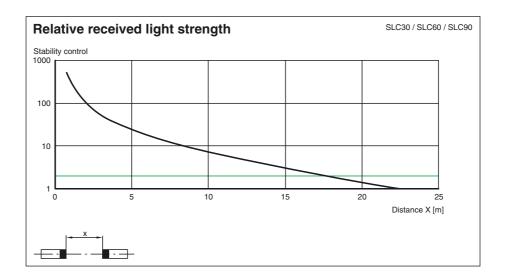

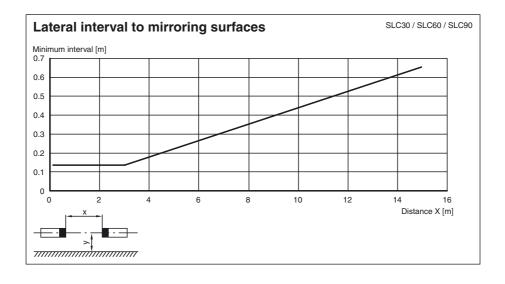

Notes

Master slave mode

Master: SLC..-... (semiconductor)

or

SLC ..-../31 (relay)

Slave: SLC..-...-S

Using slaves makes it possible to lengthen protective fields or to form protective fields that lie in more than just one level. When you select slaves that can be connected, you should take into consideration that the maximum number of 96 light rays must not be exceeded.

There are slaves for transmitters and receivers. These may simply be connected to the master light curtain. As many as 2 slaves may be connected respectively to the transmitter and receiver unit.

Installation:

- 1 The end cap should be screwed off for the light curtain (without cable gland).
- 2 The plug-in jumper on the connectors of the printed circuit board, which is now visible, should be removed.
- 3 The slave is designed so that the cap located on the cable connector can be plugged directly onto the open end of the light curtain with the printed circuit board.
- 4 After you have screwed on the connection cap, the system is complete.

System accessories

- Mounting set SLC
- Test rods SLC14/SLC30/SLC60
- Protective glass pieces for SLC (to protect the optically functional surface)
- · Lateral screwed connection SLC
- · Profile alignment aid
- Laser alignment aid SLC
- Mirror for SLC (for securing hazardous areas on multiple sides)
- Ground pillar UC SLP/SLC
- Housing for pillar Enclosure UC SLP/SLC
- Collision protector Damping UC SLP/SLC