



CE

Device manual

ioControl


CR2050

CR2051

CR2052

UK

80268387 / 00 04 / 2018

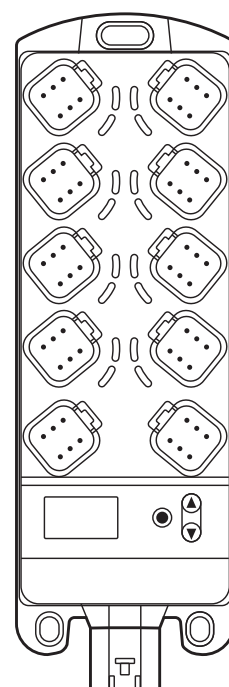

Contents

1	Preliminary note	4
1.1	Explanation of symbols	4
2	Safety instructions	4
2.1	General safety instructions.	4
2.2	Target group	5
2.3	Electrical connection	5
2.4	Tampering with the unit	6
3	Functions and features	6
4	Function	7
5	Installation.	7
5.1	Mounting surface	7
5.2	Fixing	7
5.3	Cable seal	8
6	Electrical connection.	9
6.1	General electrical connection	9
6.2	Connection accessories	10
6.3	Frequency inputs	10
6.4	Reverse polarity protection.	10
6.5	Supply of the signal generators at the inputs	10
6.6	Fuses	10
6.7	Examples for connection types	11
6.7.1	CR2050	11
6.7.2	CR2051	12
6.7.3	CR2052	13
7	Operating and display elements	14
7.1	Menu structure	15
7.2	Status indication of the inputs/outputs (I/O LEDs, yellow)	16
8	Set-up	17
8.1	I/O module	17
8.1.1	Display mode	17
8.1.2	Parameter setting.	17
8.1.3	List of parameters	18
8.2	Controller	19
8.2.1	Programming	19
8.3	Required documentation	19
8.4	Required hardware.	19
9	Technical data.	20
9.1	CR2050	20
9.2	CR2051	26
9.3	CR2052	32

10	Maintenance, repair and disposal	39
10.1	Maintenance	39
10.2	Cleaning the housing surface	39
10.3	Repair	39
10.4	Disposal	39
11	Approvals/standards	39
12	Appendix	40
12.1	EMCY Object	40
12.2	Object directory CR205x	40
12.2.1	Device-specific CR2050	44
12.2.2	Device-specific CR2051	65
12.2.3	Device-specific CR2052	89
12.3	SDOs error messages	121
12.3.1	CR2050	121
12.3.2	CR2051	123
12.3.3	CR2052	125

1 Preliminary note

This document applies to devices of the type "ioControl" (art. no.: CR2050, CR2051 and CR2052).



It is part of the device.

The document contains information about the correct handling of the device.

Adhere to the safety instructions.

Technical data, approvals, accessories and further information at:
www.ifm.com.

1.1 Explanation of symbols

- ▶ Instructions
- > Reaction, result
- [...] Designation of keys, buttons or indications
- Cross-reference
-  Important note
Non-compliance may result in malfunction or interference.
-  Information
Supplementary note

WARNING

Warning of serious personal injury.
Death or serious irreversible injuries may result.

CAUTION

Warning of personal injury.
Slight reversible injuries may result.

NOTE

Warning of damage to property.

2 Safety instructions

2.1 General safety instructions

- Read this document before setting up the device and keep it during the entire service life.
- Ensure that the product is suitable for your application and operating conditions without any restrictions.

- Improper or non-intended use may lead to malfunctions of the unit, to unwanted effects in the application or to a loss of the warranty claims. The manufacturer assumes no liability for any consequences caused by tampering with the device or incorrect use by the operator.
- Installation, electrical connection, set-up, operation and maintenance of the unit must be carried out by qualified personnel authorised and trained by the machine operator.
- After installation, maintenance or repair of the system perform a complete function check.
- The system installer is responsible for the safety of the system into which the device is integrated.

UK

2.2 Target group

These instructions are intended for authorised persons according to the EMC and low-voltage directives. The device must be installed, connected and put into operation by a qualified electrician.

2.3 Electrical connection

WARNING

Disconnect the device externally before handling it.

Supply via a mobile on-board system 12/24V battery voltage or safety extra-low voltage (SELV) according to the technical data. The supply is directly transferred to the connected sensors/actuators.

Accessible surfaces of the housing are insulated from the circuits with basic insulation to IEC 61010-1, secondary circuit with max. 32 V DC, supplied from main circuit up to 300 V of overvoltage category II.

The external wiring has to be carried out in a way that ensures the required separation from other circuits.

The cable cross section is to be adapted to the fuse used, taking into account the applicable regulations for the application.

The wiring has to be suitable for the max. temperature reached in the application.

If the supplied SELV voltage is externally grounded (SELV becomes PELV), the responsibility lies with the user and the respective national installation regulations must be complied with.

The connections may only be supplied with the signals indicated in the technical data and/or on the device label and only the approved accessories of ifm electronic gmbh may be connected.

2.4 Tampering with the unit

⚠ WARNING

In case of malfunctions or uncertainties please contact the manufacturer. Any tampering with the device can seriously affect the safety of operators and machinery.

3 Functions and features

The freely programmable controllers of the "ioControl" series are rated for use under difficult conditions (e.g. extended temperature range, strong vibration, intensive EMC interference). They are suitable for direct installation in mobile machines, even in wet environments.

By means of the application software the user can configure the inputs and outputs to adapt to the respective application. The controllers can be used as CANopen slave, CANopen master or intelligent I/O module (→ 9 Technical data).

Application-specific extensions and adaptations are possible in conjunction with additional products of the modular ioControl and ecomatmobile Basic design.

⚠ WARNING

The "ioControl" series is not approved for safety tasks in the field of safety of persons.

NOTE

The "ioControl" controllers are intended for installation in vehicle bodies, not in engines.

NOTE

The device must only be used within the limits indicated in the technical data (→ 9 Technical data). If the device is used in a way that is not intended by the manufacturer, the protection supported by the device may be impaired.

4 Function

- The user can easily create the application software by means of the IEC 61131-3 compliant programming system CODESYS 2.3. On delivery the devices are pre-configured as CANopen slaves.
- 2 CAN interfaces
- Configurable inputs/outputs
- Status LEDs, I/O Leds and 4-digit 10-segment display
- Operating keys

More information and accessories at www.ifm.com.

UK


5 Installation

5.1 Mounting surface

NOTE

The housing must not be exposed to any torsional forces or mechanical stress.



- ▶ Mount the device on a flat surface.
- ▶ Use compensating elements if there is no flat mounting surface available.

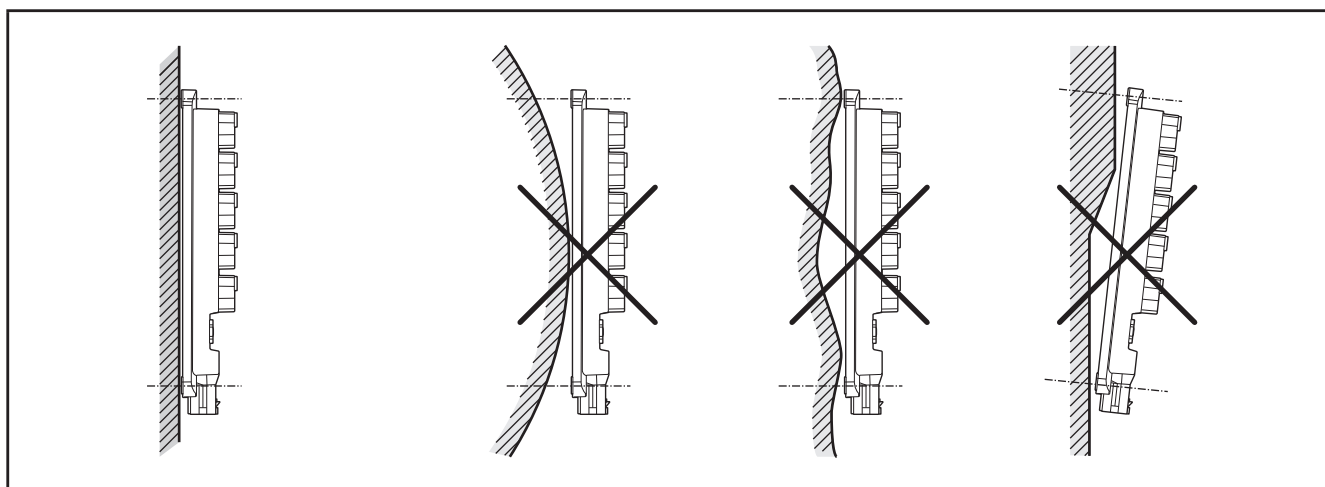

Mounting surface

5.2 Fixing

- ▶ Insert the enclosed tubular rivets from the back of the module in the 3 fixing holes.
- ▶ Fix the device using 3 washers and M5 screws. Tighten the screws alternately.

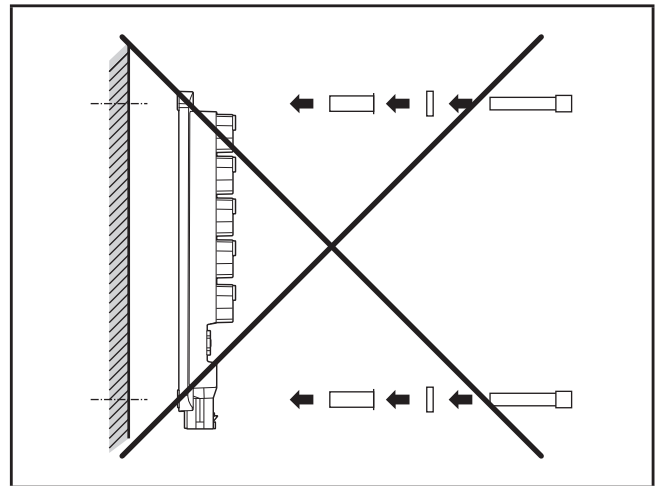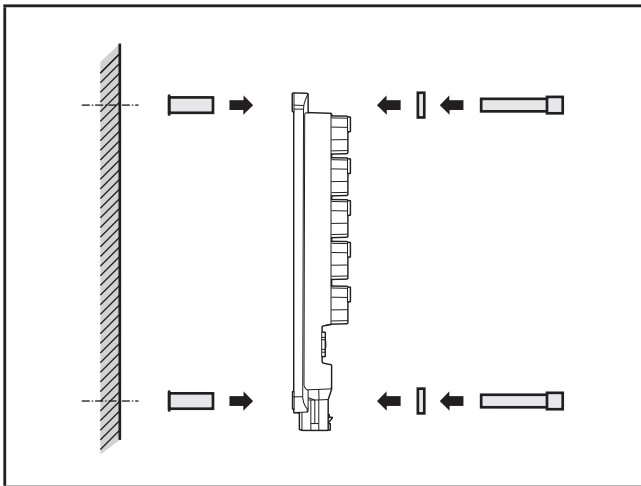

Use of the tubular rivets

Tightening torque: 2.0 Nm

Hole dimensions (→ 9 Technical data)

Screws to be used (examples):	Standard
Cylinder screws with hexagon socket (M5 x L)	DIN EN ISO 4762
Cylinder screws with hexagon socket and low head (M5 x L)	DIN 7984

5.3 Cable seal

NOTE


Protection rating IP 65 / IP 67 is only guaranteed if all ports are sealed by means of connectors or dummy plugs.

6 Electrical connection

6.1 General electrical connection

The supply cables and the CAN2 interface are connected via the X1 connector on the bottom of the device. The inputs/outputs, the CAN1 interface and the CAN supply are connected via the Deutsch connectors on the front side of the housing.

Wiring (→ 9 Technical data)

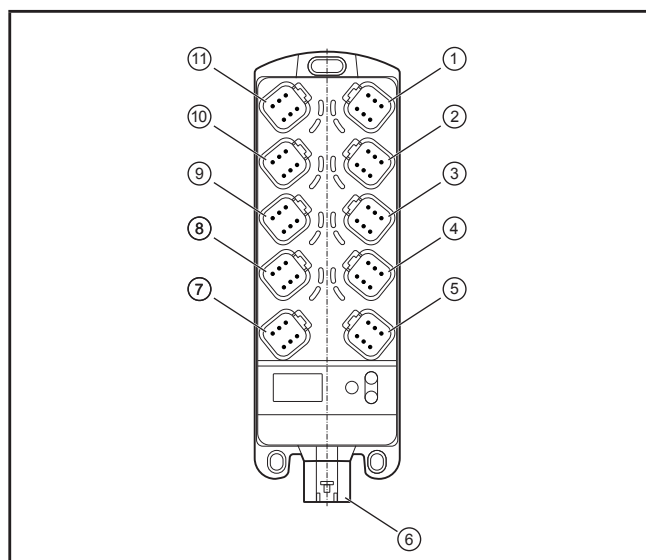

- 1: Connector 8
- 2: Connector 6
- 3: Connector 4
- 4: Connection 2
- 5: CAN1 OUT
- 6: X1 - Connection cable plug
- 7: CAN1 IN
- 8: Connector 1
- 9: Connector 3
- 10: Connector 5
- 11: Connector 7

Connector area (here e.g. CR0403)

Connector	CR2050	CR2051	CR2052	Number of poles
1	IN00 / IN08	OUT00 / OUT08	IN00 / IN04	6
2	IN01 / IN09	OUT01 / OUT09	OUT00 / OUT04	6
3	IN02 / IN10	OUT02 / OUT10	IN01 / IN05	6
4	IN03 / IN11	OUT03 / OUT11	OUT01 / OUT05	6
5	IN04 / IN12	OUT04 / OUT12	IN02 / IN06	6
6	IN05 / IN13	OUT05 / OUT13	OUT02 / OUT06	6
7	IN06 / IN14	OUT06 / OUT14	IN03 / IN07	6
8	IN07 / IN15	OUT07 / OUT15	OUT03 / OUT07	6
CAN1 IN	CAN1 interface			6
CAN1 OUT	CAN1 interface (e.g. for looping through)			6
X1	Supply voltage and CAN2 interface			6

NOTE

Wrong connection may cause damage to the device.

► Observe the safety instructions (→ 2.3 Electrical connection).

UK

- ▶ Basically all supply and signal cables must be laid separately.
- ▶ Lay supply and signal cables away from the device using the shortest possible route.
- ▶ All connected cables must be provided with a strain relief max. 400 mm behind the cable entry.
- ▶ Cover unused terminals with dummy plugs / seals.

6.2 Connection accessories

Information about the available accessories at www.ifm.com

6.3 Frequency inputs

CR2050 / CR2052:

- ▶ Operate frequency inputs with screened cables so that useful signals are not affected by external interference.

6.4 Reverse polarity protection

Reverse polarity protection of the operating voltage is only ensured in case of operation on an on-board system in connection with a fuse. In case of operation via a power supply, there is no reverse polarity protection of the operating voltage.

CR2051: There is no reverse polarity protection of the CAN supply voltage, as this voltage is not used within the device.

6.5 Supply of the signal generators at the inputs

CR2050 / CR2052:

- ▶ Use sensor voltage VBB_s of the corresponding connector as supply voltage for the signal generators at the inputs (e.g. switches or sensors).
- ▶ If the input (switch or sensor) is supplied via an external voltage, protect this voltage with max. 3 A.

6.6 Fuses

- ▶ The individual electric circuits must be protected in order to protect the whole system.

Designation		Potential	Connector: Pin	Fuse
VBB_s	Supply sensors/module	8...32 V DC	AMP connector: Pin 4	CR2050: 3 A CR2052: 3 A
VBB_1	Supply outputs CR2050: not available CR2051: OUT00, 02, 04, 06, 08, 10, 12, 14 CR2052: not available	8...32 V DC	AMP connector: Pin 4	CR2050: - CR2051: ≤ 25 A CR2052: -
VBB_2	Supply outputs CR2050: not available CR2051: OUT01, 03, 05, 07, 09, 11, 13, 15 CR2052: OUT00...07	8...32 V DC	AMP connector: Pin 6	CR2050: - CR2051: ≤ 25 A CR2052: ≤ 25 A


Designation		Potential	Connector: Pin	Fuse
V_{CAN}	Optional supply CAN1 interface CR2050: connected to VBBS CR2051: no connection to VBB_S CR2052: connected to VBB_S	8...32 V DC	CAN IN: Pins 3+4	CR2050: - CR2051: 3 A CR2052: -

- ▶ Connect the ground pins belonging to the supply voltages (GND_1 , GND_2 , if appl. GND_{CAN}) to the common ground.


6.7 Examples for connection types

UK

6.7.1 CR2050

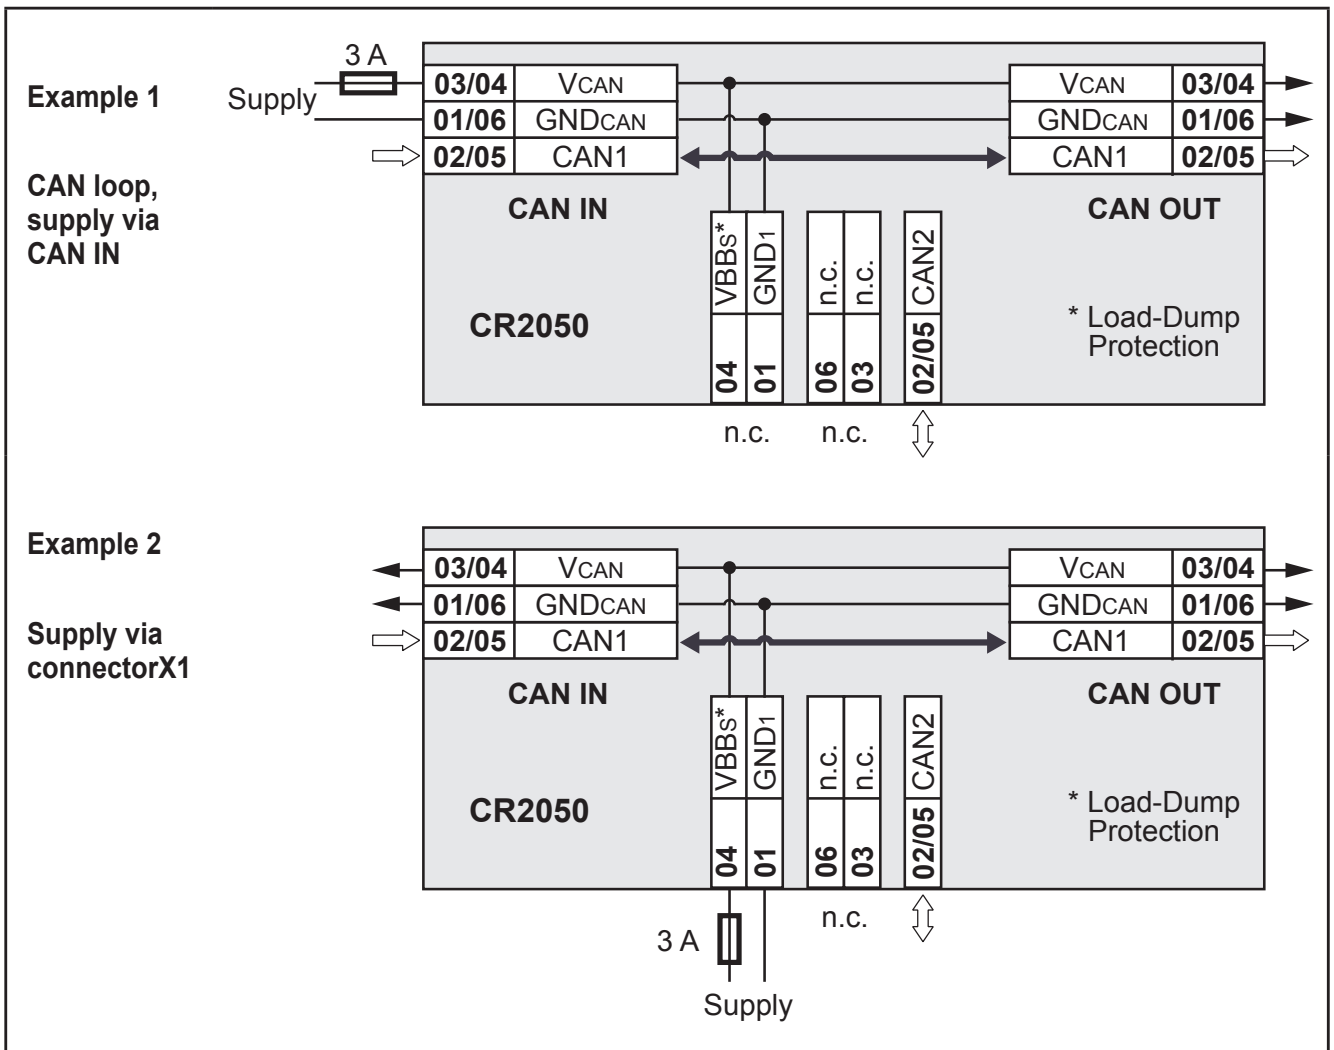


6.7.2 CR2051

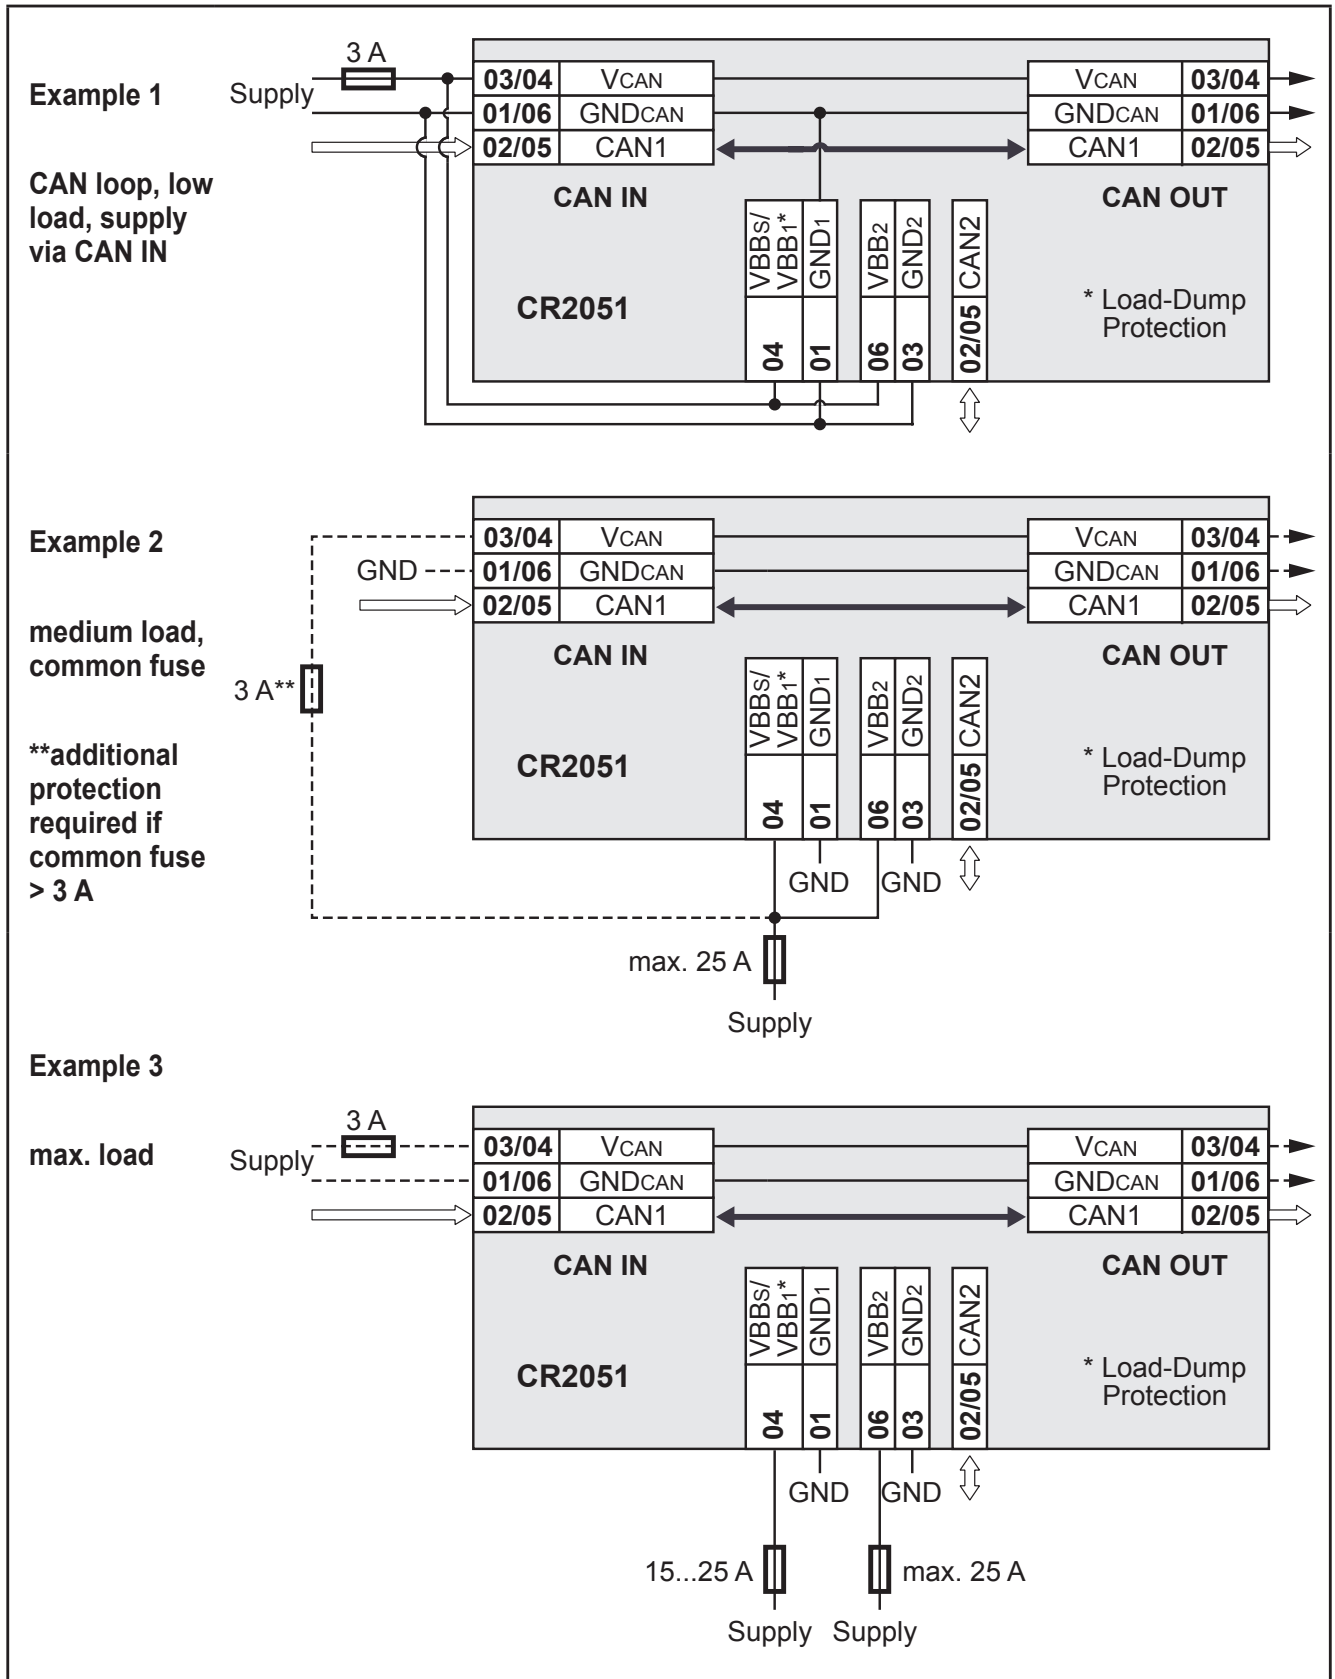


Protection against overvoltage from the vehicle's on-board system is only ensured if the connection VBB_S/VBB₁ is protected with at least 15 A (example 3) or if all voltages are protected by means of a common fuse (examples 1 and 2).

6.7.3 CR2052

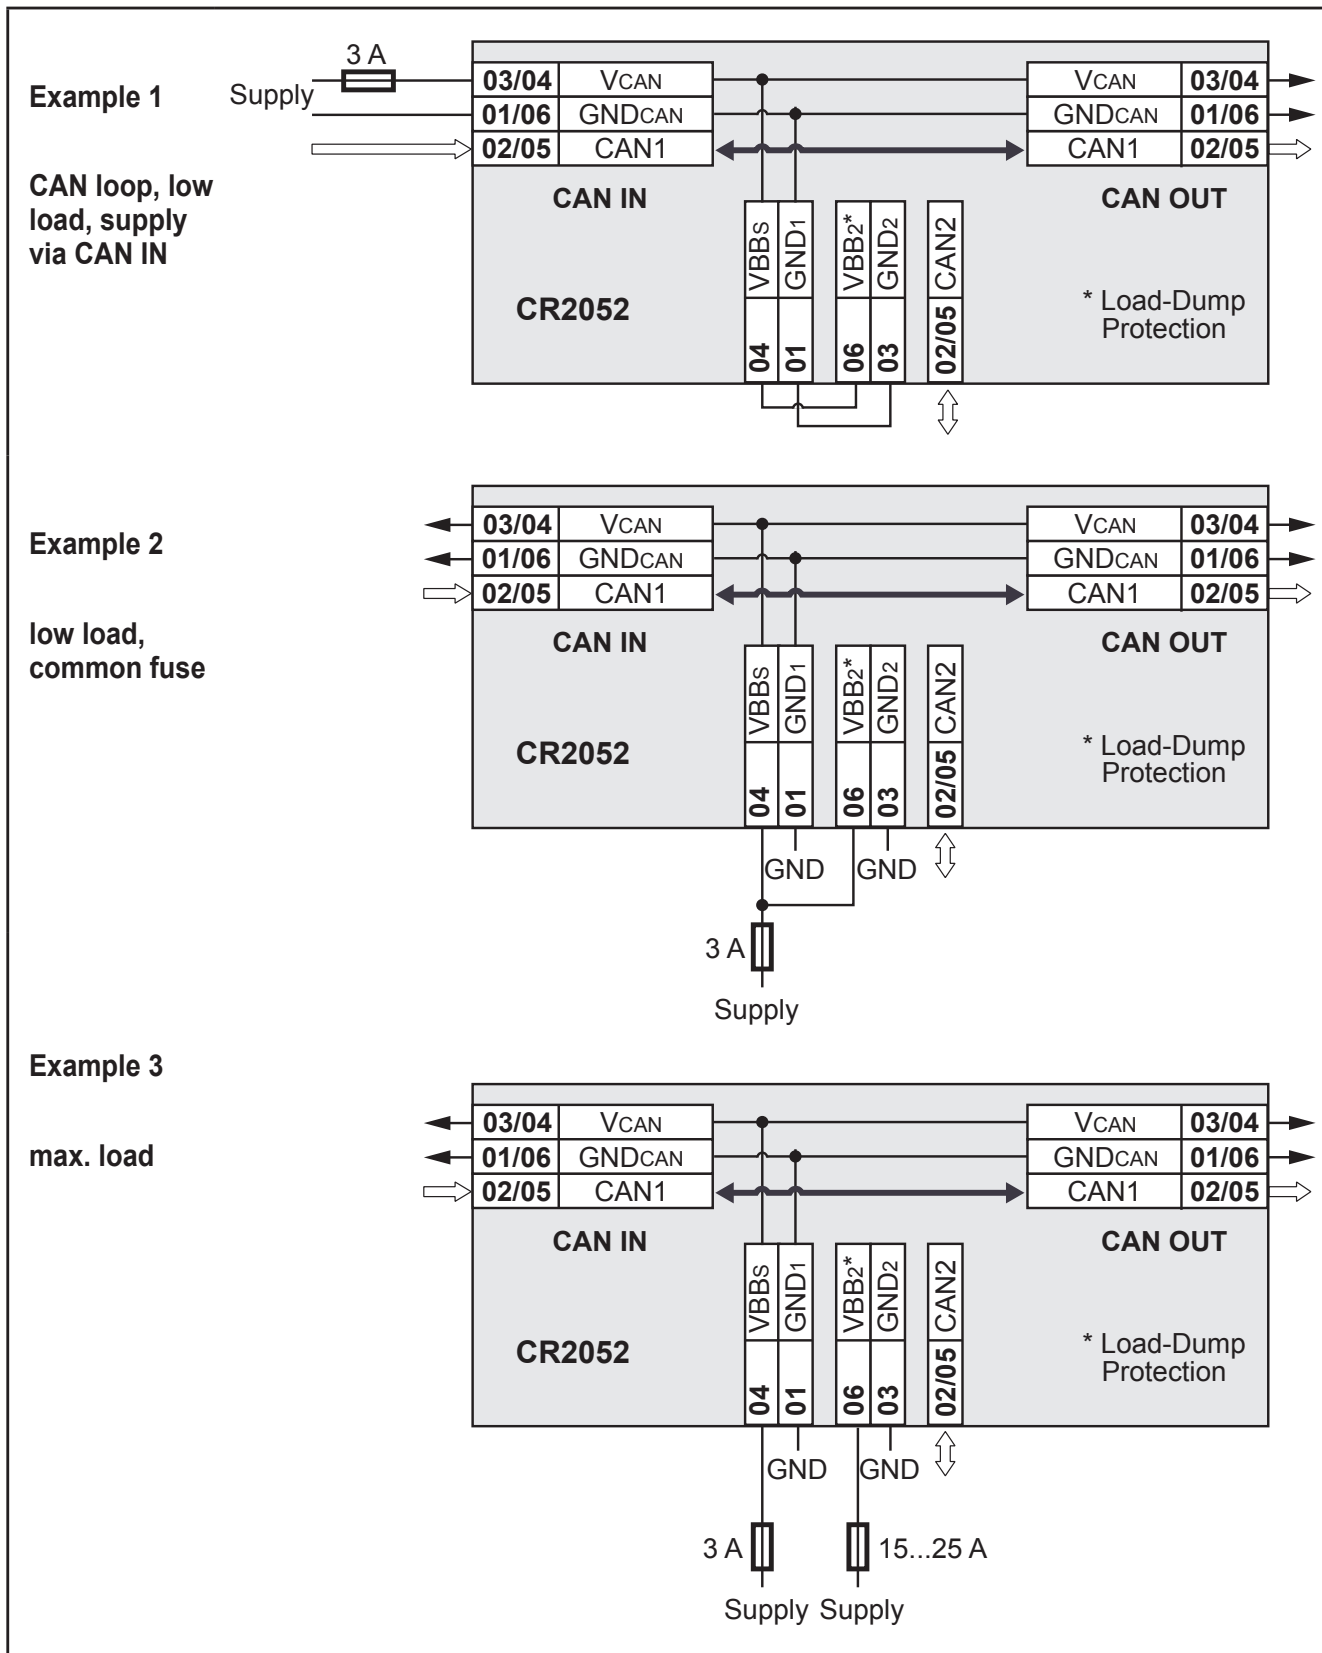

Protection against overvoltage from the vehicle's on-board system is only ensured if the connection VBB₂ is protected with at least 15 A (example 3) or if all voltages are protected by means of a common fuse (examples 1 and 2).


7 Operating and display elements

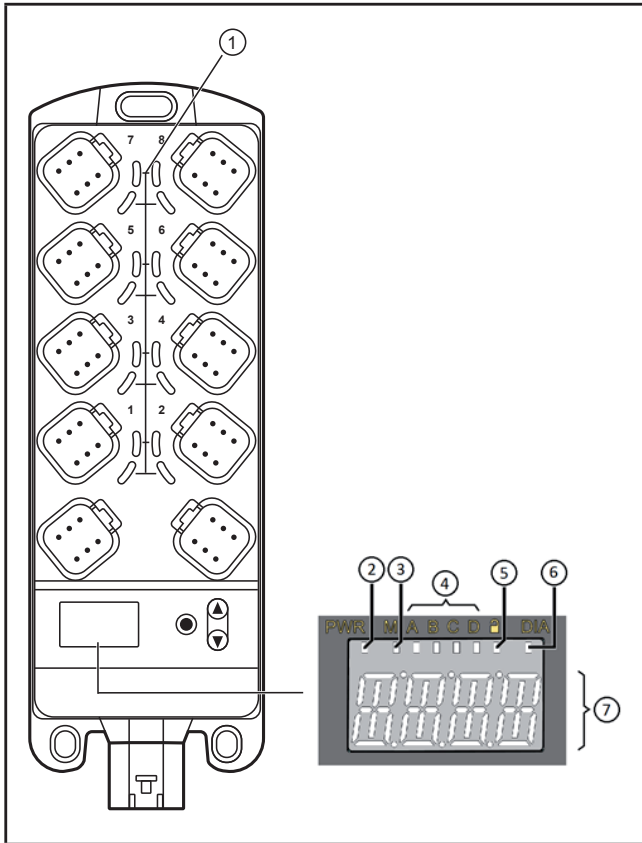

- 1: I/O LEDs (yellow)
- 2: Power LED (green)
- 3: Mode LED (green)
- 4: Application LEDs LED A...LED D (green)
- 5: Lock LED (green)
- 6: Diagnostics LED (red)
- 7: 4-digit 10-segment display

Indicators

10-segment display (→ 9 Technical data)

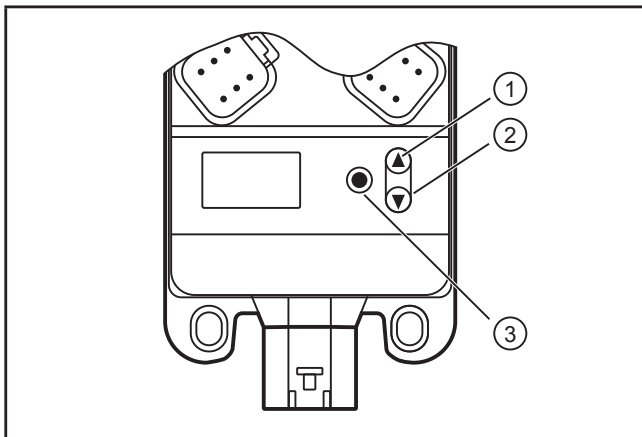

- 1: UP button
- 2: DOWN button
- 3: ENTER button


Operating elements

Pushbutton functions (→ 8.1 I/O module).

7.1 Menu structure



The following description of the menu structure refers to the factory setting as I/O module. When the device is configured as a controller, the corresponding menu structure has to be defined (see system manual ioControl).

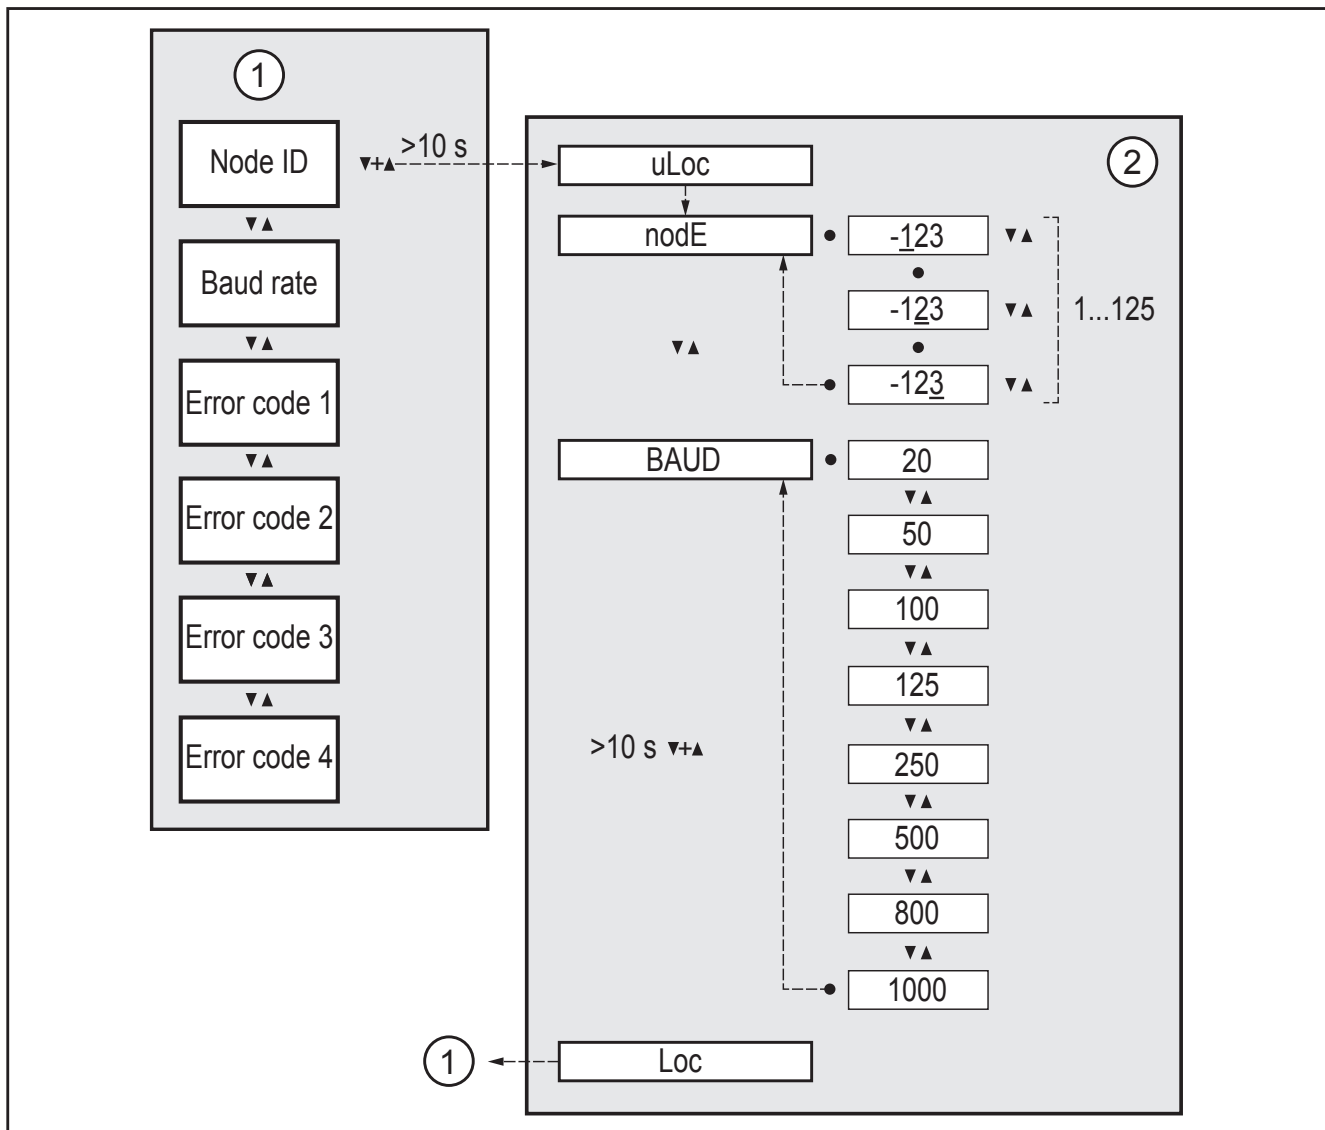

UK

1: Display mode (→ 8.1.1)

2: Editing mode (→ 8.1.2)

List of parameters: (→ 8.1.3)

7.2 Status indication of the inputs/outputs (I/O LEDs, yellow)

I/O configuration (see attached object directory)	LED status	Description
0 (not used)	Off	
1 (digital input B _L)	Off	Input signal FALSE
	On	Input signal TRUE
2 (digital output B _H)	Off	Output signal FALSE
	On	Output signal TRUE
3 (voltage input 10 V)	Off	
4 (PWM output)	Off	PWM = 0
	On	PWM > 0
5 (current-controlled output)	Off	Current value ≤ 20 mA
	On	Current value ≤ 20 mA
6 (voltage input 32 V, ratiometric)	Off	
7 (current input 20 mA)	Off	
	2 Hz	Fault at the input
9 (voltage input 32 V)	Off	
10 (digital input B _L)	Off	Input signal FALSE
	On	Input signal TRUE
11 (digital input B _L , mit Diagnose)	Off	Input signal FALSE
	On	Input signal TRUE
	2 Hz	Fault at the input
12 (digital input B _H)	Off	Input signal FALSE
	On	Input signal TRUE
14 (frequency input)	Off	
	2 Hz	Fault at the input
15 (digital output B _H , with diagnostics)	Off	Output signal FALSE
	On	Output signal TRUE
	2 Hz	Fault at the output
16 (digital output B _H , with diagnostics, short-circuit proof and overload protected)	Off	Output signal FALSE
	On	Output signal TRUE
	2 Hz	Fault at the output
18 (resistor input)	Off	
	2 Hz	Fault at the input
20 (interval measurement)	Off	
	2 Hz	Fault at the input

8 Set-up

8.1 I/O module

On delivery the device is configured as I/O module.

After power on the 10-segment display indicates the article number of the device, followed by the set node ID.

8.1.1 Display mode

If the green Lock LED is on, the device is in display mode. The device can only indicate the set node ID and baud rate and, if appl., error messages; parameters cannot be edited.

- ▶ Press the DOWN button.
- > The device displays the set baud rate.
- ▶ Press the DOWN button.
- > The device displays error code 1, if applicable.
- ▶ Press the DOWN button again.
- > Every time the DOWN button is pressed, the device displays another error code, if applicable.
- ▶ Use the UP button to go back.

Max. 4 different error codes can occur and be displayed:

Error code	Description
SH	Short circuit to GND
OP	Wire break
oL	Excessive current
Comm	Communication error

If no button is activated for 10 s, the device displays the set node ID.

8.1.2 Parameter setting

- ▶ Press UP and DOWN simultaneously for at least 10 s to change to the editing mode.
- > Green Lock LED goes out.
- > Parameters can be edited.
- > "uLoc" is displayed for 5 s
- > "nodE" is displayed
- ▶ Press the ENTER button.
- > The device displays the set node ID.

- > The 1st digit to be edited flashes.
 - ▶ Use the UP and DOWN buttons to set the requested value.
 - ▶ Use the ENTER button to go to the next digit.
- > The 2nd digit to be edited flashes.
 - ▶ Use the UP and DOWN buttons to set the requested value.
 - ▶ Use the ENTER button to go to the next digit.
- > The 3rd digit to be edited flashes.
 - ▶ Use the UP and DOWN buttons to set the requested value.
 - ▶ Press the ENTER button.
- > The set node ID is confirmed.
- > "nodE" is displayed
 - ▶ Press the DOWN button.
- > "BAUD" is displayed
 - ▶ Press the ENTER button.
- > The device displays the set baud rate.
 - ▶ Use the UP and DOWN buttons to set the requested value.
 - ▶ Press the ENTER button.
- > The set baud rate is confirmed.



Changes of the parameters are only applied after a reset of the device.

Exit the editing mode:

- ▶ Press UP and DOWN simultaneously for at least 10 s.
- > Green Lock LED on.
- > Parameters cannot be edited.
- > "Loc" is displayed for 5 s, then the set node ID is displayed



If no button is activated for 30 s, the device automatically finishes the editing mode.

8.1.3 List of parameters

Parameters	Function	Value range	Default value
nodE	Node ID of the device	1..125	125
BAUD	Baud rate	20, 50, 100, 125, 250, 500, 800, 1000	250 kBit/s

8.2 Controller

The device can be configured as a controller. The existing menu structure and the properties as I/O module will be lost.

8.2.1 Programming

The user can easily create the application software by means of the IEC 61131-3 compliant programming system CODESYS 2.3.

WARNING

The user is responsible for the safe function of the application programs which he created himself. If necessary, he must additionally carry out an approval by corresponding supervisory and test organisations according to the national regulations.

UK



For notes on the setting of the CAN ID and the baud rate when used as CANopen slave, refer to the system manual.

8.3 Required documentation

In addition to the CODESYS programming system, the following documents are required for programming and set-up of the device:

- Programming manual CODESYS V2.3
(alternatively as online help)
- System manual ioControl
(alternatively as online help)

The manuals can be downloaded from the internet:
www.ifm.com

8.4 Required hardware

If used as mobile controller a CAN interface for connection to a PC or notebook is required to load the application program to the device.

Example:

- CAN/RS232 USB interface CANfox
- Adapter cable for CANfox

You can find more information about the available accessories at:
www.ifm.com

9 Technical data

9.1 CR2050

CR2050

I/O module
digital and analogue
for R360 system
CANopen slave


Mobile controller
Programming
to IEC 61131-3

16 inputs
2 CAN interfaces

8...32 V DC

CE

E1

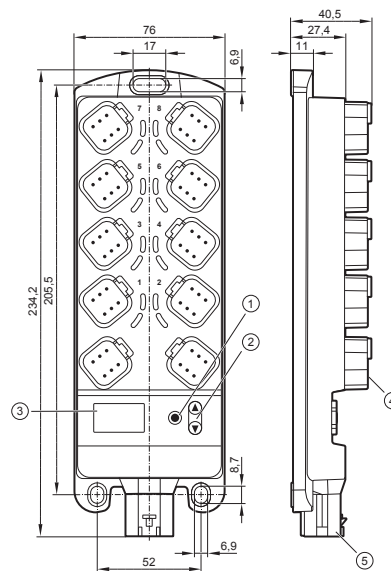

- 1: ENTER button
2: UP/DOWN buttons
3: 10-segment display
4: DEUTSCH connector
5: AMP connector

Technical data

Mechanical data

Housing

Dimensions (H x W x D)

Installation

Connection

Inputs
CAN1 interface
Operating voltage, CAN2

Protection rating

Operating/storage temperature

Max. perm. relative humidity

Max. height above sea level

Pollution degree

Weight

Electrical data

Operating voltage

Current consumption

Overvoltage
Undervoltage detection
Undervoltage shutdown

Processor

Memory (total)

Memory allocation

Modular control system Usable as CANopen slave or intelligent I/O module

Housing: PA6/6.6
Display: PA
Pushbuttons: silicone

234 x 76 x 40.5 mm (without tubular rivet)

Fixing by means of 3 M5 screws to DIN EN ISO 4762 or DIN 7984, 3 tubular rivets to DIN 7340 and 3 washers to DIN EN ISO 7092 (tubular rivets and washers are supplied)

Supply: MCP2.8 6 poles for connector TE-AMP 1745078-1
Inputs/outputs: Deutsch DT04-6S 6 poles
Contacts: AMP: CuFe tin-plated; Deutsch: CuZn, gold-plated

8 x 6 poles
2 x 6 poles
1 x 6-poles

IP 65 and IP 67 (all connectors inserted)

-40...85° C / -40...85° C

90%, non condensing

2000 m

2

500 g

8...32 V DC

100 mA (at 24 V DC) / 185 mA (at 12 V DC) / max. 300 mA

36 V for $t \leq 10$ s
if $U_B \leq 7.8$ V
if $U_B \leq 7.0$ V

Freescale PowerPC, 50 MHz

592 Kbytes RAM / 1536 Kbytes Flash / 1 Kbyte FRAM

See system manual ioControl and
www.ifm.com

CR2050	Technical data																							
Device monitoring	Undervoltage monitoring Watchdog function Checksum test for program and system Excess temperature monitoring																							
CAN interfaces 1 and 2 Baud rate Communication protocol	CAN interface 2.0 A/B, ISO 11898 20 Kbits/s...1 Mbits/s (default CAN1: 250 Kbits/s, CAN2: 250 Kbits/s) CANopen, CiA DS 301 version 4, CiA DS 401 version 1.4 or SAE J 1939 or free protocol																							
Software/Programming																								
Programming system	CODESYS version 2.3 (IEC 61131-3)																							
Inputs	16 (configurable)																							
Configurations	<table border="1"> <thead> <tr> <th>Number</th> <th>Description</th> <th></th> </tr> </thead> <tbody> <tr> <td>8</td> <td>digital for positive / negative sensor signals analogue (0...10/32 V DC, 0...20 mA, ratiometric)</td> <td>B_L/B_H A</td> </tr> <tr> <td>4</td> <td>digital for positive sensor signals resistance measurement (0.016...30 kΩ)</td> <td>B_L R</td> </tr> <tr> <td>4</td> <td>digital for positive sensor signals digital for negative sensor signals* frequency (≤ 30 kHz)</td> <td>B_L B_H FRQ</td> </tr> </tbody> </table> <p>* not available in the I/O module (CANopen slave)</p>	Number	Description		8	digital for positive / negative sensor signals analogue (0...10/32 V DC, 0...20 mA, ratiometric)	B _L /B _H A	4	digital for positive sensor signals resistance measurement (0.016...30 kΩ)	B _L R	4	digital for positive sensor signals digital for negative sensor signals* frequency (≤ 30 kHz)	B _L B _H FRQ											
Number	Description																							
8	digital for positive / negative sensor signals analogue (0...10/32 V DC, 0...20 mA, ratiometric)	B _L /B _H A																						
4	digital for positive sensor signals resistance measurement (0.016...30 kΩ)	B _L R																						
4	digital for positive sensor signals digital for negative sensor signals* frequency (≤ 30 kHz)	B _L B _H FRQ																						
Indicators																								
I/O LEDs	16 x LED orange (default setting: status indication of the corresponding input)																							
Power LED (PWR)	LED green (default setting: indication of the system status)																							
Mode LED (M)	LED green (default setting: indicates that the node ID is displayed)																							
Application LEDs (A...D)	4 x LED green																							
Lock LED (lock symbol)	1 x LED green (default setting: locking of the set parameters)																							
Diagnostics LED (DIA)	1 x LED red (default setting: indication of an error)																							
Display	4-digit 10-segment display (two colours: red/green) (default setting: indication of the baud rate or the node ID)																							
Operating states when used as mobile controller	<table border="1"> <thead> <tr> <th>LED</th> <th>State</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>–</td> <td>Permanently off</td> <td>No operating voltage</td> </tr> <tr> <td>PWR + DIA</td> <td>1 x on</td> <td>Initialisation or reset checks</td> </tr> <tr> <td rowspan="3">PWR</td> <td>5 Hz</td> <td>No operating system loaded</td> </tr> <tr> <td>2 Hz</td> <td>Application running (RUN)</td> </tr> <tr> <td>Permanently on</td> <td>Application stopped (STOP)</td> </tr> <tr> <td rowspan="3">DIA</td> <td>10 Hz</td> <td>Application stopped (STOP with error)</td> </tr> <tr> <td>5 Hz</td> <td>Application stopped due to undervoltage</td> </tr> <tr> <td>Permanently on</td> <td>System error (fatal error)</td> </tr> </tbody> </table>	LED	State	Description	–	Permanently off	No operating voltage	PWR + DIA	1 x on	Initialisation or reset checks	PWR	5 Hz	No operating system loaded	2 Hz	Application running (RUN)	Permanently on	Application stopped (STOP)	DIA	10 Hz	Application stopped (STOP with error)	5 Hz	Application stopped due to undervoltage	Permanently on	System error (fatal error)
LED	State	Description																						
–	Permanently off	No operating voltage																						
PWR + DIA	1 x on	Initialisation or reset checks																						
PWR	5 Hz	No operating system loaded																						
	2 Hz	Application running (RUN)																						
	Permanently on	Application stopped (STOP)																						
DIA	10 Hz	Application stopped (STOP with error)																						
	5 Hz	Application stopped due to undervoltage																						
	Permanently on	System error (fatal error)																						

CR2050

Operating elements

Pushbuttons

Pushbuttons (default setting)

Input characteristics

Analogue inputs (B_L, B_H, A)
 IN00 - Connection 1, Pin 5
 IN01 - Connection 2, Pin 5
 IN02 - Connection 3, Pin 5
 IN03 - Connection 4, Pin 5
 IN04 - Connection 5, Pin 5
 IN05 - Connection 6, Pin 5
 IN06 - Connection 7, Pin 5
 IN07 - Connection 8, Pin 5
 can be configured as...

Digital inputs (B_L, R)
 IN08 - Connection 1, Pin 2
 IN10 - Connection 3, Pin 2
 IN12 - Connection 5, Pin 2
 IN14 - Connection 7, Pin 2
 can be configured as...

Technical data

ENTER, UP, DOWN

Setting of the CAN ID / baud rate

● Voltage inputs	
Input voltage	0...10 V or 0...32 V
Resolution	12 bits
Accuracy	± 1% FS
Input resistance	65.6 kΩ (0...10 V), 50.7 kΩ (0...32 V)
Input frequency	≤ 500 Hz
● Current inputs, with diagnostic capability	
Input current	0 ... 20 mA
Resolution	12 bits
Accuracy	± 1% FS
Input resistance	400 Ω
Input frequency	≤ 500 Hz
At a current of > 23 mA the input is switched to the voltage input!	
● Voltage inputs, 0...32 V, ratiometric	
Function	$(U_{IN} \div U_B) \times 1000 \text{ ‰}$
Value range	0...1000 ‰
Input resistance	50.7 kΩ
● Binary voltage inputs for positive sensor signals	
Switch-on level	> 0.7 U _B
Switch-off level	< 0.3 U _B
Input resistance	3.2 kΩ
Input frequency	50 Hz
Diagnostics wire break	> 0.95 U _B
Diagnostics short circuit	< 1 V
● Binary voltage inputs for negative sensor signals	
Switch-on level	> 0.7 U _B
Switch-off level	< 0.3 U _B
Input resistance	3.2 kΩ
Input frequency	50 Hz

● Binary voltage inputs for positive sensor signals	
Switch-on level	> 0.7 U _B
Switch-off level	< 0.3 U _B
Input resistance	3.2 kΩ
Input frequency	50 Hz
Diagnostics wire break	> 0.95 U _B
Diagnostics short circuit	< 1 V
● Resistor input	
Measuring range	0.016...30 kΩ
Accuracy	± 2% FS: 16 Ω...3 kΩ ± 5% FS: 3...15 kΩ ± 10% FS: 15...30 kΩ

CR2050

Frequency inputs (B_L, B_H, FRQ)
 IN09 - Connection 2, Pin 2
 IN11 - Connection 4, Pin 2
 IN13 - Connection 6, Pin 2
 IN15 - Connection 8, Pin 2
 can be configured as...

Max. total current of the CAN supply +
 sensor supplies $V_{CAN} + V_{BS}$

Technical data

● Frequency inputs	
Input resistance	3.2 kΩ
Input frequency	≤ 30 kHz
Switch-on level	> 0.7 U _B
Switch-off level	< 0.3 U _B
● Binary voltage inputs for positive sensor signals	
Switch-on level	> 0.7 U _B
Switch-off level	< 0.3 U _B
Input resistance	3.2 kΩ
Input frequency	50 Hz
Diagnostics wire break*	> 0.95 U _B
Diagnostics short circuit*	< 1 V
● Binary voltage inputs for negative sensor signals*	
Switch-on level	> 0.7 U _B
Switch-off level	< 0.3 U _B
Input resistance	3.2 kΩ
Input frequency	50 Hz

* not available in the I/O module (CANopen slave)

1.5 A


UK

CR2050	Technical data	
Test standards and regulations		
CE mark	EN 61000-6-2	Electromagnetic compatibility (EMC) Noise immunity
E1 marking	EN 61000-6-4	Electromagnetic compatibility (EMC) Radiation of interference
Climatic tests	UN/ECE-R10	Radiation of interference Immunity with 100 V/m
Mechanical tests	ISO 7637-2	Pulse 1, severity level: IV; function state C Pulse 2a, severity level: IV; function state A Pulse 2b, severity level: IV; function state C Pulse 3a, severity level: IV; function state A Pulse 3b, severity level: IV; function state A Pulse 4, severity level: IV; function state B Pulse 5, severity level: III; function state C (data valid for the 24 V system) Pulse 4, severity level: III; function state C (data valid for the 12 V system)
Chemical resistance	EN 60068-2-30	Damp heat, cyclic upper temperature 55°C, number of cycles: 6
Note	EN 60068-2-78	Damp heat, constant Test temperature 40°C / 93% RH, Test duration: 21 days
	EN 60068-2-52	Salt spray test Severity level 3 (vehicle)
	ISO 16750-3	Test VII; Vibration, random Mounting location vehicle body
	EN 60068-2-6	Vibration, sinusoidal 10...500 Hz; 0.72 mm/10 g; 10 cycles/axis
	ISO 16750-3	Bump 30 g/6 ms; 24,000 shocks
	ISO 16750-5:2010	AA, AB, BA, BD, CC, DB, DC, DD
	The EC declaration of conformity and approvals can be found at: www.ifm.com	

CR2050


Technical data

Wiring

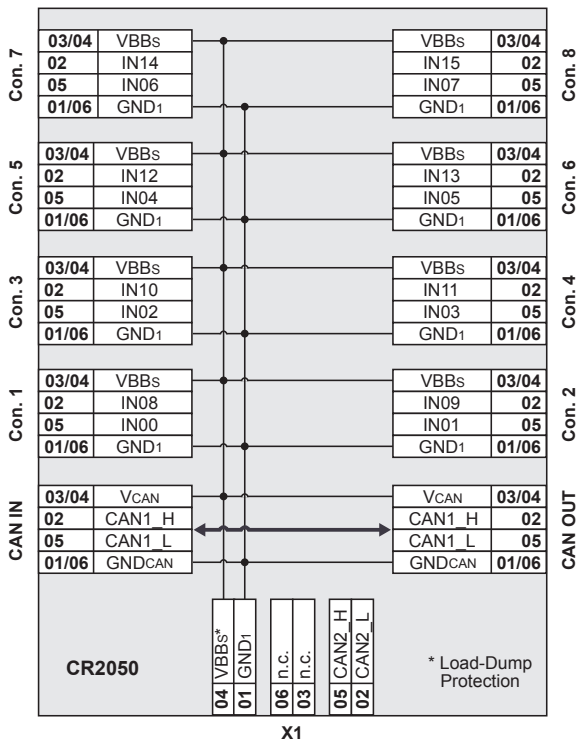

LED assignment

- 1: LED IN15
- 2: LED IN07
- 3: LED IN13
- 4: LED IN05
- 5: LED IN11
- 6: LED IN03
- 7: LED IN09
- 8: LED IN01
- 9: LED IN08
- 10: LED IN00
- 11: LED IN10
- 12: LED IN02
- 13: LED IN12
- 14: LED IN04
- 15: LED IN14
- 16: LED IN06

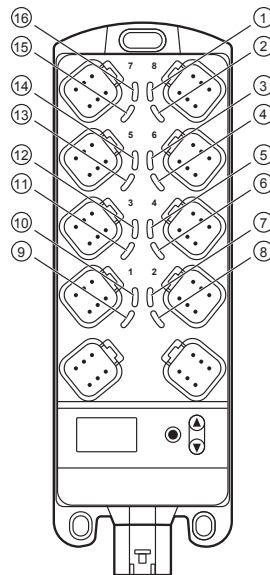

Abbreviations

- A Analogue
- B_H Binary high side
- B_L Binary low side
- FRQ Frequency / pulse input
- R Resistor input
- VBB_S Supply sensors/module
- V_{CAN} Supply CAN connector



9.2 CR2051

CR2051


I/O module
digital and analogue
for R360 system
CANopen slave

Mobile controller
Programming
to IEC 61131-3

16 outputs
2 CAN interfaces
8...32 V DC

CE

E1

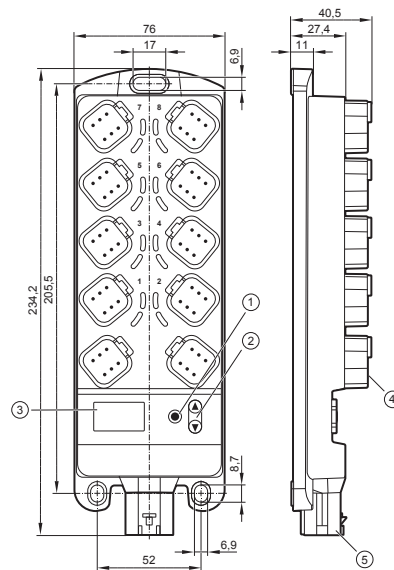

- 1: ENTER button
2: UP/DOWN buttons
3: 10-segment display
4: DEUTSCH connector
5: AMP connector

Technical data

Mechanical data

Housing

Dimensions (H x W x D)

Installation

Connection

Inputs

CAN1 interface
Operating voltage, CAN2

Protection rating

Operating/storage temperature

Max. perm. relative humidity

Max. height above sea level

Pollution degree

Weight

Electrical data

Operating voltage

Current consumption

Overvoltage

Undervoltage detection

Undervoltage shutdown

Processor

Memory (total)

Memory allocation

Modular control system Usable as CANopen slave or intelligent I/O module

Housing: PA6/6.6

Display: PA

Pushbuttons: silicone

234 x 76 x 40.5 mm (without tubular rivet)

Fixing by means of 3 M5 screws to DIN EN ISO 4762 or DIN 7984, 3 tubular rivets to DIN 7340 and 3 washers to DIN EN ISO 7092 (tubular rivets and washers are supplied)

Supply: MCP2.8 6 poles for connector TE-AMP 1745078-1
Inputs/outputs: Deutsch DT04-6S 6 poles
Contacts: AMP: CuFe tin-plated; Deutsch: CuZn, gold-plated

8 x 6 poles

2 x 6 poles

1 x 6-poles

IP 65 and IP 67 (all connectors inserted)

-40...85° C / -40...85° C

90%, non condensing

2000 m

2

500 g

8...32 V DC

104 mA (at 24 V DC) / 185 mA (at 12 V DC) / max. 300 mA

36 V for $t \leq 10$ s

if $U_B \leq 7.8$ V

if $U_B \leq 7.0$ V

Freescale PowerPC, 50 MHz

592 Kbytes RAM / 1536 Kbytes Flash / 1 Kbyte FRAM

See system manual ioControl and
www.ifm.com

CR2051	Technical data																							
Device monitoring	Undervoltage monitoring Watchdog function Checksum test for program and system Excess temperature monitoring																							
CAN interfaces 1 and 2 Baud rate Communication protocol	CAN interface 2.0 A/B, ISO 11898 20 Kbits/s...1 Mbits/s (default CAN1: 250 Kbits/s, CAN2: 250 kBit/s) CANopen, CiA DS 301 version 4, CiA DS 401 version 1.4 or SAE J 1939 or free protocol																							
Software/Programming																								
Programming system	CODESYS version 2.3 (IEC 61131-3)																							
Outputs																								
Configurations	16 (configurable)																							
	<table border="1"> <thead> <tr> <th>Number</th> <th>Description</th> <th></th> </tr> </thead> <tbody> <tr> <td>4</td> <td>positive-switching (high side), 4 A, diagnostics PWM output (20...250 Hz), 4A, diagnostics current-controlled 0.02...4 A</td> <td>B_H PWM PWM_I</td> </tr> <tr> <td>4</td> <td>positive-switching (high side), 2.5 A, diagnostics PWM output (20...250 Hz), 2.5A, diagnostics current-controlled 0.02...2.5 A</td> <td>B_H PWM PWM_I</td> </tr> <tr> <td>4</td> <td>positive-switching (high side), 4 A, diagnostics PWM output (20...250 Hz), 4A</td> <td>B_H PWM</td> </tr> <tr> <td>4</td> <td>positive-switching (high side), 2.5 A, diagnostics PWM output (20...250 Hz), 2.5A</td> <td>B_H PWM</td> </tr> </tbody> </table>	Number	Description		4	positive-switching (high side), 4 A, diagnostics PWM output (20...250 Hz), 4A, diagnostics current-controlled 0.02...4 A	B _H PWM PWM _I	4	positive-switching (high side), 2.5 A, diagnostics PWM output (20...250 Hz), 2.5A, diagnostics current-controlled 0.02...2.5 A	B _H PWM PWM _I	4	positive-switching (high side), 4 A, diagnostics PWM output (20...250 Hz), 4A	B _H PWM	4	positive-switching (high side), 2.5 A, diagnostics PWM output (20...250 Hz), 2.5A	B _H PWM								
Number	Description																							
4	positive-switching (high side), 4 A, diagnostics PWM output (20...250 Hz), 4A, diagnostics current-controlled 0.02...4 A	B _H PWM PWM _I																						
4	positive-switching (high side), 2.5 A, diagnostics PWM output (20...250 Hz), 2.5A, diagnostics current-controlled 0.02...2.5 A	B _H PWM PWM _I																						
4	positive-switching (high side), 4 A, diagnostics PWM output (20...250 Hz), 4A	B _H PWM																						
4	positive-switching (high side), 2.5 A, diagnostics PWM output (20...250 Hz), 2.5A	B _H PWM																						
Indicators																								
I/O LEDs	16 x LED orange (default setting: status indication of the corresponding output)																							
Power LED (PWR)	LED green (default setting: indication of the system status)																							
Mode LED (M)	LED green (default setting: indicates that the node ID is displayed)																							
Application LEDs (A...D)	4 x LED green																							
Lock LED (lock symbol)	1 x LED green (default setting: locking of the set parameters)																							
Diagnostics LED (DIA)	1 x LED red (default setting: indication of an error)																							
Display	4-digit 10-segment display (two colours: red/green) (default setting: indication of the baud rate or the node ID)																							
Operating states when used as mobile controller	<table border="1"> <thead> <tr> <th>LED</th> <th>State</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>–</td> <td>Permanently off</td> <td>No operating voltage</td> </tr> <tr> <td>PWR + DIA</td> <td>1 x on</td> <td>Initialisation or reset checks</td> </tr> <tr> <td rowspan="3">PWR</td> <td>5 Hz</td> <td>No operating system loaded</td> </tr> <tr> <td>2 Hz</td> <td>Application running (RUN)</td> </tr> <tr> <td>Permanently on</td> <td>Application stopped (STOP)</td> </tr> <tr> <td rowspan="3">DIA</td> <td>10 Hz</td> <td>Application stopped (STOP with error)</td> </tr> <tr> <td>5 Hz</td> <td>Application stopped due to undervoltage</td> </tr> <tr> <td>Permanently on</td> <td>System error (fatal error)</td> </tr> </tbody> </table>	LED	State	Description	–	Permanently off	No operating voltage	PWR + DIA	1 x on	Initialisation or reset checks	PWR	5 Hz	No operating system loaded	2 Hz	Application running (RUN)	Permanently on	Application stopped (STOP)	DIA	10 Hz	Application stopped (STOP with error)	5 Hz	Application stopped due to undervoltage	Permanently on	System error (fatal error)
LED	State	Description																						
–	Permanently off	No operating voltage																						
PWR + DIA	1 x on	Initialisation or reset checks																						
PWR	5 Hz	No operating system loaded																						
	2 Hz	Application running (RUN)																						
	Permanently on	Application stopped (STOP)																						
DIA	10 Hz	Application stopped (STOP with error)																						
	5 Hz	Application stopped due to undervoltage																						
	Permanently on	System error (fatal error)																						

CR2051**Operating elements**

Pushbuttons

Pushbuttons (default setting)

Output characteristicsDigital outputs (B_H, PWM, PWM_I)

OUT00 - Connection 1, Pin 5

OUT01 - Connection 2, Pin 5

OUT02 - Connection 3, Pin 5

OUT03 - Connection 4, Pin 5

can be configured as ...

Digital outputs (B_H, PWM, PWM_I)

OUT04 - Connection 5, Pin 5

OUT05 - Connection 6, Pin 5

OUT06 - Connection 7, Pin 5

OUT07 - Connection 8, Pin 5

can be configured as...

Technical data

ENTER, UP, DOWN

Setting of the CAN ID / baud rate

- Semiconductor outputs, positive switching (high side), short-circuit proof and overload protected.
Diagnosis via current feedback (wire break / overload)
Diagnosis via voltage feedback, pullup resistance can be deactivated (wire break / short circuit)

Switching voltage	8...32 V
Switching current	≤ 4 A
Load resistance	≥ 3 Ω (at 12 V DC) ≥ 6 Ω (at 24 V DC)

Current measuring range	0,02...6 A
-------------------------	------------

- PWM outputs

Output frequency	20...250 Hz
Pulse/pause ratio	1...1000 ‰
Switching current	≤ 4 A
Current measuring range	0,02...6 A

- Current-controlled output

Output frequency	20...250 Hz
Control range	0,02...4 A
Setting resolution	1 mA
Max. inrush current	≤ 24 A

- Semiconductor outputs, positive switching (high side), short-circuit proof and overload protected.
Diagnosis via current feedback (wire break / overload)
Diagnosis via voltage feedback, pullup resistance can be deactivated (wire break / short circuit)

Switching voltage	8...32 V
Switching current	≤ 2.5 A
Load resistance	≥ 4.8 Ω (at 12 V DC) ≥ 9.6 Ω (at 24 V DC)

Current measuring range	0,02...4 A
-------------------------	------------

- PWM outputs

Output frequency	20...250 Hz
Pulse/pause ratio	1...1000 ‰
Switching current	≤ 2.5 A
Current measuring range	0,02...4 A

- Current-controlled output

Output frequency	20...250 Hz
Control range	0.02...2.5 A
Setting resolution	1 mA
Max. inrush current	≤ 24 A

CR2051

Digital outputs (B_H, PWM)
 OUT08 - Connection 1, Pin 2
 OUT09 - Connection 2, Pin 2
 OUT10 - Connection 3, Pin 2
 OUT11 - Connection 4, Pin 2
 can be configured as...

Digital outputs (B_H, PWM)
 OUT12 - Connection 5, Pin 2
 OUT13 - Connection 6, Pin 2
 OUT14 - Connection 7, Pin 2
 OUT15 - Connection 8, Pin 2
 can be configured as...

Free wheel diodes

Overload protection
 (valid for all outputs)

Short-circuit protection
 (valid for all inputs and outputs)

Max. total current of the CAN supply
 V_{CAN}

Max. total current of the output supplies
 V_{BB1} / V_{BB2}

Technical data

- Semiconductor outputs, positive switching (high side), short-circuit proof and overload protected.
 Diagnosis via voltage feedback, pullup resistance can be deactivated (wire break/ short circuit)

Switching voltage	8...32 V
-------------------	----------

Switching current	≤ 2.5 A
-------------------	---------

- PWM outputs

Output frequency	20...250 Hz
------------------	-------------

Pulse/pause ratio	1...1000 ‰
-------------------	------------

Switching current	≤ 2.5 A
-------------------	---------

Max. inrush current	≤ 24 A
---------------------	--------

- Semiconductor outputs, positive switching (high side), short-circuit proof and overload protected.
 Diagnosis via voltage feedback, pullup resistance can be deactivated (wire break/ short circuit)

Switching voltage	8...32 V
-------------------	----------

Switching current	≤ 4 A
-------------------	-------

- PWM outputs

Output frequency	20...250 Hz
------------------	-------------

Pulse/pause ratio	1...1000 ‰
-------------------	------------

Switching current	≤ 4 A
-------------------	-------


Max. inrush current	≤ 24 A
---------------------	--------

Free wheel diodes for the deactivation of inductive loads are integrated

≤ 5 minutes (at 100% overload)

≤ 5 minutes

1.5 A

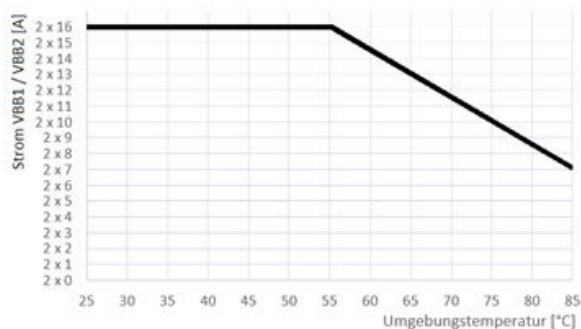


CR2051	Technical data	
Test standards and regulations		
CE mark	EN 61000-6-2	Electromagnetic compatibility (EMC) Noise immunity
	EN 61000-6-4	Electromagnetic compatibility (EMC) Radiation of interference
E1 marking	UN/ECE-R10	Radiation of interference Immunity with 100 V/m
	ISO 7637-2	Pulse 1, severity level: IV; function state C Pulse 2a, severity level: IV; function state A Pulse 2b, severity level: IV; function state C Pulse 3a, severity level: IV; function state A Pulse 3b, severity level: IV; function state A Pulse 4, severity level: IV; function state B Pulse 5, severity level: III; function state C (data valid for the 24 V system) Pulse 4, severity level: III; function state C (data valid for the 12 V system)
Climatic tests	EN 60068-2-30	Damp heat, cyclic upper temperature 55°C, number of cycles: 6
	EN 60068-2-78	Damp heat, constant Test temperature 40°C / 93% RH, Test duration: 21 days
	EN 60068-2-52	Salt spray test Severity level 3 (vehicle)
Mechanical tests	ISO 16750-3	Test VII; Vibration, random Mounting location vehicle body
	EN 60068-2-6	Vibration, sinusoidal 10...500 Hz; 0.72 mm/10 g; 10 cycles/axis
	ISO 16750-3	Bump 30 g/6 ms; 24,000 shocks
Chemical resistance	ISO 16750-5:2010	AA, AB, BA, BD, CC, DB, DC, DD
Note	The EC declaration of conformity and approvals can be found at: www.ifm.com	

CR2051


Technical data

Wiring

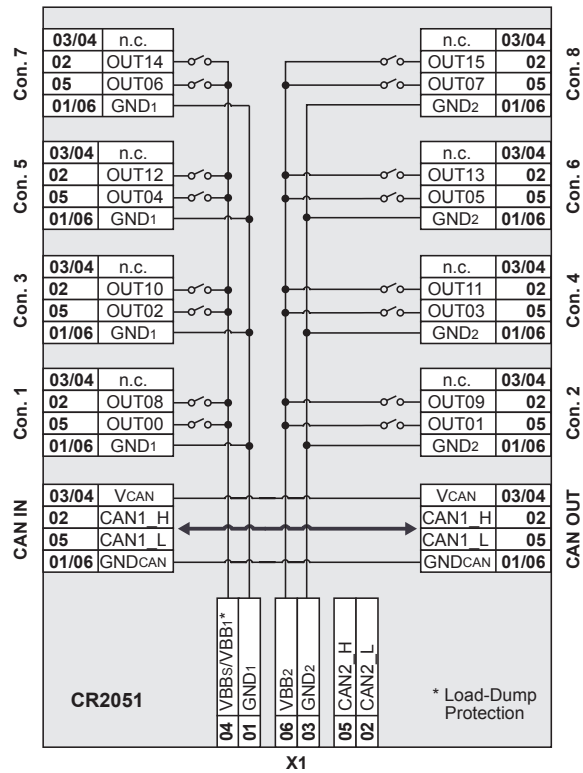

LED assignment

- 1: LED OUT15
- 2: LED OUT07
- 3: LED OUT13
- 4: LED OUT05
- 5: LED OUT11
- 6: LED OUT03
- 7: LED OUT09
- 8: LED OUT01
- 9: LED OUT08
- 10: LED OUT00
- 11: LED OUT10
- 12: LED OUT02
- 13: LED OUT12
- 14: LED OUT04
- 15: LED OUT14
- 16: LED OUT06

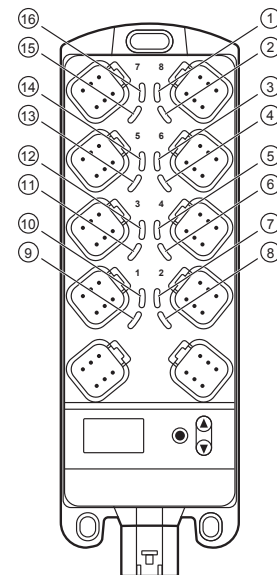

Abbreviations

- B_H Binary high side
- B_L Binary low side
- PWM Pulse width modulation
- PWM_I Pulse width modulation, current-controlled
- VBB_S Supply sensors/module
- VBB₁ Supply OUT00, OUT02, OUT04, OUT06, OUT08, OUT10, OUT12, OUT14
- VBB₂ Supply OUT01, OUT03, OUT05, OUT07, OUT09, OUT11, OUT13, OUT15
- V_{CAN} Supply CAN connector

UK

9.3 CR2052

CR2052

I/O module
digital and analogue
for R360 system
CANopen slave


Mobile controller
Programming
to IEC 61131-3

8 inputs
8 outputs
2 CAN interfaces

8...32 V DC

CE

E1

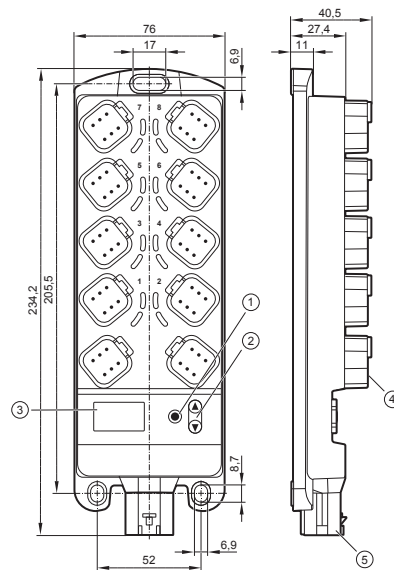

- 1: ENTER button
2: UP/DOWN buttons
3: 10-segment display
4: DEUTSCH connector
5: AMP connector

Technical data

Mechanical data

Housing

Dimensions (H x W x D)

Installation

Connection

Inputs
Outputs
CAN1 interface
Operating voltage, CAN2

Protection rating

Operating/storage temperature

Max. perm. relative humidity

Max. height above sea level

Pollution degree

Weight

Electrical data

Operating voltage

Current consumption

Overvoltage
Undervoltage detection
Undervoltage shutdown

Processor

Memory (total)

Memory allocation

Modular control system Usable as CANopen slave or intelligent I/O module

Housing: PA6/6.6
Display: PA
Pushbuttons: silicone

234 x 76 x 40.5 mm (without tubular rivet)

Fixing by means of 3 M5 screws to DIN EN ISO 4762 or DIN 7984, 3 tubular rivets to DIN 7340 and 3 washers to DIN EN ISO 7092 (tubular rivets and washers are supplied)

Supply: MCP2.8 6 poles for connector TE-AMP 1745078-1
Inputs/outputs: Deutsch DT04-6S 6 poles
Contacts: AMP: CuFe tin-plated; Deutsch: CuZn, gold-plated

4 x 6 poles
4 x 6 poles
2 x 6 poles
1 x 6 poles

IP 65 and IP 67 (all connectors inserted)

-40...85° C / -40...85° C

90%, non condensing

2000 m

2

500 g

8...32 V DC

105 mA (at 24 V DC) / 188 mA (at 12 V DC) / max. 300 mA

36 V for $t \leq 10$ s
if $U_B \leq 7.8$ V
if $U_B \leq 7.0$ V

Freescale PowerPC, 50 MHz

592 Kbytes RAM / 1536 Kbytes Flash / 1 Kbyte FRAM

See system manual ioControl and
www.ifm.com

CR2052	Technical data									
Device monitoring	Undervoltage monitoring Watchdog function Checksum test for program and system Excess temperature monitoring									
CAN interfaces 1 and 2 Baud rate Communication protocol	CAN interface 2.0 A/B, ISO 11898 20 Kbits/s...1 Mbits/s (default CAN1: 250 Kbits/s, CAN2: 250 kBit/s) CANopen, CiA DS 301 version 4, CiA DS 401 version 1.4 or SAE J 1939 or free protocol									
Software/Programming										
Programming system	CODESYS version 2.3 (IEC 61131-3)									
Inputs	8 (configurable)									
Configurations	<table border="1"> <thead> <tr> <th>Number</th> <th>Description</th> <th></th> </tr> </thead> <tbody> <tr> <td>4</td> <td>digital for positive / negative sensor signals analogue (0...10/32 V DC, 0..20 mA, ratiometric) frequency (≤ 30 kHz)</td> <td>B_L/B_H A FRQ</td> </tr> <tr> <td>4</td> <td>digital for positive sensor signals resistance measurement (0.016...30 kΩ)</td> <td>B_L R</td> </tr> </tbody> </table>	Number	Description		4	digital for positive / negative sensor signals analogue (0...10/32 V DC, 0..20 mA, ratiometric) frequency (≤ 30 kHz)	B _L /B _H A FRQ	4	digital for positive sensor signals resistance measurement (0.016...30 k Ω)	B _L R
Number	Description									
4	digital for positive / negative sensor signals analogue (0...10/32 V DC, 0..20 mA, ratiometric) frequency (≤ 30 kHz)	B _L /B _H A FRQ								
4	digital for positive sensor signals resistance measurement (0.016...30 k Ω)	B _L R								
Outputs	8 (configurable)									
Configurations	<table border="1"> <thead> <tr> <th>Number</th> <th>Description</th> <th></th> </tr> </thead> <tbody> <tr> <td>4</td> <td>positive-switching (high side), 4 A, diagnostics PWM output (20...250 Hz), 4A, diagnostics current-controlled 0.02...4 A</td> <td>B_H PWM PWM_I</td> </tr> <tr> <td>4</td> <td>positive-switching (high side), 2.5 A, diagnostics PWM output (20...250 Hz), 2.5A, diagnostics current-controlled 0.02...2.5 A</td> <td>B_H PWM PWM_I</td> </tr> </tbody> </table>	Number	Description		4	positive-switching (high side), 4 A, diagnostics PWM output (20...250 Hz), 4A, diagnostics current-controlled 0.02...4 A	B _H PWM PWM _I	4	positive-switching (high side), 2.5 A, diagnostics PWM output (20...250 Hz), 2.5A, diagnostics current-controlled 0.02...2.5 A	B _H PWM PWM _I
Number	Description									
4	positive-switching (high side), 4 A, diagnostics PWM output (20...250 Hz), 4A, diagnostics current-controlled 0.02...4 A	B _H PWM PWM _I								
4	positive-switching (high side), 2.5 A, diagnostics PWM output (20...250 Hz), 2.5A, diagnostics current-controlled 0.02...2.5 A	B _H PWM PWM _I								
Indicators										
I/O LEDs	16 x LED orange (default setting: status indication of the corresponding input)									
Power LED (PWR)	LED green (default setting: indication of the system status)									
Mode LED (M)	LED green (default setting: indicates that the node ID is displayed)									
Application LEDs (A...D)	4 x LED green									
Lock LED (lock symbol)	1 x LED green (default setting: locking of the set parameters)									
Diagnostics LED (DIA)	1 x LED red (default setting: indication of an error)									
Display	4-digit 10-segment display (two colours: red/green) (default setting: indication of the baud rate or the node ID)									

UK

CR2052

Operating states when used as mobile controller

Operating elements

Pushbuttons

Pushbuttons (default setting)

Input characteristics

Analogue inputs (B_L, B_H, A, FRQ)
 IN00 - Connection 1, Pin 5
 IN01 - Connection 3, Pin 5
 IN04 - Connection 1, Pin 2
 IN05 - Connection 3, Pin 2
 can be configured as...

Technical data

LED	State	Description
-	Permanently off	No operating voltage
PWR + DIA	1 x on	Initialisation or reset checks
PWR	5 Hz	No operating system loaded
	2 Hz	Application running (RUN)
	Permanently on	Application stopped (STOP)
DIA	10 Hz	Application stopped (STOP with error)
	5 Hz	Application stopped due to undervoltage
	Permanently on	System error (fatal error)

ENTER, UP, DOWN

Setting of the CAN ID / baud rate

• Voltage inputs	
Input voltage	0...10 V or 0...32 V
Resolution	12 bits
Accuracy	± 1% FS
Input resistance	65.6 kΩ (0...10 V), 50.7 kΩ (0...32 V)
Input frequency	≤ 500 Hz
• Current inputs, with diagnostic capability	
Input current	0 ... 20 mA
Resolution	12 bits
Accuracy	± 1% FS
Input resistance	400 Ω
Input frequency	≤ 500 Hz
At a current of > 23 mA the input is switched to the voltage input!	
• Voltage inputs, 0...32 V, ratiometric	
Function	$(U_{IN} \div U_B) \times 1000 \text{ ‰}$
Value range	0...1000 ‰
Input resistance	50.7 kΩ
• Binary voltage inputs for positive sensor signals	
Switch-on level	> 0.7 U _B
Switch-off level	< 0.3 U _B
Input resistance	3.2 kΩ
Input frequency	50 Hz
Diagnostics wire break	> 0.95 U _B
Diagnostics short circuit	< 1 V
• Binary voltage inputs for negative sensor signals	
Switch-on level	> 0.7 U _B
Switch-off level	< 0.3 U _B
Input resistance	3.2 kΩ
Input frequency	50 Hz
• Frequency inputs	
Input resistance	3.2 kΩ
Input frequency	≤ 30 kHz
Switch-on level	> 0.7 U _B
Switch-off level	< 0.3 U _B

CR2052

Digital inputs (B_L, R)
 IN02 - Connection 5, Pin 5
 IN03 - Connection 7, Pin 5
 IN06 - Connection 5, Pin 2
 IN07 - Connection 7, Pin 2
 can be configured as...

Output characteristics

Digital outputs (B_H, PWM, PWM_I)
 OUT00 - Connection 2, Pin 5
 OUT01 - Connection 4, Pin 5
 OUT02 - Connection 6, Pin 5
 OUT03 - Connection 8, Pin 5
 can be configured as ...

Technical data

- Binary voltage inputs for positive sensor signals

Switch-on level	> 0.7 U _B
Switch-off level	< 0.3 U _B
Input resistance	3.2 kΩ
Input frequency	50 Hz
Diagnostics wire break	> 0.95 U _B
Diagnostics short circuit	< 1 V
<ul style="list-style-type: none"> Resistor input 	
Measuring range	0.016...30 kΩ
Accuracy	± 2% FS: 16 Ω...3 kΩ ± 5% FS: 3...15 kΩ ± 10% FS: 15...30 kΩ

- Semiconductor outputs, positive switching (high side), short-circuit proof and overload protected.
 Diagnosis via current feedback (wire break / overload)
 Diagnosis via voltage feedback, pullup resistance can be deactivated (wire break / short circuit)

Switching voltage	8...32 V
Switching current	≤ 4 A
Load resistance	≥ 3 Ω (at 12 V DC) ≥ 6 Ω (at 24 V DC)
Current measuring range	0,02...6 A
<ul style="list-style-type: none"> PWM outputs 	
Output frequency	20...250 Hz
Pulse/pause ratio	1...1000 ‰
Switching current	≤ 4 A
Current measuring range	0,02...6 A
<ul style="list-style-type: none"> Current-controlled output 	
Output frequency	20...250 Hz
Control range	0,02...4 A
Setting resolution	1 mA
Max. inrush current	≤ 24 A

UK

CR2052

Digital outputs (B_H, PWM, PWM_I)

OUT04 - Connection 2, Pin 2

OUT05 - Connection 4, Pin 2

OUT06 - Connection 6, Pin 2

OUT07 - Connection 8, Pin 2

can be configured as...

Free wheel diodes

Overload protection
(valid for all outputs)

Short-circuit protection
(valid for all inputs and outputs)

Max. total current of the CAN supply +
sensor supplies $V_{CAN} + V_{BB_S}$

Max. total current of the output supplies
 V_{BB_2}

Technical data

- Semiconductor outputs, positive switching (high side), short-circuit proof and overload protected.
Diagnosis via current feedback (wire break / overload)
Diagnosis via voltage feedback, pullup resistance can be deactivated (wire break / short circuit)


Switching voltage	8...32 V
Switching current	≤ 2.5 A
Load resistance	≥ 4.8 Ω (at 12 V DC) ≥ 9.6 Ω (at 24 V DC)
Current measuring range	0,02...4 A
• PWM outputs	
Output frequency	20...250 Hz
Pulse/pause ratio	1...1000 ‰
Switching current	≤ 2.5 A
Current measuring range	0,02...4 A
• Current-controlled output	
Output frequency	20...250 Hz
Control range	0.02...2.5 A
Setting resolution	1 mA
Max. inrush current	≤ 24 A

Free wheel diodes for the deactivation of inductive loads are integrated

≤ 5 minutes (at 100% overload)

≤ 5 minutes

1.5 A

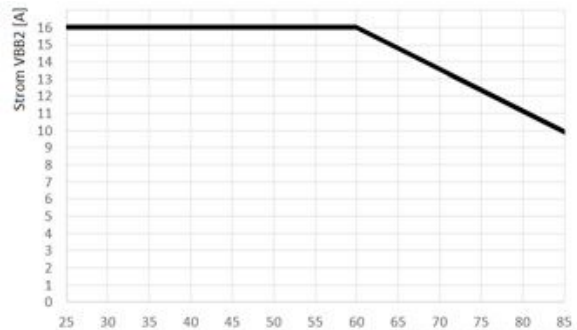


CR2052	Technical data	
Test standards and regulations		
CE mark	EN 61000-6-2	Electromagnetic compatibility (EMC) Noise immunity
	EN 61000-6-4	Electromagnetic compatibility (EMC) Radiation of interference
E1 marking	UN/ECE-R10	Radiation of interference Immunity with 100 V/m
	ISO 7637-2	Pulse 1, severity level: IV; function state C Pulse 2a, severity level: IV; function state A Pulse 2b, severity level: IV; function state C Pulse 3a, severity level: IV; function state A Pulse 3b, severity level: IV; function state A Pulse 4, severity level: IV; function state B Pulse 5, severity level: III; function state C (data valid for the 24 V system) Pulse 4, severity level: III; function state C (data valid for the 12 V system)
Climatic tests	EN 60068-2-30	Damp heat, cyclic upper temperature 55°C, number of cycles: 6
	EN 60068-2-78	Damp heat, constant Test temperature 40°C / 93% RH, Test duration: 21 days
	EN 60068-2-52	Salt spray test Severity level 3 (vehicle)
Mechanical tests	ISO 16750-3	Test VII; Vibration, random Mounting location vehicle body
	EN 60068-2-6	Vibration, sinusoidal 10...500 Hz; 0.72 mm/10 g; 10 cycles/axis
	ISO 16750-3	Bump 30 g/6 ms; 24,000 shocks
Chemical resistance	ISO 16750-5:2010	AA, AB, BA, BD, CC, DB, DC, DD
Note	The EC declaration of conformity and approvals can be found at: www.ifm.com	

UK

CR2052


Wiring

Technical data

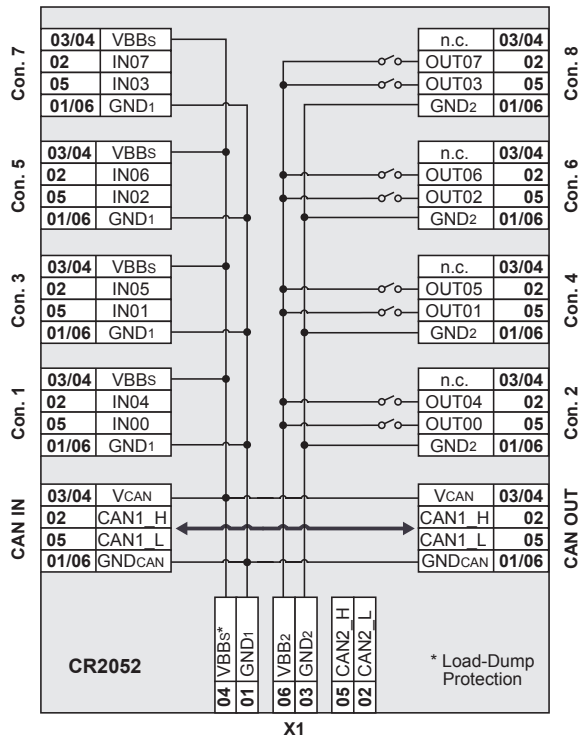

LED assignment

- 1: LED OUT07
- 2: LED OUT03
- 3: LED OUT06
- 4: LED OUT02
- 5: LED OUT05
- 6: LED OUT01
- 7: LED OUT04
- 8: LED OUT00
- 9: LED IN04
- 10: LED IN00
- 11: LED IN05
- 12: LED IN01
- 13: LED IN06
- 14: LED IN02
- 15: LED IN07
- 16: LED IN03

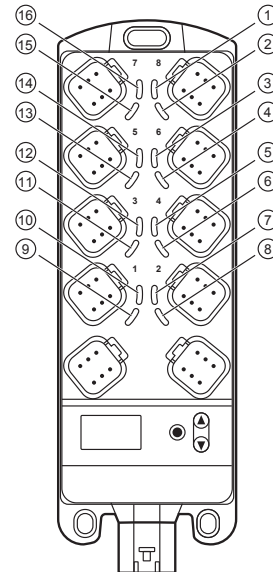

Abbreviations

- A Analogue
- R Resistor input
- FRQ Frequency / pulse input
- B_H Binary high side
- B_L Binary low side
- PWM Pulse width modulation
- PWM_I Pulse width modulation, current-controlled
- VBB_S Supply sensors/module
- VBB₂ Supply OUT01...OUT07
- V_{CAN} Supply CAN connector


10 Maintenance, repair and disposal


10.1 Maintenance

The device does not contain any components that need to be maintained by the user.

10.2 Cleaning the housing surface

- ▶ Disconnect the device.
- ▶ Clean the device from dirt using a soft, chemically untreated and dry cloth.
- ▶ In case of heavy dirt, use a damp cloth.

 The following agents are not suited for cleaning the device:
Chemicals dissolving plastics such as isopropanol, methylated spirit, benzine, thinner, alcohol, acetone or ammonia.

 Micro-fibre cloths without chemical additives are recommended.

10.3 Repair

- ▶ The device must only be repaired by the manufacturer.
Observe the safety instructions (→ 2.4 Tampering with the unit)

10.4 Disposal

- ▶ Dispose of the device in accordance with the national environmental regulations.

11 Approvals/standards

Test standards and regulations (→ 9 Technical data)

The EC declaration of conformity and approvals can be found at:

www.ifm.com

12 Appendix

12.1 EMCY Object

The following error codes according to DSP-401 or DSP-301 are supported:

EMCY code	Error reg	Additional code	Description
0x6100	0x11	0x00	Internal Software Overflow of an Rx queue e.g. frequency of the Rx PDOs is too high. Reset only externally via entry in the index 0x1003 SubIdx 00.
0x6101	0x11	0x00	Internal Software Overflow of a Tx queue e.g. device does not communicate with the bus. Reset only externally via entry in the index 0x1003 SubIdx 00.
0x8100	0x11	0x00	Monitoring (Guarding Error) No guard object is received for „guard time“ x „life time factor“. Reset with the next communication.
0x8200	0x11	0x00	Monitoring (Synch Error) For "communication cycle" no synch object is received Only in OPEATIONAL. Reset with the next synch OBJ or PREOP.

CANopen does not provide for two identical EMCY objects to be sent consecutively.

12.2 Object directory CR205x

Obligatory objects (index 0x1000...0x1FFF):

Index	S-idx	Designation	Data type		Default	Details
0x1001		Device type	ro	UDINT	0x000F0191	Device type
0x1001		Error register	ro	USINT	0	Error register bitcoded to profile 301 Permissible values: 0b0000 0000 = no error 0b0000 0001 = generic error 0b0001 0000 = communication error 0b1000 0000 = manufacturer specific

Index	S-idx	Designation	Data type		Default	Details
0x1018	0x00	Device identification Number of entries	ro	USINT	0x04	Device identification
	0x01	Vendor-ID	ro	UDINT	0x0069666D	Vendor ID of the device according to CiA specification
	0x02	Product code	ro	STRING	0	Product code of the device
	0x03	Revision number	ro	UDINT	0	Revision number of the device
	0x04	Serial number	ro	UDINT	0	Serial number of the device
0x1003	0x00	Predefined error field Number of entries	rw	UDINT	0	An error list with 4 entries is supported
	0x01	Error history	ro	UDINT	0	Error occurred, coded according to EMCY list The last error is indicated in the sub-index 1
	0x02	Error history	ro	UDINT	0	Error occurred, coded according to EMCY list
	0x03	Error history	ro	UDINT	0	Error occurred, coded according to EMCY list
	0x04	Error history	ro	UDINT	0	Error occurred, coded according to EMCY list
	0x05	Error history	ro	UDINT	0	Error occurred, coded according to EMCY list
0x1005		COB-ID synch message	rw	UDINT	0x0000 0080	Identifier of the synch message Bit 30 = 0 → device generates no synch message Bit 30 = 1 → device generates a synch message Bit 29 = 0 → 11 bit ID Bit 29 = 1 → ID = 0x80 + node ID
0x1006		Communication cycle period	rw	UDINT	0	Max. time between 2 synch objects in [µs] Control resolution = 1 ms
0x1008		Manufacturer device name	ro	STRING	CR205x	Device designation (CR2050 or CR2051 or CR2052)
0x1009		Manufacturer hardware version	ro	STRING	V00.00.00	Hardware version

Index	S-idx	Designation	Data type		Default	Details
0x100A		Manufacturer software version	ro	STRING	V00.00.00	Software version
0x100C		Guard time	rw	UINT	0	<p>Within this time in [ms] the device expects a „node guarding“ of the master off he system.</p> <p>0 = this function is not supported.</p> <p>The monitoring off he node with „node guarding“ or „heart-beat“ is only possible as an alternative!</p>
0x100D		Lifetime factor	rw	USINT	0	<p>If for „guard time“ • “lifetime” no "node guarding" was received, the device switches off the outputs. The device changes the CANopen status to PREOP.</p> <p>Default: "guard time" • "lifetime" = 0...65535</p>
0x1010	0x00	Store parameters Largest sub-index supported	ro	USINT	0x01	Number of “save options”
	0x01	Save all parameters	rw	UDINT	2	<p>Automatic saving of all parameters changed</p> <p>0 = AutoSave OFF</p> <p>2 = AutoSave ON</p>
0x1011	0x00	Restore default parameters Largest sub-index supported	ro	USINT	0x01	Number of "restore options"
	0x01	Restore all default parameters	rw	UDINT	0x01	If the String "load" is entered here, the default parameters set at the factory are restored and become valid after the next reset.
0x1014		COBId Emergency	rw	UDINT	0x80 + node ID	<p>Bit 31 = 0 → EMCY is valid</p> <p>Bit 31 = 1 → EMCY is not valid</p> <p>Bit 29 = 0 → 11-bit ID</p> <p>Bit 29 = 1 → ID = 0x80 + node ID</p> <p>CAN identifier can be changed by the user.</p>

Index	S-idx	Designation	Data type		Default	Details
0x1016	0x00	Consumer heartbeat times Nums consumer heartbeat time	ro	USINT	0x01	Heartbeat monitoring time for the node Number of devices monitored = 1
	0x01	Consumer heartbeat time	rw	UDINT	0	Heartbeat monitoring time for the node Format: 0x0nntttt tttt = monitoring time [ms] nn = node number if nn=0 or tttt=0 → no monitoring The monitoring of the node with „node guarding“ or „heartbeat“ is only possible as an alternative!
0x1017		Producer heartbeat time	rw	UINT	0	Time interval [ms] during which the device generates a producer heartbeat

UK

12.2.1 Device-specific CR2050

Transmit PDO communication parameters (index 0x1800...0x18FF):

Index	S-idx	Designation	Data type		Default	Details
0x1800	0x00	Transmit PDO Communication Parameter Number of entries	ro	USINT	0x05	Configuration transmit PDO 1 number of entries = 5
	0x01	COBID used by PDO	rw	UDINT	0x180 + Node ID	CAN ID of the transmit PDO 1 Bit 31 = 0 → PDO is valid Bit 31 = 1 → PDO is not valid
	0x02	transmission type	rw	USINT	0xFF	0x00 = synch acyclic 0x01...0xF0 = synch cyclic; values are only transmitted after „n“ synch objects n = 1...240 = 0x01...0xF0 0xFC/0xFD not implemented 0xFE = asynch man. spec. event; values are immediately transferred 0xFF = asynch device profile event; values are immediately transferred
	0x03	inhibit time	rw	UINT	0	delay time in the transmission type "asynch" before the PDO is transmitted again at the earliest. (0...65535 • 100 µs)
	0x04	reserved	rw	USINT	0	reserve
	0x05	event time	rw	UINT	0	max. transfer break in the transmission type „asynch“ (0...65535 ms) When this time has elapsed, the PDO is transferred even if the appl. event has not accured.

Index	S-idx	Designation	Data type		Default	Details
0x1801	0x00	Transmit PDO Communication Parameter Number of entries	ro	USINT	0x05	Configuration transmit PDO 2 number of entries = 5
	0x01	COBID used by PDO	rw	UDINT	0x280 + Node ID	CAN ID of the transmit PDO 2 Bit 31 = 0 → PDO is valid Bit 31 = 1 → PDO is not valid
	0x02	transmission type	rw	USINT	0x01	0x00 = synch acyclic 0x01...0xF0 = synch cyclic; values are only transmitted after „n“ synch objects n = 1...240 = 0x01...0xF0 0xFC/0xFD not implemented 0xFE = asynch man. spec. event; values are immediately transferred 0xFF = asynch device profile event; values are immediately transferred
	0x03	inhibit time	rw	UINT	0	delay time in the transmission type "asynch" before the PDO is transmitted again at the earliest. (0...65535 • 100 µs)
	0x04	reserved	rw	USINT	0	reserve
	0x05	event time	rw	UINT	0	max. transfer break in the transmission type „asynch“ (0...65535 ms) When this time has elapsed, the PDO is transferred even if the appl. event has not accured.

UK

Index	S-idx	Designation	Data type		Default	Details
0x1802	0x00	Transmit PDO Communication Parameter Number of entries	ro	USINT	0x05	Configuration transmit PDO 3 number of entries = 5
	0x01	COBID used by PDO	rw	UDINT	0x380 + Node ID	CAN ID of the transmit PDO 3 Bit 31 = 0 → PDO is valid Bit 31 = 1 → PDO is not valid
	0x02	transmission type	rw	USINT	0x01	0x00 = synch acyclic 0x01...0xF0 = synch cyclic; values are only transmitted after „n“ synch objects n = 1...240 = 0x01...0xF0 0xFC/0xFD not implemented 0xFE = asynch man. spec. event; values are immediately transferred 0xFF = asynch device profile event; values are immediately transferred
	0x03	inhibit time	rw	UINT	0	delay time in the transmission type "asynch" before the PDO is transmitted again at the earliest. (0...65535 • 100 µs)
	0x04	reserved	rw	USINT	0	reserve
	0x05	event time	rw	UINT	0	max. transfer break in the transmission type „asynch“ (0...65535 ms) When this time has elapsed, the PDO is transferred even if the appl. event has not accured.

Index	S-idx	Designation	Data type		Default	Details
0x1803	0x00	Transmit PDO Communication Parameter Number of entries	ro	USINT	0x05	Configuration transmit PDO 4 number of entries = 5
	0x01	COBID used by PDO	rw	UDINT	0x480 + Node ID	CAN ID of the transmit PDO 4 Bit 31 = 0 → PDO is valid Bit 31 = 1 → PDO is not valid
	0x02	transmission type	rw	USINT	0x01	0x00 = synch acyclic 0x01...0xF0 = synch cyclic; values are only transmitted after „n“ synch objects n = 1...240 = 0x01...0xF0 0xFC/0xFD not implemented 0xFE = asynch man. spec. event; values are immediately transferred 0xFF = asynch device profile event; values are immediately transferred
	0x03	inhibit time	rw	UINT	0	delay time in the transmission type "asynch" before the PDO is transmitted again at the earliest. (0...65535 • 100 μs)
	0x04	reserved	rw	USINT	0	reserve
	0x05	event time	rw	UINT	0	max. transfer break in the transmission type „asynch“ (0...65535 ms) When this time has elapsed, the PDO is transferred even if the appl. event has not accured.

UK

Index	S-idx	Designation	Data type		Default	Details
0x1804	0x00	Transmit PDO Communication Parameter Number of entries	ro	USINT	0x05	Configuration transmit PDO 5 number of entries = 5
	0x01	COBID used by PDO	rw	UDINT	0x181 + Node ID	CAN ID of the transmit PDO 5 Bit 31 = 0 → PDO is valid Bit 31 = 1 → PDO is not valid
	0x02	transmission type	rw	USINT	0x01	0x00 = synch acyclic 0x01...0xF0 = synch cyclic; values are only transmitted after „n“ synch objects n = 1...240 = 0x01...0xF0 0xFC/0xFD not implemented 0xFE = asynch man. spec. event; values are immediately transferred 0xFF = asynch device profile event; values are immediately transferred
	0x03	inhibit time	rw	UINT	0	delay time in the transmission type "asynch" before the PDO is transmitted again at the earliest. (0...65535 • 100 µs)
	0x04	reserved	rw	USINT	0	reserve
	0x05	event time	rw	UINT	0	max. transfer break in the transmission type „asynch“ (0...65535 ms) When this time has elapsed, the PDO is transferred even if the appl. event has not accured.

Index	S-idx	Designation	Data type		Default	Details
0x1805	0x00	Transmit PDO Communication Parameter Number of entries	ro	USINT	0x05	Configuration transmit PDO 6 number of entries = 5
	0x01	COBID used by PDO	rw	UDINT	0x281 + Node ID	CAN ID of the transmit PDO 6 Bit 31 = 0 → PDO is valid Bit 31 = 1 → PDO is not valid
	0x02	transmission type	rw	USINT	0x01	0x00 = synch acyclic 0x01...0xF0 = synch cyclic; values are only transmitted after „n“ synch objects n = 1...240 = 0x01...0xF0 0xFC/0xFD not implemented 0xFE = asynch man. spec. event; values are immediately transferred 0xFF = asynch device profile event; values are immediately transferred
	0x03	inhibit time	rw	UINT	0	delay time in the transmission type "asynch" before the PDO is transmitted again at the earliest. (0...65535 • 100 µs)
	0x04	reserved	rw	USINT	0	reserve
	0x05	event time	rw	UINT	0	max. transfer break in the transmission type „asynch“ (0...65535 ms) When this time has elapsed, the PDO is transferred even if the appl. event has not accured.

UK

Index	S-idx	Designation	Data type		Default	Details
0x1806	0x00	Transmit PDO Communication Parameter Number of entries	ro	USINT	0x05	Configuration transmit PDO 7 number of entries = 5
	0x01	COBID used by PDO	rw	UDINT	0x381 + Node ID	CAN ID of the transmit PDO 7 Bit 31 = 0 → PDO is valid Bit 31 = 1 → PDO is not valid
	0x02	transmission type	rw	USINT	0x01	0x00 = synch acyclic 0x01...0xF0 = synch cyclic; values are only transmitted after „n“ synch objects n = 1...240 = 0x01...0xF0 0xFC/0xFD not implemented 0xFE = asynch man. spec. event; values are immediately transferred 0xFF = asynch device profile event; values are immediately transferred
	0x03	inhibit time	rw	UINT	0	delay time in the transmission type "asynch" before the PDO is transmitted again at the earliest. (0...65535 • 100 µs)
	0x04	reserved	rw	USINT	0	reserve
	0x05	event time	rw	UINT	0	max. transfer break in the transmission type „asynch“ (0...65535 ms) When this time has elapsed, the PDO is transferred even if the appl. event has not accured.

Index	S-idx	Designation	Data type		Default	Details
0x1807	0x00	Transmit PDO Communication Parameter Number of entries	ro	USINT	0x05	Configuration transmit PDO 8 number of entries = 5
	0x01	COBID used by PDO	rw	UDINT	0x481 + Node ID	CAN ID of the transmit PDO 8 Bit 31 = 0 → PDO is valid Bit 31 = 1 → PDO is not valid
	0x02	transmission type	rw	USINT	0x01	0x00 = synch acyclic 0x01...0xF0 = synch cyclic; values are only transmitted after „n“ synch objects n = 1...240 = 0x01...0xF0 0xFC/0xFD not implemented 0xFE = asynch man. spec. event; values are immediately transferred 0xFF = asynch device profile event; values are immediately transferred
	0x03	inhibit time	rw	UINT	0	delay time in the transmission type "asynch" before the PDO is transmitted again at the earliest. (0...65535 • 100 µs)
	0x04	reserved	rw	USINT	0	reserve
	0x05	event time	rw	UINT	0	max. transfer break in the transmission type „asynch“ (0...65535 ms) When this time has elapsed, the PDO is transferred even if the appl. event has not accured.

UK

Index	S-idx	Designation	Data type		Default	Details
0x1808	0x00	Transmit PDO Communication Parameter Number of entries	ro	USINT	0x05	Configuration transmit PDO 9 number of entries = 5
	0x01	COBID used by PDO	rw	UDINT	0x182 + Node ID	CAN ID of the transmit PDO 9 Bit 31 = 0 → PDO is valid Bit 31 = 1 → PDO is not valid
	0x02	transmission type	rw	USINT	0x01	0x00 = synch acyclic 0x01...0xF0 = synch cyclic; values are only transmitted after „n“ synch objects n = 1...240 = 0x01...0xF0 0xFC/0xFD not implemented 0xFE = asynch man. spec. event; values are immediately transferred 0xFF = asynch device profile event; values are immediately transferred
	0x03	inhibit time	rw	UINT	0	delay time in the transmission type "asynch" before the PDO is transmitted again at the earliest. (0...65535 • 100 µs)
	0x04	reserved	rw	USINT	0	reserve
	0x05	event time	rw	UINT	0	max. transfer break in the transmission type „asynch“ (0...65535 ms) When this time has elapsed, the PDO is transferred even if the appl. event has not accured.

Index	S-idx	Designation	Data type		Default	Details
0x1809	0x00	Transmit PDO Communication Parameter Number of entries	ro	USINT	0x05	Configuration transmit PDO 10 number of entries = 5
	0x01	COBID used by PDO	rw	UDINT	0x282 + Node ID	CAN ID of the transmit PDO 10 Bit 31 = 0 → PDO is valid Bit 31 = 1 → PDO is not valid
	0x02	transmission type	rw	USINT	0x01	0x00 = synch acyclic 0x01...0xF0 = synch cyclic; values are only transmitted after „n“ synch objects n = 1...240 = 0x01...0xF0 0xFC/0xFD not implemented 0xFE = asynch man. spec. event; values are immediately transferred 0xFF = asynch device profile event; values are immediately transferred
	0x03	inhibit time	rw	UINT	0	delay time in the transmission type "asynch" before the PDO is transmitted again at the earliest. (0...65535 • 100 µs)
	0x04	reserved	rw	USINT	0	reserve
	0x05	event time	rw	UINT	0	max. transfer break in the transmission type „asynch“ (0...65535 ms) When this time has elapsed, the PDO is transferred even if the appl. event has not accured.

UK

Transmit PDO mapping (index 0x1A00...0x1AFF):

Index	S-idx	Designation	Data type		Default	Details
0x1A00	0x00	Transmit PDO mapping Number of mapped objects in PDO	rw	USINT	0x07	mapping transmit PDO 1 number of integrated application objects = 7
	0x01	PDO mapping	rw	UDINT	0x6000 0108	Index 0x6000, SubIndex 0x01 binary inputs 00...07: actual values (bit coded)
	0x02	PDO mapping	rw	UDINT	0x6000 0208	Index 0x6000, SubIndex 0x02 binary inputs 08...15: actual values (bit coded)
	0x03	PDO mapping	rw	UDINT	0x2020 0108	Index 0x2020, SubIndex 0x01 binary inputs 00...07: flag "short circuit" (bit coded)
	0x04	PDO mapping	rw	UDINT	0x2020 0208	Index 0x2020, SubIndex 0x02 binary inputs 08...15: flag "short circuit" (bit coded)
	0x05	PDO mapping	rw	UDINT	0x2021 0108	Index 0x2021, SubIndex 0x01 outputs 00...07: flag " wire break " (bit coded)
	0x06	PDO mapping	rw	UDINT	0x2021 0208	Index 0x2021, SubIndex 0x02 outputs 08...15: flag " wire break " (bit coded)
	0x07	PDO mapping	rw	UDINT	0x2025 0108	Index 0x2025, SubIndex 0x01 inputs 00...03: flag " overload " (bit coded)

Index	S-idx	Designation	Data type		Default	Details
0x1A01	0x00	Transmit PDO mapping Number of mapped objects in PDO	rw	USINT	0x04	mapping transmit PDO 2 (analogue inputs) number of integrated application objects = 4
	0x01	PDO mapping	rw	UDINT	0x6404 0110	Index 0x6404, SubIndex 0x01 analogue input 00: actual value (depending on the configuration 0x2000)
	0x02	PDO mapping	rw	UDINT	0x6404 0210	Index 0x6404, SubIndex 0x02 analogue input 01: actual value (depending on the configuration 0x2000))
	0x03	PDO mapping	rw	UDINT	0x6404 0310	Index 0x6404, SubIndex 0x03 analogue input 02: actual value (depending on the configuration 0x2000)
	0x04	PDO mapping	rw	UDINT	0x6404 0410	Index 0x6404, SubIndex 0x04 analogue input 03: actual value (depending on the configuration 0x2000)
0x1A02	0x00	Transmit PDO mapping Number of mapped objects in PDO	rw	USINT	0x04	mapping transmit PDO 3 (analogue inputs) number of integrated application objects = 4
	0x01	PDO mapping	rw	UDINT	0x6404 0510	Index 0x6404, SubIndex 0x05 analogue input 04: actual value (depending on the configuration 0x2000)
	0x02	PDO mapping	rw	UDINT	0x6404 0610	Index 0x6404, SubIndex 0x06 analogue input 05: actual value (depending on the configuration 0x2000))
	0x03	PDO mapping	rw	UDINT	0x6404 0710	Index 0x6404, SubIndex 0x07 analogue input 06: actual value (depending on the configuration 0x2000)
	0x04	PDO mapping	rw	UDINT	0x6404 0810	Index 0x6404, SubIndex 0x08 analogue input 07: actual value (depending on the configuration 0x2000)

Index	S-idx	Designation	Data type		Default	Details
0x1A03	0x00	Transmit PDO mapping Number of mapped objects in PDO	rw	USINT	0x04	mapping transmit PDO 4 number of integrated application objects = 4
	0x01	PDO mapping	rw	UDINT	0x2030 0110	Index 0x2030, SubIndex 0x01 input 08: actual resistor value
	0x02	PDO mapping	rw	UDINT	0x2030 0210	Index 0x2030, SubIndex 0x02 input 10: actual resistor value
	0x03	PDO mapping	rw	UDINT	0x2030 0310	Index 0x2030, SubIndex 0x03 input 12: actual resistor value
	0x04	PDO mapping	rw	UDINT	0x2030 0410	Index 0x2030, SubIndex 0x04 input 14: actual resistor value
0x1A04	0x00	Transmit PDO mapping Number of mapped objects in PDO	rw	USINT	0x02	mapping transmit PDO 5 (periode time IN09, IN11) number of integrated application objects = 2
	0x01	PDO mapping	rw	UDINT	0x2012 0120	Index 0x2012, SubIndex 0x01 frequency input IN09: periode time of the signal
	0x02	PDO mapping	rw	UDINT	0x2012 0220	Index 0x2012, SubIndex 0x02 frequency input IN11: periode time of the signal
0x1A05	0x00	Transmit PDO mapping Number of mapped objects in PDO	rw	USINT	0x02	mapping transmit PDO 6 (periode time IN13, IN15) number of integrated application objects = 2
	0x01	PDO mapping	rw	UDINT	0x2012 0320	Index 0x2012, SubIndex 0x03 frequency input IN13: periode time of the signal
	0x02	PDO mapping	rw	UDINT	0x2012 0420	Index 0x2012, SubIndex 0x04 frequency input IN15: periode time of the signal

Index	S-idx	Designation	Data type		Default	Details
0x1A06	0x00	Transmit PDO mapping Number of mapped objects in PDO	rw	USINT	0x04	mapping transmit PDO 7 (duty cycle of the signal on the frequency input IN09, IN11, IN13, IN15) number of integrated application objects = 4
	0x01	PDO mapping	rw	UDINT	0x2014 0110	Index 0x2014, SubIndex 0x01 frequency input IN09: duty cycle of the signal in ‰
	0x02	PDO mapping	rw	UDINT	0x2014 0210	Index 0x2014, SubIndex 0x02 frequency input IN11: duty cycle of the signal in ‰
	0x03	PDO mapping	rw	UDINT	0x2014 0310	Index 0x2014, SubIndex 0x03 frequency input IN13: duty cycle of the signal in ‰
	0x04	PDO mapping	rw	UDINT	0x2014 0410	Index 0x2014, SubIndex 0x04 frequency input IN15: duty cycle of the signal in ‰
0x1A07	0x00	Transmit PDO mapping Number of mapped objects in PDO	rw	USINT	0x02	mapping transmit PDO 8 (frequency on IN09, IN11) number of integrated application objects = 2
	0x01	PDO mapping	rw	UDINT	0x2015 0120	Index 0x2015, SubIndex 0x01 frequency input IN09: frequency value of the signal in Hz
	0x02	PDO mapping	rw	UDINT	0x2015 0220	Index 0x2015, SubIndex 0x02 frequency input IN11: frequency value of the signal in Hz
0x1A08	0x00	Transmit PDO mapping Number of mapped objects in PDO	rw	USINT	0x02	mapping transmit PDO 9 (frequency on IN13, IN15) number of integrated application objects = 2
	0x01	PDO mapping	rw	UDINT	0x2015 0320	Index 0x2015, SubIndex 0x03 frequency input IN13: frequency value of the signal in Hz
	0x02	PDO mapping	rw	UDINT	0x2015 0420	Index 0x2015, SubIndex 0x04 frequency input IN15: frequency value of the signal in Hz

Index	S-idx	Designation	Data type		Default	Details
0x1A09	0x00	Transmit PDO mapping Number of mapped objects in PDO	rw	USINT	0x02	mapping transmit PDO 10 (system flag) number of integrated application objects = 2
	0x01	PDO mapping	rw	UDINT	0x2040 0110	Index 0x2040, SubIndex 0x01 supply voltage of the system VBBS
	0x02	PDO mapping	rw	UDINT	0x2050 0010	Index 0x2050, SubIndex 0x00 system temperature in °C

Manufacturer-specific objekts (index 0x2000...0x6FFF):

Index	S-idx	Designation	Data type		Default	Details	
0x2000	0x00	IO configuration Largest sub-index supported	ro	USINT	16	Configuration inputs/outputs largest supported Sub-index = 32	
	0x01	Configuration IN00	rw	USINT	10	0 = 0x00 3 = 0x03 6 = 0x06 7 = 0x07 9 = 0x09 10 = 0x0A 11 = 0x0B 12 = 0x0C	off Input IN00 0...10 000 mV ratiometric 0...1000 % 0...20 000 µA 0...32 000 mV binary plus switched binary plus switched with diagnosis binary minus switched
	0x02	Configuration IN01	rw	USINT	10	0 = 0x00 3 = 0x03 6 = 0x06 7 = 0x07 9 = 0x09 10 = 0x0A 11 = 0x0B 12 = 0x0C	off Input IN01 0...10 000 mV ratiometric 0...1000 % 0...20 000 µA 0...32 000 mV binary plus switched binary plus switched with diagnosis binary minus switched
	0x03	Configuration IN02	rw	USINT	10	0 = 0x00 3 = 0x03 6 = 0x06 7 = 0x07 9 = 0x09 10 = 0x0A 11 = 0x0B 12 = 0x0C	off Input IN02 0...10 000 mV ratiometric 0...1000 % 0...20 000 µA 0...32 000 mV binary plus switched binary plus switched with diagnosis binary minus switched

Index	S-idx	Designation	Data type		Default	Details	
0x2000	0x04	Configuration IN03	rw	USINT	10	0 = 0x00 3 = 0x03 6 = 0x06 7 = 0x07 9 = 0x09 10 = 0x0A 11 = 0x0B 12 = 0x0C	off Input IN03 0...10 000 mV ratiometric 0...1000 ‰ 0...20 000 µA 0...32 000 mV binary plus switched binary plus switched with diagnosis binary minus switched
	0x05	Configuration IN04	rw	USINT	10	0 = 0x00 3 = 0x03 6 = 0x06 7 = 0x07 9 = 0x09 10 = 0x0A 11 = 0x0B 12 = 0x0C	off Input IN04 0...10 000 mV ratiometric 0...1000 ‰ 0...20 000 µA 0...32 000 mV binary plus switched binary plus switched with diagnosis binary minus switched
	0x06	Configuration IN05	rw	USINT	10	0 = 0x00 3 = 0x03 6 = 0x06 7 = 0x07 9 = 0x09 10 = 0x0A 11 = 0x0B 12 = 0x0C	off Input IN05 0...10 000 mV ratiometric 0...1000 ‰ 0...20 000 µA 0...32 000 mV binary plus switched binary plus switched with diagnosis binary minus switched
	0x07	Configuration IN06	rw	USINT	10	0 = 0x00 3 = 0x03 6 = 0x06 7 = 0x07 9 = 0x09 10 = 0x0A 11 = 0x0B 12 = 0x0C	off Input IN06 0...10 000 mV ratiometric 0...1000 ‰ 0...20 000 µA 0...32 000 mV binary plus switched binary plus switched with diagnosis binary minus switched
	0x08	Configuration IN07	rw	USINT	10	0 = 0x00 3 = 0x03 6 = 0x06 7 = 0x07 9 = 0x09 10 = 0x0A 11 = 0x0B 12 = 0x0C	off Input IN07 0...10 000 mV ratiometric 0...1000 ‰ 0...20 000 µA 0...32 000 mV binary plus switched binary plus switched with diagnosis binary minus switched
	0x09	Configuration IN08	rw	USINT	10	0 = 0x00 10 = 0x0A 11 = 0x0B 18 = 0x12	off Input IN08 binary plus switched binary plus switched with diagnosis 16...30 000 Ohm

UK

Index	S-idx	Designation	Data type		Default	Details	
0x2000	0x0A	Configuration IN09	rw	USINT	01	0 = 0x00 01 = 0x01 14 = 0x0E 20 = 0x14	off Input IN09 binary plus switched frequency 0...30 000 Hz period duration
	0x0B	Configuration IN10	rw	USINT	10	0 = 0x00 10 = 0x0A 11 = 0x0B 18 = 0x12	off Input IN10 binary plus switched binary plus switched with diagnosis 16...30 000 Ohm
	0x0C	Configuration IN11	rw	USINT	01	0 = 0x00 01 = 0x01 14 = 0x0E 20 = 0x14	off Input IN11 binary plus switched frequency 0...30 000 Hz period duration
	0x0D	Configuration IN12	rw	USINT	10	0 = 0x00 10 = 0x0A 11 = 0x0B 18 = 0x12	off Input IN12 binary plus switched binary plus switched with diagnosis 16...30 000 Ohm
	0x0E	Configuration IN13	rw	USINT	01	0 = 0x00 01 = 0x01 14 = 0x0E 20 = 0x14	off Input IN12 binary plus switched frequency 0...30 000 Hz period duration
	0x0F	Configuration IN14	rw	USINT	10	0 = 0x00 10 = 0x0A 11 = 0x0B 18 = 0x12	off Input IN14 binary plus switched binary plus switched with diagnosis 16...30 000 Ohm
	0x10	Configuration IN15	rw	USINT	01	0 = 0x00 01 = 0x01 14 = 0x0E 20 = 0x14	off Input IN15 binary plus switched frequency 0...30 000 Hz period duration
0x2012	0x00	Period input	ro	USINT	4	Largest sub-index supported	
	0x01	Period duration IN09	ro	UDINT	0	IN09 period duration [μs]	
	0x02	Period duration IN11	ro	UDINT	0	IN11 period duration [μs]	
	0x03	Period duration IN13	ro	UDINT	0	IN13 period duration [μs]	
	0x04	Period duration IN15	ro	UDINT	0	IN15 period duration [μs]	

Index	S-idx	Designation	Data type		Default	Details	
0x2013	0x00	Period input number of periods for average	ro	USINT	4	Largest sub-index supported	
	0x01	Number of periods IN09	rw	USINT	4	1...255	IN09 number of periods
	0x02	Number of periods IN11	rw	USINT	4	1...255	IN11 number of periods
	0x03	Number of periods IN13	rw	USINT	4	1...255	IN13 number of periods
	0x04	Number of periods IN15	rw	USINT	4	1...255	IN15 number of periods
0x2014	0x00	Period input – ratio value	ro	USINT	4	Largest sub-index supported	
	0x01	Period ratio value IN09	ro	UINT	0	0...1 000	IN09 marc-to-space ratio [‰]
	0x02	Period ratio value IN11	ro	UINT	0	0...1 000	IN11 marc-to-space ratio [‰]
	0x03	Period ratio value IN13	ro	UINT	0	0...1 000	IN13 marc-to-space ratio [‰]
	0x04	Period ratio value IN15	ro	UINT	0	0...1 000	IN15 marc-to-space ratio [‰]
0x2015	0x00	Frequency input	ro	USINT	4	Largest sub-index supported	
	0x01	Frequency IN09	ro	REAL	1	0...30 000	IN09 frequency [Hz]
	0x02	Frequency IN11	ro	REAL	1	0...30 000	IN11 frequency [Hz]
	0x03	Frequency IN13	ro	REAL	1	0...30 000	IN13 frequency [Hz]
	0x04	Frequency IN15	ro	REAL	1	0...30 000	IN15 frequency [Hz]
0x2016	0x00	Timebase	ro	USINT	4	Largest sub-index supported	
	0x01	Timebase IN09	rw	UINT	50	0...2 000	IN09 timebase [ms]
	0x02	Timebase IN11	rw	UINT	50	0...2 000	IN11 timebase [ms]
	0x03	Timebase IN13	rw	UINT	50	0...2 000	IN13 timebase [ms]
	0x04	Timebase IN15	rw	UINT	50	0...2 000	IN15 timebase [ms]

UK

Index	S-idx	Designation	Data type		Default	Details	
0x2020	0x00	Input – short to supply voltage	ro	USINT	2	Largest sub-index supported	
	0x01	Short to supply voltage IN00...IN07	ro	USINT	0	0 = normal 1 = short circuit	channels (bit coded) 0b---- ---X = IN00 0b---- --X- = IN01 0b---- -X-- = IN02 0b---- X--- = IN03 0b---X ---- = IN04 0b--X- ---- = IN05 0b-X- ---- = IN06 0bX- ---- = IN07
	0x02	Short to supply voltage IN08, IN10, IN12, IN14	ro	USINT	0	0 = normal 1 = short circuit	channels (bit coded) 0b---- ---X = IN08 0b---- --X- = IN10 0b---- -X-- = IN12 0b---- X--- = IN14
0x2021	0x00	Input – wire break	ro	USINT	2	Largest sub-index supported	
	0x01	Wire break IN00...IN07	ro	USINT	0	0 = normal 1 = wire break	channels (bit coded) 0b---- ---X = IN00 0b---- --X- = IN01 0b---- -X-- = IN02 0b---- X--- = IN03 0b---X ---- = IN04 0b--X- ---- = IN05 0b-X- ---- = IN06 0bX- ---- = IN07
	0x02	Wire break IN08, IN10, IN12, IN14	ro	USINT	0	0 = normal 1 = wire break	channels (bit coded) 0b---- ---X = IN08 0b---- --X- = IN10 0b---- -X-- = IN12 0b---- X--- = IN14
0x2025	0x00	Input analog – overcurrent	ro	USINT	1	Largest sub-index supported	
	0x01	Overcurrent IN00...IN07	ro	USINT	0	0 = normal 1 = overcurrent	channels (bit coded) 0b---- ---X = IN00 0b---- --X- = IN01 0b---- -X-- = IN02 0b---- X--- = IN03 0b---X ---- = IN04 0b--X- ---- = IN05 0b-X- ---- = IN06 0bX- ---- = IN07

Index	S-idx	Designation	Data type		Default	Details	
0x2030	0x00	Input resistor	ro	USINT	4	Largest sub-index supported	
	0x01	Resistance IN08	ro	UINT	0	0...30 000	IN08 resistance [Ohms]
	0x02	Resistance IN10	ro	UINT	0	0...30 000	IN10 resistance [Ohms]
	0x03	Resistance IN12	ro	UINT	0	0...30 000	IN12 resistance [Ohms]
	0x04	Resistance IN14	ro	UINT	0	0...30 000	IN14 resistance [Ohms]
0x2040	0x00	System supply voltage VBBS	ro	USINT	1	Largest sub-index supported	
	0x01	VBBS	ro	USINT	0	VBBS voltage [mV]	
0x2050		Device temperature	ro	UINT	0	temperature [°C]	
0x20F0		Node ID	rw	USINT	125	1...125	node ID [!] value(0x20F0) != value(20F1)
0x20F1		Node ID	rw	USINT	125	1...125	node ID [!] value(0x20F0) != value(20F1)
0x20F2		Baud rate	rw	USINT	3	baud rate [!] value(0x20F2) != value(20F3)	
	0					1000 kBit/s	
	1					800 kBit/s	
	2					500 kBit/s	
	3					250 kBit/s	
	4					125 kBit/s	
	5					100 kBit/s	
	6					50 kBit/s	
7	20 kBit/s						
0x20F3		Baud rate	rw	USINT	3	baud rate [!] value(0x20F2) != value(20F3)	
0x20F4		Autostart	rw	UINT	0	not used	
0x20F5		Lock edit mode	rw	USINT	0	0 = edit mode unlocked 1 = edit mode locked	

UK

Index	S-idx	Designation	Data type		Default	Details
0x6000	0x00	Binary input Largest sub-index supported	ro	USINT	0x02	Binary inputs Largest supported sub-index = 2
	0x01	Binary inputs IN00 - IN07	ro	USINT	0	Binary inputs IN00...IN07 0b---- ---X = IN00 0b---- --X- = IN01 0b---- -X-- = IN02 0b---- X--- = IN03 0b---X ---- = IN04 0b--X- ---- = IN05 0b-X-- ---- = IN06 0bX--- ---- = IN07
	0x02	Binary inputs IN08 - IN15	ro	USINT	0	Binary inputs IN08...IN15 0b---- ---X = IN08 0b---- --X- = IN09 0b---- -X-- = IN10 0b---- X--- = IN11 0b---X ---- = IN12 0b--X- ---- = IN13 0b-X-- ---- = IN14 0bX--- ---- = IN15
0x6404	0x00	Analogue input Largest sub-index supported	ro	USINT	0x08	Analogue inputs Largest supported sub-index = 4
	0x01	Analogue input IN00	ro	UINT	--	Analogue value of input IN00
	0x02	Analogue input IN01	ro	UINT	--	Analogue value of input IN01
	0x03	Analogue input IN02	ro	UINT	--	Analogue value of input IN02
	0x04	Analogue input IN03	ro	UINT	--	Analogue value of input IN03
	0x05	Analogue input IN04	ro	UINT	--	Analogue value of input IN04
	0x06	Analogue input IN05	ro	UINT	--	Analogue value of input IN05
	0x07	Analogue input IN06	ro	UINT	--	Analogue value of input IN06
	0x08	Analogue input IN07	ro	UINT	--	Analogue value of input IN07

12.2.2 Device-specific CR2051

Receive PDO communication parameters (index 0x1400...0x14FF):

Index	S-idx	Designation	Data type	Default	Details	
0x1400	0x00	Receive PDO Communication Parameter Number of entries	ro	USINT	0x02	Receive PDO 1: binary outputs 0 - 15 number of entries = 2
	0x01	COBID used by PDO	rw	UDINT	0x200 + node ID	CAN ID of the first read PDO Bit 31 = 0 → PDO is valid Bit 31 = 1 → PDO is not valid
	0x02	transmission type	rw	USINT	0x01	0x00 = synch acyclic 0x01...0xF0 = synch cyclic; outputs are only updated after „n“ synch objects n = 1...240 = 0x01...0xF0 0xFC/0xFD not implemented 0xFE = asynch man. spec. event; outputs are updated immediately 0xFF = asynch device profile event; outputs are updated immediately
0x1401	0x00	Receive PDO Communication Parameter Number of entries	ro	USINT	0x02	Receive PDO 2: PWM outputs 0 - 3 number of entries = 2
	0x01	COBID used by PDO	rw	UDINT	0x300 + node ID	CAN ID of the second read PDO Bit 31 = 0 → PDO is valid Bit 31 = 1 → PDO is not valid
	0x02	transmission type	rw	USINT	0x01	0x00 = synch acyclic 0x01...0xF0 = synch cyclic; outputs are only updated after „n“ synch objects n = 1...240 = 0x01...0xF0 0xFC/0xFD not implemented 0xFE = asynch man. spec. event; outputs are updated immediately 0xFF = asynch device profile event; outputs are updated immediately

UK

Index	S-idx	Designation	Data type		Default	Details
0x1402	0x00	Receive PDO Communication Parameter Number of entries	ro	USINT	0x02	Receive PDO 3: PWM outputs 4 - 7 number of entries = 2
	0x01	COBID used by PDO	rw	UDINT	0x400 + node ID	CAN-ID of the 3. read PDO Bit 31 = 0 → PDO is valid Bit 31 = 1 → PDO is not valid
	0x02	transmission type	rw	USINT	0x01	0x00 = synch acyclic 0x01...0xF0 = synch cyclic; outputs are only updated after „n“ synch objects n = 1...240 = 0x01...0xF0 0xFC/0xFD not implemented 0xFE = asynch man. spec. event; outputs are updated immediately 0xFF = asynch device profile event; outputs are updated immediately
0x1403	0x00	Receive PDO Communication Parameter Number of entries	ro	USINT	0x02	Receive PDO 4: PWM outputs 8 - 11 number of entries = 2
	0x01	COBID used by PDO	rw	UDINT	0x500 + node ID	CAN-ID of the 3. read PDO Bit 31 = 0 → PDO is valid Bit 31 = 1 → PDO is not valid
	0x02	transmission type	rw	USINT	0x01	0x00 = synch acyclic 0x01...0xF0 = synch cyclic; outputs are only updated after „n“ synch objects n = 1...240 = 0x01...0xF0 0xFC/0xFD not implemented 0xFE = asynch man. spec. event; outputs are updated immediately 0xFF = asynch device profile event; outputs are updated immediately

Index	S-idx	Designation	Data type		Default	Details
0x1404	0x00	Receive PDO Communication Parameter Number of entries	ro	USINT	0x02	Receive PDO 5: PWM outputs 12 - 15 number of entries = 2
	0x01	COBID used by PDO	rw	UDINT	0x201 + node ID	CAN-ID of the 3. read PDO Bit 31 = 0 → PDO is valid Bit 31 = 1 → PDO is not valid
	0x02	transmission type	rw	USINT	0x01	0x00 = synch acyclic 0x01...0xF0 = synch cyclic; outputs are only updated after „n“ synch objects n = 1...240 = 0x01...0xF0 0xFC/0xFD not implemented 0xFE = asynch man. spec. event; outputs are updated immediately 0xFF = asynch device profile event; outputs are updated immediately

UK

Receive PDO mapping (index 0x1600...0x16FF):

Index	S-idx	Designation	Data type		Default	Details
0x1600	0x00	Receive PDO mapping Number of mapped objects in PDO	rw	USINT	0x02	Mapping read PDO 1: binary outputs number of integrated application objects = 2
	0x01	PDO mapping	ro	UDINT	0x6200 0108	1 byte in index 0x6200, SubIndex 01 Binary outputs OUT0...OUT07 0b---- -X = OUT00 0b---- -X- = OUT01 0b---- -X-- = OUT02 0b---- X-- = OUT03 0b---X ---- = OUT04 0b--X- ---- = OUT05 0b-X-- ---- = OUT06 0bX--- ---- = OUT07
	0x02	PDO mapping	ro	UDINT	0x6200 0208	1 byte in index 0x6200, SubIndex 02 Binary outputs OUT08...OUT15 0b---- -X = OUT08 0b---- -X- = OUT09 0b---- -X-- = OUT10 0b---- X-- = OUT11 0b---X ---- = OUT12 0b--X- ---- = OUT13 0b-X-- ---- = OUT14 0bX--- ---- = OUT15

Index	S-idx	Designation	Data type		Default	Details
0x1601	0x00	Receive PDO mapping Number of mapped objects in PDO	rw	USINT	0x04	Mapping read PDO 2: PWM outputs OUT00...OUT03 number of integrated application objects = 4
	0x01	PDO mapping	rw	UDINT	0x6414 0110	PWM/current output OUT00 Index 0x6414, SubIndex 0x01 contains the preset value of the PWM output OUT00, the value is interpreted as duty cycle in ‰ or as target current value (depending on the configuration index 0x2000)
	0x02	PDO mapping	rw	UDINT	0x6414 0210	PWM/ current output OUT01 Index 0x6414, SubIndex 0x02 contains the preset value of the PWM output OUT01, the value is interpreted as duty cycle in ‰ or as target current value (depending on the configuration index 0x2000)
	0x03	PDO mapping	rw	UDINT	0x6414 0310	PWM/ current output OUT02 Index 0x6414, SubIndex 0x03 contains the preset value of the PWM output OUT02, the value is interpreted as duty cycle in ‰ or as target current value (depending on the configuration index 0x2000)
	0x04	PDO mapping	rw	UDINT	0x6414 0410	PWM/ current output OUT03 Index 0x6414, SubIndex 0x04 contains the preset value of the PWM output OUT03, the value is interpreted as duty cycle in ‰ or as target current value (depending on the configuration index 0x2000)

Index	S-idx	Designation	Data type		Default	Details
0x1602	0x00	"Receive PDO mapping Number of mapped objects in PDO"	rw	USINT	0x04	Mapping read PDO 3: PWM outputs OUT04...OUT07 number of integrated application objects = 4
	0x01	PDO mapping	rw	UDINT	0x6414 0510	PWM/ current output OUT04 Index 0x6414, SubIndex 0x05 contains the preset value of the PWM output OUT04, the value is interpreted as duty cycle in ‰ or as target current value (depending on the configuration index 0x2000)
	0x02	PDO mapping	rw	UDINT	0x6414 0610	PWM/ current output OUT05 Index 0x6414, SubIndex 0x06 contains the preset value of the PWM output OUT05, the value is interpreted as duty cycle in ‰ or as target current value (depending on the configuration index 0x2000)
	0x03	PDO mapping	rw	UDINT	0x6414 0710	PWM/ current output OUT06 Index 0x6414, SubIndex 0x07 contains the preset value of the PWM output OUT06, the value is interpreted as duty cycle in ‰ or as target current value (depending on the configuration index 0x2000)
	0x04	PDO mapping	rw	UDINT	0x6414 0810	PWM/ current output OUT07 Index 0x6414, SubIndex 0x08 contains the preset value of the PWM output OUT07, the value is interpreted as duty cycle in ‰ or as target current value (depending on the configuration index 0x2000)

UK

Index	S-idx	Designation	Data type		Default	Details
0x1603	0x00	Receive PDO mapping Number of mapped objects in PDO	rw	USINT	0x04	Mapping read PDO 4: PWM outputs OUT08...OUT11 number of integrated application objects = 4
	0x01	PDO mapping	rw	UDINT	0x6414 0910	PWM/ current output OUT08 Index 0x6414, SubIndex 0x09 contains the preset value of the PWM output OUT08, the value is interpreted as duty cycle in ‰ or as target current value (depending on the configuration index 0x2000)
	0x02	PDO mapping	rw	UDINT	0x6414 0A10	PWM/ current output OUT09 Index 0x6414, SubIndex 0x0A contains the preset value of the PWM output OUT09, the value is interpreted as duty cycle in ‰ or as target current value (depending on the configuration index 0x2000)
	0x03	PDO mapping	rw	UDINT	0x6414 0B10	PWM/ current output OUT10 Index 0x6414, SubIndex 0x0B contains the preset value of the PWM output OUT10, the value is interpreted as duty cycle in ‰ or as target current value (depending on the configuration index 0x2000)
	0x04	PDO mapping	rw	UDINT	0x6414 0C10	PWM/ current output OUT11 Index 0x6414, SubIndex 0x0C contains the preset value of the PWM output OUT11, the value is interpreted as duty cycle in ‰ or as target current value (depending on the configuration index 0x2000)

Index	S-idx	Designation	Data type		Default	Details
0x1604	0x00	Receive PDO mapping Number of mapped objects in PDO	rw	USINT	0x04	Mapping read PDO 5: PWM outputs OUT12...OUT15 number of integrated application objects = 4
	0x01	PDO mapping	rw	UDINT	0x6414 0D10	PWM/ current output OUT12 Index 0x6414, SubIndex 0x0D contains the preset value of the PWM output OUT12, the value is interpreted as duty cycle in % or as target current value (depending on the configuration index 0x2000)
	0x02	PDO mapping	rw	UDINT	0x6414 0E10	PWM/ current output OUT13 Index 0x6414, SubIndex 0x0E contains the preset value of the PWM output OUT13, the value is interpreted as duty cycle in % or as target current value (depending on the configuration index 0x2000)
	0x03	PDO mapping	rw	UDINT	0x6414 0F10	PWM/ current output OUT14 Index 0x6414, SubIndex 0x0F contains the preset value of the PWM output OUT14, the value is interpreted as duty cycle in % or as target current value (depending on the configuration index 0x2000)
	0x04	PDO mapping	rw	UDINT	0x6414 1010	PWM/ current output OUT15 Index 0x6414, SubIndex 0x10 contains the preset value of the PWM output OUT15, the value is interpreted as duty cycle in % or as target current value (depending on the configuration index 0x2000)

UK

Transmit PDO communication parameters (index 0x1800...0x18FF):

Index	S-idx	Designation	Data type		Default	Details
0x1800	0x00	Transmit PDO Communication Parameter Number of entries	ro	USINT	0x05	Configuration transmit PDO 1 number of entries = 5
	0x01	COBID used by PDO	rw	UDINT	0x180 + Node ID	CAN ID of the transmit PDO 1 Bit 31 = 0 → PDO is valid Bit 31 = 1 → PDO is not valid
	0x02	transmission type	rw	USINT	0x01	0x00 = synch acyclic 0x01...0xF0 = synch cyclic; values are only transmitted after „n“ synch objects n = 1...240 = 0x01...0xF0 0xFC/0xFD not implemented 0xFE = asynch man. spec. event; values are immediately transferred 0xFF = asynch device profile event; values are immediately transferred
	0x03	inhibit time	rw	UINT	0	delay time in the transmission type "asynch" before the PDO is transmitted again at the earliest. (0...65535 • 100 µs)
	0x04	reserved	rw	USINT	0	reserve
	0x05	event time	rw	UINT	0	max. transfer break in the transmission type „asynch“ (0...65535 ms) When this time has elapsed, the PDO is transferred even if the appl. event has not accured.

Index	S-idx	Designation	Data type		Default	Details
0x1801	0x00	Transmit PDO Communication Parameter Number of entries	ro	USINT	0x05	Configuration transmit PDO 2 number of entries = 5
	0x01	COBID used by PDO	rw	UDINT	0x280 + Node ID	CAN ID of the transmit PDO 2 Bit 31 = 0 → PDO is valid Bit 31 = 1 → PDO is not valid
	0x02	transmission type	rw	USINT	0x01	0x00 = synch acyclic 0x01...0xF0 = synch cyclic; values are only transmitted after „n“ synch objects n = 1...240 = 0x01...0xF0 0xFC/0xFD not implemented 0xFE = asynch man. spec. event; values are immediately transferred 0xFF = asynch device profile event; values are immediately transferred
	0x03	inhibit time	rw	UINT	0	delay time in the transmission type "asynch" before the PDO is transmitted again at the earliest. (0...65535 • 100 µs)
	0x04	reserved	rw	USINT	0	reserve
	0x05	event time	rw	UINT	0	max. transfer break in the transmission type „asynch“ (0...65535 ms) When this time has elapsed, the PDO is transferred even if the appl. event has not accured.

UK

Index	S-idx	Designation	Data type		Default	Details
0x1802	0x00	Transmit PDO Communication Parameter Number of entries	ro	USINT	0x05	Configuration transmit PDO 3 number of entries = 5
	0x01	COBID used by PDO	rw	UDINT	0x380 + Node ID	CAN ID of the transmit PDO 3 Bit 31 = 0 → PDO is valid Bit 31 = 1 → PDO is not valid
	0x02	transmission type	rw	USINT	0x01	0x00 = synch acyclic 0x01...0xF0 = synch cyclic; values are only transmitted after „n“ synch objects n = 1...240 = 0x01...0xF0 0xFC/0xFD not implemented 0xFE = asynch man. spec. event; values are immediately transferred 0xFF = asynch device profile event; values are immediately transferred
	0x03	inhibit time	rw	UINT	0	delay time in the transmission type "asynch" before the PDO is transmitted again at the earliest. (0...65535 • 100 µs)
	0x04	reserved	rw	USINT	0	reserve
	0x05	event time	rw	UINT	0	max. transfer break in the transmission type „asynch“ (0...65535 ms) When this time has elapsed, the PDO is transferred even if the appl. event has not accured.

Index	S-idx	Designation	Data type		Default	Details
0x1803	0x00	Transmit PDO Communication Parameter Number of entries	ro	USINT	0x05	Configuration transmit PDO 4 number of entries = 5
	0x01	COBID used by PDO	rw	UDINT	0x480 + Node ID	CAN ID of the transmit PDO 4 Bit 31 = 0 → PDO is valid Bit 31 = 1 → PDO is not valid
	0x02	transmission type	rw	USINT	0x01	0x00 = synch acyclic 0x01...0xF0 = synch cyclic; values are only transmitted after „n“ synch objects n = 1...240 = 0x01...0xF0 0xFC/0xFD not implemented 0xFE = asynch man. spec. event; values are immediately transferred 0xFF = asynch device profile event; values are immediately transferred
	0x03	inhibit time	rw	UINT	0	delay time in the transmission type "asynch" before the PDO is transmitted again at the earliest. (0...65535 • 100 µs)
	0x04	reserved	rw	USINT	0	reserve
	0x05	event time	rw	UINT	0	max. transfer break in the transmission type „asynch“ (0...65535 ms) When this time has elapsed, the PDO is transferred even if the appl. event has not accured.

UK

Transmit PDO mapping (index 0x1A00...0x1AFF):

Index	S-idx	Designation	Data type		Default	Details
0x1A00	0x00	Transmit PDO mapping Number of mapped objects in PDO	rw	USINT	0x04	mapping transmit PDO 01 (output current OUT00...OUT03) number of integrated application objects = 4
	0x01	PDO mapping	rw	UDINT	0x2002 0110	Index 0x2002, SubIndex 0x01 current on output OUT00
	0x02	PDO mapping	rw	UDINT	0x2002 0210	Index 0x2002, SubIndex 0x02 current on output OUT01
	0x03	PDO mapping	rw	UDINT	0x2002 0310	Index 0x2002, SubIndex 0x03 current on output OUT02
	0x04	PDO mapping	rw	UDINT	0x2002 0410	Index 0x2002, SubIndex 0x04 current on output OUT03
0x1A01	0x00	Transmit PDO mapping Number of mapped objects in PDO	rw	USINT	0x04	mapping transmit PDO 02 (output current OUT04...OUT07) number of integrated application objects = 4
	0x01	PDO mapping	rw	UDINT	0x2002 0510	Index 0x2002, SubIndex 0x05 current on output OUT04
	0x02	PDO mapping	rw	UDINT	0x2002 0610	Index 0x2002, SubIndex 0x06 current on output OUT05
	0x03	PDO mapping	rw	UDINT	0x2002 0710	Index 0x2002, SubIndex 0x07 current on output OUT06
	0x04	PDO mapping	rw	UDINT	0x2002 0810	Index 0x2002, SubIndex 0x08 current on output OUT07

Index	S-idx	Designation	Data type		Default	Details
0x1A02	0x00	Transmit PDO mapping Number of mapped objects in PDO	rw	USINT	0x05	mapping transmit PDO 3 number of integrated application objects = 5
	0x01	PDO mapping	rw	UDINT	0x2022 0108	Index 0x2022, SubIndex 0x01 outputs 00...07: flag " short circuit " (bit coded)
	0x02	PDO mapping	rw	UDINT	0x2022 0208	Index 0x2022, SubIndex 0x02 outputs 08...15: flag " short circuit " (bit coded)
	0x03	PDO mapping	rw	UDINT	0x2023 0108	Index 0x2023, SubIndex 0x01 outputs 00...07: flag " wire break " (bit coded)
	0x04	PDO mapping	rw	UDINT	0x2023 0208	Index 0x2023, SubIndex 0x02 outputs 08...015: flag " wire break " (bit coded)
	0x05	PDO mapping	rw	UDINT	0x2024 0108	Index 0x2024, SubIndex 0x01 outputs 00...07: flag " overload " (bit coded)
0x1A03	0x00	Transmit PDO mapping Number of mapped objects in PDO	rw	USINT	0x04	mapping transmit PDO 4 (system flag) number of integrated application objects = 4
	0x01	PDO mapping	rw	UDINT	0x2040 0110	Index 0x2040, SubIndex 0x01 supply voltage of the system VBBS
	0x02	PDO mapping	rw	UDINT	0x2041 0110	Index 0x2041, SubIndex 0x01 output supply voltage VBB1
	0x03	PDO mapping	rw	UDINT	0x2041 0210	Index 0x2041, SubIndex 0x02 output supply voltage VBB2
	0x04	PDO mapping	rw	UDINT	0x2050 0010	Index 0x2050, SubIndex 0x00 system temperature in °C

Manufacturer-specific objects (index 0x2000...0x6FFF):

Index	S-idx	Designation	Data type		Default	Details	
0x2000	0x00	IO configuration Largest sub-index supported	ro	USINT	16	Configuration inputs/outputs largest supported Sub-index = 32	
	0x01	Configuration OUT00	rw	USINT	2	0 = 0x00 2 = 0x02 4 = 0x04 5 = 0x05 15 = 0x0F 16 = 0x10	off Input OUT00 binary plus switched PWM output current control binary plus switched with diagnosis binary plus switched with diagnosis + protection
	0x02	Configuration OUT01	rw	USINT	2	0 = 0x00 2 = 0x02 4 = 0x04 5 = 0x05 15 = 0x0F 16 = 0x10	off Input OUT01 binary plus switched PWM output current control binary plus switched with diagnosis binary plus switched with diagnosis + protection
	0x03	Configuration OUT02	rw	USINT	2	0 = 0x00 2 = 0x02 4 = 0x04 5 = 0x05 15 = 0x0F 16 = 0x10	off Input OUT02 binary plus switched PWM output current control binary plus switched with diagnosis binary plus switched with diagnosis + protection
	0x04	Configuration OUT03	rw	USINT	2	0 = 0x00 2 = 0x02 4 = 0x04 5 = 0x05 15 = 0x0F 16 = 0x10	off Input OUT03 binary plus switched PWM output current control binary plus switched with diagnosis binary plus switched with diagnosis + protection
	0x05	Configuration OUT04	rw	USINT	2	0 = 0x00 2 = 0x02 4 = 0x04 5 = 0x05 15 = 0x0F 16 = 0x10	off Input OUT04 binary plus switched PWM output current control binary plus switched with diagnosis binary plus switched with diagnosis + protection

Index	S-idx	Designation	Data type		Default	Details	
0x2000	0x06	Configuration OUT05	rw	USINT	2	0 = 0x00 2 = 0x02 4 = 0x04 5 = 0x05 15 = 0x0F 16 = 0x10	off Input OUT05 binary plus switched PWM output current control binary plus switched with diagnosis binary plus switched with diagnosis + protection
	0x07	Configuration OUT06	rw	USINT	2	0 = 0x00 2 = 0x02 4 = 0x04 5 = 0x05 15 = 0x0F 16 = 0x10	off Input OUT06 binary plus switched PWM output current control binary plus switched with diagnosis binary plus switched with diagnosis + protection
	0x08	Configuration OUT07	rw	USINT	2	0 = 0x00 2 = 0x02 4 = 0x04 15 = 0x0F	off Input OUT07 binary plus switched PWM output binary plus switched with diagnosis
	0x09	Configuration OUT08	rw	USINT	2	0 = 0x00 2 = 0x02 4 = 0x04 15 = 0x0F	off Input OUT08 binary plus switched PWM output binary plus switched with diagnosis
	0x0A	Configuration OUT09	rw	USINT	2	0 = 0x00 2 = 0x02 4 = 0x04 15 = 0x0F	off Input OUT09 binary plus switched PWM output binary plus switched with diagnosis
	0x0B	Configuration OUT10	rw	USINT	2	0 = 0x00 2 = 0x02 4 = 0x04 15 = 0x0F	off Input OUT10 binary plus switched PWM output binary plus switched with diagnosis
	0x0C	Configuration OUT11	rw	USINT	2	0 = 0x00 2 = 0x02 4 = 0x04 15 = 0x0F	off Input OUT11 binary plus switched PWM output binary plus switched with diagnosis
	0x0D	Configuration OUT12	rw	USINT	2	0 = 0x00 2 = 0x02 4 = 0x04 15 = 0x0F	off Input OUT12 binary plus switched PWM output binary plus switched with diagnosis

UK

Index	S-idx	Designation	Data type		Default	Details	
0x2000	0x0E	Configuration OUT13	rw	USINT	2	0 = 0x00 2 = 0x02 4 = 0x04 15 = 0x0F	off Input OUT13 binary plus switched PWM output binary plus switched with diagnosis
	0x0F	Configuration OUT14	rw	USINT	2	0 = 0x00 2 = 0x02 4 = 0x04 15 = 0x0F	off Input OUT14 binary plus switched PWM output binary plus switched with diagnosis
	0x10	Configuration OUT15	rw	USINT	2	0 = 0x00 2 = 0x02 4 = 0x04 15 = 0x0F	off Input OUT15 binary plus switched PWM output binary plus switched with diagnosis
0x2001	0x00	PWM frequency	ro	USINT	16	Largest sub-index supported	
	0x01	PWM frequency OUT00	rw	UINT	100	20...250	OUT00 PWM frequency [Hz]
	0x02	PWM frequency OUT01	rw	UINT	100	20...250	OUT01 PWM frequency [Hz]
	0x03	PWM frequency OUT02	rw	UINT	100	20...250	OUT02 PWM frequency [Hz]
	0x04	PWM frequency OUT03	rw	UINT	100	20...250	OUT03 PWM frequency [Hz]
	0x05	PWM frequency OUT04	rw	UINT	100	20...250	OUT04 PWM frequency [Hz]
	0x06	PWM frequency OUT05	rw	UINT	100	20...250	OUT05 PWM frequency [Hz]
	0x07	PWM frequency OUT06	rw	UINT	100	20...250	OUT06 PWM frequency [Hz]
	0x08	PWM frequency OUT07	rw	UINT	100	20...250	OUT07 PWM frequency [Hz]
	0x09	PWM frequency OUT08	rw	UINT	100	20...250	OUT08 PWM frequency [Hz]
	0x0A	PWM frequency OUT09	rw	UINT	100	20...250	OUT09 PWM frequency [Hz]

Index	S-idx	Designation	Data type		Default	Details	
0x2001	0x0B	PWM frequency OUT10	rw	UINT	100	20...250	OUT10 PWM frequency [Hz]
	0x0C	PWM frequency OUT11	rw	UINT	100	20...250	OUT11 PWM frequency [Hz]
	0x0D	PWM frequency OUT12	rw	UINT	100	20...250	OUT12 PWM frequency [Hz]
	0x0E	PWM frequency OUT13	rw	UINT	100	20...250	OUT13 PWM frequency [Hz]
	0x0F	PWM frequency OUT14	rw	UINT	100	20...250	OUT14 PWM frequency [Hz]
	0x10	PWM frequency OUT15	rw	UINT	100	20...250	OUT15 PWM frequency [Hz]
0x2002	0x00	Current value	ro	USINT	8	Largest sub-index supported	
	0x01	Current value OUT00	ro	UINT	0	0...4000	OUT00 output current [mA]
	0x02	Current value OUT01	ro	UINT	0	0...4000	OUT01 output current [mA]
	0x03	Current value OUT02	ro	UINT	0	0...2500	OUT02 output current [mA]
	0x04	Current value OUT03	ro	UINT	0	0...2500	OUT03 output current [mA]
	0x05	Current value OUT04	ro	UINT	0	0...4000	OUT04 output current [mA]
	0x06	Current value OUT05	ro	UINT	0	0...4000	OUT05 output current [mA]
	0x07	Current value OUT06	ro	UINT	0	0...2500	OUT06 output current [mA]
	0x08	Current value OUT07	ro	UINT	0	0...2500	OUT07 output current [mA]

UK

Index	S-idx	Designation	Data type		Default	Details	
0x2004	0x00	P-value	ro	USINT	8	Largest sub-index supported	
	0x01	P-value OUT00	rw	USINT	30	0...255	OUT00 P-value for current control
	0x02	P-value OUT01	rw	USINT	30	0...255	OUT01 P-value for current control
	0x03	P-value OUT02	rw	USINT	30	0...255	OUT02 P-value for current control
	0x04	P-value OUT03	rw	USINT	30	0...255	OUT03 P-value for current control
	0x05	P-value OUT04	rw	USINT	30	0...255	OUT04 P-value for current control
	0x06	P-value OUT05	rw	USINT	30	0...255	OUT05 P-value for current control
	0x07	P-value OUT06	rw	USINT	30	0...255	OUT06 P-value for current control
	0x08	P-value OUT07	rw	USINT	30	0...255	OUT07 P-value for current control
0x2005	0x00	I-value	ro	USINT	8	Largest sub-index supported	
	0x01	I-value OUT00	rw	USINT	20	0...255	OUT00 I-value for current control
	0x02	I-value OUT01	rw	USINT	20	0...255	OUT01 I-value for current control
	0x03	I-value OUT02	rw	USINT	20	0...255	OUT02 I-value for current control
	0x04	I-value OUT03	rw	USINT	20	0...255	OUT03 I-value for current control
	0x05	I-value OUT04	rw	USINT	20	0...255	OUT04 I-value for current control
	0x06	I-value OUT05	rw	USINT	20	0...255	OUT05 I-value for current control
	0x07	I-value OUT06	rw	USINT	20	0...255	OUT06 I-value for current control
	0x08	I-value OUT07	rw	USINT	20	0...255	OUT07 I-value for current control
0x2006	0x00	PWM dither frequency	ro	USINT	16	Largest sub-index supported	
	0x01	PWM dither frequency OUT00	rw	UINT	0	0...PWM- freq / 2	OUT00 PWM dither frequency [Hz]
	0x02	PWM dither frequency OUT01	rw	UINT	0	0...PWM- freq / 2	OUT01 PWM dither frequency [Hz]

Index	S-idx	Designation	Data type		Default	Details	
0x2006	0x03	PWM dither frequency OUT02	rw	UINT	0	0...PWM-freq / 2	OUT02 PWM dither frequency [Hz]
	0x04	PWM dither frequency OUT03	rw	UINT	0	0...PWM-freq / 2	OUT03 PWM dither frequency [Hz]
	0x05	PWM dither frequency OUT04	rw	UINT	0	0...PWM-freq / 2	OUT04 PWM dither frequency [Hz]
	0x06	PWM dither frequency OUT05	rw	UINT	0	0...PWM-freq / 2	OUT05 PWM dither frequency [Hz]
	0x07	PWM dither frequency OUT06	rw	UINT	0	0...PWM-freq / 2	OUT06 PWM dither frequency [Hz]
	0x08	PWM dither frequency OUT07	rw	UINT	0	0...PWM-freq / 2	OUT07 PWM dither frequency [Hz]
	0x09	PWM dither frequency OUT08	rw	UINT	0	0...PWM-freq / 2	OUT08 PWM dither frequency [Hz]
	0x0A	PWM dither frequency OUT09	rw	UINT	0	0...PWM-freq / 2	OUT09 PWM dither frequency [Hz]
	0x0B	PWM dither frequency OUT10	rw	UINT	0	0...PWM-freq / 2	OUT10 PWM dither frequency [Hz]
	0x0C	PWM dither frequency OUT11	rw	UINT	0	0...PWM-freq / 2	OUT11 PWM dither frequency [Hz]
	0x0D	PWM dither frequency OUT12	rw	UINT	0	0...PWM-freq / 2	OUT12 PWM dither frequency [Hz]
	0x0E	PWM dither frequency OUT13	rw	UINT	0	0...PWM-freq / 2	OUT13 PWM dither frequency [Hz]
	0x0F	PWM dither frequency OUT14	rw	UINT	0	0...PWM-freq / 2	OUT14 PWM dither frequency [Hz]
	0x10	PWM dither frequency OUT15	rw	UINT	0	0...PWM-freq / 2	OUT15 PWM dither frequency [Hz]

UK

Index	S-idx	Designation	Data type		Default	Details	
0x2007	0x00	PWM dither value	ro	USINT	16	Largest sub-index supported	
	0x01	PWM dither value OUT00	rw	UINT	0	0...1 000	OUT00 PWM dither value [%]
	0x02	PWM dither value OUT01	rw	UINT	0	0...1 000	OUT01 PWM dither value [%]
	0x03	PWM dither value OUT02	rw	UINT	0	0...1 000	OUT02 PWM dither value [%]
	0x04	PWM dither value OUT03	rw	UINT	0	0...1 000	OUT03 PWM dither value [%]
	0x05	PWM dither value OUT04	rw	UINT	0	0...1 000	OUT04 PWM dither value [%]
	0x06	PWM dither value OUT05	rw	UINT	0	0...1 000	OUT05 PWM dither value [%]
	0x07	PWM dither value OUT06	rw	UINT	0	0...1 000	OUT06 PWM dither value [%]
	0x08	PWM dither value OUT07	rw	UINT	0	0...1 000	OUT07 PWM dither value [%]
	0x09	PWM dither value OUT08	rw	UINT	0	0...1 000	OUT08 PWM dither value [%]
	0x0A	PWM dither value OUT09	rw	UINT	0	0...1 000	OUT09 PWM dither value [%]
	0x0B	PWM dither value OUT10	rw	UINT	0	0...1 000	OUT10 PWM dither value [%]
	0x0C	PWM dither value OUT11	rw	UINT	0	0...1 000	OUT11 PWM dither value [%]
	0x0D	PWM dither value OUT12	rw	UINT	0	0...1 000	OUT12 PWM dither value [%]
	0x0E	PWM dither value OUT13	rw	UINT	0	0...1 000	OUT13 PWM dither value [%]
	0x0F	PWM dither value OUT14	rw	UINT	0	0...1 000	OUT14 PWM dither value [%]
0x10	PWM dither value OUT15	rw	UINT	0	0...1 000	OUT15 PWM dither value [%]	

Index	S-idx	Designation	Data type		Default	Details	
0x2022	0x00	Output – short circuit	ro	USINT	2	Largest sub-index supported	
	0x01	Short circuit OUT00... OUT07	ro	USINT	0	0 = normal 1 = short circuit	channels (bit coded) 0b---- ---X = OUT00 0b---- --X- = OUT01 0b---- -X-- = OUT02 0b---- X--- = OUT03 0b---X ---- = OUT04 0b--X- ---- = OUT05 0b-X- ---- = OUT06 0bX- ---- = OUT07
	0x02	Short circuit OUT08... OUT15	ro	USINT	0	0 = normal 1 = short circuit	channels (bit coded) 0b---- ---X = OUT08 0b---- --X- = OUT09 0b---- -X-- = OUT10 0b---- X--- = OUT11 0b---X ---- = OUT12 0b--X- ---- = OUT13 0b-X- ---- = OUT14 0bX- ---- = OUT15
0x2023	0x00	Output – open circuit	ro	USINT	2	Largest sub-index supported	
	0x01	Open circuit OUT00... OUT07	ro	USINT	0	0 = normal 1 = open circuit	channels (bit coded) 0b---- ---X = OUT00 0b---- --X- = OUT01 0b---- -X-- = OUT02 0b---- X--- = OUT03 0b---X ---- = OUT04 0b--X- ---- = OUT05 0b-X- ---- = OUT06 0bX- ---- = OUT07
	0x02	Open circuit OUT08... OUT15	ro	USINT	0	0 = normal 1 = open circuit	channels (bit coded) 0b---- ---X = OUT08 0b---- --X- = OUT09 0b---- -X-- = OUT10 0b---- X--- = OUT11 0b---X ---- = OUT12 0b--X- ---- = OUT13 0b-X- ---- = OUT14 0bX- ---- = OUT15
0x2024	0x00	Output – overload	ro	USINT	1	Largest sub-index supported	
	0x01	Overload OUT00... OUT07	ro	USINT	0	0 = normal 1 = overload	channels (bit coded) 0b---- ---X = OUT00 0b---- --X- = OUT01 0b---- -X-- = OUT02 0b---- X--- = OUT03 0b---X ---- = OUT04 0b--X- ---- = OUT05 0b-X- ---- = OUT06 0bX- ---- = OUT07

UK

Index	S-idx	Designation	Data type		Default	Details	
0x2040	0x00	System supply voltage VBBS	ro	USINT	1	Largest sub-index supported	
	0x01	VBBS	ro	USINT	0	VBBS voltage [mV]	
0x2041	0x00	Output supply voltage	ro	USINT	2	Largest sub-index supported	
	0x01	VBB1	ro	UINT	0	VBB1 voltage [mV]	
	0x02	VBB2	ro	UINT	0	VBB2 voltage [mV]	
0x2050		Device temperature	ro	UINT	0	temperature [°C]	
0x20F0		Node ID	rw	USINT	125	1...125	node ID [!] value(0x20F0) != value(20F1)
0x20F1		Node ID	rw	USINT	125	1...125	node ID [!] value(0x20F0) != value(20F1)
0x20F2		Baud rate	rw	USINT	3	baud rate [!] value(0x20F2) != value(20F3)	
						0	1000 kBit/s
						1	800 kBit/s
						2	500 kBit/s
						3	250 kBit/s
						4	125 kBit/s
						5	100 kBit/s
						6	50 kBit/s
7	20 kBit/s						
0x20F3		Baud rate	rw	USINT	3	baud rate [!] value(0x20F2) != value(20F3)	
0x20F4		Autostart	rw	UINT	0	not used	
0x20F5		Lock edit mode	rw	USINT	0	0 = edit mode unlocked 1 = edit mode locked	

Index	S-idx	Designation	Data type		Default	Details
0x6200	0x00	Binary output Largest sub-index supported	ro	USINT	2	Binary outputs Largest supported sub-index = 2
	0x01	Binary out- puts OUT00 - OUT07	wo	USINT	0	Binary outputs OUT00...OUT07 0b---- --X = OUT00 0b---- --X- = OUT01 0b---- -X-- = OUT02 0b---- X--- = OUT03 0b---X ---- = OUT04 0b--X- ---- = OUT05 0b-X-- ---- = OUT06 0bX--- ---- = OUT07
	0x02	Binary out- puts OUT08 - OUT15	wo	USINT	0	Binary outputs OUT08...OUT15 0b---- --X = OUT08 0b---- --X- = OUT09 0b---- -X-- = OUT10 0b---- X--- = OUT11 0b---X ---- = OUT12 0b--X- ---- = OUT13 0b-X-- ---- = OUT14 0bX--- ---- = OUT15

UK

Index	S-idx	Designation	Data type		Default	Details
0x6414	0x00	PWM output Largest sub-index supported	ro	USINT	16	PWM outputs Largest supported sub-index = 16
	0x01	PWM output OUT00	wo	UINT	--	Value for PWM output OUT00
	0x02	PWM output OUT01	wo	UINT	--	Value for PWM output OUT01
	0x03	PWM output OUT02	wo	UINT	--	Value for PWM output OUT02
	0x04	PWM output OUT03	wo	UINT	--	Value for PWM output OUT03
	0x05	PWM output OUT04	wo	UINT	--	Value for PWM output OUT04
	0x06	PWM output OUT05	wo	UINT	--	Value for PWM output OUT05
	0x07	PWM output OUT06	wo	UINT	--	Value for PWM output OUT06
	0x08	PWM output OUT07	wo	UINT	--	Value for PWM output OUT07
	0x09	PWM output OUT08	wo	UINT	--	Value for PWM output OUT08
	0x0A	PWM output OUT09	wo	UINT	--	Value for PWM output OUT09
	0x0B	PWM output OUT10	wo	UINT	--	Value for PWM output OUT10
	0x0C	PWM output OUT11	wo	UINT	--	Value for PWM output OUT11
	0x0D	PWM output OUT12	wo	UINT	--	Value for PWM output OUT12
	0x0E	PWM output OUT13	wo	UINT	--	Value for PWM output OUT13
	0x0F	PWM output OUT14	wo	UINT	--	Value for PWM output OUT14
0x10	PWM output OUT15	wo	UINT	--	Value for PWM output OUT15	

12.2.3 Device-specific CR2052

Receive PDO communication parameters (index 0x1400...0x14FF):

Index	S-idx	Designation	Data type	Default	Details	
0x1400	0x00	Receive PDO Communication Parameter Number of entries	ro	USINT	0x02	Receive PDO 1: binary outputs 0 - 7 number of entries = 2
	0x01	COBID used by PDO	rw	UDINT	0x200 + node ID	CAN ID of the first read PDO Bit 31 = 0 → PDO is valid Bit 31 = 1 → PDO is not valid
	0x02	transmission type	rw	USINT	0x01	0x00 = synch acyclic 0x01...0xF0 = synch cyclic; outputs are only updated after „n“ synch objects n = 1...240 = 0x01...0xF0 0xFC/0xFD not implemented 0xFE = asynch man. spec. event; outputs are updated immediately 0xFF = asynch device profile event; outputs are updated immediately
0x1401	0x00	Receive PDO Communication Parameter Number of entries	ro	USINT	0x02	Receive PDO 2: PWM outputs 0 - 3 number of entries = 2
	0x01	COBID used by PDO	rw	UDINT	0x300 + node ID	CAN ID of the second read PDO Bit 31 = 0 → PDO is valid Bit 31 = 1 → PDO is not valid
	0x02	transmission type	rw	USINT	0x01	0x00 = synch acyclic 0x01...0xF0 = synch cyclic; outputs are only updated after „n“ synch objects n = 1...240 = 0x01...0xF0 0xFC/0xFD not implemented 0xFE = asynch man. spec. event; outputs are updated immediately 0xFF = asynch device profile event; outputs are updated immediately

UK

Index	S-idx	Designation	Data type		Default	Details
0x1402	0x00	Receive PDO Communication Parameter Number of entries	ro	USINT	0x02	Receive PDO 3: PWM outputs 4 - 7 number of entries = 2
	0x01	COBID used by PDO	rw	UDINT	0x400 + node ID	CAN-ID of the 3. read PDO Bit 31 = 0 → PDO is valid Bit 31 = 1 → PDO is not valid
	0x02	transmission type	rw	USINT	0x01	0x00 = synch acyclic 0x01...0xF0 = synch cyclic; outputs are only updated after „n“ synch objects n = 1...240 = 0x01...0xF0 0xFC/0xFD not implemented 0xFE = asynch man. spec. event; outputs are updated immediately 0xFF = asynch device profile event; outputs are updated immediately

Receive PDO mapping (index 0x1600...0x16FF):

Index	S-idx	Designation	Data type		Default	Details
0x1600	0x00	Receive PDO mapping Number of mapped objects in PDO	rw	USINT	0x01	Mapping read PDO 1: binary outputs
	0x01	PDO mapping	ro	UDINT	0x6200 0108	1 byte in index 0x6200, SubIndex 01 Binary outputs OUT00...OUT07 0b---- --X = OUT00 0b---- --X- = OUT01 0b---- -X-- = OUT02 0b---- X-- = OUT03 0b---X ---- = OUT04 0b--X- ---- = OUT05 0b-X- ---- = OUT06 0bX- ---- = OUT07

Index	S-idx	Designation	Data type		Default	Details
0x1601	0x00	Receive PDO mapping Number of mapped objects in PDO	rw	USINT	0x04	Mapping read PDO 2: PWM outputs OUT00...OUT03 number of integrated application objects = 4
	0x01	PDO mapping	rw	UDINT	0x6414 0110	PWM/current output OUT00 Index 0x6414, SubIndex 0x01 contains the preset value of the PWM output OUT00, the value is interpreted as duty cycle in ‰ or as target current value (depending on the configuration index 0x2000)
	0x02	PDO mapping	rw	UDINT	0x6414 0210	PWM/ current output OUT01 Index 0x6414, SubIndex 0x02 contains the preset value of the PWM output OUT01, the value is interpreted as duty cycle in ‰ or as target current value (depending on the configuration index 0x2000)
	0x03	PDO mapping	rw	UDINT	0x6414 0310	PWM/ current output OUT02 Index 0x6414, SubIndex 0x03 contains the preset value of the PWM output OUT02, the value is interpreted as duty cycle in ‰ or as target current value (depending on the configuration index 0x2000)
	0x04	PDO mapping	rw	UDINT	0x6414 0410	PWM/ current output OUT03 Index 0x6414, SubIndex 0x04 contains the preset value of the PWM output OUT03, the value is interpreted as duty cycle in ‰ or as target current value (depending on the configuration index 0x2000)

UK

Index	S-idx	Designation	Data type		Default	Details
0x1602	0x00	Receive PDO mapping Number of mapped objects in PDO	rw	USINT	0x04	Mapping read PDO 3: PWM outputs OUT04...OUT07 number of integrated application objects = 4
	0x01	PDO mapping	rw	UDINT	0x6414 0510	PWM/ current output OUT04 Index 0x6414, SubIndex 0x05 contains the preset value of the PWM output OUT04, the value is interpreted as duty cycle in ‰ or as target current value (depending on the configuration index 0x2000)
	0x02	PDO mapping	rw	UDINT	0x6414 0610	PWM/ current output OUT05 Index 0x6414, SubIndex 0x06 contains the preset value of the PWM output OUT05, the value is interpreted as duty cycle in ‰ or as target current value (depending on the configuration index 0x2000)
	0x03	PDO mapping	rw	UDINT	0x6414 0710	PWM/ current output OUT06 Index 0x6414, SubIndex 0x07 contains the preset value of the PWM output OUT06, the value is interpreted as duty cycle in ‰ or as target current value (depending on the configuration index 0x2000)
	0x04	PDO mapping	rw	UDINT	0x6414 0810	PWM/ current output OUT07 Index 0x6414, SubIndex 0x08 contains the preset value of the PWM output OUT07, the value is interpreted as duty cycle in ‰ or as target current value (depending on the configuration index 0x2000)

Transmit PDO communication parameters (index 0x1800...0x18FF):

Index	S-idx	Designation	Data type		Default	Details
0x1800	0x00	Transmit PDO Communication Parameter Number of entries	ro	USINT	0x05	Configuration transmit PDO 1 number of entries = 5
	0x01	COBID used by PDO	rw	UDINT	0x180 + Node ID	CAN ID of the transmit PDO 1 Bit 31 = 0 → PDO is valid Bit 31 = 1 → PDO is not valid
	0x02	transmission type	rw	USINT	0x01	0x00 = synch acyclic 0x01...0xF0 = synch cyclic; values are only transmitted after „n“ synch objects n = 1...240 = 0x01...0xF0 0xFC/0xFD not implemented 0xFE = asynch man. spec. event; values are immediately transferred 0xFF = asynch device profile event; values are immediately transferred
	0x03	inhibit time	rw	UINT	0	delay time in the transmission type "asynch" before the PDO is transmitted again at the earliest. (0...65535 • 100 µs)
	0x04	reserved	rw	USINT	0	reserve
	0x05	event time	rw	UINT	0	max. transfer break in the transmission type „asynch“ (0...65535 ms) When this time has elapsed, the PDO is transferred even if the appl. event has not accured.

UK

Index	S-idx	Designation	Data type		Default	Details
0x1801	0x00	Transmit PDO Communication Parameter Number of entries	ro	USINT	0x05	Configuration transmit PDO 2 number of entries = 5
	0x01	COBID used by PDO	rw	UDINT	0x280 + Node ID	CAN ID of the transmit PDO 2 Bit 31 = 0 → PDO is valid Bit 31 = 1 → PDO is not valid
	0x02	transmission type	rw	USINT	0x01	0x00 = synch acyclic 0x01...0xF0 = synch cyclic; values are only transmitted after „n“ synch objects n = 1...240 = 0x01...0xF0 0xFC/0xFD not implemented 0xFE = asynch man. spec. event; values are immediately transferred 0xFF = asynch device profile event; values are immediately transferred
	0x03	inhibit time	rw	UINT	0	delay time in the transmission type "asynch" before the PDO is transmitted again at the earliest. (0...65535 • 100 µs)
	0x04	reserved	rw	USINT	0	reserve
	0x05	event time	rw	UINT	0	max. transfer break in the transmission type „asynch“ (0...65535 ms) When this time has elapsed, the PDO is transferred even if the appl. event has not accured.

Index	S-idx	Designation	Data type		Default	Details
0x1802	0x00	Transmit PDO Communication Parameter Number of entries	ro	USINT	0x05	Configuration transmit PDO 3 number of entries = 5
	0x01	COBID used by PDO	rw	UDINT	0x380 + Node ID	CAN ID of the transmit PDO 3 Bit 31 = 0 → PDO is valid Bit 31 = 1 → PDO is not valid
	0x02	transmission type	rw	USINT	0x01	0x00 = synch acyclic 0x01...0xF0 = synch cyclic; values are only transmitted after „n“ synch objects n = 1...240 = 0x01...0xF0 0xFC/0xFD not implemented 0xFE = asynch man. spec. event; values are immediately transferred 0xFF = asynch device profile event; values are immediately transferred
	0x03	inhibit time	rw	UINT	0	delay time in the transmission type "asynch" before the PDO is transmitted again at the earliest. (0...65535 • 100 µs)
	0x04	reserved	rw	USINT	0	reserve
	0x05	event time	rw	UINT	0	max. transfer break in the transmission type „asynch“ (0...65535 ms) When this time has elapsed, the PDO is transferred even if the appl. event has not accured.

UK

Index	S-idx	Designation	Data type		Default	Details
0x1803	0x00	Transmit PDO Communication Parameter Number of entries	ro	USINT	0x05	Configuration transmit PDO 4 number of entries = 5
	0x01	COBID used by PDO	rw	UDINT	0x480 + Node ID	CAN ID of the transmit PDO 4 Bit 31 = 0 → PDO is valid Bit 31 = 1 → PDO is not valid
	0x02	transmission type	rw	USINT	0x01	0x00 = synch acyclic 0x01...0xF0 = synch cyclic; values are only transmitted after „n“ synch objects n = 1...240 = 0x01...0xF0 0xFC/0xFD not implemented 0xFE = asynch man. spec. event; values are immediately transferred 0xFF = asynch device profile event; values are immediately transferred
	0x03	inhibit time	rw	UINT	0	delay time in the transmission type "asynch" before the PDO is transmitted again at the earliest. (0...65535 • 100 µs)
	0x04	reserved	rw	USINT	0	reserve
	0x05	event time	rw	UINT	0	max. transfer break in the transmission type „asynch“ (0...65535 ms) When this time has elapsed, the PDO is transferred even if the appl. event has not accured.

Index	S-idx	Designation	Data type		Default	Details
0x1804	0x00	Transmit PDO Communication Parameter Number of entries	ro	USINT	0x05	Configuration transmit PDO 5 number of entries = 5
	0x01	COBID used by PDO	rw	UDINT	0x181 + Node ID	CAN ID of the transmit PDO 5 Bit 31 = 0 → PDO is valid Bit 31 = 1 → PDO is not valid
	0x02	transmission type	rw	USINT	0x01	0x00 = synch acyclic 0x01...0xF0 = synch cyclic; values are only transmitted after „n“ synch objects n = 1...240 = 0x01...0xF0 0xFC/0xFD not implemented 0xFE = asynch man. spec. event; values are immediately transferred 0xFF = asynch device profile event; values are immediately transferred
	0x03	inhibit time	rw	UINT	0	delay time in the transmission type "asynch" before the PDO is transmitted again at the earliest. (0...65535 • 100 µs)
	0x04	reserved	rw	USINT	0	reserve
	0x05	event time	rw	UINT	0	max. transfer break in the transmission type „asynch“ (0...65535 ms) When this time has elapsed, the PDO is transferred even if the appl. event has not accured.

UK

Index	S-idx	Designation	Data type		Default	Details
0x1805	0x00	Transmit PDO Communication Parameter Number of entries	ro	USINT	0x05	Configuration transmit PDO 6 number of entries = 5
	0x01	COBID used by PDO	rw	UDINT	0x281 + Node ID	CAN ID of the transmit PDO 6 Bit 31 = 0 → PDO is valid Bit 31 = 1 → PDO is not valid
	0x02	transmission type	rw	USINT	0x01	0x00 = synch acyclic 0x01...0xF0 = synch cyclic; values are only transmitted after „n“ synch objects n = 1...240 = 0x01...0xF0 0xFC/0xFD not implemented 0xFE = asynch man. spec. event; values are immediately transferred 0xFF = asynch device profile event; values are immediately transferred
	0x03	inhibit time	rw	UINT	0	delay time in the transmission type "asynch" before the PDO is transmitted again at the earliest. (0...65535 • 100 µs)
	0x04	reserved	rw	USINT	0	reserve
	0x05	event time	rw	UINT	0	max. transfer break in the transmission type „asynch“ (0...65535 ms) When this time has elapsed, the PDO is transferred even if the appl. event has not accured.

Index	S-idx	Designation	Data type		Default	Details
0x1806	0x00	Transmit PDO Communication Parameter Number of entries	ro	USINT	0x05	Configuration transmit PDO 7 number of entries = 5
	0x01	COBID used by PDO	rw	UDINT	0x381 + Node ID	CAN ID of the transmit PDO 7 Bit 31 = 0 → PDO is valid Bit 31 = 1 → PDO is not valid
	0x02	transmission type	rw	USINT	0x01	0x00 = synch acyclic 0x01...0xF0 = synch cyclic; values are only transmitted after „n“ synch objects n = 1...240 = 0x01...0xF0 0xFC/0xFD not implemented 0xFE = asynch man. spec. event; values are immediately transferred 0xFF = asynch device profile event; values are immediately transferred
	0x03	inhibit time	rw	UINT	0	delay time in the transmission type "asynch" before the PDO is transmitted again at the earliest. (0...65535 • 100 µs)
	0x04	reserved	rw	USINT	0	reserve
	0x05	event time	rw	UINT	0	max. transfer break in the transmission type „asynch“ (0...65535 ms) When this time has elapsed, the PDO is transferred even if the appl. event has not accured.

UK

Index	S-idx	Designation	Data type		Default	Details
0x1807	0x00	Transmit PDO Communication Parameter Number of entries	ro	USINT	0x05	Configuration transmit PDO 8 number of entries = 5
	0x01	COBID used by PDO	rw	UDINT	0x481 + Node ID	CAN ID of the transmit PDO 8 Bit 31 = 0 → PDO is valid Bit 31 = 1 → PDO is not valid
	0x02	transmission type	rw	USINT	0x01	0x00 = synch acyclic 0x01...0xF0 = synch cyclic; values are only transmitted after „n“ synch objects n = 1...240 = 0x01...0xF0 0xFC/0xFD not implemented 0xFE = asynch man. spec. event; values are immediately transferred 0xFF = asynch device profile event; values are immediately transferred
	0x03	inhibit time	rw	UINT	0	delay time in the transmission type "asynch" before the PDO is transmitted again at the earliest. (0...65535 • 100 µs)
	0x04	reserved	rw	USINT	0	reserve
	0x05	event time	rw	UINT	0	max. transfer break in the transmission type „asynch“ (0...65535 ms) When this time has elapsed, the PDO is transferred even if the appl. event has not accured.

Index	S-idx	Designation	Data type		Default	Details
0x1808	0x00	Transmit PDO Communication Parameter Number of entries	ro	USINT	0x05	Configuration transmit PDO 9 number of entries = 5
	0x01	COBID used by PDO	rw	UDINT	0x182 + Node ID	CAN ID of the transmit PDO 9 Bit 31 = 0 → PDO is valid Bit 31 = 1 → PDO is not valid
	0x02	transmission type	rw	USINT	0x01	0x00 = synch acyclic 0x01...0xF0 = synch cyclic; values are only transmitted after „n“ synch objects n = 1...240 = 0x01...0xF0 0xFC/0xFD not implemented 0xFE = asynch man. spec. event; values are immediately transferred 0xFF = asynch device profile event; values are immediately transferred
	0x03	inhibit time	rw	UINT	0	delay time in the transmission type "asynch" before the PDO is transmitted again at the earliest. (0...65535 • 100 μs)
	0x04	reserved	rw	USINT	0	reserve
	0x05	event time	rw	UINT	0	max. transfer break in the transmission type „asynch“ (0...65535 ms) When this time has elapsed, the PDO is transferred even if the appl. event has not accured.

UK

Index	S-idx	Designation	Data type		Default	Details
0x1809	0x00	Transmit PDO Communication Parameter Number of entries	ro	USINT	0x05	Configuration transmit PDO 10 number of entries = 5
	0x01	COBID used by PDO	rw	UDINT	0x282 + Node ID	CAN ID of the transmit PDO 10 Bit 31 = 0 → PDO is valid Bit 31 = 1 → PDO is not valid
	0x02	transmission type	rw	USINT	0x01	0x00 = synch acyclic 0x01...0xF0 = synch cyclic; values are only transmitted after „n“ synch objects n = 1...240 = 0x01...0xF0 0xFC/0xFD not implemented 0xFE = asynch man. spec. event; values are immediately transferred 0xFF = asynch device profile event; values are immediately transferred
	0x03	inhibit time	rw	UINT	0	delay time in the transmission type "asynch" before the PDO is transmitted again at the earliest. (0...65535 • 100 µs)
	0x04	reserved	rw	USINT	0	reserve
	0x05	event time	rw	UINT	0	max. transfer break in the transmission type „asynch“ (0...65535 ms) When this time has elapsed, the PDO is transferred even if the appl. event has not accured.

Index	S-idx	Designation	Data type		Default	Details
0x180A	0x00	Transmit PDO Communication Parameter Number of entries	ro	USINT	0x05	Configuration transmit PDO 11 number of entries = 5
	0x01	COBID used by PDO	rw	UDINT	0x382 + Node ID	CAN ID of the transmit PDO 11 Bit 31 = 0 → PDO is valid Bit 31 = 1 → PDO is not valid
	0x02	transmission type	rw	USINT	0x01	0x00 = synch acyclic 0x01...0xF0 = synch cyclic; values are only transmitted after „n“ synch objects n = 1...240 = 0x01...0xF0 0xFC/0xFD not implemented 0xFE = asynch man. spec. event; values are immediately transferred 0xFF = asynch device profile event; values are immediately transferred
	0x03	inhibit time	rw	UINT	0	delay time in the transmission type "asynch" before the PDO is transmitted again at the earliest. (0...65535 • 100 μs)
	0x04	reserved	rw	USINT	0	reserve
	0x05	event time	rw	UINT	0	max. transfer break in the transmission type „asynch“ (0...65535 ms) When this time has elapsed, the PDO is transferred even if the appl. event has not accured.

UK

Transmit PDO mapping (index 0x1A00...0x1AFF):

Index	S-idx	Designation	Data type		Default	Details
0x1A00	0x00	Transmit PDO mapping Number of mapped objects in PDO	rw	USINT	0x07	mapping transmit PDO 1 number of integrated application objects = 7
	0x01	PDO mapping	rw	UDINT	0x6000 0108	Index 0x6000, SubIndex 0x01 binary inputs 00...07: actual values (bit coded)
	0x02	PDO mapping	rw	UDINT	0x2020 0108	Index 0x2020, SubIndex 0x01 binary inputs 00...07: flag "short circuit" (bit coded)
	0x03	PDO mapping	rw	UDINT	0x2021 0108	Index 0x2021, SubIndex 0x01 binary inputs 00...07: flag "wire break" (bit coded)
	0x04	PDO mapping	rw	UDINT	0x2025 0108	Index 0x2025, SubIndex 0x01 inputs 00, 01, 04 und 05: flag "overload" (bit coded)
	0x05	PDO mapping	rw	UDINT	0x2022 0108	Index 0x2022, SubIndex 0x01 outputs 00...07: flag " short circuit " (bit coded)
	0x06	PDO mapping	rw	UDINT	0x2023 0108	Index 0x2023, SubIndex 0x01 outputs 00...07: flag " wire break " (bit coded)
	0x07	PDO mapping	rw	UDINT	0x2024 0108	Index 0x2024, SubIndex 0x01 outputs 00...07: flag " overload " (bit coded)

Index	S-idx	Designation	Data type		Default	Details
0x1A01	0x00	Transmit PDO mapping Number of mapped objects in PDO	rw	USINT	0x04	mapping transmit PDO 2 (analogue inputs) number of integrated application objects = 4
	0x01	PDO mapping	rw	UDINT	0x6404 0110	Index 0x6404, SubIndex 0x01 analogue input 00: actual value (depending on the configuration 0x2000)
	0x02	PDO mapping	rw	UDINT	0x6404 0210	Index 0x6404, SubIndex 0x02 analogue input 01: actual value (depending on the configuration 0x2000))
	0x03	PDO mapping	rw	UDINT	0x6404 0310	Index 0x6404, SubIndex 0x03 analogue input 04: actual value (depending on the configuration 0x2000)
	0x04	PDO mapping	rw	UDINT	0x6404 0410	Index 0x6404, SubIndex 0x04 analogue input 05: actual value (depending on the configuration 0x2000)
0x1A02	0x00	Transmit PDO mapping Number of mapped objects in PDO	rw	USINT	0x04	mapping transmit PDO 3 number of integrated application objects = 4
	0x01	PDO mapping	rw	UDINT	0x2030 0110	Index 0x2030, SubIndex 0x01 input 02: actual resistor value
	0x02	PDO mapping	rw	UDINT	0x2030 0210	Index 0x2030, SubIndex 0x02 input 03: actual resistor value
	0x03	PDO mapping	rw	UDINT	0x2030 0310	Index 0x2030, SubIndex 0x03 input 06: actual resistor value
	0x04	PDO mapping	rw	UDINT	0x2030 0410	Index 0x2030, SubIndex 0x04 input 07: actual resistor value

UK

Index	S-idx	Designation	Data type		Default	Details
0x1A03	0x00	Transmit PDO mapping Number of mapped objects in PDO	rw	USINT	0x02	mapping transmit PDO 4 (periode time IN00...IN01) number of integrated application objects = 2
	0x01	PDO mapping	rw	UDINT	0x2012 0120	Index 0x2012, SubIndex 0x01 frequency input IN00: periode time of the signal
	0x02	PDO mapping	rw	UDINT	0x2012 0220	Index 0x2012, SubIndex 0x02 frequency input IN01: periode time of the signal
0x1A04	0x00	Transmit PDO mapping Number of mapped objects in PDO	rw	USINT	0x02	mapping transmit PDO 5 (periode time IN04...IN05) number of integrated application objects = 2
	0x01	PDO mapping	rw	UDINT	0x2012 0320	Index 0x2012, SubIndex 0x03 frequency input IN04: periode time of the signal
	0x02	PDO mapping	rw	UDINT	0x2012 0420	Index 0x2012, SubIndex 0x04 frequency input IN05: periode time of the signal
0x1A05	0x00	Transmit PDO mapping Number of mapped objects in PDO	rw	USINT	0x04	mapping transmit PDO 6 (duty cycle of the signal on the frequency input IN00, IN01, IN04, IN05) number of integrated application objects = 4
	0x01	PDO mapping	rw	UDINT	0x2014 0110	Index 0x2014, SubIndex 0x01 frequency input IN00: duty cycle of the signal in ‰
	0x02	PDO mapping	rw	UDINT	0x2014 0210	Index 0x2014, SubIndex 0x02 frequency input IN01: duty cycle of the signal in ‰
	0x03	PDO mapping	rw	UDINT	0x2014 0310	Index 0x2014, SubIndex 0x03 frequency input IN04: duty cycle of the signal in ‰
	0x04	PDO mapping	rw	UDINT	0x2014 0410	Index 0x2014, SubIndex 0x04 frequency input IN05: duty cycle of the signal in ‰

Index	S-idx	Designation	Data type		Default	Details
0x1A06	0x00	Transmit PDO mapping Number of mapped objects in PDO	rw	USINT	0x02	mapping transmit PDO 7 (frequency on IN00...IN01) number of integrated application objects = 2
	0x01	PDO mapping	rw	UDINT	0x2015 0120	Index 0x2015, SubIndex 0x01 frequency input IN00: frequency value of the signal in Hz
	0x02	PDO mapping	rw	UDINT	0x2015 0220	Index 0x2015, SubIndex 0x02 frequency input IN01: frequency value of the signal in Hz
0x1A07	0x00	Transmit PDO mapping Number of mapped objects in PDO	rw	USINT	0x02	mapping transmit PDO 8 (frequency on IN04...IN05) number of integrated application objects = 2
	0x01	PDO mapping	rw	UDINT	0x2015 0320	Index 0x2015, SubIndex 0x03 frequency input IN04: frequency value of the signal in Hz
	0x02	PDO mapping	rw	UDINT	0x2015 0420	Index 0x2015, SubIndex 0x04 frequency input IN05: frequency value of the signal in Hz
0x1A08	0x00	Transmit PDO mapping Number of mapped objects in PDO	rw	USINT	0x04	mapping transmit PDO 9 (output current OUT00...OUT03) number of integrated application objects = 4
	0x01	PDO mapping	rw	UDINT	0x2002 0110	Index 0x2002, SubIndex 0x01 current on output OUT00
	0x02	PDO mapping	rw	UDINT	0x2002 0210	Index 0x2002, SubIndex 0x02 current on output OUT01
	0x03	PDO mapping	rw	UDINT	0x2002 0310	Index 0x2002, SubIndex 0x03 current on output OUT02
	0x04	PDO mapping	rw	UDINT	0x2002 0410	Index 0x2002, SubIndex 0x04 current on output OUT03

UK

Index	S-idx	Designation	Data type		Default	Details
0x1A09	0x00	Transmit PDO mapping Number of mapped objects in PDO	rw	USINT	0x04	mapping transmit PDO 10 (output current OUT04...OUT07) number of integrated application objects = 4
	0x01	PDO mapping	rw	UDINT	0x2002 0510	Index 0x2002, SubIndex 0x05 current on output OUT04
	0x02	PDO mapping	rw	UDINT	0x2002 0610	Index 0x2002, SubIndex 0x06 current on output OUT05
	0x03	PDO mapping	rw	UDINT	0x2002 0710	Index 0x2002, SubIndex 0x07 current on output OUT06
	0x04	PDO mapping	rw	UDINT	0x2002 0810	Index 0x2002, SubIndex 0x08 current on output OUT07
0x1A0A	0x00	Transmit PDO mapping Number of mapped objects in PDO	rw	USINT	0x03	mapping transmit PDO 11 (system flag) number of integrated application objects = 4
	0x01	PDO mapping	rw	UDINT	0x2040 0110	Index 0x2040, SubIndex 0x01 supply voltage of the system VBBS
	0x02	PDO mapping	rw	UDINT	0x2041 0110	Index 0x2041, SubIndex 0x01 output supply voltage VBB2
	0x03	PDO mapping	rw	UDINT	0x2050 0010	Index 0x2050, SubIndex 0x00 system temperature in °C

Manufacturer-specific objekts (index 0x2000...0x6FFF):

Index	S-idx	Designation	Data type		Default	Details	
0x2000	0x00	IO configuration Largest sub-index supported	ro	USINT	16	Configuration inputs/outputs largest supported Sub-index = 32	
	0x01	Configuration IN00	rw	USINT	10	0 = 0x00 3 = 0x03 6 = 0x06 7 = 0x07 9 = 0x09 10 = 0x0A 11 = 0x0B 12 = 0x0C 14 = 0x0E 20 = 0x14	off Input IN00 0...10 000 mV ratiometric 0...1000 ‰ 0...20 000 µA 0...32 000 mV binary plus switched binary plus switched with diagnosis binary minus switched frequency 0...30 000 Hz period duration as ratio 0...1 000 ‰
	0x02	Configuration IN01	rw	USINT	10	0 = 0x00 3 = 0x03 6 = 0x06 7 = 0x07 9 = 0x09 10 = 0x0A 11 = 0x0B 12 = 0x0C 14 = 0x0E 20 = 0x14	off Input IN01 0...10 000 mV ratiometric 0...1000 ‰ 0...20 000 µA 0...32 000 mV binary plus switched binary plus switched with diagnosis binary minus switched frequency 0...30 000 Hz period duration as ratio 0...1 000 ‰
	0x03	Configuration IN02	rw	USINT	10	0 = 0x00 10 = 0x0A 11 = 0x0B 18 = 0x12	off Input IN02 binary plus switched binary plus switched with diagnosis 16...30 000 Ohm
	0x04	Configuration IN03	rw	USINT	10	0 = 0x00 10 = 0x0A 11 = 0x0B 18 = 0x12	off Input IN03 binary plus switched binary plus switched with diagnosis 16...30 000 Ohm

UK

Index	S-idx	Designation	Data type		Default	Details	
0x2000	0x05	Configuration IN04	rw	USINT	10	0 = 0x00 3 = 0x03 6 = 0x06 7 = 0x07 9 = 0x09 10 = 0x0A 11 = 0x0B 12 = 0x0C 14 = 0x0E 20 = 0x14	off Input IN04 0...10 000 mV ratiometric 0...1000 ‰ 0...20 000 µA 0...32 000 mV binary plus switched binary plus switched with diagnosis binary minus switched frequency 0...30 000 Hz period duration as ratio 0...1 000 ‰
	0x06	Configuration IN05	rw	USINT	10	0 = 0x00 3 = 0x03 6 = 0x06 7 = 0x07 9 = 0x09 10 = 0x0A 11 = 0x0B 12 = 0x0C 14 = 0x0E 20 = 0x14	off Input IN05 0...10 000 mV ratiometric 0...1000 ‰ 0...20 000 µA 0...32 000 mV binary plus switched binary plus switched with diagnosis binary minus switched frequency 0...30 000 Hz period duration as ratio 0...1 000 ‰
	0x07	Configuration IN06	rw	USINT	10	0 = 0x00 10 = 0x0A 11 = 0x0B 18 = 0x12	off Input IN06 binary plus switched binary plus switched with diagnosis 16...30 000 Ohm
	0x08	Configuration IN07	rw	USINT	10	0 = 0x00 10 = 0x0A 11 = 0x0B 18 = 0x12	off Input IN07 binary plus switched binary plus switched with diagnosis 16...30 000 Ohm
	0x09	Configuration OUT00	rw	USINT	2	0 = 0x00 2 = 0x02 4 = 0x04 5 = 0x05 15 = 0x0F 16 = 0x10	off Output OUT00 binary plus switched PWM output current control binary plus switched with diagnosis binary plus switched with diagnosis + protection

Index	S-idx	Designation	Data type		Default	Details	
0x2000	0x0A	Configuration OUT01	rw	USINT	2	0 = 0x00 2 = 0x02 4 = 0x04 5 = 0x05 15 = 0x0F 16 = 0x10	off Output OUT01 binary plus switched PWM output current control binary plus switched with diagnosis binary plus switched with diagnosis + protection
	0x0B	Configuration OUT02	rw	USINT	2	0 = 0x00 2 = 0x02 4 = 0x04 5 = 0x05 15 = 0x0F 16 = 0x10	off Output OUT02 binary plus switched PWM output current control binary plus switched with diagnosis binary plus switched with diagnosis + protection
	0x0C	Configuration OUT03	rw	USINT	2	0 = 0x00 2 = 0x02 4 = 0x04 5 = 0x05 15 = 0x0F 16 = 0x10	off Output OUT03 binary plus switched PWM output current control binary plus switched with diagnosis binary plus switched with diagnosis + protection
	0x0D	Configuration OUT04	rw	USINT	2	0 = 0x00 2 = 0x02 4 = 0x04 5 = 0x05 15 = 0x0F 16 = 0x10	off Output OUT04 binary plus switched PWM output current control binary plus switched with diagnosis binary plus switched with diagnosis + protection
	0x0E	Configuration OUT05	rw	USINT	2	0 = 0x00 2 = 0x02 4 = 0x04 5 = 0x05 15 = 0x0F 16 = 0x10	off Output OUT05 binary plus switched PWM output current control binary plus switched with diagnosis binary plus switched with diagnosis + protection

UK

Index	S-idx	Designation	Data type		Default	Details	
0x2000	0x0F	Configuration OUT06	rw	USINT	2	0 = 0x00 2 = 0x02 4 = 0x04 5 = 0x05 15 = 0x0F 16 = 0x10	off Output OUT06 binary plus switched PWM output current control binary plus switched with diagnosis binary plus switched with diagnosis + protection
	0x10	Configuration OUT07	rw	USINT	2	0 = 0x00 2 = 0x02 4 = 0x04 5 = 0x05 15 = 0x0F 16 = 0x10	off Output OUT07 binary plus switched PWM output current control binary plus switched with diagnosis binary plus switched with diagnosis + protection
0x2001	0x00	PWM fre- quency	ro	USINT	8	Largest sub-index supported	
	0x01	PWM frequency OUT00	rw	UINT	100	20...250	OUT00 PWM frequen- cy [Hz]
	0x02	PWM frequency OUT01	rw	UINT	100	20...250	OUT01 PWM frequen- cy [Hz]
	0x03	PWM frequency OUT02	rw	UINT	100	20...250	OUT02 PWM frequen- cy [Hz]
	0x04	PWM frequency OUT03	rw	UINT	100	20...250	OUT03 PWM frequen- cy [Hz]
	0x5	PWM frequency OUT04	rw	UINT	100	20...250	OUT04 PWM frequen- cy [Hz]
	0x6	PWM frequency OUT05	rw	UINT	100	20...250	OUT05 PWM frequen- cy [Hz]
	0x7	PWM frequency OUT06	rw	UINT	100	20...250	OUT06 PWM frequen- cy [Hz]
	0x8	PWM frequency OUT07	rw	UINT	100	20...250	OUT07 PWM frequen- cy [Hz]

Index	S-idx	Designation	Data type		Default	Details	
0x2002	0x00	Current value	ro	USINT	8	Largest sub-index supported	
	0x01	Current value OUT00	ro	UINT	0	0...4000	OUT00 output current [mA]
	0x02	Current value OUT01	ro	UINT	0	0...4000	OUT01 output current [mA]
	0x03	Current value OUT02	ro	UINT	0	0...2500	OUT02 output current [mA]
	0x04	Current value OUT03	ro	UINT	0	0...2500	OUT03 output current [mA]
	0x05	Current value OUT04	ro	UINT	0	0...4000	OUT04 output current [mA]
	0x06	Current value OUT05	ro	UINT	0	0...4000	OUT05 output current [mA]
	0x07	Current value OUT06	ro	UINT	0	0...2500	OUT06 output current [mA]
	0x08	Current value OUT07	ro	UINT	0	0...2500	OUT07 output current [mA]
0x2004	0x00	P-value	ro	USINT	8	Largest sub-index supported	
	0x01	P-value OUT00	rw	USINT	30	0...255	OUT00 P-value for current control
	0x02	P-value OUT01	rw	USINT	30	0...255	OUT01 P-value for current control
	0x03	P-value OUT02	rw	USINT	30	0...255	OUT02 P-value for current control
	0x04	P-value OUT03	rw	USINT	30	0...255	OUT03 P-value for current control
	0x05	P-value OUT04	rw	USINT	30	0...255	OUT04 P-value for current control
	0x06	P-value OUT05	rw	USINT	30	0...255	OUT05 P-value for current control
	0x07	P-value OUT06	rw	USINT	30	0...255	OUT06 P-value for current control
	0x08	P-value OUT07	rw	USINT	30	0...255	OUT07 P-value for current control

UK

Index	S-idx	Designation	Data type		Default	Details	
0x2005	0x00	I-value	ro	USINT	8	Largest sub-index supported	
	0x01	I-value OUT00	rw	USINT	20	0...255	OUT00 I-value for current control
	0x02	I-value OUT01	rw	USINT	20	0...255	OUT01 I-value for current control
	0x03	I-value OUT02	rw	USINT	20	0...255	OUT02 I-value for current control
	0x04	I-value OUT03	rw	USINT	20	0...255	OUT03 I-value for current control
	0x05	I-value OUT04	rw	USINT	20	0...255	OUT04 I-value for current control
	0x06	I-value OUT05	rw	USINT	20	0...255	OUT05 I-value for current control
	0x07	I-value OUT06	rw	USINT	20	0...255	OUT06 I-value for current control
	0x08	I-value OUT07	rw	USINT	20	0...255	OUT07 I-value for current control
0x2006	0x00	PWM dither frequency	ro	USINT	8	Largest sub-index supported	
	0x01	PWM dither frequency OUT00	rw	UINT	0	0...PWM- freq / 2	OUT00 PWM dither frequency [Hz]
	0x02	PWM dither frequency OUT01	rw	UINT	0	0...PWM- freq / 2	OUT01 PWM dither frequency [Hz]
	0x03	PWM dither frequency OUT02	rw	UINT	0	0...PWM- freq / 2	OUT02 PWM dither frequency [Hz]
	0x04	PWM dither frequency OUT03	rw	UINT	0	0...PWM- freq / 2	OUT03 PWM dither frequency [Hz]
	0x05	PWM dither frequency OUT04	rw	UINT	0	0...PWM- freq / 2	OUT04 PWM dither frequency [Hz]
	0x06	PWM dither frequency OUT05	rw	UINT	0	0...PWM- freq / 2	OUT05 PWM dither frequency [Hz]
	0x07	PWM dither frequency OUT06	rw	UINT	0	0...PWM- freq / 2	OUT06 PWM dither frequency [Hz]
	0x08	PWM dither frequency OUT07	rw	UINT	0	0...PWM- freq / 2	OUT07 PWM dither frequency [Hz]

Index	S-idx	Designation	Data type		Default	Details	
0x2007	0x00	PWM dither value	ro	USINT	8	Largest sub-index supported	
	0x01	PWM dither value OUT00	rw	UINT	0	0...1 000	OUT00 PWM dither value [%]
	0x02	PWM dither value OUT01	rw	UINT	0	0...1 000	OUT01 PWM dither value [%]
	0x03	PWM dither value OUT02	rw	UINT	0	0...1 000	OUT02 PWM dither value [%]
	0x04	PWM dither value OUT03	rw	UINT	0	0...1 000	OUT03 PWM dither value [%]
	0x05	PWM dither value OUT04	rw	UINT	0	0...1 000	OUT04 PWM dither value [%]
	0x06	PWM dither value OUT05	rw	UINT	0	0...1 000	OUT05 PWM dither value [%]
	0x07	PWM dither value OUT06	rw	UINT	0	0...1 000	OUT06 PWM dither value [%]
	0x08	PWM dither value OUT07	rw	UINT	0	0...1 000	OUT07 PWM dither value [%]
0x2012	0x00	Period input	ro	USINT	4	Largest sub-index supported	
	0x01	Period duration IN00	ro	UDINT	0	IN00 period duration [μ s]	
	0x02	Period duration IN01	ro	UDINT	0	IN01 period duration [μ s]	
	0x03	Period duration IN04	ro	UDINT	0	IN04 period duration [μ s]	
	0x04	Period duration IN05	ro	UDINT	0	IN05 period duration [μ s]	
0x2013	0x00	Period input number of periods for average	ro	USINT	4	Largest sub-index supported	
	0x01	Number of periods IN00	rw	USINT	4	1...255	IN00 number of periods
	0x02	Number of periods IN01	rw	USINT	4	1...255	IN01 number of periods
	0x03	Number of periods IN04	rw	USINT	4	1...255	IN04 number of periods
	0x04	Number of periods IN05	rw	USINT	4	1...255	IN05 number of periods

UK

Index	S-idx	Designation	Data type		Default	Details	
0x2014	0x00	Period input – ratio value	ro	USINT	4	Largest sub-index supported	
	0x01	Period ratio value IN00	ro	UINT	0	0...1 000	IN00 marc-to-space ratio [%o]
	0x02	Period ratio value IN01	ro	UINT	0	0...1 000	IN01 marc-to-space ratio [%o]
	0x03	Period ratio value IN04	ro	UINT	0	0...1 000	IN04 marc-to-space ratio [%o]
	0x04	Period ratio value IN05	ro	UINT	0	0...1 000	IN05 marc-to-space ratio [%o]
0x2015	0x00	Frequency input	ro	USINT	4	Largest sub-index supported	
	0x01	Frequency IN00	ro	REAL	1	0...30 000	IN00 frequency [Hz]
	0x02	Frequency IN01	ro	REAL	1	0...30 000	IN01 frequency [Hz]
	0x03	Frequency IN04	ro	REAL	1	0...30 000	IN04 frequency [Hz]
	0x04	Frequency IN05	ro	REAL	1	0...30 000	IN05 frequency [Hz]
0x2016	0x00	Timebase	ro	USINT	4	Largest sub-index supported	
	0x01	Timebase IN00	rw	UINT	50	0...2 000	IN00 timebase [ms]
	0x02	Timebase IN01	rw	UINT	50	0...2 000	IN01 timebase [ms]
	0x03	Timebase IN04	rw	UINT	50	0...2 000	IN04 timebase [ms]
	0x04	Timebase IN05	rw	UINT	50	0...2 000	IN05 timebase [ms]
0x2020	0x00	Input – short to supply voltage	ro	USINT	1	Largest sub-index supported	
	0x01	Short to supply voltage IN00...IN07	ro	USINT	0	0 = normal 1 = short circuit	channels (bit coded) 0b---- ---X = IN00 0b---- --X- = IN01 0b---- -X-- = IN02 0b---- X--- = IN03 0b---X ---- = IN04 0b--X- ---- = IN05 0b-X- ---- = IN06 0bX- ---- = IN07

Index	S-idx	Designation	Data type		Default	Details	
0x2021	0x00	Input – wire break	ro	USINT	1	Largest sub-index supported	
	0x01	Wire break IN00...IN07	ro	USINT	0	0 = normal 1 = wire break	channels (bit coded) 0b---- ---X = IN00 0b---- --X- = IN01 0b---- -X-- = IN02 0b---- X--- = IN03 0b---X ---- = IN04 0b--X- ---- = IN05 0b-X- ---- = IN06 0bX- ---- = IN07
0x2022	0x00	Output – short circuit	ro	USINT	1	Largest sub-index supported	
	0x01	Short circuit OUT00...OUT07	ro	USINT	0	0 = normal 1 = short circuit	channels (bit coded) 0b---- ---X = OUT00 0b---- --X- = OUT01 0b---- -X-- = OUT02 0b---- X--- = OUT03 0b---X ---- = OUT04 0b--X- ---- = OUT05 0b-X- ---- = OUT06 0bX- ---- = OUT07
0x2023	0x00	Output – open circuit	ro	USINT	1	Largest sub-index supported	
	0x01	Open circuit OUT00...OUT07	ro	USINT	0	0 = normal 1 = open circuit	channels (bit coded) 0b---- ---X = OUT00 0b---- --X- = OUT01 0b---- -X-- = OUT02 0b---- X--- = OUT03 0b---X ---- = OUT04 0b--X- ---- = OUT05 0b-X- ---- = OUT06 0bX- ---- = OUT07
0x2024	0x00	Output – overload	ro	USINT	1	Largest sub-index supported	
	0x01	Overload OUT00...OUT07	ro	USINT	0	0 = normal 1 = overload	channels (bit coded) 0b---- ---X = OUT00 0b---- --X- = OUT01 0b---- -X-- = OUT02 0b---- X--- = OUT03 0b---X ---- = OUT04 0b--X- ---- = OUT05 0b-X- ---- = OUT06 0bX- ---- = OUT07

UK

Index	S-idx	Designation	Data type		Default	Details	
0x2025	0x00	Input analog – overcurrent	ro	USINT	1	Largest sub-index supported	
	0x01	Overcurrent IN00, IN01,N04 und IN05	ro	USINT	0	0 = normal 1 = overcurrent	channels (bit coded) 0b---- --X = IN00 0b---- --X- = IN01 0b---- -X-- = IN04 0b---- X--- = IN05
0x2030	0x00	Input resistor	ro	USINT	4	Largest sub-index supported	
	0x01	Resistance IN02	ro	UINT	0	0...30 000	IN02 resistance [Ohms]
	0x02	Resistance IN03	ro	UINT	0	0...30 000	IN03 resistance [Ohms]
	0x03	Resistance IN06	ro	UINT	0	0...30 000	IN06 resistance [Ohms]
	0x04	Resistance IN07	ro	UINT	0	0...30 000	IN07 resistance [Ohms]
0x2040	0x00	System supply voltage VBBS	ro	USINT	1	Largest sub-index supported	
	0x01	VBBS	ro	USINT	0	VBBS voltage [mV]	
0x2041	0x00	Output supply voltage	ro	USINT	1	Largest sub-index supported	
	0x01	VBB2	ro	UINT	0	VBB2 voltage [mV]	
0x2050		Device temperature	ro	UINT	0	temperature [°C]	
0x20F0		Node ID	rw	USINT	125	1...125	node ID [!] value(0x20F0) != value(20F1)
0x20F1		Node ID	rw	USINT	125	1...125	node ID [!] value(0x20F0) != value(20F1)
0x20F2		Baud rate	rw	USINT	3	baud rate [!] value(0x20F2) != value(20F3)	
	0					1000 kBit/s	
	1					800 kBit/s	
	2					500 kBit/s	
	3					250 kBit/s	
	4					125 kBit/s	
	5					100 kBit/s	
	6					50 kBit/s	
7	20 kBit/s						

Index	S-idx	Designation	Data type		Default	Details
0x20F3		Baud rate	rw	USINT	3	baud rate [!] value(0x20F2) != value(20F3)
0x20F4		Autostart	rw	UINT	0	not used
0x20F5		Lock edit mode	rw	USINT	0	0 = edit mode unlocked 1 = edit mode locked
0x6000	0x00	Binary input Largest sub-index supported	ro	USINT	0x02	Binary inputs Largest supported sub-index = 2
	0x01	Binary inputs IN00 - IN07	ro	USINT	0	Binary inputs IN00...IN07 0b---- --X = IN00 0b---- --X- = IN01 0b---- -X-- = IN02 0b---- X--- = IN03 0b---X---- = IN04 0b--X---- = IN05 0b-X---- = IN06 0bX---- = IN07
0x6200	0x00	Binary output Largest sub-index supported	ro	USINT	0x02	Binary outputs Largest supported sub-index = 2
	0x01	Binary out-puts OUT00 - OUT07	wo	USINT	0	Binary outputs OUT00...OUT07 0b---- --X = OUT00 0b---- --X- = OUT01 0b---- -X-- = OUT02 0b---- X--- = OUT03 0b---X---- = OUT04 0b--X---- = OUT05 0b-X---- = OUT06 0bX---- = OUT07
0x6404	0x00	Analogue input Largest sub-index supported	ro	USINT	0x04	Analogue inputs Largest supported sub-index = 4
	0x01	Analogue input IN00	ro	UINT	--	Analogue value of input IN00
	0x02	Analogue input IN01	ro	UINT	--	Analogue value of input IN01
	0x03	Analogue input IN04	ro	UINT	--	Analogue value of input IN04
	0x04	Analogue input IN05	ro	UINT	--	Analogue value of input IN05

UK

Index	S-idx	Designation	Data type		Default	Details
0x6414	0x00	PWM output Largest sub-index supported	ro	USINT	0x08	PWM outputs Largest supported sub-index = 12
	0x01	PWM output OUT00	wo	UINT	--	Value for PWM output OUT00
	0x02	PWM output OUT01	wo	UINT	--	Value for PWM output OUT01
	0x03	PWM output OUT02	wo	UINT	--	Value for PWM output OUT02
	0x04	PWM output OUT03	wo	UINT	--	Value for PWM output OUT03
	0x05	PWM output OUT04	wo	UINT	--	Value for PWM output OUT04
	0x06	PWM output OUT05	wo	UINT	--	Value for PWM output OUT05
	0x07	PWM output OUT06	wo	UINT	--	Value for PWM output OUT06
	0x08	PWM output OUT07	wo	UINT	--	Value for PWM output OUT07

12.3 SDOs error messages

12.3.1 CR2050

The following messages are created in case of an error:

Index	S-idx	Designation	Data type		Default	Details	
0x1001		Error register	ro	USINT	0	Error register bitcodiert to profil 301 permissible values: 0b0000 0000 = no error 0b0000 0001 = generic error 0b0001 0000 = communication error 0b1000 0000 = manufacturer specific	
0x1003	0x00	Predefined error field Number of entries	rw	UDINT	0	An error list with 4 entries is supported.	
	0x01	Error history	ro	UDINT	0	Error occured; coded according to EMCY list The last error is indicated in the sub- index 1	
	0x02	Error history	ro	UDINT	0	Error occured; coded according to EMCY list	
	0x03	Error history	ro	UDINT	0	Error occured; coded according to EMCY list	
	0x04	Error history	ro	UDINT	0	Error occured; coded according to EMCY list	
	0x05	Error history	ro	UDINT	0	Error occured; coded according to EMCY list	
0x2020	0x00	Input – short to supply voltage	ro	USINT	2	Largest sub-index supported	
	0x01	Short to supply voltage IN00... IN07	ro	USINT	0	0 = normal 1 = short circuit	channels (bit coded) 0b---- ---X = IN00 0b---- --X- = IN01 0b---- -X-- = IN02 0b---- X--- = IN03 0b---X ---- = IN04 0b--X- ---- = IN05 0b-X-- ---- = IN06 0bX--- ---- = IN07
	0x02	Short to supply voltage IN08, IN10, IN12, IN14	ro	USINT	0	0 = normal 1 = short circuit	channels (bit coded) 0b---- ---X = IN08 0b---- --X- = IN10 0b---- -X-- = IN12 0b---- X--- = IN14

UK

Index	S-idx	Designation	Data type		Default	Details	
0x2021	0x00	Input – wire break	ro	USINT	2	Largest sub-index supported	
	0x01	Wire break IN00... IN07	ro	USINT	0	0 = normal 1 = wire break	channels (bit coded) 0b---- ---X = IN00 0b---- --X- = IN01 0b---- -X-- = IN02 0b---- X--- = IN03 0b---X ---- = IN04 0b--X- ---- = IN05 0b-X-- ---- = IN06 0bX--- ---- = IN07
	0x02	Wire break IN08, IN10, IN12, IN14	ro	USINT	0	0 = normal 1 = wire break	channels (bit coded) 0b---- ---X = IN08 0b---- --X- = IN10 0b---- -X-- = IN12 0b---- X--- = IN14
0x2025	0x00	Input analog – overcurrent	ro	USINT	1	Largest sub-index supported	
	0x01	Overcurrent IN00...IN07	ro	USINT	0	0 = normal 1 = overcurrent	channels (bit coded) 0b---- ---X = IN00 0b---- --X- = IN01 0b---- -X-- = IN02 0b---- X--- = IN03 0b---X ---- = IN04 0b--X- ---- = IN05 0b-X-- ---- = IN06 0bX--- ---- = IN07

12.3.2 CR2051

The following messages are created in case of an error:

Index	S-idx	Designation	Data type		Default	Details	
0x1001		Error register	ro	USINT	0	Error register bitcodiert to profil 301 permissible values: 0b0000 0000 = no error 0b0000 0001 = generic error 0b0001 0000 = communication error 0b1000 0000 = manufacturer specific	
0x1003	0x00	Predefined error field Number of entries	rw	UDINT	0	An error list with 4 entries is supported.	
	0x01	Error history	ro	UDINT	0	Error occured; coded according to EMCY list The last error is indicated in the sub- index 1	
	0x02	Error history	ro	UDINT	0	Error occured; coded according to EMCY list	
	0x03	Error history	ro	UDINT	0	Error occured; coded according to EMCY list	
	0x04	Error history	ro	UDINT	0	Error occured; coded according to EMCY list	
	0x05	Error history	ro	UDINT	0	Error occured; coded according to EMCY list	
0x2022	0x00	Output – short circuit	ro	USINT	2	Largest sub-index supported	
	0x01	Short circuit OUT00...OUT07	ro	USINT	0	0 = normal 1 = short circuit	channels (bit coded) 0b---- ---X = OUT00 0b---- --X- = OUT01 0b---- -X-- = OUT02 0b---- X--- = OUT03 0b---X ---- = OUT04 0b--X- ---- = OUT05 0b-X-- ---- = OUT06 0bX--- ---- = OUT07
	0x02	Short circuit OUT08...OUT15	ro	USINT	0	0 = normal 1 = short circuit	channels (bit coded) 0b---- ---X = OUT08 0b---- --X- = OUT09 0b---- -X-- = OUT10 0b---- X--- = OUT11 0b---X ---- = OUT12 0b--X- ---- = OUT13 0b-X-- ---- = OUT14 0bX--- ---- = OUT15

UK

Index	S-idx	Designation	Data type		Default	Details	
0x2023	0x00	Output – open circuit	ro	USINT	2	Largest sub-index supported	
	0x01	Open circuit OUT00...OUT07	ro	USINT	0	0 = normal 1 = open circuit	channels (bit coded) 0b---- ---X = OUT00 0b---- --X- = OUT01 0b---- -X-- = OUT02 0b---- X--- = OUT03 0b---X ---- = OUT04 0b--X- ---- = OUT05 0b-X-- ---- = OUT06 0bX--- ---- = OUT07
	0x02	Open circuit OUT08...OUT15	ro	USINT	0	0 = normal 1 = open circuit	channels (bit coded) 0b---- ---X = OUT08 0b---- --X- = OUT09 0b---- -X-- = OUT10 0b---- X--- = OUT11 0b---X ---- = OUT12 0b--X- ---- = OUT13 0b-X-- ---- = OUT14 0bX--- ---- = OUT15
0x2024	0x00	Output – overload	ro	USINT	1	Largest sub-index supported	
	0x01	Overload OUT00...OUT07	ro	USINT	0	0 = normal 1 = overload	channels (bit coded) 0b---- ---X = OUT00 0b---- --X- = OUT01 0b---- -X-- = OUT02 0b---- X--- = OUT03 0b---X ---- = OUT04 0b--X- ---- = OUT05 0b-X-- ---- = OUT06 0bX--- ---- = OUT07

12.3.3 CR2052

The following messages are created in case of an error:

Index	S-idx	Designation	Data type		Default	Details
0x1001		Error register	ro	USINT	0	Error register bitcodiert to profil 301 permissible values: 0b0000 0000 = no error 0b0000 0001 = generic error 0b0001 0000 = communication error 0b1000 0000 = manufacturer specific
0x1003	0x00	Predefined error field Number of entries	rw	UDINT	0	An error list with 4 entries is supported.
	0x01	Error history	ro	UDINT	0	Error occured; coded according to EMCY list The last error is indicated in the sub-index 1
	0x02	Error history	ro	UDINT	0	Error occured; coded according to EMCY list
	0x03	Error history	ro	UDINT	0	Error occured; coded according to EMCY list
	0x04	Error history	ro	UDINT	0	Error occured; coded according to EMCY list
	0x05	Error history	ro	UDINT	0	Error occured; coded according to EMCY list
0x2020	0x00	Input – short to supply voltage	ro	USINT	1	Largest sub-index supported
	0x01	Short to supply voltage IN00...IN07	ro	USINT	0	0 = normal 1 = short circuit channels (bit coded) 0b---- ---X = IN00 0b---- --X- = IN01 0b---- -X-- = IN02 0b---- X--- = IN03 0b---X ---- = IN04 0b--X- ---- = IN05 0b-X-- ---- = IN06 0bX--- ---- = IN07
0x2021	0x00	Input – wire break	ro	USINT	1	Largest sub-index supported
	0x01	Wire break IN00... IN07	ro	USINT	0	0 = normal 1 = wire break channels (bit coded) 0b---- ---X = IN00 0b---- --X- = IN01 0b---- -X-- = IN02 0b---- X--- = IN03 0b---X ---- = IN04 0b--X- ---- = IN05 0b-X-- ---- = IN06 0bX--- ---- = IN07

UK

Index	S-idx	Designation	Data type		Default	Details	
0x2022	0x00	Output – short circuit	ro	USINT	1	Largest sub-index supported	
	0x01	Short circuit OUT00...OUT07	ro	USINT	0	0 = normal 1 = short circuit	channels (bit coded) 0b---- ---X = OUT00 0b---- --X- = OUT01 0b---- -X-- = OUT02 0b---- X--- = OUT03 0b---X ---- = OUT04 0b--X- ---- = OUT05 0b-X-- ---- = OUT06 0bX--- ---- = OUT07
0x2023	0x00	Output – open circuit	ro	USINT	1	Largest sub-index supported	
	0x01	Open circuit OUT00...OUT07	ro	USINT	0	0 = normal 1 = open circuit	channels (bit coded) 0b---- ---X = OUT00 0b---- --X- = OUT01 0b---- -X-- = OUT02 0b---- X--- = OUT03 0b---X ---- = OUT04 0b--X- ---- = OUT05 0b-X-- ---- = OUT06 0bX--- ---- = OUT07
0x2024	0x00	Output – overload	ro	USINT	1	Largest sub-index supported	
	0x01	Overload OUT00...OUT07	ro	USINT	0	0 = normal 1 = overload	channels (bit coded) 0b---- ---X = OUT00 0b---- --X- = OUT01 0b---- -X-- = OUT02 0b---- X--- = OUT03 0b---X ---- = OUT04 0b--X- ---- = OUT05 0b-X-- ---- = OUT06 0bX--- ---- = OUT07
0x2025	0x00	Input analog – overcurrent	ro	USINT	1	Largest sub-index supported	
	0x01	Overcurrent IN00, IN01, IN04 und IN05	ro	USINT	0	0 = normal 1 = overcurrent	channels (bit coded) 0b---- ---X = IN00 0b---- --X- = IN01 0b---- -X-- = IN04 0b---- X--- = IN05