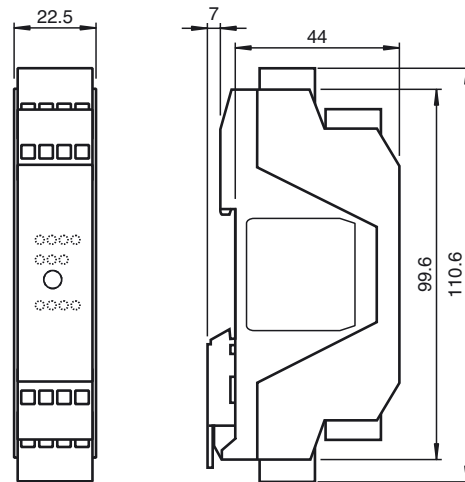## Model number

VBA-4E4A-KE1-Z/E2

KE1 switch cabinet module
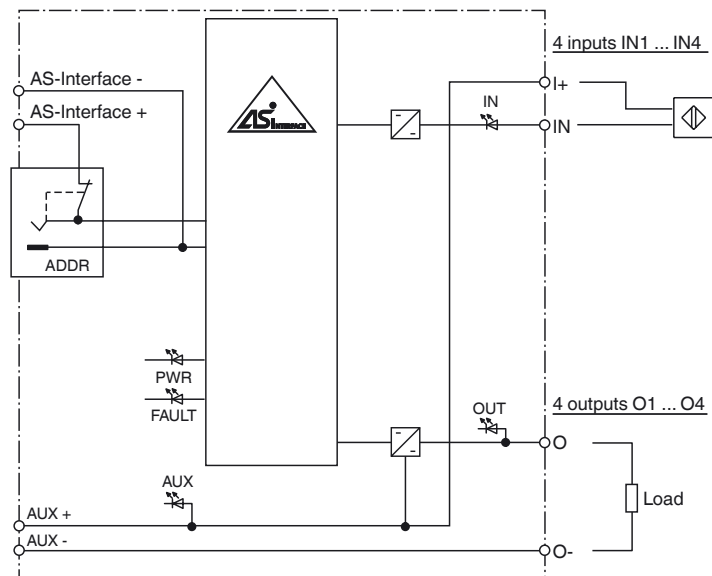4 inputs and 4 outputs

Features

- Housing with removable terminals
- Communication monitoring
- Inputs for 2-wire sensors and mechanical contacts
- Addressing jack
- Power supply of the inputs and outputs from the external auxiliary voltage
- Function display for bus, ext. auxiliary voltage, inputs and outputs

Dimensions

Electrical connection

Indicating / Operating means

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group   USA: +1 330 486 0001   Germany: +49 621 776 4411   Singapore: +65 6779 9091
www.pepperl-fuchs.com   fa-info@us.pepperl-fuchs.com   fa-info@de.pepperl-fuchs.com   fa-info@sg.pepperl-fuchs.com

PEPPERL+FUCHS
SENSING YOUR NEEDS

1
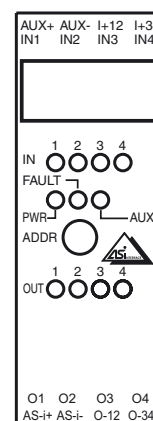
Technical data

General specifications

Slave type	A/B slave
AS-Interface specification	V3.0
Required master specification	≥ V3.0
UL File Number	E87056

Functional safety related parameters

$MTTF_d$	90 a
Mission Time (T_M)	20 a
Diagnostic Coverage (DC)	0 %

Indicators/operating means

LED FAULT	error display; LED red red: communication error or address is 0 red flashing: overload of outputs
LED PWR	AS-Interface voltage; LED green
LED AUX	ext. auxiliary voltage U_{AUX}; dual LED green/red green: voltage OK red: reverse voltage
LED IN	switching state (input); 4 LED yellow
LED OUT	Switching state (output); 4 LED yellow

Electrical specifications

Auxiliary voltage (output)	U_{AUX}	20 ... 30 V DC PELV
Rated operating voltage	U_e	26.5 ... 31.6 V from AS-Interface
Rated operating current	I_e	≤ 40 mA
Protection class		III
Surge protection		U_{AUX}, U_{in}: Over voltage category III, safe isolated power supplies (PELV)

Input

Number/Type	4 inputs for 2-wire sensors (PNP), DC or for mechanical contacts
Supply	from external auxiliary voltage U_{AUX}
Input current	≤ 8 mA (limited internally)
Switching point	according to DIN EN 61131-2 (Type 2)
0 (unattenuated)	≤ 2 mA
1 (attenuated)	≥ 4 mA
Signal delay	< 2 ms (input/AS-Interface)
Signal frequency	≤ 250 Hz

Output

Number/Type	4 electronic outputs, PNP, overload and short-circuit proof
Supply	from external auxiliary voltage U_{AUX}
Current	0.5 A per output , 2 A per module
Voltage	≥ (U_{AUX} - 0.5 V)
Usage category	DC-13

Directive conformity

Electromagnetic compatibility	
Directive 2014/30/EU	IEC 62026-2:2015 EN 61326-1:2006

Standard conformity

Degree of protection	EN 60529:2000
Fieldbus standard	EN 62026-2:2013
Input	EN 61131-2:2015
Emitted interference	EN 55011:2009
AS-Interface	EN 62026-2:2013
Noise immunity	EN 61326-1:2006

Programming instructions

Profile	S-7.A.7
IO code	7
ID code	A
ID1 code	7
ID2 code	7

Data bits (function via AS-Interface)	input	output
D0	IN1	O1
D1	IN2	O2
D2	IN3	O3
D3	IN4	O4

Parameter bits (programmable via AS-i)	function
P0	Communication monitoring P0 = 0 monitoring = off, the outputs maintain the status if communication fails P0 = 1 monitoring = on, i.e. if communication fails, the outputs are deenergised (default settings)
P1	Input filter P1 = 0 input filter on, pulse suppression ≤ 2 ms P1 = 1 input filter off (default settings)
P2	Synchronous mode P2 = 0 synchronous mode on P2 = 1 synchronous mode off (default settings)
P3	not used

Function

The AS-Interface Module VAA-4E4A-KE1-Z/E2 is a control cabinet with 4 inputs and 4 electronic outputs. The housing, only 22.5 mm in width and 48.5 mm in height, takes up little place in the switch cabinet. The module features an integrated addressing jack is mounted by snapping onto the 35 mm DIN rail in accordance with EN 50022.

For easy disconnection for commissioning and servicing, the connection is via plug-in black 4-pin spring terminals.

The external auxiliary voltage, the AS-Interface cable, the inputs and outputs (IN and O), as well as the plus potential of the inputs (I+) and the minus potential of the outputs (O-) are connected with the module via double terminals.

The inputs and outputs and the connected sensors and actuators are supplied via external auxiliary power U_{AUX}. Polarity reversal is signalled by a red light on the AUX-LED.

The current switching status is indicated for each input and output by means of an LED on the top of the module.

Note:

The device features communication monitoring. It switches off the power to the outputs when no communication has occurred on the AS-Interface cable for more than 40 ms.

In the event of overloading of the outputs, e.g. due to short-circuiting, the FAULT-LED on the module flashes and a signal is communicated to the AS-Interface master via the "Peripheral error" function. Communication via the AS-Interface remains uninterrupted.

Accessories

VBP-HH1-V3.0-KIT
AS-Interface Handheld with accessory

VBP-HH1-V3.0
AS-Interface Handheld

VAZ-PK-1,5M-V1-G
Adapter cable module/hand-held programming device

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group
www.pepperl-fuchs.com

USA: +1 330 486 0001
fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411
fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091
fa-info@sg.pepperl-fuchs.com

PEPPERL+FUCHS
SENSING YOUR NEEDS

Release date: 2019-01-09 10:02   Date of issue: 2019-01-09   254246_eng.xml

Ambient conditions	
Ambient temperature	-25 ... 60 °C (-13 ... 140 °F)
Storage temperature	-25 ... 85 °C (-13 ... 185 °F)
Relative humidity	90 % , noncondensing
Pollution degree	2
Mechanical specifications	
Degree of protection	IP20
Connection	removable spring double terminals rated connection capacity: rigid/flexible (with and without wire-end ferrules): 0.25 mm^2 ... 1.5 mm^2 recommended tools for 1.5 mm^2: PxC CRIMPFOX ZA3 or Weid-müller PZ 6 roto
Material	
Housing	PA 66-FR
Mass	80 g
Mounting	DIN mounting rail

Notes

Do not connect inputs and outputs, which are supplied via the module from AS-interface or via auxiliary power, with power supply and signal circuits with external potentials.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group　　　　USA: +1 330 486 0001　　　　Germany: +49 621 776 4411　　　　Singapore: +65 6779 9091
www.pepperl-fuchs.com　　　fa-info@us.pepperl-fuchs.com　　fa-info@de.pepperl-fuchs.com　　fa-info@sg.pepperl-fuchs.com

PEPPERL+FUCHS
SENSING YOUR NEEDS

3