# SBL-8-H-900-IR/59/65b/73/120

**Dimensions** 





# CE

# **Model Number**

## SBL-8-H-900-IR/59/65b/73/120

Background suppression sensor with 4-pin, M12 x 1 connector

#### **Features**


- Background suppression sensor for • roller conveyors
- For installation between the rollers on ٠ a roller conveyor
- Very small black-white difference
- Adjustable detection range

# **Product information**


Sensors of the SBL series are used to easily control material flow on roller conveyors in material handling and other branches.

The SBL series is a precise background suppression sensor according to the 3 element method. The sensor features superior background suppression and a very good ambient light immunity. Material and transport container of all colors and opacities are reliably detected.

The special design allows the sensor to be mounted between the rollers of a roller conveyor or any other conveying unit. Mounting between the rollers is easy and protects the sensor.

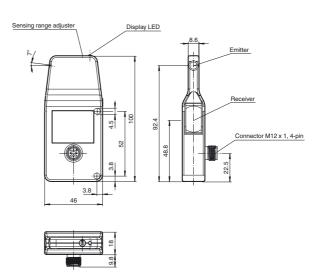

# **Electrical connection**

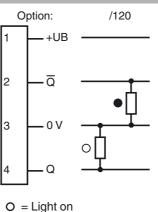




#### Pinout



# Indicators/operating means

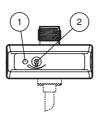

1	Signal display	yellow
2	Sensing range adjuster	

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com <sup>5</sup> PEPPERL+FUCHS 1

Technical data		Accessories		
General specifications		OMH-SBL-01		
Detection range	40 900 mm	Mounting bracket for sensors of SBL series		
Detection range min.	40 340 mm			
Detection range max.	40 900 mm	Series		
Adjustment range	340 900 mm	V1-G-2M-PVC		
Reference target	standard white 200 mm x 200 mm	Female cordset, M12, 4-pin, PVC cable		
Light source	IRED			
Light type	modulated infrared light, 880 nm	V1-G-5M-PVC		
Black/White difference (6 %/90 %)	< 10 %	Female cordset, M12, 4-pin, PVC cable		
Diameter of the light spot	approx. 60 mm at detection range 900 mm			
Ambient light limit	continuous light 30000 Lux, Fluorescent lamp 5000 Lux	V1-W-2M-PUR		
Functional safety related parameter	Female cordset, M12, 4-pin, PUR cable			
MTTF <sub>d</sub>	1100 a			
Mission Time (T <sub>M</sub> )	20 a	V1-W-5M-PUR Female cordset, M12, 4-pin, PUR cable		
Diagnostic Coverage (DC)	0 %			
Indicators/operating means		Schraubendreher 0,5 x 3,0 mm		
Function indicator	LED yellow: lights when object is detected			
Control elements	Sensing range adjuster	Screwdriver		
Electrical specifications	Conting range adjuster	Other suitable accessories can be found at		
-	24 VDC -20% +10%	www.pepperl-fuchs.com		
Operating voltage U <sub>B</sub>	max. 10 %			
Ripple				
No-load supply current I <sub>0</sub>	max. 20 mA			
Output				
Switching type	dark on			
Signal output	2 PNP, complementary, short-circuit protected, open collectors			
Switching voltage	max. 30 V DC			
Switching current	max. 100 mA			
Switching frequency f	100 Hz			
Response time	5 ms			
Conformity				
Product standard	EN 60947-5-2			
Ambient conditions				
Ambient temperature	-20 50 °C (-4 122 °F)			
Storage temperature	-30 60 °C (-22 140 °F)			
Mechanical specifications				
Housing width	18 mm			
Housing height	100 mm			
Housing depth	46 mm			
Degree of protection	IP65			
Connection	4-pin, M12 x 1 connector			
Material				
Housing	plastic			
Optical face	plastic lens			
Mass	approx. 50 g			
Compliance with standards and directives				
Standard conformity				
Shock and impact resistance	IEC / EN 60068. half-sine, 40 g in each X, Y and Z directions			
Vibration resistance	IEC / EN 60068-2-6. Sinus. 10 -1000 Hz, 10 g in each X, Y and Z directions			
Approvals and certificates	Approvals and certificates			
UL approval	cULus Listed, Class 2 Power Source, Type 1 enclosure			
CCC approval	CCC approval / marking not required for products rated $\leq$ 36 V			
coc uppiorui	e e e approvary maning not required for producto rated 200 V			

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com

2


Germany: +49 621 776 1111

fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

# **EPPERL+FUCHS**

#### **Curves/Diagrams**

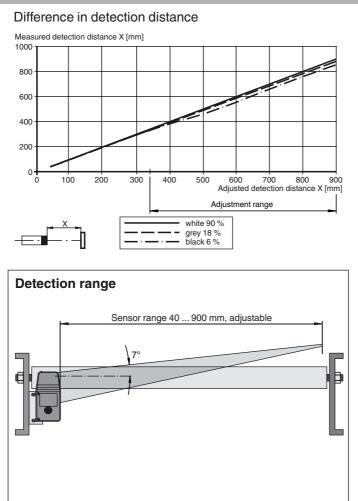

#### **Options:**

Sensors with the version -V are equipped with a solenoid valve and can directly control a 3/2 way pneumatic actuator, without any-interaction of an external system controlling unit (PLC). As soon as conveyed goods are detected, the diffuse mode sensor gives an electrical-signal to the pneumatic solenoid valve, which is then activated.

Sensors with the control logic option -SL-(V) allows up to 50 diffuse mode sensors to be connected-to each other (data and power), depending on the current consumption of sensor and solenoid valve. An additional supply power and data bus cable is used to interconnect the sensors with control logic option -SL. All necessary functions for controlling the material flow of conveyed goods are supported, such as: single feed, single release, slug release, external motor and solenoid valve control. It is also possible to energize the valves of all sensors included in the cascade by slug release (VT). To do this, apply the positive supply voltage (+UB) on the input VT of the first sensor.

Sensors with timing function -Z features the adjustment of the ON- and OFF delay of the output independently. This optimizes control of the solenoid valve. A zero pressure accumulation of the conveyed goods can be realized with application of time ONand OFF delay of the output. The ON- and OFF delay to control the switching of the solenoid valve may be adjusted between 0 and 2 seconds.

Additional power supply between every 20 to 25 sensors can be realized by the use of the power in feed junction V1S-TEE-V1/ V1S in combination with a cable V1-G-...-PVC. This features to practically connect any number of SBL sensors in series. Attention should be paid to the maximum rated current of the cable and the connectors which usually is max. I = 4 A. For more details on the maximum rated current of single components, please refer to our datasheet values. For the electrical supply of the sensors the country specific standards have to be considered.

#### Note:

Use a screwdriver to adjust the sensing range. We strongly recommend to use the screwdriver given in the accessories section.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com