Safety light curtain

SLC14-1200/130/151





Model Number

SLC14-1200/130/151

with 2 separate fail-safe semiconductor outputs

Features

- ٠ Sensing range up to 5 m
- Resolution 14 mm (finger protection) ٠
- Self-monitoring (type 4 according to IEC/EN 61496-1)
- Master/Slave detection, Plug and • Play
- Start/Restart disable ٠
- ٠ Very short response time
- Degree of protection IP67 •
- Integrated function display .
- Pre-fault indication ٠
- Optional with relay monitor (Option • 129)
- Connection via appliance socket ٠ M12 x b1
- Safety outputs OSSD in potential-se-• parated semiconductor version
- Protective field height up to 1800 mm

Accessories

PG SLC-1200

Protective glass panes for SLC series

BA SLC


Pepperl+Fuchs Group www.pepperl-fuchs.com

laser alignment aid for safety light cutrtains series SLC

13 58 Height of the protected area 22

Electrical connection

Dimensions

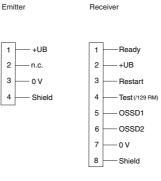


Pinout

1

2

з

4

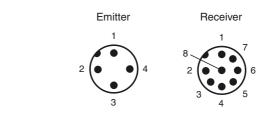

199732_eng.xml

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" USA: +1 330 486 0001

fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



1

SLC14-1200/130/151


Technical data		
System components		
Emitter	SLC14-1200-T/130	
Receiver	SLC14-1200-R/130/151	
General specifications		
Effective detection range	0.2 5 m	
Light source	IRED	
Light type	modulated infrared light	
LED risk group labelling	exempt group	
Tests	IEC/EN 61496	
Safety type according to IEC/EN 6149		
Width of protected area	0.2 5 m	
Protection field height	1200 mm	
Number of beams	128	
Operating mode	can be selected with or without start/restart disable	
Optical resolution	14 mm	
Angle of divergence	< 5 °	
Functional safety related parameters		
Safety Integrity Level (SIL)	SIL 3	
Performance level (PL)	PL e	
Category	Cat. 4	
Mission Time (T _M)	20 a	
PFH _d	2.42 E-8	
-	4	
Type	т 	
Indicators/operating means		
Operation indicator	7-segment display in emitter	
Diagnostics indicator	7-segment display in receiver	
Function indicator	in receiver: LED red: OSSD off	
	LED green: OSSD on	
	LED yellow: Protected area free, system start-ready	
Pre-fault indicator	LED orange	
Control elements	switch for start/restart disable, transmission coding	
Electrical specifications		
Operating voltage U _E	24 V DC (-30 %/+25 %)	
No-load supply current I ₀	Emitter: ≤ 100 mA receiver: ≤ 150 mA	
Protection class		
Input		
Activation current	approx. 10 mA	
Activation time	0.03 1 s	
Test input	Reset-input for system test (not for option /129)	
Function input	Start release	
	Clart House	
Output	O concreted foil onfo comicanductor outputs	
Safety output	2 separated fail safe semiconductor outputs	
Signal output	1 PNP, max. 100 mA for start readiness	
Switching voltage	Operating voltage -2 V	
Switching current	max. 0.5 A	
Response time	25 ms	
Conformity		
Functional safety	ISO 13849-1	
Des durat attain da val		
Product standard	EN 61496-1 ; IEC 61496-2	
Ambient conditions		
Ambient temperature	0 55 °C (32 131 °F)	
Storage temperature	-25 70 °C (-13 158 °F)	
Relative humidity	max. 95 %, not condensing	
Mechanical specifications		
Housing length L	1310 mm	
Degree of protection	IP67	
Connection	Emitter: M12 connector, 4-pin Receiver: M12 connector, 8-pin	
Material		
Housing	extruded aluminum profile, RAL 1021 (yellow) coated	
Optical face	Plastic pane	
Mass	Per 3900 g	
Approvals and certificates		
	CE	
CE conformity	CE cULus Listed	
CE conformity UL approval	cULus Listed	
CE conformity		


2


Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com



Curves/Diagrams

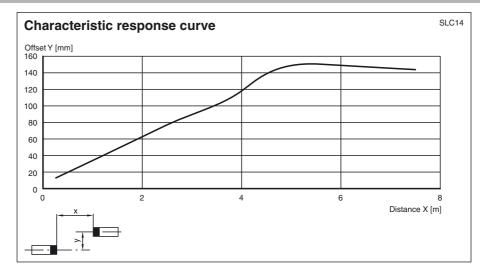

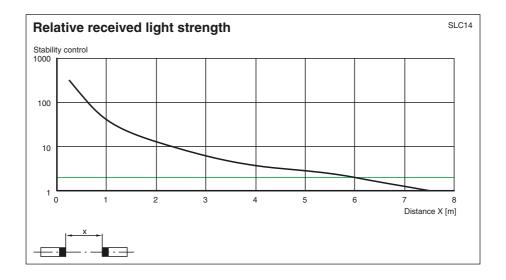

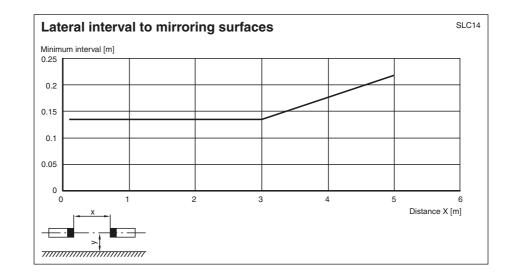

Note

Pepperl+Fuchs Group

www.pepperl-fuchs.com

Master-Slave operation

Master:	SLC (semiconductor)
	or SLC/31 (relay)
Slave:	SLCS

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

USA: +1 330 486 0001 Germany: +4 fa-info@us.pepperl-fuchs.com fa-info@de.pe

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



Safety light curtain

The use of slaves allows both the protection fields to be extended and protection fields to be created that do not all exist at a single level. When deciding which slaves to connect, remember that the total maximum of 96 beams must not be exceeded. Up to 192 beams are possible if the /130 option is selected.

Slaves exist for the transmitter and the receiver. These simply need to be connected to the master light curtain. Up to two slaves can be connected to both the transmitter and receiving units. Only one slave can be connected if the /130 option is selected.

Installation:

- The end cap (no cable gland) on the light curtain is unscrewed and removed. 1
- 2 The plug-in jumper on the connectors of the now visible PCB is removed.
- З The slave is designed in such a way that the cap and PCB on the connecting cable plug directly onto the open end of the light curtain.
- Once the end cap has been screwed on, the system is complete. 4

System accessories

- Mounting set SLC •
- Test rods SLC14/SLC30/SLC60
- Protection glass for SLC (to protect the optical surface)
- Side cable gland SLC
- Profile alignment tool •
- Beam alignment tool SLC
- Mirror for SLC (to protect danger areas on more than one side)
- Stands UC SLP/SLC
- Enclosure for stands Enclosure UC SLP/SLC
- Start protection Damping UC SLP/SLC

