Thru-beam sensor

OBE12M-R100-S2EP1-IO-V31



CE **OIO**-Link

Model Number

OBE12M-R100-S2EP1-IO-V31

Thru-beam sensor with 4-pin, M8 x 1 connector

Features

- Miniature design with versatile • mounting options
- IO-link interface for service and ٠ process data
- Various frequencies for avoiding • mutual interference (cross-talk immunity)
- Extended temperature range • -40°C ... 60°C
- High degree of protection IP69K


Product information

The R100 series miniature optical sensors are the first devices of their kind to offer an end-to-end solution in a small single standard design - from thru-beam sensor through to a distance measurement device. As a result of this design, the sensors are able to perform practically all standard automation tasks.


The entire series enables sensors to communicate via IO-Link.

The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor.


The use of Multi Pixel Technology gives the standard sensors a high level of flexibility and enables them to adapt more effectively to their operating environment.

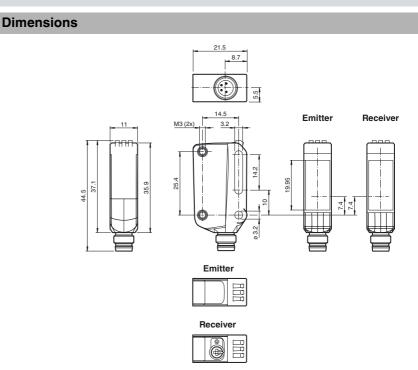

Electrical connection emitter



Electrical connection receiver



Pinout



Refer to "General Notes Relating to Pepperl+Fuchs Product Information" USA: +1 330 486 0001

Pepperl+Fuchs Group www.pepperl-fuchs.com

fa-info@us.pepperl-fuchs.com


Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com


Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

⁵ PEPPERL+FUCHS 1

Indicators/operating means

Emitter





1 Operating indicator	
-----------------------	--

1	Light-on/Dark-on changeover switch
2	Sensitivity adjuster
3	Operating indicator / dark on
4	Signal indicator
5	Operating indicator / light on

Accessories

V31-WM-2M-PUR

Female cordset single-ended, M8, 4-pin, PUR cable

V31-GM-2M-PUR

Female cordset single-ended, M8, 4-pin, PUR cable

IO-Link-Master02-USB

IO-Link master, supply via USB port or separate power supply, LED indicators, M12 plug for sensor connection

Other suitable accessories can be found at www.pepperl-fuchs.com

2

Technical data	
System components	
Emitter	OBE12M-R100-S-IO-V31
Receiver	OBE12M-R100-2EP1-IO-V31
General specifications	
Effective detection range	0 12 m
Threshold detection range	15 m
Light source	LED
Light type	modulated visible red light
LED risk group labelling	exempt group
Diameter of the light spot	approx. 65 mm at a distance of 1 m
Angle of divergence	3.7 ° EN 60947-5-2 : 30000 Lux
Ambient light limit	
Functional safety related parar MTTF _d	462 a
Mission Time (T _M)	402 a 20 a
Diagnostic Coverage (DC)	0%
Indicators/operating means	0,0
Operation indicator	LED green:
	constantly on - power on flashing (4Hz) - short circuit flashing with short break (1 Hz) - IO-Link mode
Function indicator	Yellow LED: Permanently lit - light path clear Permanently off - object detected Flashing (4 Hz) - insufficient operating reserve
Control elements	Receiver: light/dark switch
Control elements	Receiver: sensitivity adjustment
Parameterization indicator	IO link communication: green LED goes out briefly (1 Hz)
Electrical specifications	
Operating voltage	U _B 10 30 V DC
Ripple	max. 10 %
No-load supply current	I₀ Emitter: ≤ 14 mA Receiver: ≤ 13 mA at 24 V supply voltage
Protection class	Ш
Interface	
Interface type Transfer rate	IO-Link (via $C/Q = pin 4$)
IO-Link Revision	COM 2 (38.4 kBaud) 1.1
Min. cycle time	2.3 ms
Process data witdh	Emitter: Process data output: 2 Bit Receiver: Process data input: 2 Bit
	Process data output: 2 Bit
SIO mode support Device ID	yes Emitter: 0x110401 (1115137) Receiver: 0x11030A (1114890)
Compatible master port type	A
Test input	emitter deactivation at +U _B
Output	childer dedeavailon at TOB
Switching type	The switching type of the sensor is adjustable. The default
contoining type	setting is: C/Q - Pin4: NPN normally closed / light-on, PNP normally open dark-on, IO-Link /Q - Pin2: NPN normally open / dark-on, PNP normally closed / light-on
Signal output	2 push-pull (4 in 1)outputs, short-circuit protected, reverse polarity protected, overvoltage protected
Switching voltage	max. 30 V DC
Switching current	max. 100 mA , resistive load
Usage category	DC-12 and DC-13 U _d ≤ 1.5 V DC
Voltage drop Switching frequency	U _d ≤ 1.5 V DC f 1000 Hz
Response time	0.5 ms
•	0.0 mo
Conformity Communication interface	IEC 61131-9
Product standard	EN 60947-5-2
Ambient conditions Ambient temperature	-40 60 °C (-40 140 °F)
	· · · /
Storage temperature	-40 70 °C (-40 158 °F)
Mechanical specifications	
Mechanical specifications Housing width	11 mm
•	11 mm 44.5 mm

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

Thru-beam sensor

Degree of protection Connection Material Housing Optical face Mass

IP67 / IP69 / IP69K M8 x 1 connector, 4-pin

PC (Polycarbonate) PMMA Emitter: approx. 10 g receiver: approx. 10 g


Approvals and certificates

UL approval


E87056 , cULus Listed , class 2 power supply , type rating 1

Curves/Diagrams

Characteristic response curve									
Characteristic	e response	curve		4 16 ance X (m)					
	F		Dist	ance x [m]					

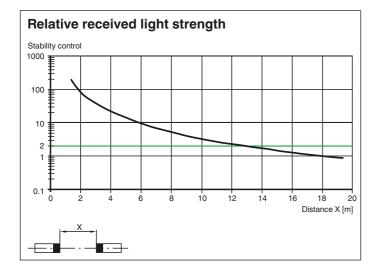

Functions and Operation

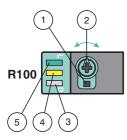

- 1 Light-on / dark-on changeover switch
- 2 Sensing range / sensitivity adjuster
- 3 Operating indicator / dark on
- 4 Signal indicator
- 5 Operating indicator / light on

To unlock the adjustment functions turn the sensing range /sensitivity adjuster for more than 180 degrees.

Sensing Range / Sensitivity

Turn sensing range / sensitivity adjuster clockwise to increase sensing range / sensitivity.

Turn sensing range / sensitivity adjuster counter clockwise to decrease sensing range / sensitivity.

If the end of the adjustment range is reached, the signal indicator starts flashing with 8 Hz.

Light-on / Dark-on Configuration

Press the light-on / dark-on changeover switch for more than 1 second (less than 4 seconds). The light-on / dark-on mode changes and the operating indicators are activated accordingly.

If you press the light-on / dark-on changeover switch for more than 4 seconds, the light-on /dark-on mode changes back to the original setting. On release of the light-on / dark-on changeover switch the current state is activated.

Restore Factory Settings

4

Press the light-on / dark-on changeover switch for more than 10 seconds (less than 30 seconds) until all LEDs turn off. On release of the light-on / dark-on changeover switch the signal indicator turns on. After 5 seconds the sensor resumes operation with factory default settings.

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com After 5 minutes of inactivity the sensing range / sensitivity adjustment is locked. In order to reactivate the sensing range / sensitivity adjustment, turn the sensing range /sensitivity adjuster for more than 180 degrees.

Pepperl+Fuchs Group www.pepperl-fuchs.com

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com