




# Installation instructions BasicDisplay XL/Clear

**CR9222**

**UK**

80230845 / 00 10 / 2017

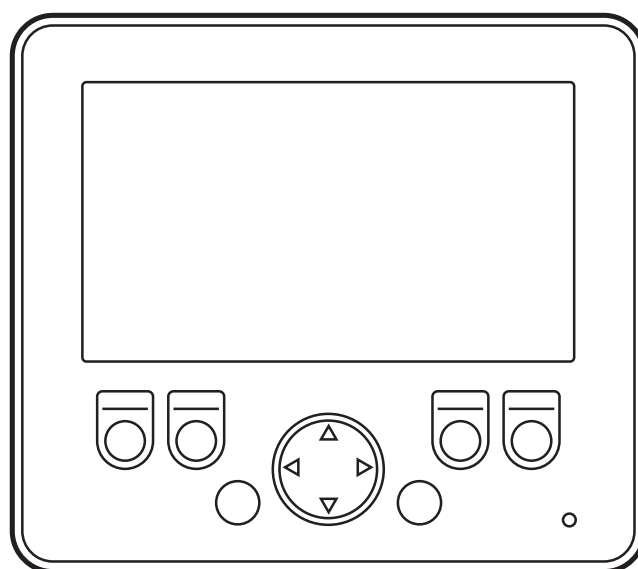

## Contents

1	Preliminary note . . . . .	3
1.1	Symbols used . . . . .	3
1.2	Warning signs used . . . . .	3
2	Safety instructions . . . . .	4
2.1	General . . . . .	4
2.2	Target group . . . . .	4
2.3	Electrical connection . . . . .	4
2.4	Tampering with the device . . . . .	4
3	Functions and features . . . . .	5
3.1	Features at a glance . . . . .	5
3.2	Application examples . . . . .	5
3.3	ecomatmobile Basic (examples) . . . . .	6
4	Installation . . . . .	7
4.1	General installation instructions . . . . .	7
4.1.1	Types of mounting and required accessories . . . . .	7
4.1.2	Items supplied . . . . .	7
4.2	Panel mounting . . . . .	7
4.3	RAM® mount . . . . .	8
4.4	Surface mounting . . . . .	9
5	Electrical connection . . . . .	10
5.1	General electrical connection . . . . .	10
5.2	Fuse . . . . .	10
5.3	Connection accessories . . . . .	10
5.3.1	Example accessories . . . . .	10
6	Display elements . . . . .	11
7	Set-up . . . . .	12
7.1	Programming . . . . .	12
7.2	Required documentation . . . . .	12
7.3	Required hardware . . . . .	12
8	Technical data . . . . .	13
9	Maintenance, repair and disposal . . . . .	16
9.1	Maintenance . . . . .	16
9.2	Cleaning the housing surface . . . . .	16
9.3	Repair . . . . .	16
9.4	Disposal . . . . .	16
10	Approvals/standards . . . . .	16

This document is the original instructions.

All trademarks and company names are subject to the copyright of the respective companies.

# 1 Preliminary note

This document applies to devices of the type "BasicDisplay XL/Clear" (art. no.: CR9222). It is deemed as a part of the unit.

CR9222 is identical with the BasicDisplay XL CR0452.



Deviation: Display film without UV protection (→ 8 Technical data).

This document is intended for specialists. These specialists are people who are qualified by their appropriate training and their experience to see risks and to avoid possible hazards that may be caused during operation or maintenance of the device. The document contains information about the correct handling of the device.

Read this document before use to familiarise yourself with operating conditions, installation and operation. Keep this document during the entire duration of use of the device.

Adhere to the safety instructions.

## 1.1 Symbols used

- Instructions
- > Reaction, result
- [...] Designation of keys, buttons or indications
- Cross-reference
-  Important note  
Non-compliance can result in malfunction or interference.
-  Information  
Supplementary note

## 1.2 Warning signs used

### WARNING

Warning of serious personal injury.  
Death or serious irreversible injuries may result.

### CAUTION

Warning of personal injury.  
Slight reversible injuries may result.

### NOTE

Warning of damage to property.

## **2 Safety instructions**

### **2.1 General**

These instructions contain texts and figures concerning the correct handling of the device and must be read before installation or use.

Observe the operating instructions. Non-observance of the instructions, operation which is not in accordance with use as prescribed below, wrong installation or incorrect handling can seriously affect the safety of operators and machinery.

### **2.2 Target group**

These instructions are intended for authorised persons according to the EMC and low-voltage directives. The device must only be installed, connected and put into operation by a qualified electrician.

### **2.3 Electrical connection**

Disconnect the device externally before handling it. If necessary, also disconnect any independently supplied output load circuits.

If the device is not supplied by the mobile on-board system (12/24 V battery operation), it must be ensured that the external voltage is generated and supplied according to the criteria for safety extra-low voltage (SELV) as this voltage is supplied without further measures to the connected controller, the sensors and the actuators.

The wiring of all signals in connection with the SELV circuit of the device must also comply with the SELV criteria (safety extra-low voltage, safe electrical isolation from other electric circuits).

If the supplied SELV voltage is externally grounded (SELV becomes PELV), the responsibility lies with the user and the respective national installation regulations must be complied with. All statements in this document refer to the device the SELV voltage of which is not grounded.

The connections may only be supplied with the signals indicated in the technical data and/or on the device label and only the approved accessories of ifm electronic may be connected.

### **2.4 Tampering with the device**

In case of malfunctions or uncertainties please contact the manufacturer. Any tampering with the device can seriously affect the safety of operators and machinery. This is not permitted and leads to the exclusion of any liability and warranty claims.

### 3 Functions and features

BasicDisplay XL/Clear is a programmable graphic display for controlling, parameter-setting and operation of mobile machines and plants. Communication with other system components is ensured via a CAN interface. Application-specific extensions and adaptations are possible in conjunction with additional products of the modular ecomatmobile Basic products.

#### **⚠ WARNING**

The device is not approved for safety-related tasks in the field of operator protection.

**UK**

#### **NOTE**

The device is intended for installation in vehicle bodies, not in engines.




It is recommended to use the keypad without work gloves since the coated surface can wear off when used intensively. Abrasion is only an optical impairment, but not a technical defect.


#### 3.1 Features at a glance

- 4.3" colour display
- 6 freely programmable backlit function keys
- Navigation key for cursor function
- CAN interface
- Freely programmable in accordance with IEC 61131-3 with target visualisation

#### 3.2 Application examples

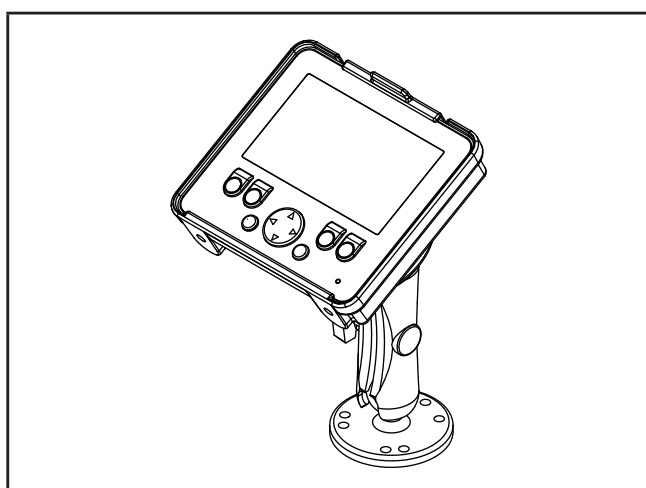

Display with RAM® mount set

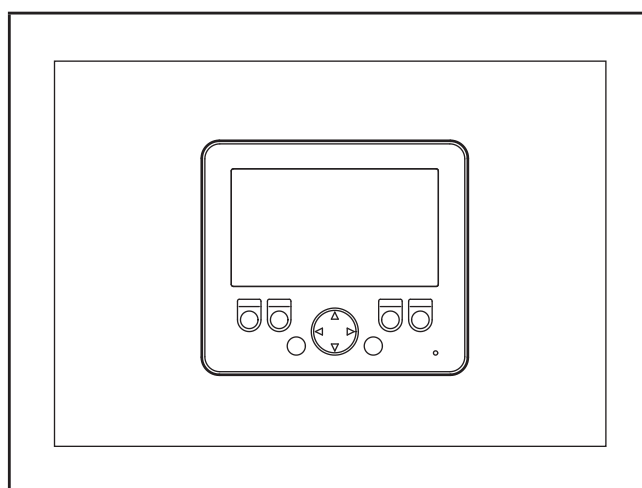

Display in panel

### 3.3 ecomatmobile Basic (examples)

- BasicController (art. no.: CR040x)  
Mobile controller, freely programmable to IEC 61131-3  
2 CAN interfaces (incl. interface for BasicDisplay CR0451 or BasicDisplay XL CR0452)  
Configurable inputs/outputs
- BasicRelay (art. no.: CR0421)  
Freely wirable relay and fuse carrier for 6 automotive relays and 10 automotive fuses
- Connection cable (art. no.: EC0454)  
For 1 BasicController CR040x and 1 BasicDisplay CR045x
- Connection cable (art. no.: EC0455)  
For 2 devices BasicController CR040x and 1 BasicDisplay CR045x  
(→ 5.3.1 Example accessories)
- RAM® mount set (art.-no.: EC0406)  
For BasicDisplay XL CR0452

For information about the available ecomatmobile Basic series see:  
[www.ifm.com](http://www.ifm.com)

## 4 Installation

### 4.1 General installation instructions

#### 4.1.1 Types of mounting and required accessories

Mounting type		Required accessories	Article no.
Installation	e.g. in panel cutout	Mounting frame	EC0404
RAM® mount	e.g. as desktop unit that can be aligned in various directions	RAM® mount set	EC0406
Setup	e.g. on a control panel	–	–

UK

#### 4.1.2 Items supplied

The device is supplied with an M52 nut.


This nut is needed for panel and surface mounting.

You can find more information about the available accessories at:  
[www.ifm.com](http://www.ifm.com)

### 4.2 Panel mounting


Suitable for material thicknesses up to 3 mm.

- ▶ Make a cut-out.  
Cutout dimensions for panel mounting (→ 8 Technical data)
- ▶ Remove the M52 nut from the device.
- ▶ Insert the device into the cutout.
- ▶ Place the mounting frame onto the device from the back.
- ▶ Screw the M52 nut onto the device and tighten by hand.

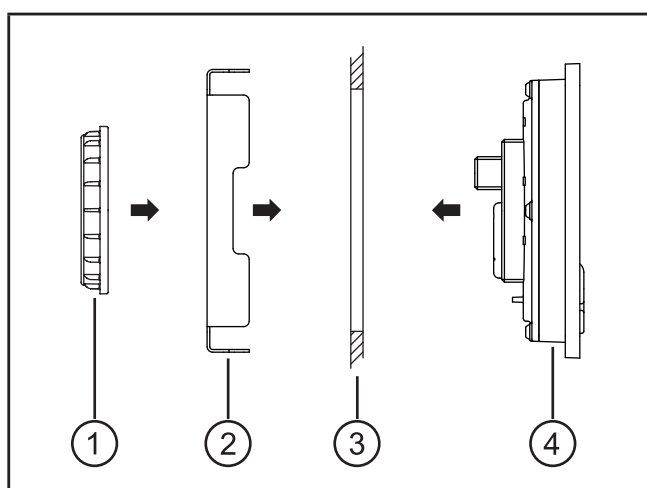

Mounting principle


- 1: M52 nut
- 2: Mounting frame
- 3: Panel
- 4: BasicDisplay XL/Clear

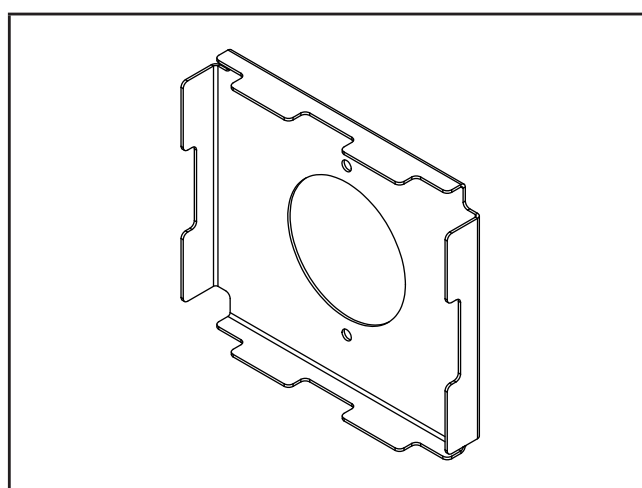

Mounting frame EC0404


### 4.3 RAM® mount

Using the RAM® mount set, available as accessories, the device can be used as a firmly mounted desktop unit. Two balls allow a variable orientation of the unit.

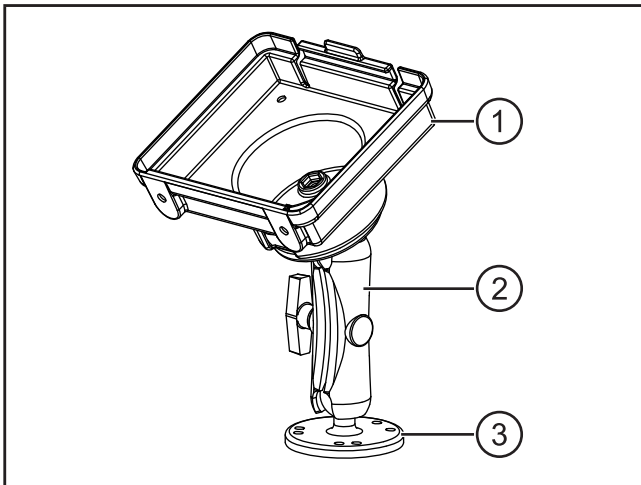


RAM® mount set EC0406

- 1: Display carrier
- 2: Mounting arm with fastening screw
- 3: Mounting plate with ball (2 pcs)

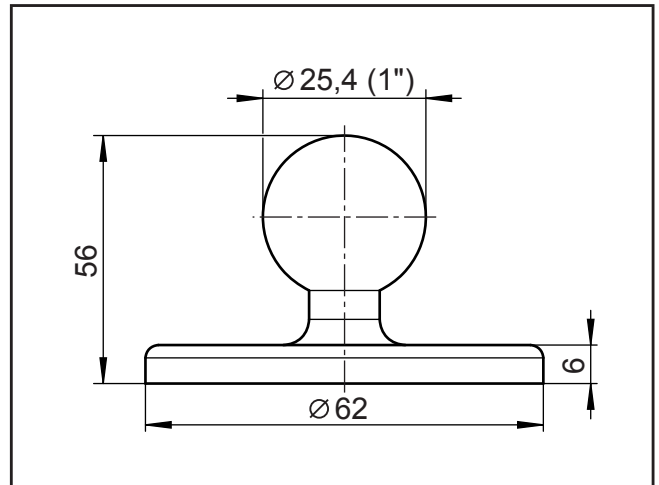


Mounting plate with ball

- Screw the mounting plate onto an even surface.  
Tightening torque:  $5 \pm 0.5$  Nm
- Screw second mounting plate to the display carrier.
- Slightly loosen the fastening screw of the mounting arm.
- Place the mounting arm onto the balls and tighten the fastening screw.

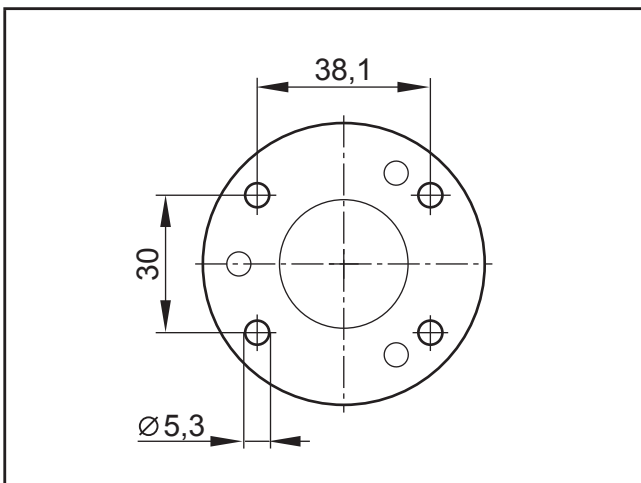

Hole dimensions for mounting plate

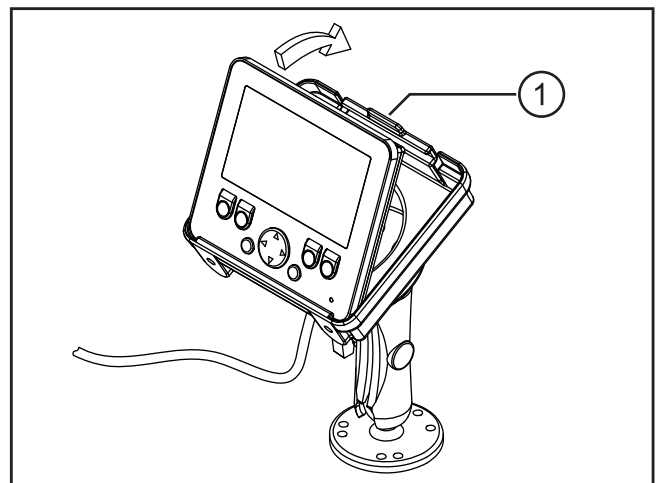

Display carrier

1: Snap-in


- Insert the device in the display carrier and clip it in place.  
In the lower area the display carrier has a hole for the plug and cable pass-through.



## 4.4 Surface mounting


Suitable for material thicknesses up to 3 mm.

- ▶ Make a round cutout and hole for the locating pins.
- ▶ Remove the M52 nut from the device.
- ▶ Insert the device into the cutout.
- ▶ Screw the M52 nut onto the device and tighten by hand.

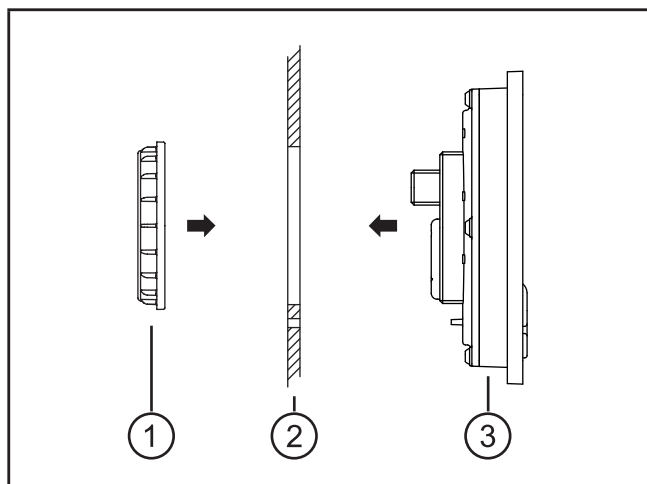

Mounting principle

- 1: M52 nut
- 2: Control panel
- 3: BasicDisplay XL/Clear

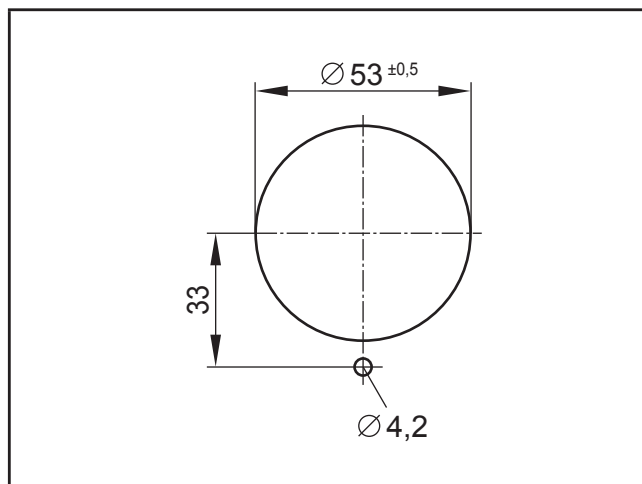

Cutout and hole for locating pins



Surface mounting does not allow for a seal between the device and the panel.

UK

## 5 Electrical connection

### 5.1 General electrical connection

Wiring (→ 8 Technical data)

- ▶ Connected cables must be provided with a strain relief.

### 5.2 Fuse


- ▶ Protect supply voltage.

Potential	Description	Pin no.	Fuse
VBB <sub>s</sub>	Supply voltage	2	≤ 2 A time-lag

### 5.3 Connection accessories


You can find more information about the available accessories at:  
[www.ifm.com](http://www.ifm.com)

#### 5.3.1 Example accessories

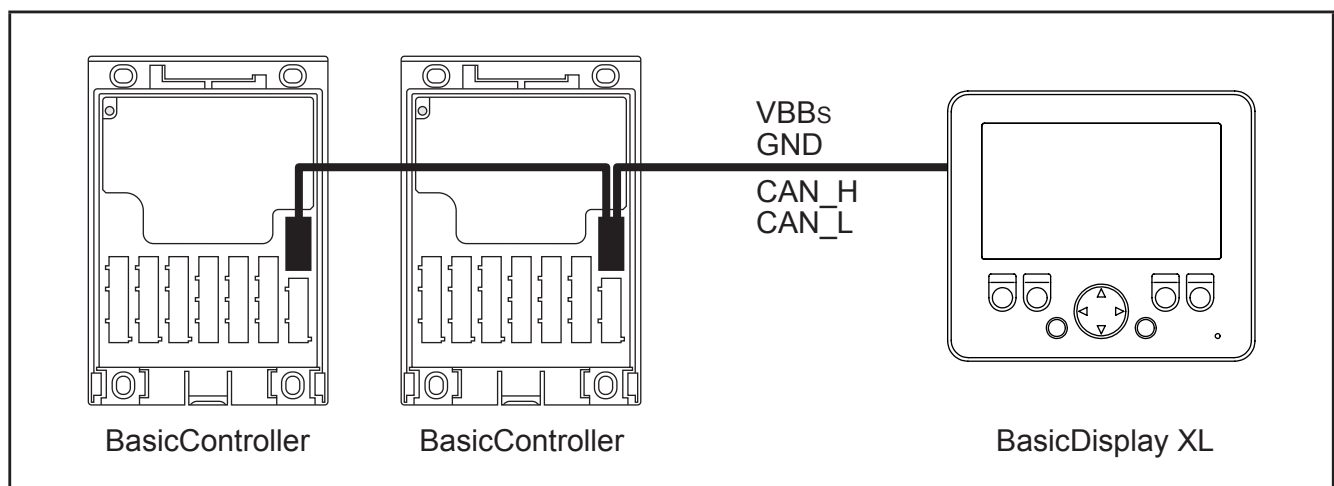

Connection cable EC0455

## 6 Display elements

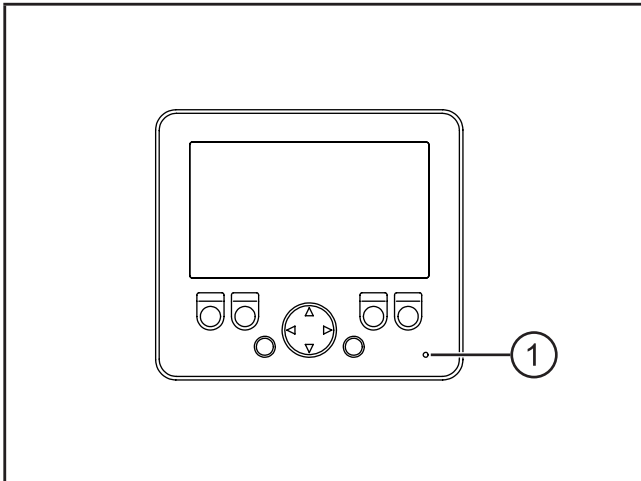

1: Status LED

Operating states (→ 8 Technical data)

UK

## 7 Set-up

### 7.1 Programming

The user can easily create the application software by means of the IEC 61131-3 compliant programming system CODESYS 2.3.

#### **WARNING**

The user is responsible for the safe function of the application programs which he created himself. If necessary, he must additionally carry out an approval test by corresponding supervisory and test organisations according to the national regulations.

### 7.2 Required documentation

In addition to the CODESYS programming system, the following documents are required for programming and set-up of the device:

- Programming manual CODESYS V2.3  
(alternatively as online help)
- System manual BasicDisplay XL/Clear  
(alternatively as online help)

The manuals can be downloaded from the internet:  
[www.ifm.com](http://www.ifm.com)

CODESYS and BasicDisplay XL/Clear online help:  
[www.ifm.com](http://www.ifm.com) → Service → Download → Systems for mobile machines\*

\*) Download area with registration

### 7.3 Required hardware

A CAN interface for the connection to a PC or a notebook is required to load the application program to the device.

Example:


- CAN/RS232 USB interface CANfox (art. no.: EC2112)
- Adapter cable for CANfox (art. no.: EC2113)

You can find more information about the available accessories at:  
[www.ifm.com](http://www.ifm.com)

## 8 Technical data

### CR9222

BasicDisplay XL/Clear  
4.3" colour display  
6 freely programmable  
backlit  
function keys  
Navigation key  
for cursor function  
8...32 V DC

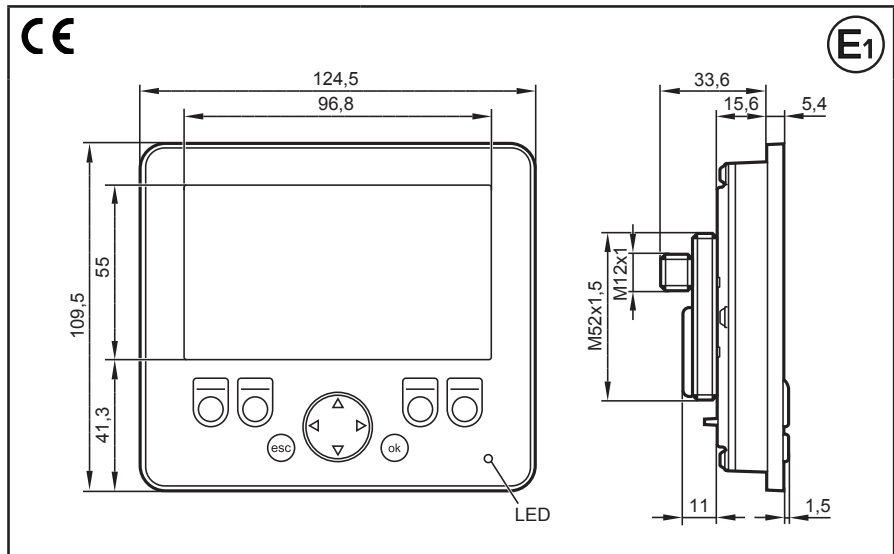

#### Technical data

##### Display

Display

Format

Resolution

Aspect ratio

Surface

Colours

Background illumination

Brightness

Contrast ratio

Character sets

##### Mechanical data

Dimensions (W x H x D)

Cutout for panel mounting (W x H)

Cutout for surface mounting (Ø)

Hole for locating pins (Ø)

Housing material

Pushbuttons

Navigation key

Background illumination operating elements

Protection rating

Operating/storage temperature

Weight

#### Programmable display with graphic capabilities, can be used with BasicController or as stand-alone display

TFT LCD colour display, transmissive

95.0 x 53.9 mm (active area), 4.3" diagonal

480 x 272 pixels

16 : 9

polyester film, clear transparent (without UV protection)  
reinforced with glass (mineral glass) in the visible area of the device

256 (8 bits)

LED (lifetime  $\geq 40,000$  h; at 25°C)

$\geq 400$  cd/m<sup>2</sup>, typically 440 cd/m<sup>2</sup> (adjustable 0...100%, increments 1%)

$\geq 300:1$ , typically 450:1

Preinstalled: Arial, Lucida Console (fixed font sizes)  
for further information see the BasicDisplay XL/Clear manual

124.5 x 109.5 x 39 mm

114 ± 0.5 x 99 ± 0.5 mm

53 ± 0.5 mm

4.2 mm (33 mm distance to the centre of the cutout)

Plastic (black)

6 function keys (silicone keyboard) with tactile feedback  
freely programmable (softkey function)  
Life cycle  $\geq 750,000$  activations

Cursor function (up, down, left, right) with tactile feedback  
Life cycle  $\geq 750,000$  activations

LED (brightness adjustable 0...100%, global control)

IP 67  
(on the front panel when mounted, otherwise IP 65)


-20...65° C / -30...80° C

0.22 kg


CR9222	Technical data		

CR9222
Climatic tests
Mechanical tests
Tests for railway applications
Back of the unit
Connection
Wiring

Technical data	
EN 60068-2-30: 2006	Damp heat, cyclic upper temperature 55°C, number of cycles: 6
EN 60068-2-78: 2002	Damp heat, steady state test temperature 40°C / 93% RH, Test duration: 21 days
EN 60068-2-52: 1996	Salt spray test severity level 3 (motor vehicle)
ISO 16750-3: 2012	Test VII; Vibration, random mounting location: vehicle body
EN 60068-2-6: 2008	Vibration, sinusoidal 10...500 Hz; 0.72 mm/10 g; 10 cycles/axis
ISO 16750-3: 2012	Bumps 30 g/6 ms; 24,000 shocks
EN 50155-12-2: 2008	Electronic equipment used on rolling stock
EN 50121-3-2: 2006	Electromagnetic compatibility (EMC)

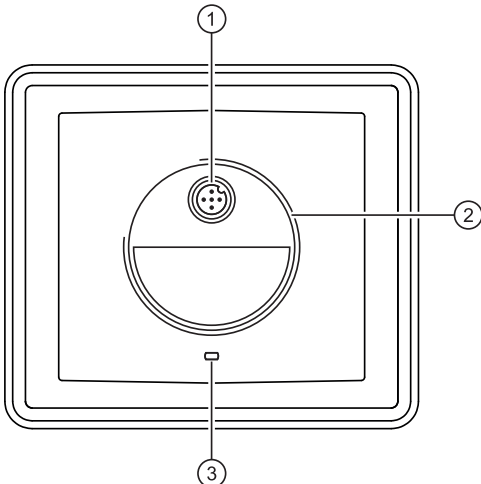

1: M12 connector  
2: M52 thread for fixing nut  
3: Locating pins

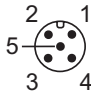Supply, CAN		
	1	n.c.
	2	8...32 V DC
	3	GND
	4	CAN_H
	5	CAN_L

## 9 Maintenance, repair and disposal

### 9.1 Maintenance

The device does not contain any components that need to be maintained by the user.

### 9.2 Cleaning the housing surface

- ▶ Disconnect the device.
- ▶ Clean the device from dirt using a soft, chemically untreated and dry cloth.
- ▶ In case of heavy dirt, use a damp cloth.



The following agents are not suited for cleaning the device:  
chemicals dissolving plastics such as methylated spirit, benzine, thinner, alcohol, acetone or ammonia.



Micro-fibre cloths without chemical additives are recommended.

### 9.3 Repair

- ▶ The device must only be repaired by the manufacturer.  
Observe the safety instructions (→ 2.4 Tampering with the device)

### 9.4 Disposal

- ▶ Dispose of the device in accordance with the national environmental regulations.

## 10 Approvals/standards

Test standards and regulations (→ 8 Technical data)