



 **IO-Link**



Operating Instructions
IO-Link Master with Modbus TCP interface
DataLine
4 Ports
IP 65 / IP 66 / IP 67

AL1340

IO-Link: 1.1.2
ifm firmware: 2.1.19 or higher
LR DEVICE: 1.3.0.131 or higher

English

Table of Contents

1	Preliminary note	5
1.1	Legal and copyright information	5
1.2	Purpose of the document	5
1.3	Symbols and styles used	6
1.4	Modification history	6
2	Safety instructions	7
2.1	General	7
2.2	Required background knowledge	7
2.3	Safety symbols on the device	8
2.4	Tampering with the unit	8
3	Intended use	9
3.1	Permitted use	9
3.2	Prohibited use	9
4	Function	10
4.1	Communication, parameter setting, evaluation	11
4.1.1	IO-Link	11
4.1.2	Modbus TCP	11
4.1.3	Internet of Things (IoT)	11
4.1.4	Parameter setting	11
4.1.5	Visual indication	12
4.2	Digital inputs	12
4.3	IO-Link supply	12
5	Mounting	13
5.1	Mount the device	13
6	Electrical connection	14
6.1	Remarks	14
6.2	Modbus TCP ports	15
6.3	IoT port	15
6.4	IO-Link ports	16
6.4.1	Input circuit	17
6.4.2	IO-Link circuits	17
6.5	Connect the device	18
7	Operating and display elements	19
7.1	Overview	19
7.2	LED indicators	20
7.2.1	Status LEDs	20
7.2.2	Ethernet interface	21
7.2.3	IoT port	21
7.2.4	Voltage supply	21
7.2.5	IO-Link ports (Class A)	22

8	Configuration	23
8.1	LR DEVICE	24
8.1.1	Remarks	25
8.1.2	IoT: Configure access rights	26
8.1.3	IoT: Configure IP settings	27
8.1.4	IoT: Configure the interface to the LR SMARTOBSERVER	28
8.1.5	Fieldbus: configure Modbus TCP port	29
8.1.6	IO-Link ports: Activate data transfer to the LR SMARTOBSERVER	30
8.1.7	IO-Link ports: Configure operating mode	31
8.1.8	IO-Link ports: Set the device validation and data storage	32
8.1.9	IO-Link ports: set fail-safe values	33
8.1.10	Info: Show device information	33
8.1.11	Firmware: Reset device to factory settings	34
8.1.12	Firmware: Reboot the device	34
8.1.13	Configure IO-Link devices	35
8.2	Modbus TCP	36
8.2.1	Integrate the AL1340 into the Modbus project	36
8.2.2	Set IO-Link master and IO-Link ports	38
8.2.3	read input data of several IO-Link ports	39
8.2.4	Read input data of individual IO-Link ports	40
8.2.5	Write output data of several IO-Link ports	41
8.2.6	Write output data of individual IO-Link ports	42
8.2.7	Read diagnostic information and events	43
8.2.8	Read device information	44
8.2.9	Control IO-Link master	44
8.2.10	Configure IO-Link devices	44
8.2.11	Modbus TCP: Programmers' notes	45
8.3	IoT Core	47
8.3.1	Configure IoT port	48
8.3.2	Configure the fieldbus port	49
8.3.3	Configure IO-Link ports	49
8.3.4	Set application identification	50
8.3.5	Read / write cyclic process data	50
8.3.6	Read diagnostic data	50
8.3.7	Read device information	51
8.3.8	Read information about IO-Link devices	51
8.3.9	Configure IO-Link devices	52
8.3.10	Control IO-Link master	52
8.3.11	Examples	53
8.3.12	Programmers' notes	57

Content

9	Operation	61
9.1	Identify device	61
9.2	Firmware update	62
9.3	Replace IO-Link device	63
10	Maintenance	64
11	Factory settings	65
12	Accessories	66
13	Appendix	67
13.1	Technical data	68
13.1.1	Application	68
13.1.2	Electrical data	68
13.1.3	Inputs / outputs	68
13.1.4	Inputs	69
13.1.5	Outputs	69
13.1.6	Interfaces	69
13.1.7	Operating conditions	70
13.1.8	Approvals / tests	70
13.1.9	Mechanical data	70
13.1.10	Electrical connection	71
13.2	Modbus TCP	72
13.2.1	Register	73
13.2.2	Acyclic commands	89
13.3	ifm IoT Core	100
13.3.1	Overview: IoT profile	101
13.3.2	Overview: IoT types	104
13.3.3	Overview: IoT services	105
14	Index	117

1 Preliminary note

Contents

Legal and copyright information	5
Purpose of the document	5
Symbols and styles used.....	6
Modification history	6

14801

1.1 Legal and copyright information

1631

© All rights reserved by **ifm electronic gmbh**. No part of this manual may be reproduced and used without the consent of **ifm electronic gmbh**.

- All product names, pictures, companies or other brands used on our pages are the property of the respective rights owners:
- AS-i is the property of the AS-International Association, (→ www.as-interface.net)
- CAN is the property of the CiA (CAN in Automation e.V.), Germany (→ www.can-cia.org)
- CODESYS™ is the property of the 3S – Smart Software Solutions GmbH, Germany (→ www.codesys.com)
- DeviceNet™ is the property of the ODVA™ (Open DeviceNet Vendor Association), USA (→ www.odva.org)
- EtherNet/IP® is the property of the →ODVA™
- EtherCAT® is a registered trade mark and patented technology, licensed by Beckhoff Automation GmbH, Germany
- IO-Link® (→ www.io-link.com) is the property of the →PROFIBUS Nutzerorganisation e.V., Germany
- ISOBUS is the property of the AEF – Agricultural Industry Electronics Foundation e.V., Deutschland (→ www.aef-online.org)
- Microsoft® is the property of the Microsoft Corporation, USA (→ www.microsoft.com)
- PROFIBUS® is the property of the PROFIBUS Nutzerorganisation e.V., Germany (→ www.profibus.com)
- PROFINET® is the property of the →PROFIBUS Nutzerorganisation e.V., Germany
- Windows® is the property of the →Microsoft Corporation, USA

1.2 Purpose of the document

22044

This document is only for device types "IO-Link master - Modbus TCP gateway (DataLine) 4 port IP 65 / IP 66 / IP 67" (art. no.: AL1340).

It is part of the device and contains information about the correct handling of the product.

- Read this document before using the device.
- Keep this document during the service life of the device.

1.3 Symbols and styles used

15989

⚠ WARNING

Death or serious irreversible injuries may result.

⚠ CAUTION

Slight reversible injuries may result.

NOTICE

Property damage is to be expected or may result.

-  Important note
Non-compliance can result in malfunction or interference
-  Information
Supplementary note
- ... Request for action
- > ... Reaction, result
- ... "see"
- abc** Cross-reference
- 123 Decimal number
- 0x123 Hexadecimal number
- 0b010 Binary number
- [...] Designation of pushbuttons, buttons or indications

1.4 Modification history

21676

Version	Topic	Date
00	New creation of document	04 / 2018

2 Safety instructions

Contents	
General	7
Required background knowledge	7
Safety symbols on the device	8
Tampering with the unit	8

213

2.1 General

22068



The plant manufacturer is responsible for the safety of the plant in which the device is installed.

If the device is used in a way that is not intended by the manufacturer, the protection supported by the device may be impaired.

Non-observance of the instructions, operation which is not in accordance with use as prescribed below, wrong installation or incorrect handling can affect the safety of operators and machinery.

- ▶ Observe these operating instructions.
- ▶ Adhere to the warning notes on the product.

2.2 Required background knowledge

22046

This document is intended for specialists. Specialists are people who, based on their relevant training and experience, are capable of identifying risks and avoiding potential hazards that may be caused during operation or maintenance of the product.

The document contains information about the correct handling of the product.

2.3 Safety symbols on the device

15021



General warning

Observe instructions in chapter "Electrical connection" (→ **Electrical connection** (→ p. [14](#)))!

2.4 Tampering with the unit

11242



WARNING

Tampering with the units can affect the safety of operators and machinery!

Tampering with the units is not allowed.

In case of non-compliance our liability and warranty expire.

- ▶ Do not open the devices!
- ▶ Do not insert any objects into the devices!
- ▶ Prevent metal foreign bodies from penetrating!

3 Intended use

Contents

Permitted use	9
Prohibited use.....	9

18761

3.1 Permitted use

22052

The IO-Link master serves as a gateway between intelligent IO-Link devices and the fieldbus. The device is designed for use without a control cabinet in the plant construction.

3.2 Prohibited use

22053

The device may not be used beyond the limits of the technical data (→ **Technical data** (→ p. [68](#)))!

4 Function

Contents

Communication, parameter setting, evaluation	11
Digital inputs	12
IO-Link supply.....	12

7482

4.1 Communication, parameter setting, evaluation

Contents

IO-Link	11
Modbus TCP	11
Internet of Things (IoT)	11
Parameter setting	11
Visual indication	12

7485

4.1.1 IO-Link

7773

The device offers the following IO-Link functions:

- IO-Link master (IO-Link revision 1.0 and 1.1)
- 4 IO-Link ports for connection of IO-Link devices
- Provision of process data of the connected IO-Link devices for LR SMARTOBSERVER monitoring software (→ www.ifm.com)

4.1.2 Modbus TCP

2259

The device offers the following Modbus TCP functions:

- Provision of the functions of a Modbus TCP Slave
- 2 port switch for access to the Modbus TCP interface (X21/X22)
- Gateway for transmission of the process and parameter data between the connected IO-Link devices and the higher-level Modbus TCP controller

4.1.3 Internet of Things (IoT)

8355

The device has an Ethernet port (X23) for Internet-of-Things applications. The interface allows separate access from IT networks to parameters, process and monitoring data of the IO-Link master and the connected IO-Link devices. Different protocols (e.g. TCP/IP JSON) are supported.

4.1.4 Parameter setting

7284

The device provides the following configuration options:

- Parameter setting of the IO-Link master of the AL1340 with LR DEVICE parameter setting software, Modbus TCP projection software or ifm IoT-Core services.
- Parameter setting of the connected IO-Link devices (sensors, actuators) with LR DEVICE parameter setting software, Modbus TCP projection software or ifm IoT-Core services
- Storage of parameter sets of the connected IO-Link devices for automatic recovery (data storage)

4.1.5 Visual indication

7772

The device has the following visual indicators:

- Status and error indication of the gateway, of the Modbus TCP connection and of the system
- Status display of the voltage supply
- Status and activity display of the Ethernet connection
- Status, error and short circuit/overload indication of the IO-Link ports

4.2 Digital inputs

7584

The device has 4 additional digital inputs (type 2 according to EN 61131-2).

The digital inputs are on pin 2 of the IO-Link ports X01 ... X04.

All inputs refer to the potential of the device supply (pin 3).

4.3 IO-Link supply

7623

The device has 4 supplies for IO-Link devices.

The IO-Link ports X01...X04 are ports class A.

Every supply provides short circuit monitoring.

The device ensures fire protection for the connected IO-Link devices by providing a power-restricted circuit at the IO-Link ports (according to IEC61010-1 and Class 2 according to UL1310).

5 Mounting

Contents

Mount the device	13
------------------------	----

22016

5.1 Mount the device

15540



- ▶ Disconnect the system from power before installation.
- ▶ For installation choose a flat mounting surface.
- ▶ Please observe the maximum tightening torque.

- ▶ Fix the unit to the mounting surface using 2 M5 mounting screws and washers.
 - Tightening torque: 1.8 Nm
- ▶ Ground the unit via the two mounting screws of the upper mounting lugs.

6 Electrical connection

Contents

Remarks	14
Modbus TCP ports	15
IoT port	15
IO-Link ports	16
Connect the device	18

22017

6.1 Remarks

18076



A qualified electrician must connect the unit.

- Observe the national and international regulations for the installation of electrical equipment.

Device is only suitable for operation on SELV/PELV voltages.

- Observe the information concerning IO-Link circuits (→ **IO-Link circuits** (→ p. 17))!

The device contains components that can be damaged or destroyed by electrostatic discharge (ESD).

- Observe the required safety measures against electrostatic discharge!

The IP rating depends on the individual protection ratings of the unit, the applied connection elements and the corresponding protective covers.

- For UL applications: For connecting the device and the IO-Link devices use UL certificated cables of category CYJV or PVVA with a minimum temperature rating of 100°C.
- Depending on the mounting conditions, cables must be provided with a strain relief to avoid unacceptable loads on the mounting points and M12 connections.
- Make sure that the M12 connection parts are correctly seated and mounted correctly. The specified protection rating can not be guaranteed if this is not observed.


Wiring: → **Technical data** (→ p. 68)



The communication interfaces are separated from the device supply according to EN61010-1 considering basis isolation as secondary circuit with maximum 30 V DC derived from the applied voltage up to 300 V of overvoltage category II. The communication interfaces are designed for a network environment 0 according to IEC TR62102.

6.2 Modbus TCP ports


17849

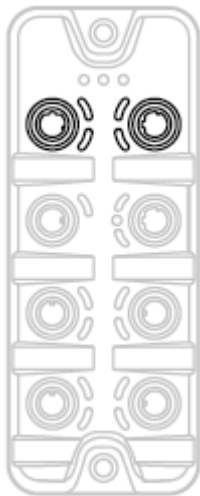

- ▶ Connect the device via the M12 socket X21 and/or X22 to the Modbus TCP network (e.g. Modbus TCP PLC, additional Modbus TCP device)
 - Tightening torque: 0.6...0.8 Nm
- ▶ To connect the devices, use M12 connectors with protection rating IP 65 / IP 66 / IP 67 or higher (→ **Accessories** (→ p. 66)).
- ▶ Cover the unused sockets with M12 protective caps (art no. E73004).
 - Tightening torque 0.6...0.8 Nm

6.3 IoT port


11029

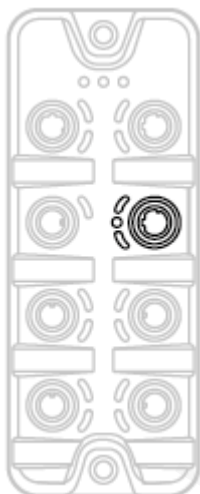

- ▶ Connect the device via the M12 socket X23 to the IT network (e.g. laptop/PC with installed LR DEVICE parameter setting software, laptop/PC with installed LR SMARTOBSERVER monitoring software)
 - Tightening torque: 0.6...0.8 Nm
- ▶ To connect the devices, use M12 connectors with protection rating IP 65 / IP 66 / IP 67 or higher (→ **Accessories** (→ p. 66)).
- ▶ Cover the unused sockets with M12 protective caps (art no. E73004)
 - Tightening torque 0.6...0.8 Nm

6.4 IO-Link ports

22684

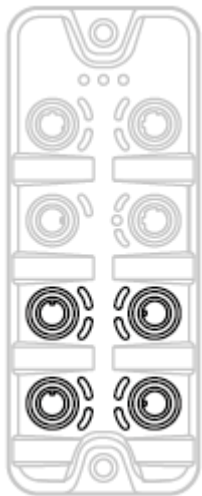

Ports X01...X04: For use as IO-Link port class A:

- ▶ Connect the connector of the IO-Link devices with the M12 sockets X01 ... X04.
 - Tightening torque: 0.6...0.8 Nm
 - Maximum cable length per IO-Link interface: 20 m
- ▶ For the connection, use M12 connectors with protection rating IP 65 / IP 66 / IP 67 or higher (→ **Accessories** (→ p. [66](#))).

Ports X01...X04: For use as IO-Link port class B:

- ▶ Connect the connector of the IO-Link devices via the adapter with the M12 sockets X01 ... X04.
 - Tightening torque: 0.6...0.8 Nm
- ▶ To connect the devices, use M12 connectors with protection rating IP 65 / IP 66 / IP 67 or higher (→ **Accessories** (→ p. [66](#))).
- ▶ Cover the unused sockets with M12 protective caps (art no. E73004).
 - Tightening torque 0.6...0.8 Nm

6.4.1 Input circuit

18629

The inputs of the ports X01...X04 (pin 2) provide a type 2 behaviour according to standard EN61131-2, the connected electronics must be rated for this electrically.

6.4.2 IO-Link circuits

11616

The IO-Link interfaces of the device meet the requirements of the IO-Link specification 1.0 to 1.1.2.



The connected IO-Link devices may only be supplied via the AL1340.

Exception: Connection of IO-Link devices to ports X01...X04 via suitable connection technology for port class B operation (→ **IO-Link ports** (→ p. [16](#))):

The external supply for port class B operation must be galvanically separated from the circuit of the AL1340 by assuring basic isolation (according to EN61010-1, secondary circuit with maximum 30 V DC derived from applied voltage up to 300 V of overvoltage category II)!

The isolation must be done both for IO-Link devices and for the connection technology.

NOTICE

Risk of material damage

If the requirements of galvanic separation of the circuits are not observed, the fire protection of the device can not be assured.

- Observe the requirements of the electrical connection of IO-Link devices for port class B operation!

Further information: → **Technical data** (→ p. [68](#))

6.5 Connect the device

2580



- ▶ Disconnect power.
- ▶ Connect the unit via M12 socket X31 to 24 V DC (20...30 V SELV/PELV, for cULus max. 24 V DC; according to EN61010-1, secondary circuit with maximum 30 V DC derived from applied voltage up to 300 V of overvoltage category II).
 - Tightening torque: 0.6...0.8 Nm
 - Maximum cable length: 25 m
- ▶ To connect the device, use M12 connectors with protection rating IP 65 / IP 66 / IP 67 or higher (→ **Accessories** (→ p. [66](#))).

If the port X01...X04 will be used as IO-Link ports Class B:

- ▶ Connect adapter for Port Class B operation to 24 V DC (20...30 V SELV/PELV, for cULus max. 24 V DC; according to EN61010-1, secondary circuit with maximum 30 V DC derived from applied voltage up to 300 V of overvoltage category II) (→ **IO-Link ports** (→ p. [16](#)))
 - Tightening torque: 0.6...0.8 Nm



When using connectors longer than 25 m keep in mind the voltage drop as well as the required minimum voltage supply of the AL1340.

7 Operating and display elements


Contents

Overview.....	19
LED indicators	20

5440

7.1 Overview

17857

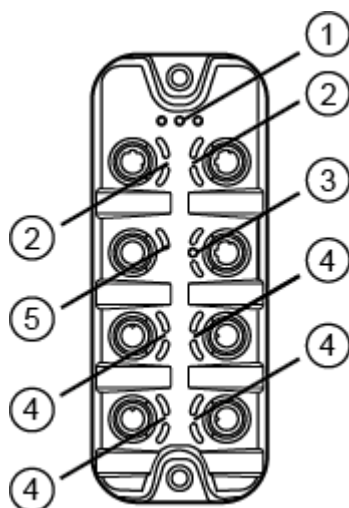

- ① RDY, RUN and ERR status LEDs
→ **Status LEDs** (→ p. [20](#))
- ② LNK and ACT status LEDs of the Modbus TCP interfaces 1 (X21) and 2 (X22)
→ **Ethernet interface** (→ p. [21](#))
- ③ LNK, ACT status-LEDs and IoT LED of the IoT interface (X23)
→ **IoT port** (→ p. [21](#))
- ④ IOL and DI status-LEDs of the IO-Link port (X01...X04)
→ **IO-Link ports (Class A)** (→ p. [22](#))
- ⑤ PWR status LED of the voltage supply (X31)
→ **Voltage supply** (→ p. [21](#))

7.2 LED indicators

22024

The device only has the following LED indicators:

7.2.1 Status LEDs

11748

The RDY LED indicates the status of the gateway.

The RUN LED indicates the current state of the Modbus TCP state machine.

The ERR LED indicates occurring errors.

Status LED			Description
RDY	green	on	gateway functions properly
		flashing 1 Hz	error
		flashing 5 Hz	firmware update
		off	gateway does not function; device reboots
ERR	red	on	error in application controller
		flashes (10 Hz)	boot error
		flashes (200 ms on, 200 ms off, 200 ms on, 1000 ms off)	watchdog error (Modbus TCP or process data)
		flashes (200 ms on, 1000 ms off)	local error
		flashes (2.5 Hz)	invalid configuration
		off	no error
RUN	green	on	connection established
		flashes (1 Hz)	ready, but not yet configured
		flashes (5 Hz)	waiting for connection
		off	not ready

7.2.2 Ethernet interface

22027

Each Ethernet interface (X21, X22) has 2 LEDs (LNK and ACT). The LEDs indicate the status of the Ethernet connection.

Status LED			Description
LNK	green	on	Ethernet connection established
		off	No Ethernet connection
ACT	yellow	flashes	Data is transmitted via the Ethernet interface.
		off	No data transmission

7.2.3 IoT port

7722

The IoT port (X23) has the 3 LNK, ACT and IoT LEDs. The LEDs indicate the status of the Ethernet connection and the device identification.

Status LED			Description
LNK	green	on	Ethernet connection established
		off	No Ethernet connection
ACT	yellow	flashes	Data is transmitted via the Ethernet interface.
		off	No data transmission
IoT	green	flashes	Device identification active

7.2.4 Voltage supply

22026

The interface for voltage supply (X31) has the LED that is marked as US. The LED indicates the status of the voltage supply.

Status LED			Description
US	green	on	The supply voltage U_s is applied.
		off	No supply voltage is applied or the applied supply voltage is too low.

7.2.5 IO-Link ports (Class A)

22029

Each IO-Link port Class A (X01 ... X04) has 2 LEDs marked as IOL and DI. The LEDs indicate the status of the IO-Link port.

Status LED			Description
IOL	yellow	on	Interface configured as DI/DO: pin 4 (C/Q) = ON
		off	Interface configured as DI/DO: pin 4 (C/Q) = OFF
	green	on	IO-Link transmission functions properly
		flashes 1 Hz	Interface configured as IO-Link, but no IO-Link transmission
	red	on	Short circuit or overload in supply voltage
		flashes 1 Hz	Transmission error
DI	yellow	on	Digital input: pin 2 (DI) = ON
		off	Digital input : pin 2 (DI) = OFF

8 Configuration

Contents

LR DEVICE.....	24
Modbus TCP.....	36
IoT Core.....	47

22367

8.1 LR DEVICE

Contents

Remarks	25
IoT: Configure access rights	26
IoT: Configure IP settings	27
IoT: Configure the interface to the LR SMARTOBSERVER	28
Fieldbus: configure Modbus TCP port	29
IO-Link ports: Activate data transfer to the LR SMARTOBSERVER	30
IO-Link ports: Configure operating mode	31
IO-Link ports: Set the device validation and data storage	32
IO-Link ports: set fail-safe values	33
Info: Show device information	33
Firmware: Reset device to factory settings	34
Firmware: Reboot the device	34
Configure IO-Link devices	35

22822

On delivery, the AL1340 is configured with the factory settings (→ **Factory settings** (→ p. [65](#))).

Required software: LR DEVICE (1.3.0.131 or higher) (art.-no.: QA0011/QA0012)

8.1.1 Remarks

Contents

Offline parameter setting	25
Parameter setting with LR DEVICE	25

22369

Offline parameter setting

22405

The AL1340 supports the offline parameter setting. In this context, the user creates and stores a configuration for the IO-Link master and the connected IO-Link devices without being connected to the AL1340 (OFFLINE mode). The configuration created in this way can be stored as a file (*.lrp) and loaded to the AL1340 and activated at a later date.



Further information about offline parameter setting: → Operating instructions LR DEVICE

Parameter setting with LR DEVICE

10924

Parameter setting of the AL1340 with the LR DEVICE is only possible via the IoT interface X23.

8.1.2 IoT: Configure access rights

16555

The access rights define which instance may read and / or write the parameter data, process data and event/diagnostic messages.

In order to configure the access rights to the IO-Link master:

- ▶ Select [IoT] menu.
- > The menu page shows the current settings.
- ▶ Set the following parameters as required:

Name	Description	Possible values	
[Access Rights]	The access rights to the parameter data, process data and the event/diagnostic messages of the IO-Link master as well as the connected IO-Link devices	[Modbus TCP + IoT]	▪ Modbus TCP and IoT Core have read and write access rights to parameters and process data ▪ Modbus TCP and <IoT Core> have read access rights to events/alarms
		[Modbus TCP + IoT (read-only)]	▪ Modbus TCP has read and write access rights to parameters and process data ▪ Modbus TCP has read access rights to events/alarms ▪ IoT Core only has read access rights to parameters, process data and events/alarms
		[IoT only]	▪ IoT Core has read and write access rights to parameters and process data ▪ IoT has read access rights to events/alarms ▪ Modbus TCP has no access rights

- ▶ Save changed values on the device.



Parameter [Access Rights]:

Different parameter settings in the Modbus TCP projection software and the IoT applications can result in undesired system behaviour. The set values of the Modbus TCP projection software apply.



Changes of the parameter [Access Rights] are only effective after restarting the device.

To activate the changed access rights:

- ▶ **Firmware: Reboot the device** (→ p. [34](#))

8.1.3 IoT: Configure IP settings

17713

For access to the IO-Link master via the IT infrastructure the user has to set the IP settings of the IoT port.



To configure the IP settings with DHCP, a DHCP server has to be active in the IT network. If no DHCP server can be reached in the IT network, an IP address is automatically assigned to the IoT port with the Zeroconfig protocol (address range: → Factory settings).

To configure the IP settings of the IoT port:

- ▶ Select [IoT] menu.
- > The menu page shows the current settings.
- ▶ Set the following parameters as required:

Name	Description	Possible values	
[DHCP]	Activate/deactivate the DHCP client of the device	[Static IP]	IP settings were set by the user
		[DHCP]	IP settings are set by a DHCP server in the network.
[IP address]*	IP address of the IoT port	Factory setting: 169.254.X.X	
[Subnet mask]*	Subnet mask of the Ethernet network	Factory setting: 255.255.0.0	
[Default gateway IP address]*	IP address of the network gateway	Factory setting: 0.0.0.0	
[MAC address]	MAC address of the IoT port	The value is firmly set.	

* ... can only be edited if parameter [DHCP] = [Static IP]

- ▶ Save changed values on the device.

8.1.4 IoT: Configure the interface to the LR SMARTOBSERVER

16552

To enable data transfer between the device and the LR SMARTOBSERVER monitoring software, the LR SMARTOBSERVER monitoring software interface has to be configured.

- ▶ Select [IoT] menu.
- > The menu page shows the current settings.
- ▶ Set the following parameters as required:

Name	Description	Possible values	
[IP address LR SMARTOBSERVER]	IP address of the PC on which the LR SMARTOBSERVER is installed.	Factory setting: 255.255.255.255	
[Port LR SMARTOBSERVER]	Port number that is used to send process data to the LR SMARTOBSERVER	0 ... 65535	Factory setting: 35100
[Interval LR SMARTOBSERVER]	Cycle time for the transfer of the process data to the LR SMARTOBSERVER (value in milliseconds)	[Off]	no transfer
		500 ... 2147483647	500 ms ... 2147483647 ms
[Application Tag]	Source identifier of the IO-Link master in the structure of the LR SMARTOBSERVER (String32)	Factory setting: AL1340	



After changing the parameter [Port LR SMARTOBSERVER] or [Application Tag], it may take 120 seconds before the device establishes a new TCP connection.

To prevent the delay:

- ▶ Reboot the device after the parameter change.
- ▶ Save changed values on the device.

8.1.5 Fieldbus: configure Modbus TCP port

12284



The configuration of the IP settings of the fieldbus port is only possible via LR DEVICE.

To configure the fieldbus port:

- Select [Fieldbus] menu.
- > The menu page shows the current settings.
- Set the following parameters as required:

Name	Description	Possible values	
[DHCP]	Activate/deactivate the DHCP client of the device	[Static IP]	IP parameters are set by the user
		[DHCP]	IP parameters are set by a DHCP server in the network.
		[BOOTP]	IP parameters are set via the Bootstrap Protocol (BOOTP)
[IP address]*	IP address of the Modbus TCP port	Factory setting: 192.168.1.250	
[Subnet mask]*	Subnet mask of the IP network	Factory setting: 255.255.255.0	
[Default gateway IP address]*	IP address of the gateway	Factory setting: 0.0.0.0	
[MAC address]	MAC address of the Modbus TCP interface	The value is firmly set.	
[Fieldbus firmware]	Firmware version of the Modbus TCP stack	e.g. 2.6.0.5	
[Process data length]	Length of the process input data and process output data per IO-Link port	2 bytes input 2 bytes output	2 bytes input data, 2 bytes output data
		4 bytes input 4 bytes output	4 bytes input data, 4 bytes output data
		8 bytes input 8 bytes output	8 bytes input data, 8 bytes output data
		16 bytes input 16 bytes output	16 bytes input data, 16 bytes output data
		32 bytes input 32 bytes output	32 bytes input data, 32 bytes output data
[Swap]	Sequence of bytes in the data word	off	as Array of Bytes
		on	as integer16 value; when process data is updated, bytes will be exchanged

* ... can only be edited if parameter [DHCP] = [Static IP]

- Save changed values on the device.

8.1.6 IO-Link ports: Activate data transfer to the LR SMARTOBSERVER

16551

The user can decide separately for each IO-Link port if the process data of the connected IO-Link devices should be transferred to the LR SMARTOBSERVER.



To transfer process data the interfaces to the LR SMARTOBSERVER have to be correctly configured (→ **IoT: Configure the interface to the LR SMARTOBSERVER** (→ p. [28](#))).

To activate / deactivate data transfer:

- ▶ Select [Port x] menu (x = 1...4).
- > The menu page shows the current settings.
- ▶ Set the following parameters as required:

Name	Description	Possible values	
[Transmission to LR SMARTOBSERVER]	Transfer of process data of the connected IO-Link device to LR SMARTOBSERVER	[Disabled]	Process data is not transferred
		[Enabled]	Process data is transferred

- ▶ Save changed values on the device.

8.1.7 IO-Link ports: Configure operating mode

17439

The IO-Link ports X01...X04 of the device support the following operating modes:

- Digital input (DI): binary input signal at pin 4 (C/Q) of the IO-Link port
- Digital output (DO): binary output signal at pin 4 (C/Q) of the IO-Link port
- IO-Link: IO-Link data transfer via pin 4 (C/Q) of the IO-Link port

The user can set the operating mode separately for each IO-Link port.

To set the operating mode of an IO-Link port:

- Select [Port x] menu (x = 1...4).
- > The menu page shows the current settings.
- Set the following parameters as required:

Name	Description	Possible values	
[Mode]	Operating mode of the IO-Link port	[Disabled]	Port deactivated
		[DI]	Operation as digital input
		[DO]	Operation as digital output
		[IO-Link]	Operation as IO-Link interface
[Cycle time actual]**	Current cycle time of the data transfer between IO-Link master and IO-Link device on the port (value in microseconds)	Parameter can only be read	
[Cycle time preset]*	Cycle time of the data transfer between the IO-Link master and the IO-Link device at the port (value in microseconds)	0	The device automatically sets the fastest possible cycle time.
		1	1 microsecond
		...	...
		132800	132800 microseconds
[Bitrate]**	Current transmission rate of the data transfer between the IO-Link master and the IO-Link device on the port	Parameter can only be read	

* ... Parameter only available if [Mode] = [IO-Link]

** ... Parameter only visible if the IO-Link device is connected to the IO-Link port.

- Save changed values on the device.

8.1.8 IO-Link ports: Set the device validation and data storage

17945

In the operating mode "IO-Link" the user can set the behaviour of the IO-Link port with regard to device validation and the storage / restoration of the parameter data of the connected IO-Link device.

To configure the device validation and the data storage:

- Select [Port x] menu (x = 1...4).
- > The menu page shows the current settings.
- Set the following parameters as required:

Name	Description	Possible values	
[Validation / Data Storage]	Supported IO-Link standard and behaviour of the device during connection of a new IO-Link device on port x (x = 1...4)	[No check and clear]	▪ No verification of the vendor ID and device ID ▪ No data storage
		[Type compatible V1.0 device]	▪ IO-Link device is compatible with the V1.0 IO-Link standard ▪ Verification whether it is an IO-Link device of the same type (validation via vendor ID and device ID) ▪ No data storage
		[Type compatible V1.1 device]	▪ IO-Link device is compatible with the V1.1 IO-Link standard ▪ Verification whether it is an IO-Link device of the same type (validation via vendor ID and device ID) ▪ No data storage
		[Type compatible V1.1 device with Backup + Restore]	▪ IO-Link device is compatible with the V1.1 IO-Link standard ▪ Verification whether it is an IO-Link device of the same type (validation via vendor ID and device ID) ▪ The IO-Link master saves the parameter values of the connected IO-Link device; modifications of the parameter values are also saved (observe the note!) ▪ When connecting an IO-Link device with factory settings, the parameter values stored in the IO-Link master are restored automatically on the IO-Link device.
		[Type compatible V1.1 device with Restore]	▪ IO-Link device is compatible with the V1.1 IO-Link standard ▪ Verification whether it is an IO-Link device of the same type (validation via vendor ID and device ID) ▪ The IO-Link master saves the parameter values of the connected IO-Link device once. ▪ When connecting an IO-Link device with factory settings, the parameter values stored in the IO-Link master are restored automatically on the IO-Link device.
[Vendor ID]	ID of the manufacturer that is to be validated	0 ... 65535	Factory setting: 0 ifm electronic: 310
[Device ID]	ID of the IO-Link device that is to be validated	0 ... 16777215	Factory setting: 0

- Save changed values on the device.

8.1.9 IO-Link ports: set fail-safe values

11752

In case the Modbus TCP connection is interrupted, fail-safe values can be assigned to the outputs of the IO-Link ports.

To set the fail-safe values of the IO-Link ports:

- ▶ select [Port x] menu (x = 1...4).
- > The menu page shows the current settings.
- ▶ Set the following parameters as required:

Name	Description	Possible values	
[Fail-safe digital out]	Fail-safe values for output (operating mode "DO")	Reset	Reset value (LOW)
		Old	hold old value
		Set	Set value (HIGH)
[Fail-safe IO-Link]	Fail-safe value for output (operating mode "IO-Link")	Off	no fail-safe value
		Reset	reset value
		Old	hold old value
		Pattern	provide sample

- ▶ Save changed values on the device.

8.1.10 Info: Show device information

12218

To read the general information of the ifm IO-Link master:

- ▶ Select [Info] menu.
- > The menu page shows the current settings.

Name	Description	Possible values
[Product code]	Article number of the IO-Link master	AL1340
[Device family]	Device family of the IO-Link master	IO-Link master
[Vendor]	Vendor	ifm electronic gmbh
[SW-Revision]	Firmware of the IO-Link master	
[HW revision]	Hardware version of the IO-Link master	
[Bootloader revision]	Bootloader version of the IO-Link master	
[Serial number]	Serial number	

8.1.11 Firmware: Reset device to factory settings

7209

When the IO-Link master is reset, all parameters are set to the factory settings:

To reset the device to factory settings:

- ▶ Select [Firmware] menu.
- > The menu page shows the current settings.
- ▶ Click on [Factory Reset] to reset the device.
- > LR DEVICE sets the device to the factory settings.

8.1.12 Firmware: Reboot the device

18105

When rebooting the device, all settings are kept.

To restart the AL1340:

- ▶ Select [Firmware] menu.
- > The menu page shows the current settings.
- ▶ Click on [Reboot] to reboot the device.
- > LR DEVICE reboots the ifm IO-Link master.

8.1.13 Configure IO-Link devices

11033

To configure the IO-Link devices connected to the device with the LR DEVICE parameter setting software:

Requirements:


- > IO-Link master is correctly installed and connected to the LR DEVICE parameter setting software.
- > The IO-Link device is correctly connected to the AL1340.
- > Operating mode of the IO-Link port is "IO-Link" (→ **IO-Link ports: Configure operating mode** (→ p. 31)).
- > IoT has write access rights to the IO-Link master (→ **IoT: Configure access rights** (→ p. 26)).

1 Select IO-Link master

- ▶ Start LR DEVICE.
- ▶ Update IODD file library
OR:
Import IODD file of the IO-Link device manually.
- ▶ Scan network for devices.
- > LR DEVICE detects IO-Link master.

2 Add IO-Link device

- ▶ Under [ONLINE]: Click on the required IO-Link master.
- > LR DEVICE automatically detects the IO-Link devices connected to the IO-Link master (e.g. ifm sensor KG5065).

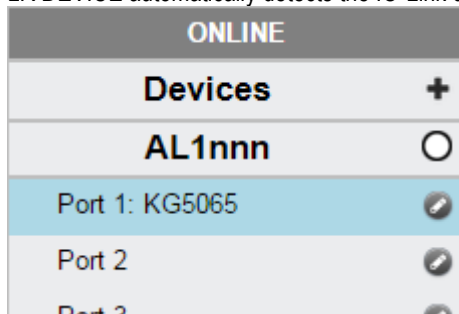

3 Configure IO-Link device

- ▶ Mouse click on the port to which the <IO> device is connected.
- > LR DEVICE reads and shows the current parameter values of the IO-Link device.
- ▶ Configure IO-Link device.



Information about the available parameters of the IO-Link device: → IO Device Description (IODD) of the IO-Link device

- ▶ Save the changed configuration on the IO-Link device.

8.2 Modbus TCP

Contents

Integrate the AL1340 into the Modbus project	36
Set IO-Link master and IO-Link ports.....	38
read input data of several IO-Link ports	39
Read input data of individual IO-Link ports	40
Write output data of several IO-Link ports.....	41
Write output data of individual IO-Link ports	42
Read diagnostic information and events	43
Read device information.....	44
Control IO-Link master	44
Configure IO-Link devices	44
Modbus TCP: Programmers' notes	45

11614

On the field bus side, the device can be configured with any Modbus TCP compatible projection software.

8.2.1 Integrate the AL1340 into the Modbus project

11754

The AL1340 provides the functionality of a Modbus-TCP slave. The user can integrate the IO-Link master via the profile of a generic Modbus-TCP slave to a fieldbus project.

The IO-Link master, the IO-Link Ports and the process data are configured via the Modbus register of the AL1340.

Example: Integrate IO-Link master in a CODESYS project

9612



Familiarise yourself with the following CODESYS functions!

- Modbus master:
→ Online help > Fieldbus support > Modbus configurator > Modbus master
- Modbus slave device:
→ Online help > Fieldbus support > Modbus configurator > Modbus slave device

Task: Integrate IO-Link master in a CODESYS project

Hardware:

- AC14 DL as Modbus-TCP master
- AL1340 as Modbus-TCP slave

Solution:

Preparation:

- Create CODESYS project with AC14 DL.

1 Create Modbus-TCP master

- In the device tree: Right-click on X8
- > Context menu appears.
- In the context menu: Select [Add Device...].
- > Dialogue window appears.
- Select the following settings:
 1. [Vendor]: Select [ifm electronic].
 2. [Device]: Select [Modbus_TCP_Master].
 3. [Name]: Enter a unique name.
- Click on [Add Device].
- > Device tree shows Modbus-TCP master as sub-node of the interface X8.

2 Create Modbus-TCP slave (AL1340)

- In the device tree: Right-click on the node of the added Modbus-TCP master
- In the context menu: Select [Add Device...].
- > Dialogue window appears.
- Select the following settings:
 1. [Vendor]: Select [ifm electronic].
 2. [Device]: Select [Modbus_TCP_Slave].
 3. [Name]: Enter a unique name
- Click on [Add Device].
- > Device tree shows AL1340 as sub-node of the Modbus-TCP master.

3 Configure Modbus-TCP slave

- In the following tabs, set the parameters as required:
 1. [General]
 2. [ModbusTCPSlave Parameters]

8.2.2 Set IO-Link master and IO-Link ports

17986

Register area for the access to the configuration of the IO-Link master: → **Configuration Area** (→ p. [74](#))

The area contains the following data:

- Access rights to the IO-Link master
- Data length of the IO-Link input and output data of all IO-Link ports
- Alignment of the bytes in a data word
- Port configuration of the IO-Link ports



- Observe the general rules for access to the Modbus registers (→ **Rules for accessing the Modbus register** (→ p. [45](#)))!

Several connected register areas can be written with one write command.

- When writing the registers, ensure that the transferred parameter data has the correct length!

Register area		Contents	Access
Start address	Length (words)		
8998	1	Access Rights; Process Data Length	r/w
8999	1	Byte Swap	r/w
9000	6	Port X01: Port Configuration	r/w
9006	6	Port X02: Port Configuration	r/w
9012	6	Port X03: Port Configuration	r/w
9018	6	Port X04: Port Configuration	r/w

r/w = read and write

In addition, the user can set the IO-Link ports of the AL1340 via the following acyclic commands:

- "Set Mode": → **Command 0x10 – set mode** (→ p. [90](#))
- "Set Validation ID / Data Storage": → **Command 0x20 – set validation ID / data storage** (→ p. [92](#))
- "Set Fail-safe Data Pattern": → **Command 0x30 – set fail-safe data pattern** (→ p. [94](#))

The commands use the process mechanisms of the acyclic command channel (→ **Use acyclic services** (→ p. [46](#))).

8.2.3 read input data of several IO-Link ports

10925

Register area for compact access to the input data of the IO-Link ports X01...X04 and X05...X04: →

Input Data (→ p. 79)

The area contains the following data:

- Combined digital inputs - pin 2 / pin 4 (DI) of the IO-Link ports X01...X04
- Status information of the IO-Link ports X01...X04
- Status information of the IO-Link devices in IO-Link ports X01...X04
- Combined input data - IO-Link of the IO-Link ports X01...X04



Observe the general rules for access to the Modbus registers (→ **Rules for accessing the Modbus register** (→ p. 45))!

The parameter "Invalid Data" indicates whether the read IO-Link input data is valid.

- Also read and evaluate the corresponding status information in addition to the input data of the ports!

Register area		Contents	Access
Start address	Length (words)		
197	1	Port X01...X04: Digital Input - Pin 2 / Pin 4 (DI)	r
198	1	Port X01...X04: Status Information IO-Link Ports	r
199	1	Port X01...X04: Status Information IO-Link Devices	r
	2n	Port X01...X04: Compact Input Data - IO-Link (4n bytes)	r

r = read only

n = [2,4,8,16,32]; is determined by parameters [Process Data Length] (→ **Configuration Area** (→ p. 74))

8.2.4 Read input data of individual IO-Link ports

18330

Register area for separate access to input data of the individual IO-Link ports: → **Single Port Access**
(→ p. 83)

The area contains the following data for each IO-Link port X01...X04:

- Digital input data at pin 2 / pin 4 (DI)
- Diagnostic and status information of the connected IO-Link devices
- Input data IO-Link



Observe the general rules for access to the Modbus registers (→ **Rules for accessing the Modbus register** (→ p. 45))!

The parameter "Invalid Data" indicates whether the read IO-Link input data is valid.

► Also read and evaluate the corresponding diagnostic information!

Register area		Contents	Access
Start address	Length (words)		
1000	1	Port X01: Digital Input - Pin 2 / Pin 4 (DI)	r
1001	1	Port X01: Diagnostic data	r
	n/2	Port X01: Input Data - IO-Link (n bytes)	r
2000	1	Port X02: Digital Input - Pin 2 / Pin 4 (DI)	r
2001	1	Port X02: Diagnostic data	r
	n/2	Port X02: Input Data - IO-Link (n bytes)	r
3000	1	Port X03: Digital Input - Pin 2 / Pin 4 (DI)	r
3001	1	Port X03: Diagnostic data	r
	n/2	Port X03: Input Data - IO-Link (n bytes)	r
4000	1	Port X04: Digital Input - Pin 2 / Pin 4 (DI)	r
4001	1	Port X04: Diagnostic data	r
	n/2	Port X04: Input Data - IO-Link (n bytes)	r

r ... read only

n = [2,4,8,16,32]; is determined by parameters [Process Data Length] (→ **Configuration Area** (→ p. 74))

8.2.5 Write output data of several IO-Link ports

13874

Register area for compact access to the output data of the IO-Link ports X01...X04: → **Output Data**
(→ p. 82)

The area contains the following data:

- Digital output data on <IOL_Klemme_Pin 2> of the IO-Link ports X01...X04
- IO-Link output data of the IO-Link ports X01...X04



- Observe the general rules for access to the Modbus registers (→ **Rules for accessing the Modbus register** (→ p. 45))!

Several connected register areas can be written with one write command.

The IO-Link master writes only the outputs in "Compact Output Data" that are completely covered by the transferred output data.

Example: The configured process data length is 4 bytes. If all in all 5 words have been transferred to register 600, the IO-Link master writes the outputs X01 (words 1+2) and X02 (words 3+4). The output X03 is not written.

- When writing the IO-Link outputs, ensure that the output data has the correct length!

The output data is invalid in the following situations:

- no Ethernet cable connected
- PLC has terminated the connection
- Connection to the PLC has a timeout

Register area		Contents	Access
Start address	Length (words)		
599	1	Port X01...X04: Digital Output - Pin 4 (DO)	r/w
600	2n	Port X01...X04: Compact Output Data IO-Link (4n bytes)	r/w

r/w = read and write

n = [2,4,8,16,32]; is determined by parameters [Process Data Length] (→ **Configuration Area** (→ p. 74))

8.2.6 Write output data of individual IO-Link ports

12554

Register area for separate access to output data of individual IO-Link ports: → **Single Port Access**
(→ p. 83)

The area contains the following data for each IO-Link port X01...X04:

- Digital output data at pin 2>
- Digital output data at pin 4 (DO)
- IO-Link output data



- Observe the general rules for access to the Modbus registers (→ **Rules for accessing the Modbus register** (→ p. 45))!

With one write command, several connected register areas of a IO-Link port can be written (e. g. registers 1100 and 1101).

- When writing outputs, ensure that the length of the transferred output data corresponds with the configured process data length.

The output data is invalid in the following situations:

- no Ethernet cable connected
- PLC has terminated the connection
- Connection to the PLC has a timeout

Register area		Contents	Access
Start address	Length (words)		
1100	1	Port X01: Digital Output - Pin 4 (DO)	r/w
1101	n/2	Port X01: Output Data IO-Link (n bytes)	r/w
2100	1	Port X02: Digital Output - Pin 4 (DO)	r/w
2101	n/2	Port X02: Output Data IO-Link (n bytes)	r/w
3100	1	Port X03: Digital Output - Pin 4 (DO)	r/w
3101	n/2	Port X03: Output Data IO-Link (n bytes)	r/w
4100	1	Port X04: Digital Output - Pin 4 (DO)	r/w
4101	n/2	Port X04: Output Data IO-Link (n bytes)	r/w

r/w = read and write

n = [2,4,8,16,32]; is determined by parameters [Process Data Length] (→ **Configuration Area** (→ p. 74))

8.2.7 Read diagnostic information and events

7251

Register area for the access to diagnostic information of the IO-Link ports X01...X04: → **Diagnostic data** (→ p. [76](#))

The area contains the following data:

- Status/error flags for port configuration
- Vendor ID / device ID of the connected IO-Link devices
- Events and corresponding event codes



► Observe the general rules for access to the Modbus registers (→ **Rules for accessing the Modbus register** (→ p. [45](#)))!



A maximum of 3 events per IO-Link port are displayed.

One-time events will be deleted after a minimum of 10 s (Event Single Shot).

Occurring events indicate the time of the error occurrence (event appears). If the error cause disappears, this is indicated by a further event (event disappears). Both event types always occur in pairs.

Register area		Contents	Access
Start address	Length (words)		
30	10	Port X01: Diagnostic Data	r
40	10	Port X02: Diagnostic Data	r
50	10	Port X03: Diagnostic Data	r
60	10	Port X04: Diagnostic Data	r

r = read only

Additional diagnostic and status details are provided in the following register areas:

- "Input Data" area: → **read input data of several IO-Link ports** (→ p. [39](#))
- "Single Port Access" area: → **read input data of several IO-Link ports** (→ p. [39](#))

8.2.8 Read device information

11039

The user can read device information using the FC43.

The AL1340 supports the following data records ("Read Device ID code"):

- Basic Device Identification (0x01): contained data objects: → Modbus TCP specification
- Regular Device Identification (0x02): contained data objects: → Modbus TCP specification
- Specific Device Identification (0x04): contained data objects:

Object ID	Object name / description	Data type	Possible values
0x00	VendorName	ASCII string	ifm electronic
0x01	ProductCode	ASCII string	1340
0x02	MajorMinorRevision	ASCII string	e.g. V1.001
0x03	VendorURL	ASCII string	www.ifm.com
0x04	ProductName	ASCII string	IO-Link Master DL MOD 4P IP67
0x05	ModelName	ASCII string	1340
0x06	UserApplicationName	ASCII string	MODBUS IO-Link master

8.2.9 Control IO-Link master

23382

The user can control the IO-Link master using the following acyclic commands:

- "Reboot": → **Command 0x40 – Reboot** (→ p. [96](#))
- "Factory Reset": → **command 0x50 – Factory Reset** (→ p. [98](#))

The commands use the process mechanisms of the acyclic command channel (→ **Use acyclic services** (→ p. [46](#))).

8.2.10 Configure IO-Link devices

9031

The IO-Link master supports the configuration of the connected IO-Link devices from the Modbus TCP projection software. The parameters of an IO-Link device are set via IO-Link index and subindex. The number of the configurable parameters depends on the connected IO-Link device.



Available parameters of the IO-Link devices: → IO Device Description (IODD) of the IO-Link device

The user can read and write IO-Link index and subindex using the following methods:

- Acyclic communication: → **Use acyclic services** (→ p. [46](#))

8.2.11 Modbus TCP: Programmers' notes

Contents


Rules for accessing the Modbus register	45
Supported function codes	46
Use acyclic services	46

17965

Rules for accessing the Modbus register

13916

The Modbus table of the AL1340 is subdivided into areas.

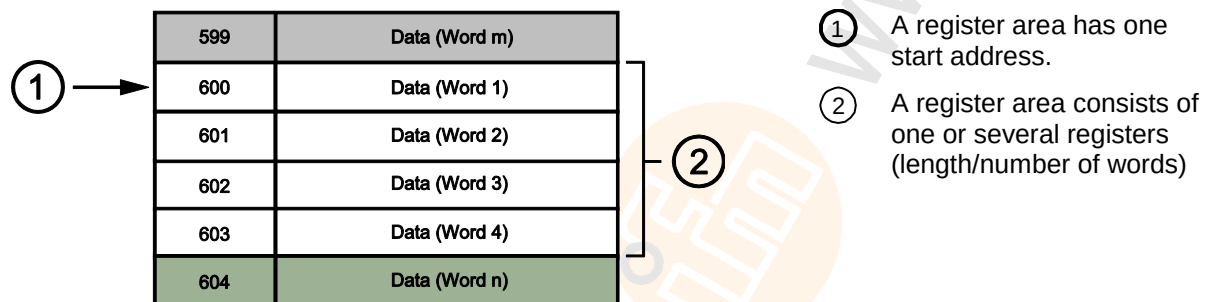

The following general rules apply for access to the Modbus registers:

- ▶ Only read or write Modbus registers word by word.
- ▶ Only use the valid function codes to read or write Modbus registers (→ **Supported function codes** (→ p. 46)).
- ▶ Only implement read and write access via valid start addresses. Access via an invalid start address generates an error.

Example:

Task: Write IO-Link output data of the IO-Link port X02 (process data length n = 2 bytes)

Solutions:

Right:

- Version 1: "Output Data" area (→ **Output Data** (→ p. 82))
 - ▶ In the Compact Output Block of the ports X01...X04, read the registers 600...603 (FC03, start address: 600, length: 4 words)
 - ▶ Change read values of the register 601.
 - ▶ In the Compact Output Block of the ports X01...X04, write the registers 600...603 (FC16, start address: 600, length: 4 words)
- Version 2: "Single Port Access" area (→ **Single Port Access** (→ p. 83))
 - ▶ Write the required value into register 2101 (FC06, start address: 2101)

Wrong:

- ▶ In the Compact Output Block of the ports X01...X04, write the register 601 (FC06, start address: 601, length: 1 word)

Supported function codes

13676

The AL1340 supports the following function codes for read and/or write access to the Modbus register:

Function code	Function name / description
3 (0x03)	Read Multiple Registers
4 (0x04)	Read Input Register
6 (0x06)	Write Single Register
16 (0x10)	Write Multiple Registers
23 (0x17)	Read/Write Multiple Registers
43 (0x2B)	Read Device Identification



Detailed information about the function codes: → MODBUS-TCP specification

Use acyclic services

11046

The AL1340 has a command interface to execute acyclic commands. A cyclic command consists of a request and a response.

Register area		Contents	Access
Start address	Length (words)		
500	22	Command Request Channel (Fieldbus PLC >>> IO-Link Master)	r/w
0	22	Command Response Channel (IO-Link Master >>> Fieldbus PLC)	r

Structure of the acyclic command channel: → **Acyclic Command Channel** (→ p. 85)

General procedure of the acyclic communication:

1 Write Command Request

- ▶ In the request channel: Write required data (except for [User ID]).
- > Write required [User ID].
- > Changed [User ID] signals a new command.
- > In the response channel: registers are reset to 0.
- > Acyclic command channel is blocked.
- > Processing of the command is started.

2 Check status

- ▶ In the response channel: Check [Command Status] register.
- > If [Command Status] <> 0: continue with step 3
- > If [Command Status] == 0: repeat step 2.

3 Read Command Response

- ▶ In the response channel: read returned user data.
- > Acyclic command channel is released.

8.3 IoT Core

Contents

Configure IoT port.....	48
Configure the fieldbus port	49
Configure IO-Link ports	49
Set application identification	50
Read / write cyclic process data	50
Read diagnostic data	50
Read device information	51
Read information about IO-Link devices	51
Configure IO-Link devices	52
Control IO-Link master	52
Examples	53
Programmers' notes	57

17302



The user can access the IoT Core only via IoT port X23 of the ifm IO-Link master.
General notes on the ifm IoT Core: → **Programmers' notes** (→ p. [57](#))

The AL1340 is of type device (→ **Overview: IoT types** (→ p. [104](#))).

It has the following sub-structures:

Structure	Contents
processdatamaster	- Diagnostic data (temperature, voltage, current) - Status of the current / voltage supply
deviceinfo	Device identification
timer[1]	Subscribe to data
timer[2]	Subscribe to data
iotsetup	Parameters of the IoT port (access rights, IP settings, IP settings of the LR SMARTOBSERVER)
fieldbussetup	Parameters of the fieldbus port (IP settings, device identification in fieldbus projection software)
iolinkmaster/port[n]	- Parameters of the IO-Link port (operating mode, transmission rate, cycle time, validation and data storage) - Digital input data (pin 2) - Port event
iolinkmaster/port[n]/iolinkdevice	- Status information IO-Link devices on the IO-Link port - Device information of the IO-Link device - Process data on input/output - Application-specific identification
firmware	- Firmware of the device - Reset devices - Reboot the device

The user can request the available data points and services in the substructures with `gettree`(→ **Service: gettree** (→ p. [105](#))). The service returns the device description as tree structure. It shows the services supported by a data point: In the sub-element "subs" each data point lists all services that can be applied to it.

8.3.1 Configure IoT port

16540

The parameters of the IoT port X23 are saved in the `iotsetup` substructure. The user can access the following data points:

Name	Description	Access
<code>iotsetup/accessrights</code>	Access rights to the IO-Link master 0 = Modbus TCP + IoT 1 = Modbus TCP + IoT (read only) 2 = IoT only	rw
<code>iotsetup/smobip</code>	IP address of the LR SMARTOBSERVER	rw
<code>iotsetup/smobport</code>	Port number of the LR SMARTOBSERVER	rw
<code>iotsetup/smobinterval</code>	Cycle time for (value in milliseconds)	rw
<code>iotsetup/network/dhcp</code>	Configuration of the IP settings of the IoT port 0 = STATIC_IP/OFF 1 = DHCP/ON	rw
<code>iotsetup/network/ipaddress</code>	IP address of the IoT port	rw
<code>iotsetup/network/subnetmask</code>	Subnet mask of the network segment	rw
<code>iotsetup/network/ipdefaultgateway</code>	IP address of the network gateway	rw

rw ... read and write



Data point [`iotsetup/accessrights`]:

Different parameter settings in the Modbus TCP projection software and the IoT applications can result in undesired system behaviour. The set values of the Modbus TCP projection software apply.

8.3.2 Configure the fieldbus port

11747

The parameters of the fieldbus port X21/X22 are saved in the `fieldbussetup` substructure. The user can access the following data points:

Last name	Description	Access
<code>fieldbussetup/fieldbusfirmware</code>	Firmware version of the IO-Link master	r
<code>fieldbussetup/network/macaddress</code>	MAC address of the fieldbus port	r
<code>fieldbussetup/network/ipaddress</code>	IP address of the fieldbus port	rw
<code>fieldbussetup/network/subnetmask</code>	Subnet mask of the network segment	rw
<code>fieldbussetup/network/ipdefaultgateway</code>	IP address of the network gateway	rw
<code>fieldbussetup/network/dhcp</code>	Activate/deactivate the DHCP client of the device	rw
<code>fieldbussetup/connectionstatus</code>	Status of the connection to the Modbus TCP network	r
<code>fieldbussetup/independentmode/ processdataconfiguration</code>	Length of the process input data and process output data	rw
<code>fieldbussetup/independentmode/swap</code>	Arrangement of the bytes	r/w
<code>fieldbussetup/independentmode/port[n]/ failsafedigital</code>	Fail-safe value for the digital output - Pin 4 (DO)	r/w
<code>fieldbussetup/independentmode/port[n]/ failsafeiolink</code>	Fail-safe value for output data IO-Link	r/w

n ... 1...4

r = read only

rw ... read and write

8.3.3 Configure IO-Link ports

16454

Parameters of the IO-Link ports of the IO-Link master are saved in the `iolinkmaster/port[n]` substructure. There are the following data points for each IO-Link-Port X01...X04 :

Name	Description	Access
<code>iolinkmaster/port[n]/senddatatosmob</code>	Send process data to LR SMARTOBSERVER	rw
<code>iolinkmaster/port[n]/mode</code>	Operating mode of the IO-Link port	rw*
<code>iolinkmaster/port[n]/mastercycletime_preset</code>	Cycle time of the data transfer at the IO-Link port (value in microseconds)	rw
<code>iolinkmaster/port[n]/mastercycletime_actual</code>	Current cycle time of the data transfer at the IO-Link port (value in microseconds)	r
<code>iolinkmaster/port[n]/validation_datastorage_mode</code>	Response of the IO-Link port when a new IO-Link device is connected	rw*
<code>iolinkmaster/port[n]/validation_vendorid</code>	IO-Link ID of the manufacturer that is to be validated	rw*
<code>iolinkmaster/port[n]/validation_deviceid</code>	IO-Link ID of the device that is to be validated	rw*

n ... 1...4)

r = read only

rw ... read and write

* ... only available if Modbus TCP PLC is separated from the device

8.3.4 Set application identification

16580

The application name of the IO-Link master is saved in the `devicetag` substructure. The user can access the following data points:

Name	Description	Access
<code>devicetag/applicationtag</code>	Name of the IO-Link master in the fieldbus project (application tag)	rw

rw ... read and write

8.3.5 Read / write cyclic process data

10994

Cyclic process data of the IO-Link ports X01...X04 is saved in the `iolinkmaster/port[n]` substructure. The user can access the following data points:

Name	Description	Access
<code>iolinkmaster/port[n]/pin2in</code>	Digital input signal to pin 2 of the IO-Link port n	r
<code>iolinkmaster/port[n]/iolinkdevice/pdin</code>	IO-Link input signal at pin 4 of the IO-Link port n	r
<code>iolinkmaster/port[n]/iolinkdevice/pdout</code>	IO-Link output signal at pin 4 of the IO-Link port n	rw*

n ... 1...4

r = read only

rw ... read and write

* ... only available if Modbus TCP PLC is separated from the device

8.3.6 Read diagnostic data

16571

Diagnostic data is saved in the `processdatamaster` substructure. The user can access the following data points:

Name	Description	Access
<code>processdatamaster/temperature</code>	Temperature of the IO-Link master (value in °C)	r
<code>processdatamaster/voltage</code>	Voltage applied (value in V)	r
<code>processdatamaster/current</code>	Current (value in A)	r
<code>processdatamaster/supervisionstatus</code>	Diagnostic information of the device supply 0 = no error 1 = short circuit 2 = overload 3 = undervoltage	r

r = read only

8.3.7 Read device information

17133

Device information is saved in the deviceinfo substructure. The user can access the following data points:

Name	Description	Access
deviceinfo/productcode	Article Number	r
deviceinfo/vendor	Vendor	r
deviceinfo/devicefamily	Device family	r
deviceinfo/hwrevision	Hardware revision	r
deviceinfo/serialnumber	Serial number	r
deviceinfo/swrevision	Firmware version	r
deviceinfo/bootloaderrevision	Bootloader revision	r
deviceinfo/extensionrevisions		r

r = read only

Additional information about the AL1340 can be read with the getidentity service (→ **Service: getidentity** (→ p. 108)).

8.3.8 Read information about IO-Link devices

16553

Information about an IO-Link device connected via an IO-Link port is saved in the iolinkmaster/port[n]/iolinkdevice/ substructure. The user can access the following data points:

Name	Description	Access
iolinkmaster/port[n]/iolinkdevice/status	Status of the connected IO-Link device 0 = SENSOR_NOT_CONNECTED 1 = SENSOR_IN_PREOPERATE 2 = SENSOR_IN_OPERATE 3 = SENSOR_WRONG	r
iolinkmaster/port[n]/iolinkdevice/vendorid	IO-Link ID of the manufacturer	r
iolinkmaster/port[n]/iolinkdevice/deviceid	IO-Link ID of the IO-Link device	r
iolinkmaster/port[n]/iolinkdevice/productname	Product name of the IO-Link device	r
iolinkmaster/port[n]/iolinkdevice/serial	Serial number of the IO-Link device	r
iolinkmaster/port[n]/iolinkdevice/applicationspecifictag	Device-specific identification (application tag)	rw

n ... 1...4

r ... read only

rw ... read and write

8.3.9 Configure IO-Link devices

11002

The ifm IoT Core supports the configuration of the connected IO-Link devices. A parameter is accessed via IO-Link index and subindex (→ IO Device Description (IODD) of the device)

The user can use the following services:

Service	Description	Access
iolinkmaster/port[n]/iolinkdevice/iolreadacyclic	Acyclic reading of a parameter of an IO-Link device	r
iolinkmaster/port[n]/iolinkdevice/iolwriteacyclic	Acyclic writing of a parameter of an IO-Link device	rw

n ... 1...4

r = read only

rw ... read and write

8.3.10 Control IO-Link master

17963

The device can be controlled via the following services:

Service	Description	Access
firmware/version	Firmware version of the IO-Link master	r
firmware/reboot	Reboot IO-Link master	rw
firmware/factoryreset	Reset IO-Link master to factory settings	rw

r = read only

rw ... read and write

8.3.11 Examples

Contents	
Example: Read process data of an IO-Link device	53
Example: Read several parameter values of the IO-Link master simultaneously.....	54
Example: Change name of the IO-Link master	54
Example: read the parameter value of an IO-Link device	55
Example: change the parameter value of an IO-Link device	55
Example: Subscribe to event.....	56

16577

Example: Read process data of an IO-Link device

16574

Task: Read the current measured value of the ifm temperature sensor TN2531 at IO-Link port X06

Solution: Read the data point for the process input data with the `getdata` service.

- **Request object:**

```
{
  "code":10,
  "cid":4711,
  "adr":"/iolinkmaster/port[6]/iolinkdevice/pdin/getdata"
}
```

- **Return object:**

```
{
  "cid":4711,
  "data":{"value": "03C9"},
  "code":200
}
```

The return value is given in hexadecimal format. Besides the temperature value the return value comprises additional information (→ IO Device Description (IODD) of the sensor). The temperature value is shown in bits 2 to 15.

0x03C9 = 0b1111001001

Temperature value: 0b11110010 = 242

Therefore: The current temperature value is 24.2 °C.

Example: Read several parameter values of the IO-Link master simultaneously

17310

Task: The following current values are to be read by the IO-Link master. Temperature, serial number

Solution: Read the current parameter values using the getdatamult (data point temperature service: /processdatamaster/temperature; Data point serial number: /deviceinfo/serialnumber)

- **Request object:**

```
{
  "code":10,
  "cid":4711,
  "adr":"/getdatamulti",
  "data":{"datatosend":["/processdatamaster/temperature","/deviceinfo/serialnumber"]}
}
```

- **Return object:**

```
{
  "cid":4711,
  "data":{"processdatamaster/temperature":{"code":200,"data":44},
  "deviceinfo/serialnumber":{"code":200,"data":"000174210147"}},
  "code":200
}
```

Example: Change name of the IO-Link master

10987

Task: Set the name of the IO-Link master for the representation in the LR SMARTOBSERVER to AL1340.

Solution: Change the parameter [Application Tag] with the setdata service to the value [AL1340].

The data point of the parameter [Application Tag] in the device description object is /devicetag/applicationtag.

- **Request object:**

```
{
  "code":10,
  "cid":4711,
  "adr":"/devicetag/applicationtag/setdata",
  "data":{"newvalue":"AL1340"}
}
```

- **Return object:**

```
{
  "cid":4711,
  "code":200
}
```

Example: read the parameter value of an IO-Link device

16546

Task: Read the serial number of the ifm temperature sensor TN2531 at IO-Link port X02

Solution: Read the serial number with the `iolreadacyclic` service from the IO-Link device (index: 21, subindex: 0)

- **Request object:**

```
{
  "code":10,
  "cid":4711,
  "adr":"/iolinkmaster/port[2]/iolinkdevice/iolreadacyclic",
  "data":{"index":21,"subindex":0}
}
```

- **Return object:**

```
{
  "cid":4711,
  "data":{"value":"4730323134323830373130"},
  "code":200
}
```

The returned value is given in hexadecimal format. The conversion of the HEX value in a STRING value is: G0214280710

Example: change the parameter value of an IO-Link device

16578

Task: Set the output configuration OUT1 of the ifm temperature sensor TN2531 at IO-Link port X02 to the value "Hnc / hysteresis function, normally closed".

Solution: Change the parameter [ou1] of the sensor to the value 4 using the `iolwriteacyclicdata` service. The parameter can be accessed via IO-Link index 580, subindex 0 (→ IO-Link description of the sensor).

- **Request object:**

```
{
  "code":10,
  "cid":4711,
  "adr":"/iolinkmaster/port[2]/iolinkdevice/iolwriteacyclic",
  "data":{"index":580,"subindex":0,"value":"34"}
}
```

The value has to be given in hexadecimal format. The conversion of the STRING value in a HEX value is: 34.

- **Response object:**

```
{
  "cid":4711,
  "code":200
}
```

Example: Subscribe to event

17946

Task: The current values of the following parameters should be sent regularly to a network server with IP address 192.168.0.4: product name of the IO-Link device at IO-Link port X02, cyclic input data of the IO-Link device at IO-Link port X02 and the operating temperature of the IO-Link master.

Solution: Subscribe to the required data using the subscribe service.

- **Request object:**

```
{
  "code":80,
  "cid":4711,
  "adr":"/timer[1]/counter/datachanged/subscribe",
  "data":{"callback":"192.168.0.44/temp",
  "datatosend":[
    "/iolinkmaster/port[2]/iolinkdevice/productname",
    "/iolinkmaster/port[2]/iolinkdevice/pdin",
    "/processdatamaster/temperature"]
  }
}
```

Additionally the interval of the timer[1] has to be set to a value between 500 ms and 2147483647 ms.

- **Request object:**

```
{
  "code":10,
  "cid":4712,
  "adr":"/timer[1]/interval/setdata",
  "data":{"newvalue":500}
}
```

- **Response object**

```
{
  "cid":4712,
  "code":200
}
```


8.3.12 Programmers' notes

Contents

ifm IoT Core: General information	57
Device description	57
Access ifm-IoT Core	58
IoT Core: Diagnostic codes	60

10989

ifm IoT Core: General information

16576

The DataLine device family has one IoT Core. This component allows the user to address the IO-Link master from IT networks and to integrate it into Internet-of-Things applications.

The IoT Core provides the user with the following functions:

- Control device
- Monitoring of process data
- Read / write parameters of the IO-Link master
- Read / write parameters of the connected IO-Link devices
- Collect diagnostic data

Device description

14411

The IoT Core creates a device description on the AL1340. This device description is a structured, machine-readable data object in JSON format. All current values of parameters, diagnostic data and device information are mapped in this data object. The user can access this data object from IT networks.

The complete device description can be read using the gettree (→ service **Service: gettree** (→ p. [105](#))).

Access ifm-IoT Core

17561



To activate the changes of the parameter values the IoT Core must have the respective write access rights to the IO-Link master (→ Parameter [Access Rights]).

The ifm IoT Core supports HTTP requests. The following request methods are available.

GET method

21300

Using the GET method the user has read access to a data point.

The syntax of the request to the IoT Core is:

ip/datapoint/service

Description	Description
ip	IP address of the IoT port X23 of the IO-Link master
data_point	Data point which is to be accessed
service	Service

The syntax of the return of the IoT Core is:

```
{  
  "cid":id,  
  "data":{"value":resp_data},  
  "code":err_code  
}
```

parameter	Description
id	Correlation ID for the assignment of request and return
resp_data	Value of the data point; depending on the data type of the data point
err_code	Error code (→ IoT Core: Diagnostic codes (→ p. 60))

Example:

Request (via browser): 192.168.0.250/devicetag/applicationtag/getdata

Return: {"cid":-1,"data":{"value":"AL1340"}, "code":200}

POST method

16548

Using the POST method the user has read and write access to a data point. A form with the required information is transferred to the IP address of the IO-Link master (IoT port X23).

The syntax of the request to the IoT Core is:

```
{
  "code":code_id,
  "cid":id,
  "adr":"data_point/service",
  "data":{"req_data"}
}
```

Parameter	Description
code_id	ID of the service class
	10 Request
	11 Transaction
	80 Event
id	Correlation ID for the assignment of request and return
data_point	Data point which is to be accessed
service	Service to be performed (→ Overview: IoT services (→ p. 105))
req_data	Data to be transferred to the IoT Core (e.g. new values); indication optional (depending on the service)

The syntax of the return of the IoT Core is:

```
{
  "cid":id,
  "data":{"value":resp_data},
  "code":err_code
}
```

Parameter	Description
id	Correlation ID for the assignment of request and return
resp_data	Value of the data point; depending on the data type of the data point
err_code	Error code (→ IoT Core: Diagnostic codes (→ p. 60))

Example:

Request: {"code":10,"cid":4711, "adr":"devicetag/applicationtag/getdata"}

Return: {"cid":4711,"data":{"value":"AL1340"}, "code":200}

IoT Core: Diagnostic codes

17437

The ifm IoT Core uses the following diagnostic codes:

Code	Description
200	OK
230	OK; but reboot required
231	OK, but block request not yet terminated
232	Data accepted but changed internally
233	IP settings changed; application has to reboot the device; Wait for min. 1 second before the device is rebooted
400	Invalid request
403	Unauthorised access
500	Internal server fault
503	Service not available
530	Requested data is invalid
531	IO-Link error
532	Error in PLC

9 Operation

Contents

Identify device.....	61
Firmware update.....	62
Replace IO-Link device	63

22368

9.1 Identify device

16568

In the online mode, the user can identify the device using the RDY and IoT status LEDs.

- ▶ Start LR DEVICE.
- ▶ Scan network for devices.
- > LR DEVICE recognises the IO-Link master.
- ▶ Click on the selection field next to the device name.
- > The RDY and IoT status LEDs are flashing.

9.2 Firmware update

16582

The new firmware is installed via the device's web interface.



If the firmware update is not successful, deactivate all connections to the Modbus TCP PLC, LR SMARTOBSERVER and LR DEVICE and repeat the process.

- ▶ Stop Modbus TCP PLC.
- ▶ Set the parameter [IP address SmartObserver] to 255.255.255.255 (→ **IoT: Configure the interface to the LR SMARTOBSERVER** (→ p. 28)).
- ▶ Stop the LRAgent.LRDevice service in the Windows task manager.

To install a new firmware version on the device:

Requirements

- > Zip file with new firmware has been downloaded and unpacked.
- > Ethernet connection between laptop/PC and device is established.

1 Call up web interface

- ▶ Start web browser.
- ▶ Enter the following into the address field of the browser: and confirm with [ENTER]:
<IP address of the device>/web/update
- > Web browser shows the [Firmware Update] page.

2 Load new firmware to AL1340

- ▶ Click on [Search...].
- > Dialogue window appears.
- ▶ Select the firmware file (.bin) and click on [Open] in order to adopt the file.
- ▶ Click on [Submit] to start the firmware update.
- > Firmware is being loaded to the device.
- > After successful storage, the success message is displayed.

3 Restart the device

- ▶ Click on [Restart device now] to restart the device.
- > The status LED RDY flashes quickly.
- > Firmware is updating.
- ▶ Follow the instructions in the browser.

9.3 Replace IO-Link device

7775

To replace an IO-Link device:

Requirement:

- > IO-Link device is with factory settings.
- > IO-Link device supports IO-Link standard 1.1 or higher.

1 Set data storage

- ▶ Set the following parameters of the IO-Link port:
Validation and Data Storage = [Type compatible V1.1 device with Restore]
- ▶ Save changes.

2 Replace IO-Link device

- ▶ Disconnect old IO-Link device from IO-Link master.
- ▶ Connect new IO-Link device with the same IO-Link port of the AL1340.
- > IO-Link master copies parameter values from the data memory to the new IO-Link device.

10 Maintenance

21577

The operation of the unit is maintenance-free.

- ▶ Clean the surface of the unit when necessary. Do not use any caustic cleaning agents for this!
- ▶ After use, dispose of the unit in an environmentally friendly way in accordance with the applicable national regulations.

11 Factory settings

16542

In the factory settings, the device has the following parameter settings:

Parameter	Factory setting
[IP address] (Modbus TCP)	192.168.1.250
[Subnet mask] (Modbus TCP)	255.255.255.0
[IP gateway address] (Modbus TCP)	0.0.0.0
[IP address] (IoT interface)	169.254.X.X
[Subnet mask] (IoT interface)	255.255.0.0
[IP gateway address] (IoT interface)	0.0.0.0
[Modbus TCP name]	blank
Data memory (Data Storage)	blank

12 Accessories

17853

List of accessories of AL1340: → www.ifm.com > Product page > Accessories

13 Appendix

Contents

Technical data	68
Modbus TCP.....	72
ifm IoT Core	100

7156

13.1 Technical data

Contents

Application	68
Electrical data	68
Inputs / outputs	68
Inputs	69
Outputs	69
Interfaces	69
Operating conditions	70
Approvals / tests	70
Mechanical data	70
Electrical connection	71

9011

13.1.1 Application

23710

Application	
Application	I/O modules for field applications
Daisy-chain function	Communication interface

13.1.2 Electrical data

22819

Electrical data	
Operating voltage [V]	20...30 DC; (US; to SELV/PELV; cULus: max. 24 DC)
Current Consumption [mA]	300...3900; (US)
Protection class	III
Sensor supply US	
Max. current load total [A]	3.6

13.1.3 Inputs / outputs

23711

Inputs / outputs	
Total number of inputs and outputs	8; (configurable)

13.1.4 Inputs

22820

Inputs	
Number of digital inputs	8; (IO-Link Port Class A: 4 x 2)
Switching level high [V]	11...30 DC
Switching level low [V]	0...5 DC
Digital inputs protected against short circuits	yes

13.1.5 Outputs

22821

Outputs (digital)	
Output function	4; (IO-Link Port Class A: 4 x 1)
Max. current load per output [mA]	200
Short-circuit protection	yes

13.1.6 Interfaces

10921

Interfaces	
Communication interface	Ethernet; IO-Link
Communication interface	IO-Link; TCP/IP; Modbus TCP
Ethernet	
Transmission standard	10Base-T; 100Base-TX
Transmission rate [MBit/s]	10; 100
Protocol	TCP/IP; Modbus TCP
Factory settings	- IP address: 192.168.1.250 - Subnet mask: 255.255.255.0 - Gateway IP address: 0.0.0.0 - MAC address: see type label
IO-Link master	
Type of transmission	COM 1 / COM 2 / COM 3
IO-Link revision	V1.1
Number of ports Class A	4
IoT interface	
Transmission standard	10Base-T; 100Base-TX
Transmission rate [Mbits/s]	10; 100
Protocol	DCP, DHCP, Auto IP
Factory settings	- IP address: 169.254.X.X - Subnet mask: 255.255.0.0 - Gateway IP address: 0.0.0.0 - MAC address: see type label

13.1.7 Operating conditions

22823

Operating conditions	
Applications	Indoor use
Ambient temperature [°C]	-25...60
Storage temperature [°C]	-25...85
Max. perm. relative air humidity [%]	90
Max. height above sea level [m]	2000
Protection rating	IP 65; IP 66; IP 67
Pollution Degree	2

13.1.8 Approvals / tests

22824

Approval / tests	
EMC	- EN 61000-6-2 - EN 61000-6-4
MTTF [Years]	90




13.1.9 Mechanical data

22825

Mechanical data	
Weight [g]	271
Materials	Housing: PA; socket: brass nickel-plated

13.1.10 Electrical connection

17850

Voltage supply IN X31		
Plug and socket connection	M12	
Wiring		1: + 24 V DC (US) 2: - 3: GND (US) 4: -
Ethernet IN / OUT X21, X22		
Plug and socket connection	M12	
Wiring		1: TX + 2: RX + 3: TX - 4: RX - 5: -
IoT X32		
Plug and socket connection	M12	
Wiring		1: TX + 2: RX + 3: TX - 4: RX - 5: -
Process connection IO-Link ports Class A X01...X0<IOL_AnzPorts>		
Plug and socket connection	M12	
Wiring		1: + 24 V DC (US) 2: DI 3: GND (US) 4: C/Q IO-Link 5: -

13.2 Modbus TCP

Contents

Register	73
Acyclic commands	89

22433

13.2.1 Register

Contents

Configuration Area.....	74
Diagnostic data.....	76
Input Data	79
Output Data	82
Single Port Access	83
Acyclic Command Channel	85

18637

The AL1340 saves the configuration data, process data and status/diagnostic data in Modbus registers.

Configuration Area

22817

Register	Contents	
	Bits 8-15	Bits 0-7
8998*	Access Rights	Process Data Length
8999*	reserved	Byte Swap
9000*	Port X01: Port Configuration (→ Mapping: port configuration (→ p. 75))	
9006*	Port X02: Port Configuration (→ Mapping: port configuration (→ p. 75))	
9012*	Port X03: Port Configuration (→ Mapping: port configuration (→ p. 75))	
9018*	Port X04: Port Configuration (→ Mapping: port configuration (→ p. 75))	

* ... valid start address for accessing the register area (→ [Rules for accessing the Modbus register](#) (→ p. 45))

Legend:

- [Access Rights] The access rights to the parameter data, process data and the events/diagnostic messages of the IO-Link master as well as the connected IO-Link devices.

1 byte	0x00	Modbus TCP + IoT
	0x01	Modbus TCP + IoT (ro)
	0x02	Modbus TCP only
	0x03	Keep setting (default)
- [Process Data Length] Length of the process input data and process output data

1 byte	0x01	2 bytes input / 2 bytes output data ▪ Input Data: 7 Words ▪ Output Data: 5 Words
	0x02	4 bytes input / 4 bytes output data ▪ Input Data: 11 Words ▪ Output Data: 9 Words
	0x04	8 bytes input / 8 bytes output data ▪ Input Data: 19 Words ▪ Output Data: 17 Words
	0x08	16 bytes input / 16 bytes output data ▪ Input Data: 35 Words ▪ Output Data: 33 Words
	0x16	32 bytes input / 32 bytes output data ▪ Input Data: 67 Words ▪ Output Data: 65 Words
- [Byte Swap] Sequence of bytes in the data word

1 byte	0x00	as Array of Bytes
	0x01	as integer16 value; when process data is updated, bytes will be exchanged
- [Port Configuration] Configuration of the IO-Link port

12 bytes	→ Mapping: port configuration (→ p. 75)
----------	---

Mapping: port configuration

18639

Bits 8-15	Bits 0-7
Port Mode	Master Cycle Time
reserved	Validation ID
Vendor ID	
reserved	Device ID (MSB)
Device ID	Device ID (LSB)
Failsafe Mode -- IO-Link	Failsafe Mode -- Pin 4 (DO)

Legend:

- [Port Mode]
Operating mode of the IO-Link port

1 byte

0x00 deactivated
0x01 Digital input (DI)
0x02 Digital output (DO)
0x03 IO-Link

[Master Cycle Time]
Cycle time of the data transmission between the IO-Link master and the IO-Link device

1 byte

0x00 As fast as possible
0x01 2 milliseconds
0x02 4 milliseconds
0x03 8 milliseconds
0x04 16 milliseconds
0x05 32 milliseconds
0x06 64 milliseconds
0x07 128 milliseconds
- [Validation ID]
Supported IO-Link standard and behaviour of the IO-Link master when connecting new IO-Link devices to the IO-Link port

1 byte

0x00 No validation
0x01 V1.0 device
0x02 V1.1 device
0x03 V1.1 device with Backup + Restore
0x04 V1.1 device with Backup
- [Vendor ID]
Vendor ID of the manufacturer of the device on the IO-Link port

2 bytes

0x0000...0xFFFF
- [Device ID]
Device ID of the device on the IO-Link port
Device ID = 0x123456

3 bytes

pro Byte: 0x00...0xFF

Device ID (MSB) = 0x12

Device ID = 0x34

Device ID (LSB) = 0x56
- [Failsafe Mode -- IO-Link]
Fail-safe mode for output data when the Modbus TCP connection is interrupted

1 byte

0x00 No Failsafe
0x01 Failsafe Reset Value
0x02 Failsafe Old Value
0x03 Failsafe with Pattern
- [Failsafe Mode -- Pin 4 (DO)]
Fail-safe value for the operating mode "digital output (DO)"

1 byte

0x00 Failsafe Reset Value
0x01 Failsafe Old Value
0x02 Failsafe Set Value

Diagnostic data

SYS_OBJECTID>

Register	Contents	
	Bits 8-15	Bits 0-7
30*	reserved	Port X01: → Mapping: Diagnostics (→ p. 77)
31	Port X01: Vendor ID	
32	reserved	Port X01: Device ID (MSB)
33	Port X01: Device ID	Port X01: Device ID (LSB)
34...39	Port X01: Events (→ Mapping: events (→ p. 78))	
40*	Port X02: Diagnostic data (Mapping: → Port X01 - register 30...39)	
50*	Port X03: Diagnostic data (Mapping: → Port X01 - register 30...39)	
60*	Port X04: Diagnostic data (Mapping: → Port X01 - register 30...39)	

* ... valid start address for accessing the register area (→ **Rules for accessing the Modbus register** (→ p. 45))

Legend:

- [Vendor ID] Vendor ID of the manufacturer of the device on the IO-Link port 2 bytes 0x0000...0xFFFF
- [Device ID] Device ID of the device on the IO-Link port 3 bytes per byte: 0x00...0xFF
Device ID = 0x123456
 - Device ID (MSB) = 0x12
 - Device ID = 0x34
 - Device ID (LSB) = 0x56

Mapping: Diagnostics

17305

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
reserved	Wrong Length PD OUT	Wrong Length PD IN	Cycle time	Wrong Vendor ID/ Device ID	reserved	reserved	IOL mode

Legend:

- | | | | | |
|-----------------------------------|--|-------|-----|---------------------------|
| ▪ [IOL Mode] | Operating type of the IO-Link port | 1 bit | 0x0 | Other |
| | | | 0x1 | IO-Link |
| ▪ [Wrong Vendor ID/
Device ID] | Verification if the current and configured vendor ID and device ID are identical | 1 bit | 0x0 | OK |
| | | | 0x1 | No match |
| ▪ [Wrong Cycle Time] | Verification if the current and configured cycle time are identical | 1 bit | 0x0 | OK |
| | | | 0x1 | No match |
| ▪ [Wrong Length PD IN] | Verification if the size of the received input data are identical with the configured size | 1 bit | 0x0 | OK |
| | | | 0x1 | Configured size too small |
| ▪ [Wrong Length PD OUT] | Verification if the size of the sent output data is identical with the size expected by the IO-Link device | 1 bit | 0x0 | OK |
| | | | 0x1 | Configured size too small |

Mapping: events

13674

Bit															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
reserved								Event 1: Mode		Event 1: Type		Event 1: Src		Event 1: Instance	
Event 1: Code															
reserved								Event 2: Mode		Event 2: Type		Event 2: Src		Event 2: Instance	
Event 2: Code															
reserved								Event 3: Mode		Event 3: Type		Event 3: Src		Event 3: Instance	
Event 3: Code															

Legend:

- [Event m: Mode] Mode: mode of the event

2 bits	0x0	reserved
	0x1	One-time event
	0x2	Event has disappeared
	0x3	Event has appeared
- [Event m: Type] Type: category of the event

2 bits	0x0	reserved
	0x1	Notification
	0x2	Warning
	0x3	Error
- [Event m: Src] Source: source of the event

1 bit	0x0	IO-Link Device
	0x1	IO-Link Master
- [Event m: Instance] Type: trigger of the event

2 bits	0x0	unknown
	0x1...0x3	reserved
	0x4	Application
	0x5...0x7	reserved
- [Event m: Code] Code: event code; depends on the device

2 bytes	→ IODD description of the IO-Link device
---------	--

Input Data

12759

Register	Contents
197*	Port X01...X04: Digital Input - Pin 2 / Pin 4 (DI) (→ Mapping: digital input data (→ p. 80))
198*	Port X01...X04: Diagnostic Information (→ Mapping: diagnostic information (→ p. 80))
199*	Port X01...X04: Status Information IO-Link Ports (→ Mapping: Status information IO-Link ports (→ p. 81))
200	Port X01...X04: Compact Input Block (4n bytes)

* ... valid start address for accessing the register area (→ **Rules for accessing the Modbus register** (→ p. 45))

Legend:

- [Digital Input - Pin 2 / Pin 4 (DI)] Digital input data Pin 2 / Pin 4 (operating mode DO) of 4 IO-Link ports 2 bytes
- [Diagnostic Information] Diagnostic information 2 bytes
- [Status Information IO-Link Ports] Status information of the IO-Link ports 2 bytes
- [Compact Input Block (4n Bytes)] Input data (operating mode IO-Link) of 4 IO-Link ports 4n byte per byte: 0x00...0xFF
n = [2,4,8,16,32]; is determined by parameters [Process Data Length] (→ **Configuration Area** (→ p. 74))

Mapping: digital input data

11730

Bit															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
res.	res.	res.	res.	X04: pin 2	X03: pin 2	X02: pin 2	X01: pin 2	res.	res.	res.	res.	X04: pin 4	X03: pin 4	X02: pin 4	X01: pin 4

Legend:

- [pin 4] Signal level on pin 4 of the IO-Link port (DI) 1 bit 0x0 LOW
0x1 HIGH
- [pin 2] Signal level on pin 2 of the IO-Link ports (if used) 1 bit 0x0 LOW
0x1 HIGH

Mapping: diagnostic information

22931

Bit															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
res.	res.	res.	res.	X04: SC/ OL	X03: SC/ OL	X02: SC/ OL	X01: SC/ OL	res.	res.	res.	res.	res.	res.	SENS PWR	AUX PWR

Legend:

- [SC/OL] Short Circuit / Overload: indicates the occurrence of a short-circuit or overvoltage on the IO-Link port 1 bit 0x0 error-free
0x1 Short-circuit or overvoltage
- [SENS PWR] Sensor Power: indicates the status of the supply voltage US 1 bit 0x0 US not available
0x1 US available
- [AUX PWR] Auxiliary Power: indicates the supply voltage UA 1 bit 0x0 UA not available
0x1 UA available

Mapping: Status information IO-Link ports

15383

Bit															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
res.	res.	res.	res.	X04: Data invalid	X03: Data invalid	X02: Data Invalid	X01: Data invalid	res.	res.	res.	res.	X04: Dev Conn	X03: Dev Conn	X02: Dev Conn	X01: Dev Conn

Legend:

- [Data invalid] indicates the status of the process input data on 1 bit 0x0 data valid
the IO-Link port 0x1 data invalid
- [Dev Conn] Device Connected: indicates the connection to 1 bit 0x0 Available
the device on the IO-Link port 0x1 not available

Output Data

7948

Register	Contents	
	Bits 8-15	Bits 0-7
599*	Port X01...X04: Digital Output - Pin 4 (DO) (→ Mapping: Digital output data (→ p. 82))	
600*	Port X01...X04: Compact Output Block (4n bytes)	

* ... valid start address for accessing the register area (→ **Rules for accessing the Modbus register** (→ p. 45))

Legend:

- [Digital Output - Pin 4 (DO)] Digital output data - pin 4 (operating mode DO) of 4 IO-Link ports 2 bytes
- [Compact Output Block (4n Bytes)] Output data (operating mode IO-Link) of 4 IO-Link ports 4n Byte per byte: 0x00...0xFF
n = [2,4,8,16,32]; is determined by parameters [Process Data Length] (→ **Configuration Area** (→ p. 74))

Mapping: Digital output data

4165

Bit															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
res.	res.	res.	res.	res.	res.	res.	res.	res.	res.	res.	res.	X04: Pin 4	X03: Pin 4	X02: Pin 4	X01: Pin 4

Legend:

- [Pin4] Signal level on pin 4 of the IO-Link port (DO) 1 bit 0x0 LOW
0x1 HIGH

Single Port Access

21513

Register	Contents	
	Bits 8-15	Bits 0-7
1000	Port X01: Digital Input - Pin 2	Port X01: Digital Input - Pin 4 (DI)
1001	reserved	Port X01: → Mapping: PQI
1002	Port X01: Input Data IO-Link (n bytes)	
1100	reserved	Port X01: Digital Output - Pin 4 (DO)
1101	Port X01: Output Data IO-Link (n bytes)	
2000	Port X02: Single Port Access (Mapping: → Port X01 - register 1000...1101)	
3000	Port X03: Single Port Access (Mapping: → Port X01 - register 1000...1101)	
4000	Port X04: Single Port Access (Mapping: → Port X01 - register 1000...1101)	

* ... valid start address for accessing the register area (→ **Rules for accessing the Modbus register** (→ p. 45))

Legend:

- [Digital Input - Pin 2] Pin 2 signal level (if used) 1 byte 0x00 LOW
0x01 HIGH
- [Digital Input - Pin 4 (DI)] Pin 4 signal level (operating mode DI) 1 byte 0x00 LOW
0x01 HIGH
- [Input Data IO-Link (n Bytes)] Input data (operating mode IO-Link) (n bytes) n bytes per byte: 0x00...0xFF
n = [2,4,8,16,32]; is determined by parameters [Process Data Length] (→ **Configuration Area** (→ p. 74))
- [Digital Output - Pin 4(DO)] Pin4 signal level (operating mode DO) 1 byte 0x00 LOW
0x01 HIGH
- [Output Data IO-Link (n Bytes)] Output data (operating mode IO-Link) (n bytes) n bytes per byte: 0x00...0xFF
n = [2,4,8,16,32]; is determined by parameters [Process Data Length] (→ **Configuration Area** (→ p. 74))

Mapping: PQI

21509

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
reserved	Wrong Length PD OUT	Wrong Length PD IN	Wrong Cycle Time	Wrong VID/DID	Invalid Data	Dev Conn	IOL Mode

Legend:

- | Parameter | Description | Length | 0x0 | 0x1 |
|-----------------------|---|--------|-----|---------------------------|
| [IOL Mode] | Operating type of the IO-Link port | 1 bit | 0x0 | Other |
| | | | 0x1 | IO-Link |
| [Dev Conn] | Connection between IO-Link Device and IO-Link port | 1 bit | 0x0 | not connected. |
| | | | 0x1 | connected |
| [Invalid Data] | Status of the process input data on the IO-Link port | 1 bit | 0x0 | valid data |
| | | | 0x1 | invalid data |
| [Wrong VID/DID] | Verification whether the current and configured vendor ID and device ID are identical | 1 bit | 0x0 | OK |
| | | | 0x1 | no match |
| [Wrong Cycle Time] | Verification whether the current and configured cycle time are identical | 1 bit | 0x0 | OK |
| | | | 0x1 | no match |
| [Wrong Length PD IN] | Verification whether the size of the received input data are identical with the configured size | 1 bit | 0x0 | OK |
| | | | 0x1 | Configured size too small |
| [Wrong Length PD OUT] | Verification whether the size of the sent output data is identical with the size expected by the IO-Link device | 1 bit | 0x0 | OK |
| | | | 0x1 | Configured size too small |

Acyclic Command Channel

17311

The following Modbus registers are available for acyclic data transmission:

Register	Contents	
	Bits 8-15	Bits 0-7
500*	Command Request Channel (→ Request channel (→ p. 86))	
0*	Command Response Channel (→ Response channel (→ p. 87))	

* ... valid start address for accessing the register area (→ **Rules for accessing the Modbus register** (→ p. [45](#)))

Legend:

- [Command Request Channel] Area for transmission of command request (fieldbus PLC >>> IO-Link master) 44 bytes
- [Command Response Channel] Area for transmission of command response (IO-Link master >>> fieldbus PLC) 44 bytes

Request channel

10893

Register	Contents	
	Bits 8-15	Bits 0-7
500	Port No.	
501	Index	
502	Subindex	
503	Command	User ID
504	Data Length (Number of Bytes)	
505	Data (byte 1)	Data (byte 0)
...	...	...
521	Data (byte 33)	Data (byte 32)

Legend:

- | | | | | |
|---|---|---------|-------------------------|----------|
| ▪ [Port No.] | Number of the IO-Link port | 1 Word | 0x0001 | Port X01 |
| | | | 0x0002 | Port X02 |
| | | | ... | ... |
| | | | 0x0004 | Port X04 |
| ▪ [Index] | Index of the IO-Link object | 1 Word | 0x0000...0xFFFF | |
| ▪ [Subindex] | Subindex of the IO-Link object | 1 Word | 0x0000...0xFFFF | |
| ▪ [Command] | Command number | 1 byte | 0x01 | Read |
| | | | 0x02 | Write |
| ▪ [User ID] | ID to identify the command | 1 byte | 0x00...0xFF | |
| ▪ [Data Length
(Number of
Bytes)] | Number of bytes that contain relevant user data
(is only evaluated for Command = 0x02) | 1 Word | 0x0000 | 0 bytes |
| | | | ... | ... |
| | | | 0x0022 | 34 bytes |
| ▪ [Data (Byte n)] | user data | n bytes | per byte: 0x00 ... 0xFF | |

Response channel

6916

Register	Contents	
	Bits 8-15	Bits 0-7
0	Port No.	
1	Index	
2	Subindex	
3	Command	User ID
4	Result	
5	Data Length (Number of Bytes)	
6	Data (byte 1) / Error Code	Data (byte 0) / Error
...	...	...
21	Data (byte 31)	Data (byte 30)

Legend:

- | Parameter | Description | Length | Value | Meaning |
|---------------------------------|---|---------|--------------------------------|---|
| [Port No.] | Number of the IO-Link port | 1 Word | 0x0001 | Port X01 |
| | | | 0x0002 | Port X02 |
| | | | ... | ... |
| | | | 0x0004 | Port X04 |
| [Index] | Index of the IO-Link object | 1 Word | 0x0000...0xFFFF | |
| [Subindex] | Subindex of the IO-Link object | 1 Word | 0x0000...0xFFFF | |
| [Command] | Command number | 1 byte | 0x01 | Read |
| | | | 0x02 | Write |
| [User ID] | reflected User ID from request channel | 1 byte | 0x00...0xFF | |
| [Result] | Status of the command processing | 1 Word | 0x0000 | OK |
| | | | 0x000F | OK, but data length too long (only with [Command] = 0x02) |
| | | | 0x00FF | Error |
| [Data Length (Number of Bytes)] | Number of bytes that contain relevant user data | 1 Word | 0x0000 | 0 bytes |
| | | | ... | |
| | | | 0x0020 | 32 bytes |
| [Error] | Error ID | 1 byte | → Error codes (→ p. 88) | |
| [Error Code] | additional error codes | 1 byte | depends on the IO-Link device | |
| [Data (Byte n)] | User data (byte n) | n bytes | per byte: 0x00...0xFF | |

Error codes

15475

Error code	Description
0x71	Service not available (unknown command has been sent to the IO-Link port)
0x72	Port blocked (another cyclic process accesses the IO-Link port)
0x74	Invalid data (wrong parameter has been sent in the command)
0x76	Wrong port (wrong port number)
0x77	Wrong port function (wrong port function or wrong parameter has been sent to the device)
0x78	Invalid length (set length is > 0x20)
0x80	Error in the device application; observe add. error codes (error codes: → description of IODD of the IO-Link device)

13.2.2 Acyclic commands

Contents

Command 0x10 – set mode	90
Command 0x20 – set validation ID / data storage	92
Command 0x30 – set fail-safe data pattern	94
Command 0x40 – Reboot.....	96
command 0x50 – Factory Reset	98

22631

14273

Legend:

- | | |
|-------------------------------------|---|
| ... 21 | res |
| nd: | |
| Port No.] | Number of the IO-Link port |
| User ID] | reflected User ID from request channel |
| Result] | Status of the command processing |
| Data Length
Number of
bytes)] | Number of bytes that contain relevant user data |
| Target Mode] | Operating type of the IO-Link port |
| Error] | Error ID |
| Error Code] | additional error codes |

10919

Legend:

Command 0x40 – Reboot

7639

The command reboots the AL1340.

Command request

21515

Register	Contents	
	Bits 8-15	Bits 0-7
500	reserved	
501	reserved	
502	reserved	
503	0x40	User ID
504	reserved	
505	0x00AA	
506 ... 521	reserved	

Legend:

- [User ID] ID to identify the command 1 byte 0x00 .. 0xFF

command 0x50 – Factory Reset

7254

The command resets all parameters to the factory settings (→ **Factory settings** (→ p. 65)).

Command request

11060

Register	Contents	
	Bits 8-15	Bits 0-7
500	reserved	
501	reserved	
502	reserved	
503	0x50	User ID
504	reserved	
505	0x0055	
506 ... 520	reserved	

Legend:

- [User ID] ID to identify the command 1 byte 0x00 .. 0xFF

13.3 ifm IoT Core

Contents

Overview: IoT profile.....	101
Overview: IoT types.....	104
Overview: IoT services	105

8988

13.3.1 Overview: IoT profile

Contents

Profile: deviceinfo	101
Profile: devicetag	102
Profile: iolinkmaster	102
Profile: parameter	103
Profile: processdata	103
Profile: service	103
Profile: software	103
Profile: timer	103

17711

Profile: deviceinfo

17135

Element (identifier)	Properties	mandatory	Comments
deviceinfo	- type = structure - profiles = deviceinfo		characterises the element as device information
deviceinfo/devicename	type = data	optional	
deviceinfo/devicefamily	type = data	optional	
deviceinfo/devicevariant	type = data	optional	
deviceinfo/devicesymbol	type = data	optional	
deviceinfo/deviceicon	type = data	optional	
deviceinfo/serialnumber	type = data	mandatory	
deviceinfo/productid	type = data	optional	
deviceinfo/productname	type = data	optional	
deviceinfo/productcode	type = data	mandatory	
deviceinfo/producttext	type = data	optional	
deviceinfo/ordernumber	type = data	optional	
deviceinfo/productiondate	type = data	optional	
deviceinfo/productioncode	type = data	optional	
deviceinfo/hwrevision	type = data	mandatory	
deviceinfo/swrevision	type = data	mandatory	
deviceinfo/bootloaderrevision	type = data	optional	
deviceinfo/vendor	type = data	optional	
deviceinfo/vendortext	type = data	optional	
deviceinfo/vendorurl	type = data	optional	
deviceinfo/vendorlogo	type = data	optional	
deviceinfo/productwebsite	type = data	optional	
deviceinfo/supportcontact	type = data	optional	
deviceinfo/icon	type = data	optional	
deviceinfo/image	type = data	optional	
deviceinfo/standards	type = data	optional	

Profile: devicetag

17438

Element (identifier)	Properties	mandatory	Comments
devicetag	- type = structure - profiles = devicetag		
devicetag/applicationtag	type = data	mandatory	
devicetag/applicationgroup	type = data	optional	
devicetag/machinecode	type = data	optional	
devicetag/tenant	type = data	optional	

Profile: iolinkmaster

14997

Element (identifier)	Properties	mandatory	Comments
masterport	- type = structure - profiles = iolinkmaster		Executable service
masterport/mode	- type = data - profile = parameter	mandatory	
masterport/comspeed	- type = data - profile = parameter	mandatory	
masterport/mastercycletime_actual	- type = data - profile = parameter	mandatory	
masterport/mastercycletime_preset	- type = data - profile = parameter	mandatory	
masterport/validation_datastorage_mode	- type = data - profile = parameter	mandatory	
masterport/validation_vendorid	- type = data - profile = parameter	mandatory	
masterport/validation_deviceid	- type = data - profile = parameter	mandatory	
masterport/additionalpins_in	- type = data - profile = processdata	optional	
masterport/additionalpins_out	- type = data - profile = processdata	optional	
masterport/portevent	type = data	mandatory	
masterport/iolinkdevice	- type = structure - profile = iolinkdevice_full	mandatory	

Profile: parameter

16545

The profile is used to mark the elements of type data as parameters (acyclic data). The profile defines no substructure.

Profile: processdata

16569

The profile is used to mark the elements of type data as process data (cyclic data). The profile does not define a substructure.

Profile: service

16575

Element (identifier)	Properties	mandatory	Comments
service	- type = service - profiles = service		Executable service

Profile: software

10999

Element (identifier)	Properties	mandatory	Comments
software	- type = structure - profiles = software		characterises the element as software
software/version	type = data	mandatory	
software/reboot	type = service	optional	
software/factoryreset	type = service	optional	
software/status	type = structure	optional	
software/diag	type = structure	optional	

Profile: timer

10997

Element (identifier)	Properties	mandatory	Comments
timer	- type = structure - profiles = timer		Executable service
timer/interval	- type = data - profile = parameter	optional	

13.3.2 Overview: IoT types

16547

The ifm IoT Core uses the following element types:

Name	Description
structure	Element is a structure element (like a folder in a file system)
service	Element is a service that can be addressed from the network
Event	Element is an event that can be started by the firmware and sends messages.
data	Element is a data point
device	Root element a device represents

13.3.3 Overview: IoT services

Contents	
Service: factoryreset.....	105
Service: gettree	105
Service: getdata.....	106
Service: getdatamulti	107
Service: getidentity	108
Service: getsubscriptioninfo.....	109
Service: iolreadacyclic.....	110
Service: iolwriteacyclic.....	111
Service: reboot	112
Service: setblock	113
Service: setdata.....	114
Service: setelementinfo	115
Service: subscribe	116
Service: unsubscribe	116

17708

Service: factoryreset

12188

Name: factoryreset

Description: The service sets the parameters of the device to the factory settings.

Applicable to: different objects

Request data: none

Return data (data): none

Service: gettree

17435

Name: gettree

Description: The service reads the complete device description of the AL1340 and provides it as JSON object.

Applicable to: Objects of the device type

Request data: none

Return data (data):

Data field	Required field	Data type	Default	Description
Identifier	mandatory	STRING		Identifier of the root element
type	mandatory	STRING		Type of the element
format	optional	JSON object	empty	Format of the data content
uid	optional	STRING	empty	
profiles	optional	JSON array	empty	
subs	mandatory	JSON array		Subelements
hash	optional	STRING		

Service: getdata

12223

Name: getdata**Description:** Service reads the value of a data point and provides it.**Applicable to:** Objects of the data type**Request data:** none**Return data (data):**

Data field	Required field	Data type	Default	Description
value	mandatory	STRING		Value of the element/data point

Example: {"code":10,"cid":4711,"adr":"devicetag/applicationtag/getdata"}

Service: getdatamulti

17964

Name: getdatamulti

Description: The service sequentially reads the values of several data points and provides them. The value and the diagnostic code are provided for each data point.

Applicable to: Objects of the data type

Request data:

Data field	Required field	Data type	Default	Description
datatosend	mandatory	ARRAY OF STRINGS		List of data points to be requested; data points must support the service getdata
consistent	optional	BOOL	false	

Return data (data): for each requested data point

Data field	Required field	Data type	Default	Description
Data point	mandatory	STRING		Data point request
code	mandatory	INT		Diagnostic code of the request
data	mandatory	STRING		Value of the data point

Service: getidentity

17134

Name: getidentity

Description: The service reads the complete device description of the AL1340 and provides it as JSON object.

Applicable to: Objects of the device type

Request data: none

Return data (data):

Data field	Required field	Data type	Default	Description
iot		device		Device description as JSON object
iot.name	mandatory	STRING		
iot.uid	optional	STRING		
iot.version	mandatory	STRING		
iot.catalogue	optional	ARRAY OF OBJECTS		
iot.deviceclass	optional	ARRAY OF STRING		
iot.serverlist		ARRAY OF OBJECTS		
device	optional			AL1340
device.serialnumber	optional			Serial number
device.hwrevision	optional			Hardware version
device.swrevision	optional			Software version
device.custom	optional			

Service: getsubscriptioninfo

17436

Name: getsubscriptioninfo

Description: The service provides information about an existing subscription (subscribe).

Applicable to: Objects of the event type

Request data:

Data field	Required field	Data type	Default	Description
subscriptionid	mandatory	INT		ID of the subscription

Return data (data): none

Service: iolreadacyclic

12222

Name: iolreadacyclic

Description: The service acyclically reads the parameter value of an IO-Link device. It is accessed via IO-Link index and subindex.

Applicable to: IO-Link specific objects

Request data:

Data field	Required field	Data type	Default	Description
index	mandatory	NUMBER		IO-Link index of the parameter
subindex	mandatory	NUMBER		IO-Link subindex of the parameter

Return data (data):

Data field	Required field	Data type	Default	Description
value	mandatory	STRING		Value of the parameter; Value in hexadecimal format

Service: iolwriteacyclic

11035

Name: iolwriteacyclic

Description: The service acyclically writes the parameter value of an IO-Link device. It is accessed via IO-Link index and subindex.

Applicable to: IO-Link specific objects

Request data:

Data field	Required field	Data type	Default	Description
index	mandatory	NUMBER		IO-Link index of the parameter
subindex	mandatory	NUMBER		IO-Link subindex of the parameter
value	mandatory	STRING		New value of the parameter; Value in hexadecimal format

Return data (data): none

Service: reboot

10986

Name: reboot

Description: The service reboots the device.

Applicable to: different objects

Request data: none

Return data (data): none

Service: setblock

12224

Name: setblock

Description: The service simultaneously sets the values of several data points of a structure.

Applicable to: Objects of the data type

Request data:

Data field	Required field	Data type	Default	Description
datatosend	mandatory	ARRAY OF (STRINGS)		List of data points and their new values; data points must support the service setdata
consistent	optional	BOOL	false	

Return data (data): none

Example:

```
{
  "code":10,
  "cid":4711,
  "adr":"/iotsetup/network/setblock",
  "data":{"consistent":true,"datatosend":["ipadresse":"192.168.0.6","ipdefaultgateway":"192.168.0.250"]}
}
```

Service: setdata

11036

Name: setdata

Description: The service sets the value of the data point.

Applicable to: Objects of the data type

Request data:

Data field	Required field	Data type	Default	Description
newvalue	mandatory	STRING		New value of the element/data point

Return data (data): none

Example:

```
{
  "code":10,
  "cid":4711,
  "adr":"devicetag/applicationtag/setdata",
  "data":{"newvalue":"ifm IO-Link master"}
}
```

Service: setelementinfo

7159

Name: setelementinfo

Description: The service sets the uid of an element.

Applicable to: Objects of the device type

Request data:

Data field	Required field	Data type	Default	Description
url	mandatory	STRING		URL of the element to be changed
uid	optional	STRING		UID to be set
profiles	optional	JSON array		
format	optional	JSON object		

Return data (data):

Data field	Required field	Data type	Default	Description
identifier	mandatory	STRING		Identifier of the element
type	mandatory	STRING		Type of the element
format	optional	JSON object	blank	Format of the data or the service content
uid	optional	STRING	blank	
profiles	optional	JSON array	blank	
hash	optional	STRING	--	

Service: subscribe

10920

Name: subscribe

Description: The service subscribes to the values of data points. The data points to be subscribed are transferred as a list. The IO-Link master sends changes to the data drain defined in callback.

Applicable to: Objects of the event type

Request data:

Data field	Required field	Data type	Default	Description
callback	mandatory	STRING		Address to which IoT Core event notifications are to be sent; complete URL: ipaddress:port/path
datatosend	mandatory	ARRAY OF STRINGS		List from URLs of data elements; elements have to support getdata

Return data (data): none

Service: unsubscribe

16567

Name: unsubscribe

Description: The service deletes an existing subscription. unsubscribe is successful if cid and the callback address are registered for a subscription (subscribe). If the STRING "DELETE" is provided in callback, the IO-Link master deletes all active subscriptions.

Applicable to: Objects of the event type

Request data:

Data field	Required field	Data type	Default	Description
callback	mandatory	STRING		Address to which IoT Core event notifications are to be sent; complete URL: ipaddress:port/path

Return data (data): none

14 Index

A

Access ifm-IoT Core	58
Accessories	66
Acyclic Command Channel	85
Acyclic commands	89
Appendix	67
Application	68
Approvals / tests	70

C

Command 0x10 – set mode	90
Command 0x20 – set validation ID / data storage	92
Command 0x30 – set fail-safe data pattern	94
Command 0x40 – Reboot	96
command 0x50 – Factory Reset	98
Command request	90, 92, 94, 96, 98
Command response	91, 93, 95, 97, 99
Communication, parameter setting, evaluation	11
Configuration	23
Configuration Area	74
Configure IO-Link devices	35, 44, 52
Configure IO-Link ports	49
Configure IoT port	48
Configure the fieldbus port	49
Connect the device	18
Control IO-Link master	44, 52

D

Device description	57
Diagnostic data	76
Digital inputs	12

E

Electrical connection	14, 71
Electrical data	68
Error codes	88
Ethernet interface	21
Example	
Change name of the IO-Link master	54
change the parameter value of an IO-Link device	55
Integrate IO-Link master in a CODESYS project	37
Read process data of an IO-Link device	53
Read several parameter values of the IO-Link master simultaneously	54
read the parameter value of an IO-Link device	55
Subscribe to event	56
Examples	53

F

Factory settings	65
Fieldbus	
configure Modbus TCP port	29
Firmware	
Reboot the device	34
Reset device to factory settings	34
Firmware update	62
Function	10

G

General	7
GET method	58

I

Identify device	61
ifm IoT Core	100
General information	57
Info	
Show device information	33
Input circuit	17
Input Data	79
Inputs	69
Inputs / outputs	68
Integrate the AL1340 into the Modbus project	36
Intended use	9
Interfaces	69
Internet of Things (IoT)	11
IO-Link	11
IO-Link circuits	17
IO-Link ports	16
Activate data transfer to the LR SMARTOBSERVER	30
Configure operating mode	31
set fail-safe values	33
Set the device validation and data storage	32
IO-Link ports (Class A)	22
IO-Link supply	12
IoT	
Configure access rights	26
Configure IP settings	27
Configure the interface to the LR SMARTOBSERVER	28
IoT Core	47
Diagnostic codes	60
IoT port	15, 21

L

LED indicators	20
Legal and copyright information	5
LR DEVICE	24

M

Maintenance	64
Mapping	
diagnostic information	80
Diagnostics	77
digital input data	80
Digital output data	82
events	78
port configuration	75
PQI	84
Status information IO-Link ports	81
Mechanical data	70
Modbus TCP	11, 36, 72
Programmers' notes	45
Modbus TCP ports	15
Modification history	6
Mount the device	13
Mounting	13

Index

O

Offline parameter setting	25
Operating and display elements	19
Operating conditions	70
Operation	61
Output Data	82
Outputs	69
Overview	19
IoT profile	101
IoT services	105
IoT types	104

P

Parameter setting	11
Parameter setting with LR DEVICE	25
Permitted use	9
PI controller	5
POST method	59
Preliminary note	5
Profile	
deviceinfo	101
devicetag	102
iolinkmaster	102
parameter	103
processdata	103
service	103
software	103
timer	103
Programmers' notes	57
Prohibited use	9
Purpose of the document	5

R

Read / write cyclic process data	50
Read device information	44, 51
Read diagnostic data	50
Read diagnostic information and events	43
Read information about IO-Link devices	51
Read input data of individual IO-Link ports	40
read input data of several IO-Link ports	39
Register	73
Remarks	14, 25
Replace IO-Link device	63
Request channel	86
Required background knowledge	7
Response channel	87
Rules for accessing the Modbus register	45

S

Safety instructions	7
Safety symbols on the device	8
Service	
factoryreset	105
getdata	106
getdatamulti	107
getidentity	108
getsubscriptioninfo	109
gettree	105
iolreadacyclic	110
iolwriteacyclic	111

reboot	112
setblock	113
setdata	114
setelementinfo	115
subscribe	116
unsubscribe	116
Set application identification	50
Set IO-Link master and IO-Link ports	38
Single Port Access	83
Status LEDs	20
Supported function codes	46
Symbols and styles used	6

T

Tampering with the unit	8
Technical data	68

U

Use acyclic services	46
----------------------------	----

V

Visual indication	12
Voltage supply	21

W

Write output data of individual IO-Link ports	42
Write output data of several IO-Link ports	41