





CE





# **Model Number**

### **OBR15M-R201-2EP-IO**

Retroreflective sensor with fixed cable

### **Features**

- Medium design with versatile mounting options
- Extended temperature range -40°C ... 60°C
- High degree of protection IP69K
- IO-link interface for service and process data

## **Product information**

The optical sensors in the series are the first devices to offer an end-to-end solution in a medium-sized standard design—from the thru-beam sensor through to the measuring distance sensor. As a result of this design, the sensors are able to perform practically all standard automation tasks.


The entire series enables sensors to communicate via IO-Link.

The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor.


Multi Pixel Technology (MPT) ensures that the standard sensors are flexible and

can be adapted to the application environment.


## **Dimensions**

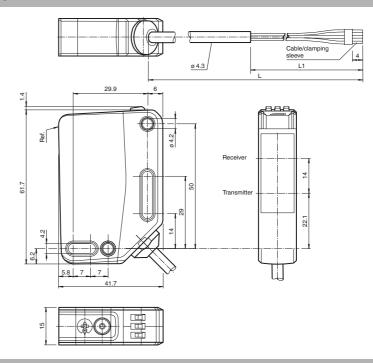

### **Electrical connection**

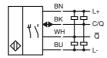

# Indicators/operating means

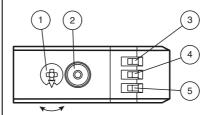

	1	1 Sensitivity adjustment		
	2	Light-on / dark-on changeover switch		
	3	Operating indicator / dark on	ing indicator / dark on GN	
4		Signal indicator	YE	
	5	Operating indicator / light on	GN	



Technical data		
General specifications		
Effective detection range		0 15 m
Reflector distance		0.02 15 m
Threshold detection range		18.5 m
Reference target		H85-2 reflector
Light source		LED
Light type		modulated visible red light
LED risk group labelling		-
• •		exempt group
Polarization filter		yes
Diameter of the light spot		approx. 520 mm at a distance of 15 m
Angle of divergence		2°
Ambient light limit		EN 60947-5-2 : 60000 Lux
Functional safety related para	ameters	
MTTF <sub>d</sub>		724 a
Mission Time (T <sub>M</sub> )		20 a
Diagnostic Coverage (DC)		0 %
		0 /0
Indicators/operating means		
Operation indicator		LED green: constantly on - power on flashing (4Hz) - short circuit flashing with short break (1 Hz) - IO-Link mode
Function indicator		Yellow LED: Permanently lit - light path clear Permanently off - object detected Flashing (4 Hz) - insufficient operating reserve
Control elements		Light-on/dark-on changeover switch
Control elements		sensitivity adjustment
Electrical specifications		
Operating voltage	U <sub>B</sub>	10 30 V DC
·	ОВ	max. 10 %
Ripple		
No-load supply current	I <sub>0</sub>	< 18 mA at 24 V Operating voltage
Protection class		III
Interface		
Interface type		IO-Link ( via C/Q = BK )
Device profile		Identification and diagnosis
·		Smart Sensor type 2.4
Transfer rate		COM 2 (38.4 kBaud)
IO-Link Revision		1.1
Min. cycle time		2.3 ms
Process data witdh		Process data input 2 Bit
		Process data output 2 Bit
SIO mode support		yes
Device ID		0x111211 (1118737)
		0.111211 (1110737)
Compatible master port type		A
Output		
Switching type		The switching type of the sensor is adjustable. The default setting is:  C/Q - BK: NPN normally open / dark-on, PNP normally closlight-on, IO-Link /Q - WH: NPN normally closed / light-on, PNP normally opedark-on
Signal output		2 push-pull (4 in 1)outputs, short-circuit protected, reverse polarity protected, overvoltage protected
Switching voltage		max. 30 V DC
Switching current		max. 100 mA , resistive load
Usage category		DC-12 and DC-13
Voltage drop	$U_d$	≤ 1.5 V DC
Switching frequency	f	1000 Hz
Response time		0.5 ms
Conformity		
Communication interface		IEC 61131-9
Product standard		EN 60947-5-2
Ambient conditions		550 II 0 L
		40 60 °C ( 40 140 °C) fixed as 1-
Ambient temperature		-40 60 °C (-40 140 °F) , fixed cable -20 60 °C (-4 140 °F) , movable cable not appropriate to conveyor chains
Storage temperature		-40 70 °C (-40 158 °F)
Mechanical specifications		
Housing width		15 mm
Housing height		61.7 mm
Housing depth		41.7 mm
Degree of protection		IP67 / IP69 / IP69K
Connection		2 m fixed cable
Material		
Housing		PC (Polycarbonate)
•		
Optical face		PMMA

## **Accessories**

## IO-Link-Master02-USB

IO-Link master, supply via USB port or separate power supply, LED indicators, M12 plug for sensor connection

### OMH-RL31-02

Mounting bracket narrow

### OMH-RL31-03

Mounting bracket narrow

# OMH-RL31-04

Mounting aid for round steel ø 12 mm or sheet 1.5 mm ... 3 mm

### OMH-RL31-07

Mounting bracket including adjustment

### **OMH-R20x-Quick-Mount**

Quick mounting accessory

#### REF-H85-2

Reflector, rectangular 84.5 mm x 84.5 mm, mounting holes

#### REF-C110-2

Reflector, round ø 84 mm, central mounting hole

#### REF-H50

Reflector, rectangular 51 mm x 61 mm, mounting holes, fixing strap

### REF-VR10

Reflector, rectangular 60 mm x 19 mm, mounting holes


## OFR-100/100


Reflective tape 100 mm x 100 mm

Other suitable accessories can be found at www.pepperl-fuchs.com

Release date: 2018-05-23 09:22 Date of issue: 2019-10-31 295670-100064\_eng.xml

## **Curves/Diagrams**

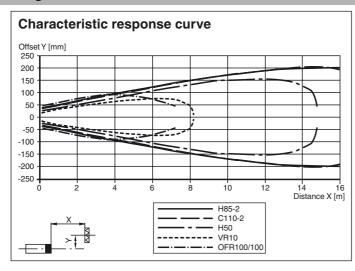

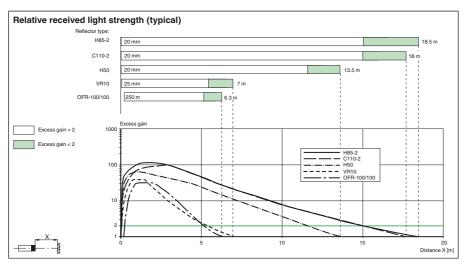

### **Functions and Operation**

To unlock the adjustment functions turn the sensing range /sensitivity adjuster for more than 180 degrees.

## Sensing Range / Sensitivity

Turn sensing range / sensitivity adjuster clockwise to increase sensing range / sensitivity.

Turn sensing range / sensitivity adjuster counter clockwise to decrease sensing range / sensitivity.

If the end of the adjustment range is reached, the signal indicator starts flashing with 8 Hz.

# **Light-on / Dark-on Configuration**

Press the light-on / dark-on changeover switch for more than 1 second (less than 4 seconds). The light-on / dark-on mode changes and the operating indicators are activated accordingly.

If you press the light-on / dark-on changeover switch for more than 4 seconds, the light-on /dark-on mode changes back to the original setting. On release of the light-on / dark-on changeover switch the current state is activated.

# **Restore Factory Settings**

Press the light-on / dark-on changeover switch for more than 10 seconds (less than 30 seconds) until all LEDs turn off. On release of the light-on / dark-on changeover switch the signal indicator turns on. After 5 seconds the sensor resumes operation with factory default settings.

After 5 minutes of inactivity the sensing range / sensitivity adjustment is locked. In order to reactivate the sensing range / sensitivity adjustment, turn the sensing range / sensitivity adjuster for more than 180 degrees.

295670-100064\_eng.xml