



### Model Number

**PCV100B-F200-R4-V15-LS221**


Read head for incident light positioning system

### Features

- **RS 485 interface**
- **Mechanically rugged: no wearing parts, long operating life, maintenance-free**
- **High resolution and precise positioning, especially for facilities with curves and switch points as well as inclines and declines.**
- **Non-contact positioning on Bar-code strip**
- **Travel ranges up to 524 m**

### Diagrams

#### Coordinates

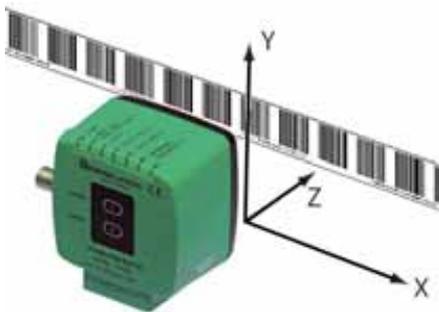

## Technical data

### General specifications

|                     |                                |
|---------------------|--------------------------------|
| Passage speed $v$   | $\leq 6$ m/s                   |
| Measuring range     | max. 524 m                     |
| Light type          | Integrated LED lightning (red) |
| Read distance       | 100 mm                         |
| Depth of focus      | $\pm 20$ mm                    |
| Reading field       | 80 mm x 50 mm                  |
| Ambient light limit | 100000 Lux                     |
| Resolution          | $\pm 1$ mm                     |

### Nominal ratings

|                       |                       |
|-----------------------|-----------------------|
| Camera                |                       |
| Type                  | CMOS , Global shutter |
| Processor             |                       |
| Clock pulse frequency | 600 MHz               |
| Speed of computation  | 4800 MIPS             |

### Functional safety related parameters

|                                |      |
|--------------------------------|------|
| MTTF <sub>d</sub>              | 20 a |
| Mission Time (T <sub>M</sub> ) | 10 a |
| Diagnostic Coverage (DC)       | 0 %  |

### Indicators/operating means

|               |   |
|---------------|---|
| LED indicator | 7 LEDs (communication, alignment aid, status information) |
|---------------|---|

### Electrical specifications

|                              |                       |
|------------------------------|-----------------------|
| Operating voltage $U_B$      | 15 ... 30 V DC , PELV |
| No-load supply current $I_0$ | max. 200 mA           |
| Power consumption $P_0$      | 3 W                   |

### Interface

|                  |                              |
|------------------|------------------------------|
| Interface type   | RS 485 interface             |
| Data output code | binary code                  |
| Protocol         | WCS...B-LS221                |
| Transfer rate    | 62500 Bit/s                  |
| Termination      | Switchable terminal resistor |
| Query cycle time | $\geq 10$ ms                 |

### Input

|                 |  |
|-----------------|--|
| Input type      | 1 function input<br>0-level: $-U_B$ or unwire<br>1-level: $+8$ V ... $+U_B$ , programmable |
| Input impedance | $\geq 27$ k $\Omega$   |

### Output

|                   |  |
|-------------------|--|
| Output type       | 1 switch output PNP , programmable , short-circuit protected |
| Switching voltage | Operating voltage  |
| Switching current | 150 mA each output   |

### Standard conformity

|                      |                           |
|----------------------|---------------------------|
| Emitted interference | EN 61000-6-4:2007+A1:2011 |
| Noise immunity       | EN 61000-6-2:2005         |
| Shock resistance     | EN 60068-2-27:2009        |
| Vibration resistance | EN 60068-2-6:2008         |

### Ambient conditions

|                       |  |
|-----------------------|--|
| Operating temperature | 0 ... 60 °C (32 ... 140 °F) , -20 ... 60 °C (-4 ... 140 °F)<br>(noncondensing; prevent icing on the lens!) |
| Storage temperature   | -20 ... 85 °C (-4 ... 185 °F)  |
| Relative humidity     | 90 % , noncondensing   |


### Mechanical specifications

|                      |                          |
|----------------------|--------------------------|
| Connection type      | 5-pin, M12 x 1 connector |
| Housing width        | 70 mm                    |
| Housing height       | 70 mm                    |
| Degree of protection | IP67                     |
| Material             |                          |
| Housing              | PC/ABS                   |
| Mass                 | approx. 160 g            |



### Approvals and certificates

|              |   |
|--------------|---|
| UL approval  | cULus Listed, General Purpose, Class 2 Power Source, Type 1 enclosure |
| CCC approval | CCC approval / marking not required for products rated $\leq 36$ V    |


**Dimensions**

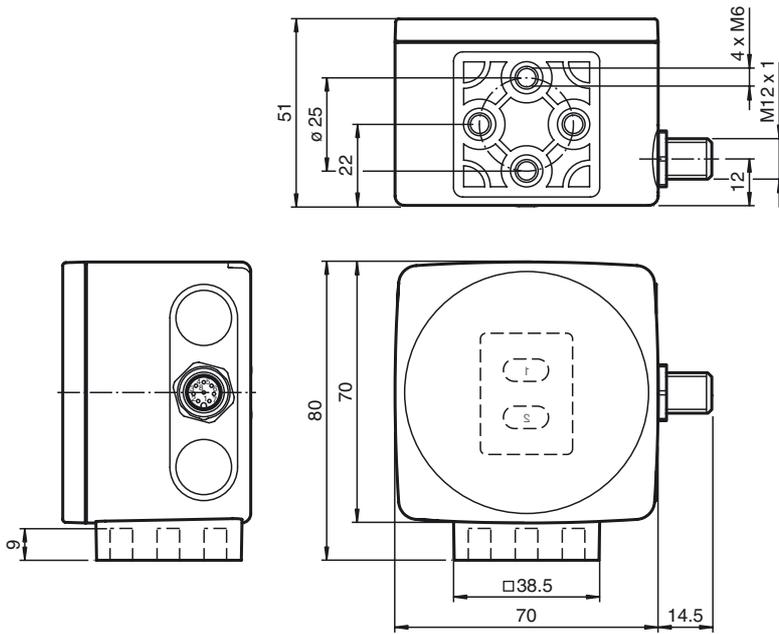


**Additional Information**

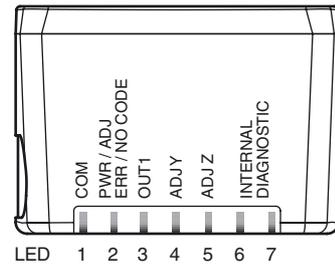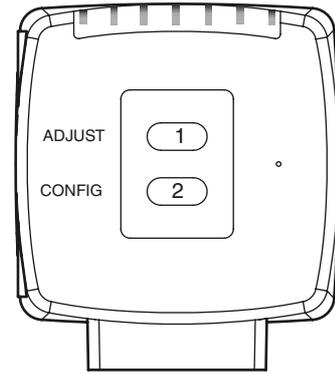

**Electrical Connection**

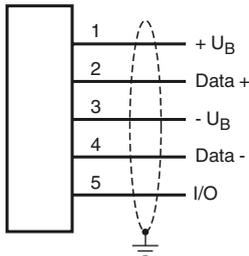

**Pinout**

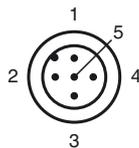

**General**

The PCV... reading head is part of the positioning system in the method for measurement by Pepperl+Fuchs. It consists of a camera module and an integrated illumination unit among other things. The reading head detects position marks, which are put on an adhesive code band in the form of Barcode. The mounting of the code band is as a rule stationary on a firm part of the plant (elevator shaft, overhead conveyor mounting rails...); that of the reading head is parallel on the moving "vehicle" (elevator car, overhead conveyor chassis...).

**Accessories**

**V15-G-ABG-PG9**

Female connector, M12, 5-pin, shielded, field attachable

**V15-G-ABG-PG9-FE**

Female connector, M12, 5-pin, shielded, field attachable

**PCV-SC12**

Grounding clip for PCV system

**PCV-LM25**

Marker head for 25 mm code tape

**PCV-MB1**

Mounting bracket for PCV\* read head

**PCV-AG100**

Alignment guide for PCV100-\* read head

**Vision Configurator**

Operating software for camera-based sensors

**PCV-USB-RS485-Converter Set**

USB to RS 485 interface converter

**PCV-KBL-V19-STR-RS485**

Cable unit with power supply for USB / RS-485 interface converter

Release date: 2016-05-13 10:47 Date of issue: 2016-05-13 246409\_eng.xml

### Mounting and commissioning

Mount the reading head such that its optical surface captures the optimal read distance to the code band (see Technical Data). The stability of the mounting and the guidance of the vehicle must be provided such that the depth of field of the reading head is not closed during operation. All reading heads can be optimally customized by parameterization for specific requirements.

### Displays and Controls

The PCV... reading head allows visual function check and fast diagnosis with 7 indicator LEDs. The reading head has 2 buttons on the reverse of the device to activate the alignment aid and parameterization mode.

#### LEDs

| LED | Color            | Label                   | Meaning                               |
|-----|------------------|-------------------------|---------------------------------------|
| 1   | Yellow           | COM                     | Communication active                  |
| 2   | Green/red        | PWR/ADJ<br>ERR/NO CODE  | Code recognized/not recognized, Error |
| 3   | Yellow           | OUT1                    | Output 1                              |
| 4   | Yellow           | ADJ Y                   | no function                           |
| 5   | Yellow           | ADJ Z                   | no function                           |
| 6,7 | red/green/yellow | INTERNAL<br>DIAGNOSTICS | Internal diagnostics                  |

### External parameterization

For external parameterization you require the parameterization code as Data Matrix with the desired reading head parameters. Data Matrix code cards for step-by-step external parameterization are printed in the reading heads operating instructions.

Parameterization is only possible within 10 minutes of switching on the reading head. If a button is pressed after 10 minutes subsequent to switching on, there is visual signaling via the LEDs (LED1, yellow/LED2, red/LED3, yellow/LED4, yellow/LED5, yellow flash for 2 seconds)

- The switchover from normal operation to parameterization mode is via button 2 on the reverse of the reading head. Button 2 must be pressed for more than 2 seconds. LED3 now flashes.

**Note:**Parameterization mode automatically ends after 1 minute of inactivity. The reading head returns to normal operation and works with unchanged settings.

- Place the parameterization code in the view of the camera module. After recognition of the parameterization code, the green LED2 lights up for 1s. In the event of an invalid parameterization code, the red LED2 lights up for 2 s.
- A short press on button 2 ends the parameterization mode and the changed parameters are not stored volatile in the reading head.